


Speaker Stand

Operating Instructions
Mode d'emploi

WS-TV10C

Sony Corporation © 2002 Printed in China

Supplied Items Éléments fournis

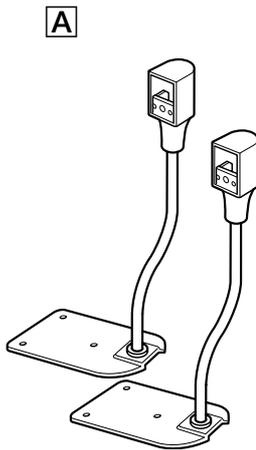

B



C



Precautions

On safety

- Recommended for use with the Sony small speaker system.
- Be sure to place the speaker stand in a flat, horizontal place.

Précautions

Sécurité

- Utilisation recommandée avec le système de petits haut-parleurs Sony.
- Installez bien le support d'enceinte à un emplacement horizontal et plat.

Specifications

Dimensions

Approx. 80 × 350 × 160 mm
(3 1/4 × 13 7/8 × 6 3/8 in.)
(w/h/d)

Mass

Approx. 0.25 kg (9 oz)

Design and specifications are subject to change without notice.

Spécifications

Dimensions

Env. 80 × 350 × 160 mm
(3 1/4 × 13 7/8 × 6 3/8 po)
(l/h/p)

Poids

Env. 0,25 kg (9 on.)

La conception et les spécifications sont modifiables sans préavis.

Assembly

- ① Rotate the mount (A) on the top of the pipe stand, making sure the screw on the mount faces the back of the pipe stand when you stop. Then tighten the screw to secure the mount.
- ② Adjust the orientation of the pipe stand with respect to the base and tighten the nut at the bottom of the pipe stand with the wrench, then pass the speaker cord into the hole under the base and out from the hole in the mount.
- ③ Tightly secure the speaker to the mount with the screws (B).
- ④ Use commercially available wood screws to tightly attach each speaker stand securely to the TV stand or whatever support is being used.

Montage

- ① Tournez la monture (A) à l'extrémité supérieure du tube support, en vérifiant que la vis sur la monture est bien à l'arrière du tube support quand vous cessez de tourner. Puis, serrez la vis pour immobiliser la monture.
- ② Ajustez l'orientation du tube support par rapport à la base et serrez l'écrou au bas du tube support avec une clé. Faites ensuite passer le cordon d'enceinte dans le trou sous la base et ressortir par le trou de la monture.
- ③ Fixez solidement l'enceinte à la monture avec les vis (B).
- ④ Utilisez des vis à bois en vente dans le commerce pour fixer solidement chaque support d'enceinte au socle du téléviseur ou à tout autre socle.

