

SONY® Speaker System


SS-CR3000

2-899-202-11(2)




* 2 8 9 9 2 0 2 1 1 * (2)

- To connect to speaker terminals (SURROUND, CENTER)

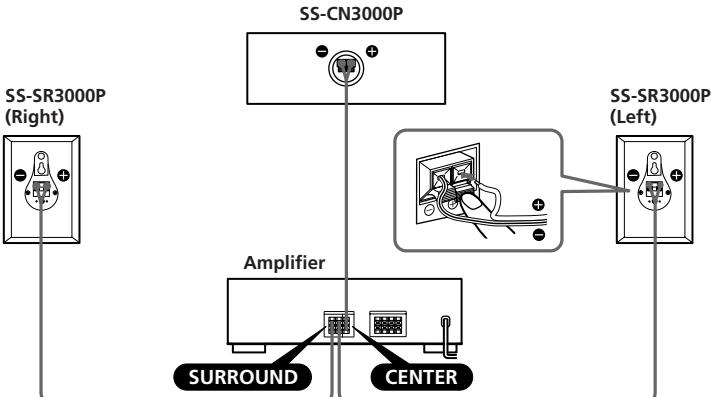


- To use the systems as surround speaker system

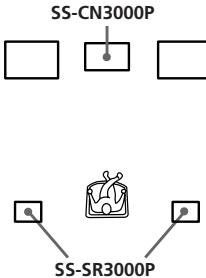

- To put the SS-CN3000P on your TV set

Please attach a foot pad (supplied) to each bottom corner of the speaker, and make sure that the speaker is completely flat on top of the TV.

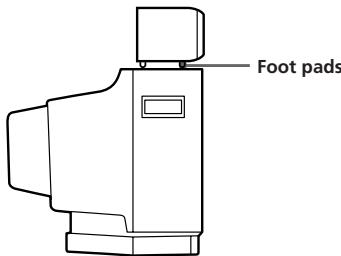


- To hang SS-SR3000P with a hook (not supplied) on the wall

You are responsible for the proper selection and use of mounting hardware that you purchase at hardware stores, and for the proper and safe mounting of the speakers.

- To install SS-SR3000P on the speaker stand (not supplied)

It is recommended to use the optional WS-FV11 or WS-FV10D speaker stand (available only in certain countries). Be sure to detach the screw A from the speaker and use it during installation. For details, refer to the operating instructions supplied with the speaker stand.

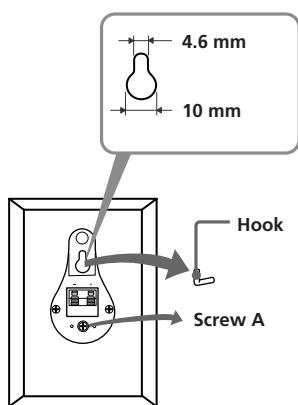

English

Owner's Record

The model and serial numbers are located on the rear of the unit. Record the serial number in the space provided below. Refer to them whenever you call upon your Sony dealer regarding this product.

Model No. _____

Serial No. _____

Precautions

- Avoid driving the speaker system continuously with a wattage exceeding the maximum input power of this speaker system.
- Before connecting, turn off the amplifier to avoid damaging the speaker system.
- If the +/− connection is incorrect, the bass tones will seem to be missing and the position of the instruments becomes obscure.
- The speaker grille on the SS-CN3000P and SS-SR3000P cannot be removed. Do not attempt to remove the grille on the SS-CN3000P and SS-SR3000P. If you try to remove it, you may damage the speaker.

In case color irregularity is observed on nearby TV screen

With the magnetically shielded type of the speaker system, the speakers can be installed near a TV set. However color irregularity may still be observed on the TV screen depending on the type of your TV set.

If color irregularity is observed...

→ Turn off the TV set, then turn it on after 15 to 30 minutes.

If color irregularity is observed again...

→ Place the speakers more apart from the TV set.

Specifications

SS-CN3000P (Center speaker)

Speaker system	Full range, magnetically shielded
Speaker units	7.0 cm (2 3/4 in.), cone type × 2
Enclosure type	Bass reflex
Rated impedance	8 ohms
Power handling capacity	Maximum input power: 100 watts
Sensitivity level	85 dB (1 W, 1 m)
Frequency range	150 Hz - 20,000 Hz
Dimensions (w/h/d)	Approx. 430 × 86 × 105 mm (17 × 3 3/8 × 4 1/8 in.) including front grill
Mass	Approx. 1.6 kg (3 lb 9 oz)
Supplied accessories	Speaker cord, short (1) Foot Pads (4)

SS-SR3000P (Surround speakers)


Speaker system	Full range
Speaker units	7.0 cm (2 3/4 in.), cone type
Enclosure type	Bass reflex
Rated impedance	8 ohms
Power handling capacity	Maximum input power: 100 watts
Sensitivity level	85 dB (1 W, 1 m)
Frequency range	150 Hz - 20,000 Hz
Dimensions (w/h/d)	Approx. 110 × 170 × 111 mm (4 3/8 × 6 5/8 × 4 3/8 in.) including front grill
Mass	Approx. 0.9 kg (1 lb 16 oz)
Supplied accessory	Speaker cord, long (2)

Design and specifications are subject to change without notice.


SONY® Speaker System

SS-CR3000

- Pour relier l'amplificateur aux bornes d'enceintes (SURROUND, CENTER)

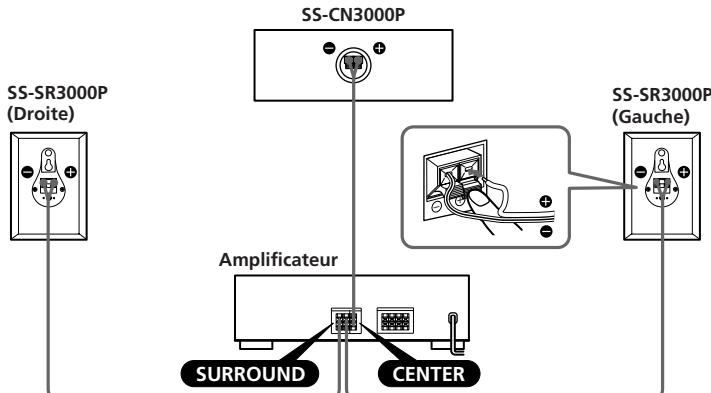


- Utilisation comme système d'enceintes surround

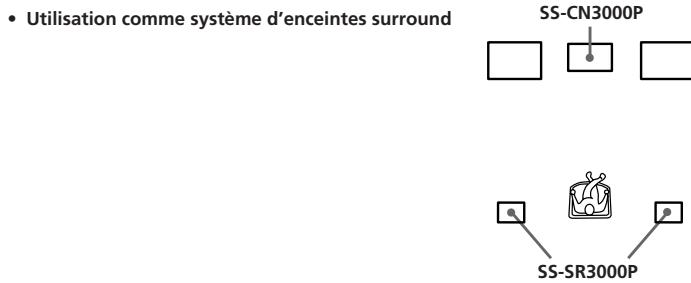

- Pour installer la SS-CN3000P sur votre téléviseur

Collez les tampons (fournis) à chaque coin de l'enceinte et assurez-vous que l'enceinte est bien à plat sur le téléviseur.

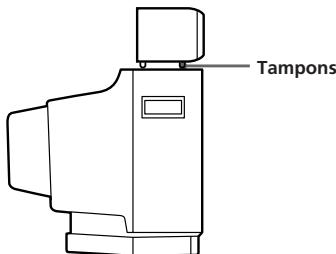


- Suspension murale du système SS-SR3000P à l'aide d'un crochet (non fourni)

La sélection, l'achat et l'utilisation du matériel de montage est de votre responsabilité, ainsi que l'installation des enceintes.

- Pour fixer la SS-SR3000P au pied d'enceinte (non fourni)

Il est conseillé d'utiliser le pied d'enceinte en option WS-FV11 ou WS-FV10D (commercialisé seulement dans certains pays). Détachez la vis A de l'enceinte et utilisez-la pour fixer l'enceinte au pied d'enceinte. Pour le détail, reportez-vous au mode d'emploi fourni avec le pied d'enceinte.

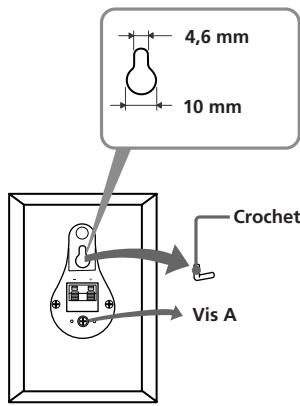

Français

Précautions

- Evitez de faire fonctionner les enceintes de manière continue avec une puissance électrique qui excède la puissance d'entrée maximum de ce système.
- Avant d'effectuer les connexions, mettez l'amplificateur hors tension pour éviter d'endommager les enceintes.
- Si la polarité +/− n'est pas respectée, les graves sembleront absents et la position des instruments indistincte.
- La grille de l'enceinte sur les SS-CN3000P et SS-SR3000P ne peut pas être enlevée. N'essayez pas de l'enlever sur les SS-CN3000P et SS-SR3000P, sinon l'enceinte risque d'être endommagée.

En cas d'anomalie de couleur sur un téléviseur se trouvant à proximité

Grâce à leur blindage magnétique, vous pouvez installer les enceintes près d'un téléviseur. Cependant, selon le type de téléviseur, les couleurs sur l'écran peuvent être anormales.

En cas d'anomalie de couleur...

→ Éteignez le téléviseur puis rallumez-le 15 à 30 minutes plus tard.

Si l'anomalie de couleur persiste...

→ Eloignez davantage les enceintes du téléviseur.

Spécifications

SS-CN3000P (Enceinte centrale)

Système d'enceintes	Pleine gamme, blindage magnétique
Haut-parleurs	7,0 cm (2 3/4 in.), type conique × 2
Type d'enceinte	Bass reflex
Impédance nominale	8 ohms
Capacité de puissance admissible	
Puissance d'entrée maximum	100 W
Niveau de sensibilité	85 dB (1 W, 1 m)
Plage de fréquences	de 150 à 20 000 Hz
Dimensions (l/h/p)	Env. 430 × 86 × 105 mm (17 × 3 3/8 × 4 1/8 in.), avec la grille avant
Poids	Env. 1,6 kg (3 lb 9 oz)
Accessoire fourni	Cordon d'enceinte, court (1) Tampons (4)

SS-SR3000P (Enceintes arrière)

Système d'enceintes	Pleine gamme
Haut-parleurs	7,0 cm (2 3/4 in.), type conique
Type d'enceinte	Bass reflex
Impédance nominale	8 ohms
Capacité de puissance admissible	
Puissance d'entrée maximum	100 W
Niveau de sensibilité	85 dB (1 W, 1 m)
Plage de fréquences	de 150 à 20 000 Hz
Dimensions (l/h/p)	Env. 110 × 170 × 111 mm (4 3/8 × 6 5/8 × 4 3/8 in.), avec la grille avant
Poids	Env. 0,9 kg (1 lb 16 oz)
Accessoire fourni	Cordon d'enceinte, long (2)

La conception et les spécifications sont modifiables sans préavis.