HURRICANE BACKYARD TV

OWNER'S MANUAL

CINIOS Inc.

Rev. 1.4

Thank you for purchasing a CINIOS™ Backyard TV™ – a television designed specifically for TV viewing enjoyment in the outdoors of your home backyard, spa, patio, or cabana. It's well-protected from the sun, most weather and temperatures, and from the errant baseballs and pool splashing that comes with backyard fun.

IMPORTANT - FCC STATEMENT

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

TABLE OF CONTENTS

Safety Instructions 2
Unpacking 4
TV Setup 5
Operating the TV 10
TV Controls 10
On-Screen Display Menu Controls 14
Care and Maintenance 24
Troubleshooting 25
Limited Warranty 28

Copyright © 2011 CINIOS Incorporated. All Rights Reserved.
All other trademarks are the property of their respective owners.

SAFETY INSTRUCTIONS

This product has been designed, engineered, and manufactured with a priority on user and product safety. However, improper use and care can result in permanent damage to the TV, or harm to you. To ensure your safety and avoid potential dangerous situations, please read and follow these precautions prior to use, while installing, and during use of this product.

- Read this entire manual to become familiar with all instructions and proper operations.
- Heed all warnings.
- Do NOT use this TV near a heating source of any kind.
- Do NOT modify or alter the polarized or 3-way grounding plug in any way, shape, or form. Do NOT bypass the 3-way grounding plug. Use only in a 3-way grounded outlet.
- Protect the power cord from being walked on, cut, pinched or pulled under strain, especially at the plug and at TV entry.
- Unplug the unit during lightning storms. Do not touch the TV during lightning storms. It is recommended to use a surge protector.
- Only use attachments and accessories specified and/or provided by CINIOS.
- This TV should be operated only from the type of power source indicated on the manual/rear marking label.
- Although your TV has strong protection from water, it is not 100% waterproof. Always avoid spilling liquid on this product.
- Never push objects of any kind into this product through any openings.
- Do NOT attempt to remove the rear cover or to open this TV, as this can expose you to high voltage and risk of electric shock. There are no user serviceable parts inside. Refer servicing and repair to qualified personnel.
- Do NOT attempt to modify or repair this product in any way as this will invalidate your warranty.
- TV installation should be performed by a licensed installer for best results.
- Use proper lifting technique during installation and removal as a TV can be a heavy, bulky item.
- When moving or lifting, do not press or place stress on the front screen.
- For use with outdoor antennas, follow proper grounding and installation requirements provided by the antenna.
- Do not block any ventilation openings during use as this can damage the TV permanently. Ensure the installation location has plenty of space around the TV, particularly near the ventilation openings.

- Do not touch the ventilation openings during TV operation as they can become hot – this is normal operation.
- Although the front panel is tempered glass and scratch resistant, avoid any sharp objects contacting the surface as permanent scratches can occur.
- Although the TV is protected from high temperatures, direct sunlight can cause temperatures to exceed the product specifications and create dark splotches on the screen. Over time this can permanently damage the LCD panel inside. To remedy, ensure the installation does not allow direct sunlight on the front panel during the day. Block or remove the TV from the direct sunlight. Direct sunlight reduces the picture quality because it increases light on the screen, washing out the bright picture from the TV.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

UNPACKING

A television is a heavy, bulky, and fragile item. Always use caution when lifting it from the packaging and mounting in place.
Save the original packaging in the event warranty service is required to ensure safe shipment to an authorized service provider.

CONTENTS of PRODUCT PACKAGING:

- CINIOS Backyard TV with integrated AC power cord
- Waterproof Remote Control, with battery (1) and battery cover key (1)
- This User Manual
- Quick Start Guide
- Velcro strips (2) for remote control
- Magnet strips (2) for remote control

* Note: No stand or mount is included. Contact a CINIOS Dealer or local retailer if you need a mounting solution.
Remote control replacement battery is one 3V CR2025 coin-style, found in most drugstores or home improvement stores.

IMPORTANT: Keep all original product packaging materials and the original purchase receipt or invoice in the event the product requires any service in the future. Keep a record of your date of purchase, store or dealer purchased from, the model number, the product serial number, and the price paid for your own records, besides the original receipt for proof of purchase.


TV SETUP

Follow these four quick steps to setup and enjoy your Backyard TV.
Some A/V device sources may not support every connection shown. Check your device manual for its recommended connection cable and input connection type. You will need to provide the cables for each connection chosen (most sources like a cable set top box or DVD player include them in the box).

1 CHOOSE A MOUNTING LOCATION

The location must be strong and sturdy enough to hold the TV in place during normal use and in high winds. We recommend following the instructions in the mounting product you have chosen for the installation, or using a professional installer. [Note: 42" TV weighs about 95lbs, 32" TV weighs about 60lbs.]


Although the TV has features and protection from the effects of sunlight, for best picture quality you should mount the TV so that direct sunlight is not facing the front panel. This will also provide a longer life for the TV.

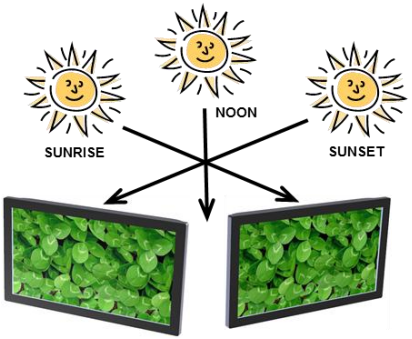


2 CONNECT YOUR INPUT SOURCE DEVICES

Connect your device to the TV using the device cables that provide the best connection. Not all devices have all of the connections shown below and available on the TV. Remove the rear cable area cover by loosening the (4) screws. Reattach cover after cables are connected to protect the cable area.
Standard input device connections available:


BEST CONNECTION HDMI

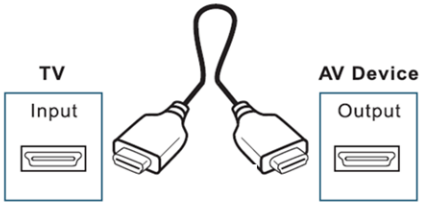


VERY GOOD CONNECTION COMPONENT

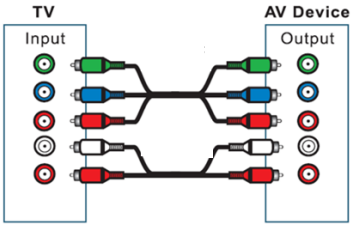


GOOD CONNECTION COMPOSITE

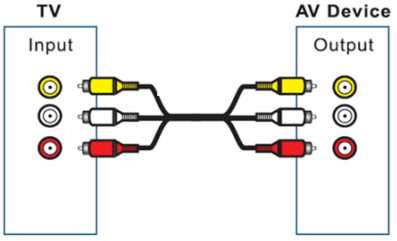

GOOD CONNECTION S-VIDEO

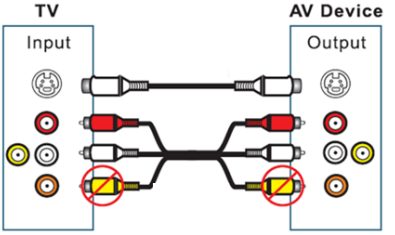


BASIC CONNECTION ANTENNA

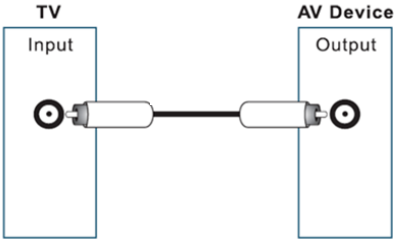

3 CONNECT POWER TO THE TV + INSERT BATTERY TO REMOTE CONTROL

Connect the power cord from the TV into a properly grounded AC plug outlet. It is highly recommended to use a ground fault protected outlet using a cover shield.

Remove the rear cover from the back of the remote control by twisting it to 'OPEN' with the included plastic key or a small coin. Insert the disk battery with the '+' side facing up. Replace the cover and turn it to 'CLOSE' to lock it.

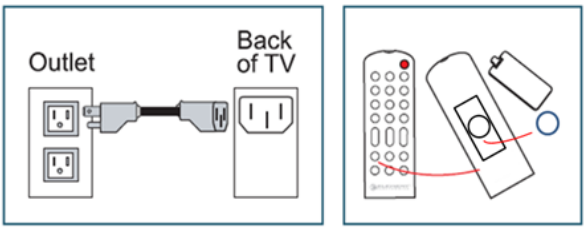

4 CHOOSE THE INPUT SOURCE TO WATCH

Press the 'POWER' button on the remote or the TV side panel.
Press 'TV/AV' button on the remote or 'INPUT' on the TV side panel.
Select the input source you wish to view that was connected from step 2.
Press 'TV/AV' again to exit the onscreen display.


For help, please refer to the Troubleshooting section in this manual or visit www.cinios.com 'CUSTOMER SUPPORT' page.

Additional Setup:
The first time the TV is powered on, the Setup Wizard will display, or can be reached by pressing the MENU button on the remote.
Choose your settings for Language, Time Zone, TV signal from over-the-air or cable.
Selecting auto-scan will start the TV automatically scanning for available channels to lock in.



STORABLE REMOTE CONTROL SETUP:

1. Choose Velcro or magnet method to attach remote control.
2. Peel the backing from one Velcro piece (2 halves), or from one magnet strip.
3. Press the Velcro strip on the bottom of the remote control housing, and on the side of the TV bezel. Or press the magnet strip on the bottom of the remote control only. Press and hold firmly for several seconds.
4. Place the remote against the bezel anywhere for the magnet, or on the Velcro strip to store it anytime and never lose it!
5. Save the extra Velcro and magnet strip for a second remote, more holding strength, or a second Velcro another location.

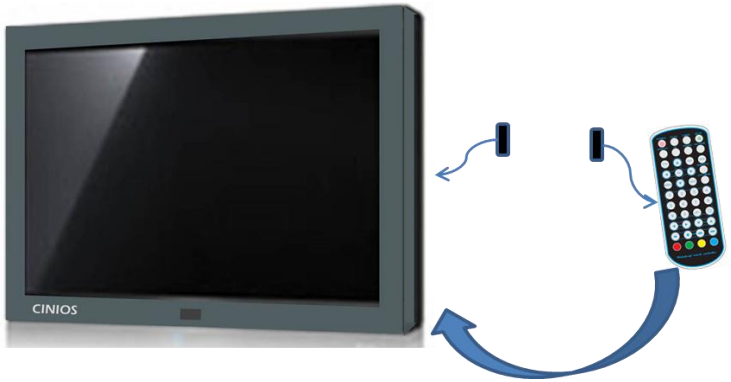

Now that the TV is setup and ready to enjoy, you may want to adjust the picture settings to improve the picture quality based on how you prefer to view your programming on the screen.


Press the 'MENU' button on the remote control or the side of the TV to enter the on-screen display. There you will find settings such as brightness and contrast that you can adjust for the optimum picture. See page 13 for more details.

DAY-NIGHT DIMMING ADJUSTMENT

In the on-screen display menu, on the Picture menu page, you will find the setting to change the TV brightness from daytime to nighttime viewing. This is a single step dimming between day and night to optimize the picture brightness to the different light conditions. You should adjust the TV for normal daylight viewing, then choosing 'night' will dim the settings. It is a manual setting and not automatic.

INPUT-OUTPUT CONNECTORS:


Connect your input device source to one of these connectors.

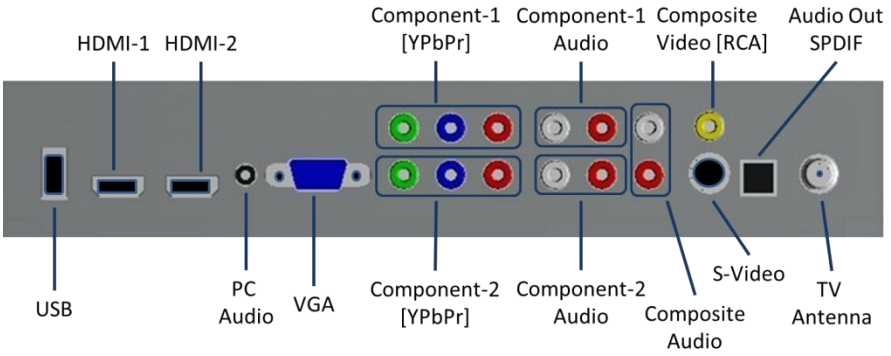

OPERATING THE TV: TV and Remote Controls

EXTERNAL TOUCH CONTROL BUTTONS:

The touch buttons are located on the side of the TV for operation without using the remote control.

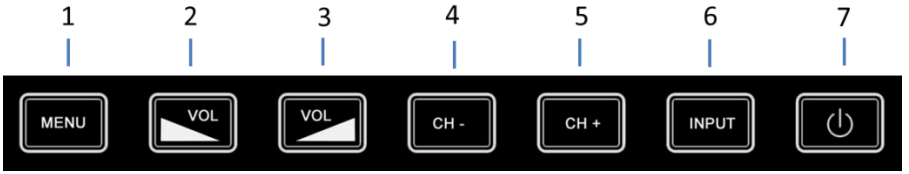

1. DISPLAY ON-SCREEN MENU
2. VOLUME DOWN
3. VOLUME UP
4. CHANNEL DOWN -
5. CHANNEL UP +
6. SELECT INPUT SOURCE
7. POWER ON/OFF

REMOTE CONTROL OPERATION:


The remote control is waterproof, but is not made for a prolonged period submerged in water or at depths below several inches.

Should the remote be submerged for a period of time, it is recommended to allow it to dry for 24 hours or longer before use. Open the battery cover, and remove and dry the battery. Place it in a cool, dry area with the battery compartment open and face up to allow air to circulate inside.

The remote control operates on one 3V CR2025 coin-style battery. Replacement battery can typically be found in most drugstores or home improvement stores.

REPLACE BATTERY

On the remote control bottom, simply turn the battery cover to 'OPEN' using a coin or the included plastic key. Place the battery inside with the '+' side facing up. Replace cover and turn it to 'CLOSE'.

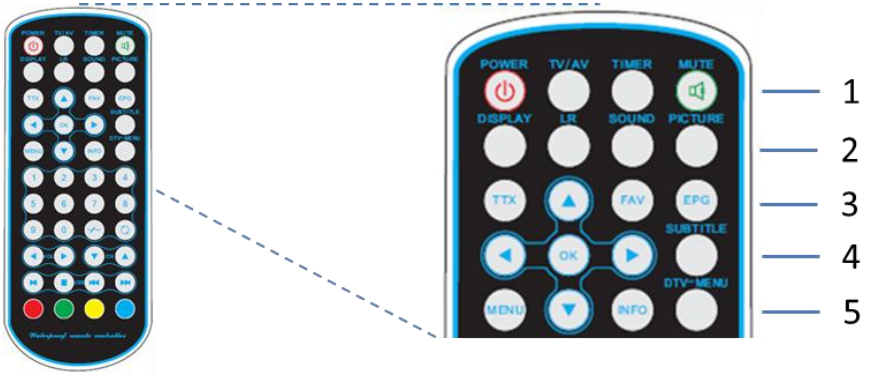

ROW 1 buttons:

POWER Press to power the TV on and off.

TV/AV Press to enter the input menu to choose source connection.

TIMER Press to set sleep timer on/off/or a specific time.

MUTE Press to mute/unmute the speaker volume.

ROW 2 buttons:

DISPLAY Press to change the zoom mode – Cinema/Zoom/Wide/Normal.

LR Press to change MTS mode (MONO/STEREO/DUAL), used only in TV mode.

SOUND Press to change the SOUND mode between Standard/News/Music/ Movie/Sports/or Custom.

PICTURE Press to change the picture mode between Standard/Sports/Theater/ Custom/or Vivid.

ROW 3 buttons:

TTX Press to turn on/off teletext, used only in TV mode.

FAV Press to show all channels in favorite programs on the screen, used only in TV mode.

EPG Press to open Electronic Program Guide, used only in TV mode.

ROW 4 buttons:

▲ ▼ Menu button for up and down control in most menu pages.

OK Press to confirm choices in menus.

◄ ► Menu button for left and right in most menu pages.


SUBTITLE Function not supported.

ROW 5 buttons:

MENU Press to display the OSD menu or to EXIT to the previous menu.

INFO Press to show TV information (e.g. channel number or TV system) on the top of the screen.

DTV-MENU Function not supported in North America TV tuners.

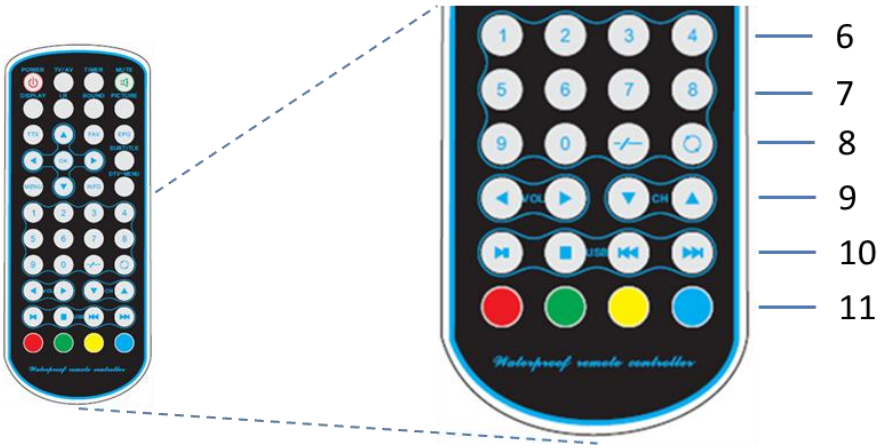

ROWS 6, 7, and 8 buttons:

0 - 9 Press to select channel number or enter data.

- / -- Press to enter the second/third digit of channel numbers larger than one digit. Not needed on all models.

↺ Press to return to previous TV channel.

ROW 9 buttons:

VOL ◄ ► Press to adjust volume up or down.

CH ▼ ▲ In TV mode, changes the channel up or down. In On-Screen Display (OSD) mode, this selects the next or previous menu.

ROW 10 buttons:

Only operate in USB input mode to command the photo player and music player.

►II Press to start photo slideshow or to play music file highlighted.

■ Press to stop photo slideshow, stop playing current music file, or to exit USB mode.

⏮ Press to play the previous photo or music file.

⏭ Press to play the next photo or music file.


ROW 11 buttons:

RED	Used in the USB mode. Press to select on-screen items in RED color.
GREEN	Used in the USB mode. Press to select on-screen items in GREEN color.
YELLOW	Used in the USB mode. Press to select on-screen items in YELLOW.
BLUE	Used in the USB mode. Press to select on-screen items in BLUE color.

OPERATING THE TV: On-Screen Display Menu Controls

The on-screen display (OSD) menu can be displayed by pressing the 'MENU' button on the remote control, or the external control button 'MENU' on the side of the TV. While in the OSD like the pictures below, you can press MENU to exit that menu page.

1. PICTURE MENU

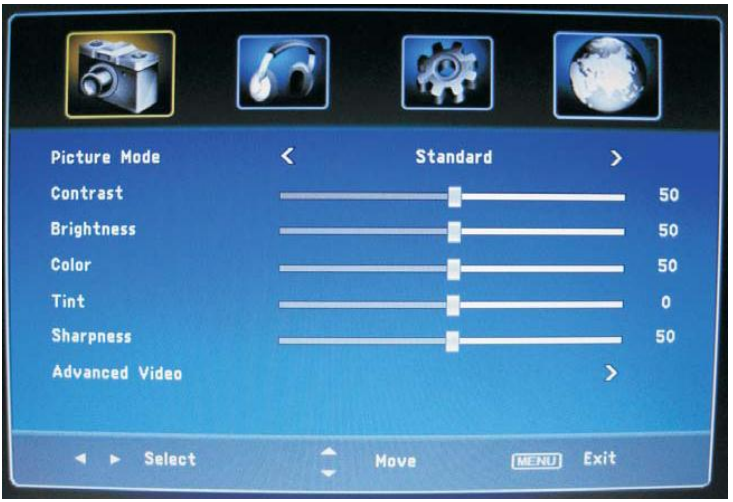

The picture menu is the first page of the main menu shown by the camera icon. You can make basic adjustments to the picture quality here such as picture mode, contrast, color, sharpness.

1. Press ▼ ▲ buttons to highlight the item to be selected.
2. Press ◄ ► buttons to make the desired adjustments.
3. When you are satisfied with your adjustments, press MENU to exit.

Picture Mode

Highlight the PICTURE MODE line to select the type of picture that corresponds to your viewing requirements.

Press the ◄ ► buttons select the picture mode such as Standard, Sports, Theater, Custom, or Vivid mode. You may also press the PICTURE button on the remote control when not using the OSD menu.

Contrast

Highlight the CONTRAST line and adjust using ◄ ► buttons.

Brightness

Highlight the BRIGHTNESS line and adjust using ◄ ► buttons.

Color

Highlight the COLOR line and adjust the color saturation using ◄ ► buttons.

Tint

Highlight the TINT line and adjust using ◄ ► buttons. Only used in TV mode with NTSC (Analog) input sources.

Sharpness

Highlight the SHARPNESS line and adjust using ◄ ► buttons.

Advanced Video

Highlight the ADVANCED VIDEO line and press the ► button to open the Advanced Video menu page. Using ▼ ▲ buttons highlight the selected item to adjust.

ADVANCED VIDEO Page:



Color Temperature

Highlight the COLOR TEMP line and adjust using ◄ ► buttons to select personal/normal/cool/warm.

Zoom Mode

Highlight the ZOOM MODE line and adjust using ◄ ► buttons to select wide/zoom/cinema/normal mode. You may also press the DISPLAY button on the remote control when not using OSD menu.


Noise Reduction

Highlight the NOISE REDUCTION line and adjust using ◄ ► buttons to select off/ weak/ middle/ strong/ auto.

Adaptive Contrast

Highlight the ADAPTIVE CONTRAST line and adjust using ◄ ► buttons to select on/off.

2. AUDIO MENU

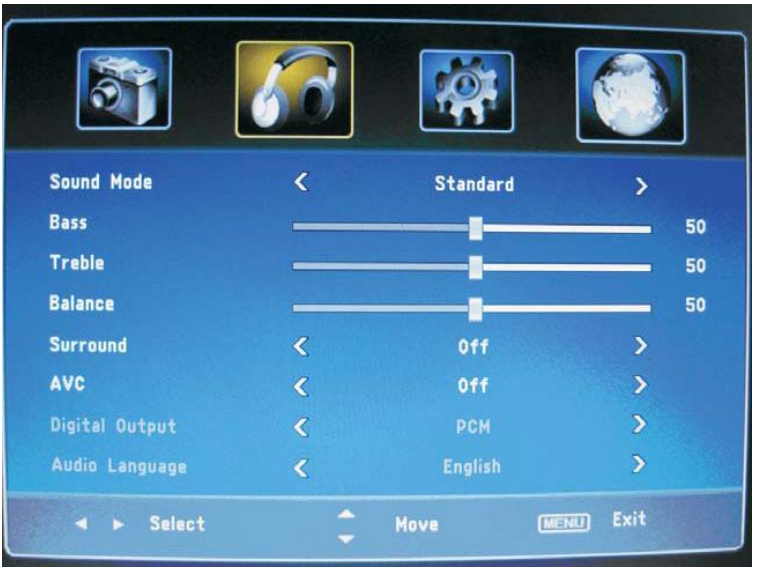

The audio menu is the second page of the main menu -- the headphones icon.

1. Press ▼ ▲ buttons to highlight the item to be selected.
2. Press ◄ ► button to adjust the item.
3. When you are satisfied with your adjustments, press MENU to exit.

Sound Mode

Highlight the SOUND MODE line and adjust using the ◄ ► buttons to select the sound type that best matches your listening preference - Standard/News/Music/ Movie/Sports/Custom. Bass and Treble will automatically be set except in Custom. You may also press the SOUND button on the remote when not using OSD menu.

Bass

Highlight the SOUND MODE line and select Custom. Then highlight the BASS line and adjust using the ◄ ► buttons.

Treble

Highlight the SOUND MODE line and select Custom. Then highlight the TREBLE line and adjust using the ◄ ► buttons.

Balance

Highlight the BALANCE line and adjust using ◄ ► buttons.

Surround

Highlight the SURROUND line and adjust using ◄ ► buttons to turn Surround on/off.

AVC

Highlight the AVC line and adjust using ◄ ► buttons on or off.

DIGITAL OUTPUT

Highlight the DIGITAL OUTPUT line and adjust using ◄ ► buttons.

Audio Language

Highlight the AUDIO LANGUAGE line and adjust using ◄ ► buttons to select one audio language such as English/French/ Spanish. If there is no selection
This function has not been programmed for use on this TV model.

3. SETTING MENU



The settings menu is the third page of the main menu shown by the gear icon.

1. Press ▼ ▲ buttons to highlight the item to be selected.
2. Press ◄ ► button to enter the submenu of each item.
3. When you are satisfied with your adjustments, press MENU to exit the page.

PARENTAL CONTROL Page:

Highlight the PARENTAL CONTROL line and adjust using ◄ ► buttons to select a password and turn controls on/off. The default password is: 0000.



TIME Page:

Highlight the TIME line and adjust using ◄ ► buttons to show Sleep Timer/Time Zone/DST Mode/Clock.



Sleep Timer

Highlight the SLEEP TIMER line and adjust using ◄ ► buttons to select off/30Min/ 45 Min/60 Min/90 Min/120 Min/180 Min/240 Min. You may also press the TIMER button on the remote control when not using the OSD menu.

Time Zone

Highlight the TIME ZONE line and adjust using ◄ ► buttons to select the correct time zone, the options are Pacific / Alaska / Hawaii / Eastern / Central / Mountain.

DST: Daylight Saving Time

Highlight the DST line and adjust using ◄ ► buttons to select Daylight Saving Time on/off. When DST is ON, the clock is set 1 hour ahead of local standard time.

CLOSED CAPTION Page:

Highlight the CLOSED CAPTION line and adjust using ◄ ► buttons to show closed caption adjustments.



CC Mode

Highlight the CC MODE line and adjust using ◄ ► buttons to turn CC on/off.

Basic Selection

Highlight the BASIC SELECTION line and adjust using ◄ ► buttons to choose the closed caption type to display.

Advanced Selection


Highlight the ADVANCED SELECTION line and adjust using ◄ ► buttons to choose the closed caption special type to display.

Option

Highlight the OPTION line and adjust using ◄ ► buttons to change the text type to display in the submenu.

MENU SETTINGS Page:

Highlight the MENU SETTINGS line and adjust using ◄ ► buttons.

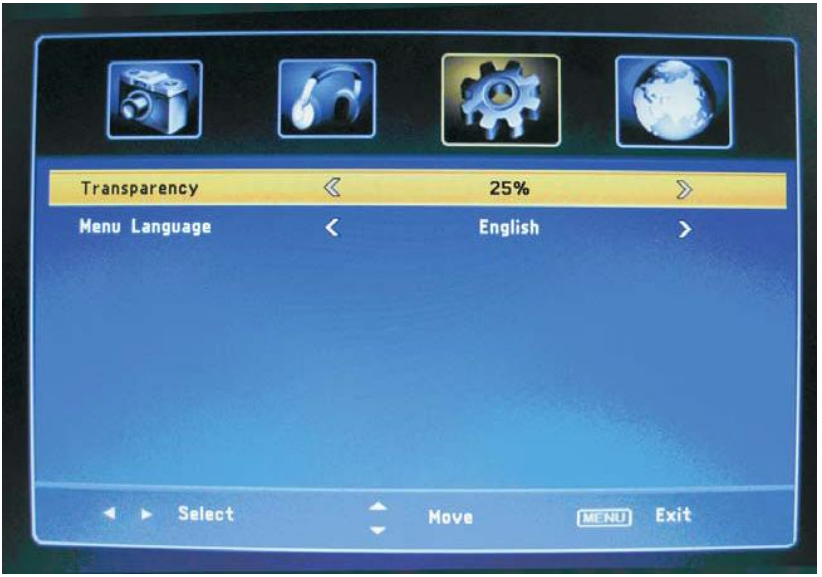

Transparency

Highlight the TRANSPARENCY line and adjust using ◄ ► buttons to select 0%/ 25%/ 50% / 75%/ 100% degree of transparency of the OSD menu.

Menu language

Highlight the MENU LANGUAGE line and adjust using ◄ ► buttons to select English/Spanish/French/Korean.

RESTORE DEFAULT Page:

Highlight the RESTORE DEFAULT line and adjust using ◄ ► buttons to select yes/no and then press OK button to confirm.

4. CHANNEL MENU



The channel menu is the fourth page of the main menu shown by the earth icon.

1. Press ▼ ▲ buttons to highlight the item to be selected.
2. Press ◄ ► button to enter the submenu of each item.
3. When you are satisfied with your adjustments, press MENU to exit the page.

Air/Cable

Highlight the AIR/CABLE line and adjust using ◄ ► buttons to select Air/ Cable mode.

Auto Scan

Highlight the AUTO SCAN line and adjust using ◄ ► buttons to perform auto-scan of TV channels. Press OK to confirm.

Favorite

Highlight the FAVORITE line to adjust/change using ◄ ► buttons for Channel Number, Channel Name, and Favorite Menu. Press OK button to set and confirm.

Show/ Hide

Highlight the SHOW/HIDE line and adjust using ◄ ► buttons to show/hide. Press OK to set and confirm.

Channel No.

Highlight the CHANNEL NO. line and adjust using ◄ ► buttons Press buttons to enter Channel No. mode and select the channel no. desired.

Channel Label

Highlight the CHANNEL LABEL line and adjust using ◄ ► buttons to edit the channel labels.

DTV Signal

Highlight the DTV SIGNAL line and adjust using ◄ ► buttons to show the current DTV signal strength.

6. USB MODE

When you attach a USB drive (large or small of any kind), and select the USB source using the remote 'TV/AV' button or the INPUT button on the side of the TV, then the USB menu below will display.

From there you can select the PHOTO or MUSIC tab to display the files on the drive, start a slideshow, or to play the music files.




Use the arrow buttons to move the cursor to the item you wish to select, or to select one of the commands at the bottom of the screen.

Pressing ▶II starts the photo slideshow full-screen or plays the music file highlighted.

Pressing ■ to exit slideshow mode or to stop playing music files.

The colored boxes on the screen correspond to the colored buttons on the remote control.

Press the RED button on the remote control to show/hide the control menu during a slideshow.

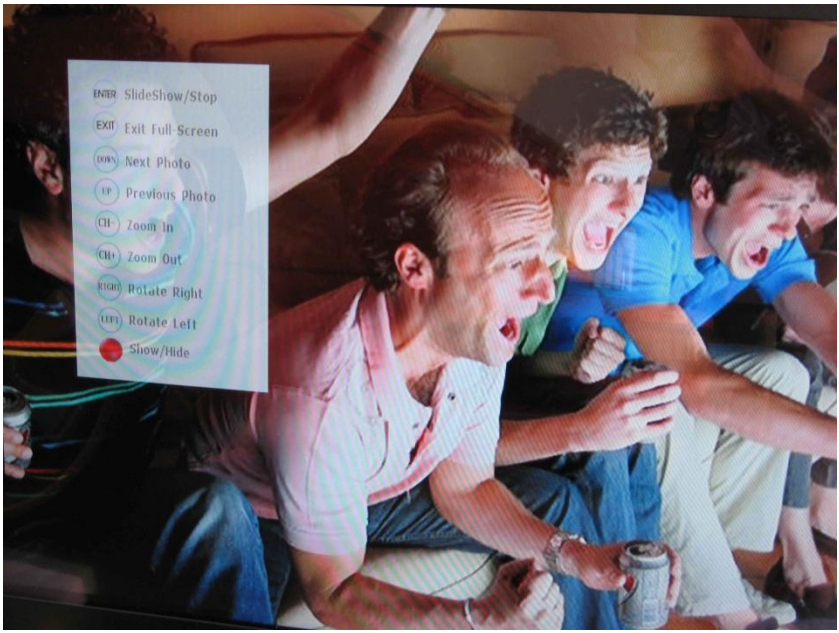
ENTER SlideShow/Stop
EXIT Exit Full-Screen
DOWN Next Photo
UP Previous Photo
CH+ Zoom In
CH- Zoom Out
RIGHT Rotate Right
LEFT Rotate Left
Show/Hide

CARE and MAINTENANCE

To clean the TV, use a soft damp cloth and warm water. Never use detergents or cleaning chemicals which can remove or streak the surface protections in the paint and metal. In addition, chemicals can break down the materials in the product causing them to fade or fail. Follow the same directions to remove water spots from the front screen.

Protect the TV like you would a car – it's fine to be outdoors, but it looks better and lasts longer when placed away from the sun and/or covered when not in use. It's good additional protection from the long term effects of the sun, and also reduces the cleaning of water spots on the screen - improving the picture quality and your viewing enjoyment.

Always keep the TV a safe distance from pools, ponds, and water to avoid electrical shock or damage from accidents. Always follow local zoning laws.

Should the screen receive direct sunlight in high temperatures, and dark blotches appear, this is normal for LCD TV at high temperatures. Be sure to turn off the TV until the unit cools and is out of direct sunlight to avoid damaging the LCD panel inside.

TROUBLESHOOTING

GENERAL:

PROBLEM	RESOLUTION
Cannot control the TV with the remote control.	Confirm remote control is pointing directly at the remote control sensor on the TV and try again.
	Remove any obstacle between the TV and the remote control.
	Check if the remote control batteries are still working and properly installed.
No image display and no sound is produced.	Check if the product is turned on.
	Check if the power cord is properly connected to a wall outlet.
	Check if there is a problem in the wall outlet by connecting other products.
Cannot connect external devices.	Refer to the "SETUP" section in the manual to connect an external device.
The TV turns off suddenly.	Check the power cord is still connected, and any power strip used is on.
	Check if the Auto sleep feature is activated in the Time settings. Refer to the "Sleep Timer" section.
	If there is no signal while the TV is on, it will turn off automatically after 15 minutes of inactivity.
Water drips from the rear vent holes.	This is normal. It is water collecting near the vent/speaker holes as it runs off the rear cover of the TV.
There are water droplets behind the front glass.	Under unique weather conditions, condensation can form inside the TV. This is normal. It will disappear naturally, aided by the internal ventilation system.
The screen has black blotchy areas.	Direct sunlight on the screen on a hot day can cause the LCD panel to display improperly. This is normal if it occurs. Face screen away from direct sunlight.
	Power off the TV until the sunlight is not directly on the screen.

AUDIO:

PROBLEM	RESOLUTION
No sound is produced while images are displayed.	Press VOL + button on the remote control or external TV buttons.
	Check if the sound is muted by pressing MUTE on the remote control.
	Scroll to other channels. There may a problem with that channel's broadcast.
	Check if the audio cables are connected properly, and to the input source used.
	Check if the TV Speaker feature is activated in the On-Screen menu option.
No output from one of the speakers.	Adjust speaker right/left balance in the On-screen menu option.

VIDEO:

PROBLEM	RESOLUTION
The image displays in black & white, or poor color quality.	Adjust the color setting in the menu option.
	Keep a sufficient distance between this product and other electronic products.
	Scroll to other channels. There may a problem with the broadcast.
Horizontal or vertical bars appears or images blur.	Check if there are local interferences such as an electrical appliance or power tool.
	If the lines persist after powering the TV on/off and across all sources, contact CINIOS for service.
Lines or streaks appear on images.	Check the antenna or aim the antenna to the proper direction.
The power is on but the screen appears extremely dark or light.	Adjust the brightness and contrast in the On-screen menu option.
"No Signal" appears on the screen.	Check the signal cable is connected properly between TV and input source device.
	Check the input source is correctly selected.
Thin lines appear in the background of the screen.	Check the video cable connections.
The picture image is one color, others are missing.	Check the component video connections.
The reception on some channels is poor.	Scroll to other channels. There may a problem with the broadcast.
	The station signal may be weak. Aim the antenna to the proper direction.
	Check if there is local interference such as an electrical appliance or power tool.

REMOTE CONTROL HEX CODES:

HEX CODE	FUNCTION	DESCRIPTION
00FF		CINIOS Remote Code
00	POWER ON/OFF	Remote Button
46	TV/AV	Remote Button
4F	TIMER	Remote Button
47	MUTE	Remote Button
15	DISPLAY	Remote Button
49	LR	Remote Button
1	SOUND	Remote Button
17	PICTURE	Remote Button
1A	TTX	Remote Button
44	▲	Remote Button
3	FAV	Remote Button
4E	EPG	Remote Button
18	◄	Remote Button
1D	OK	Remote Button
11	►	Remote Button
48	SUBTITLE	Remote Button
1B	MENU	Remote Button
45	▼	Remote Button
1E	INFO	Remote Button
4A	DTV-MENU	Remote Button
7	1	Remote Button
8	2	Remote Button
9	3	Remote Button
0A	4	Remote Button
0B	5	Remote Button
0C	6	Remote Button
0E	7	Remote Button
0F	8	Remote Button
19	9	Remote Button

16	0	Remote Button
1F	-/--	Remote Button
2		Remote Button <PREVIOUS>
10	◄ VOL UP	Remote Button
12	► VOL DOWN	Remote Button
14	▼ CHL	Remote Button
13	▲ CHL	Remote Button
40	► II	Remote Button - USB Programs
41	■	Remote Button - USB Programs
42	⏮	Remote Button - USB Programs
43	⏭	Remote Button - USB Programs
4	RED	Remote Button - USB Programs
5	GREEN	Remote Button - USB Programs
6	YELLOW	Remote Button - USB Programs
0D	BLUE	Remote Button - USB Programs

LIMITED WARRANTY

ONE-YEAR LIMITED PRODUCT WARRANTY ON PARTS AND LABOR

Parts and Labor

CINIOS INC. (the 'Company') provides a warranty to the original purchaser of the product against defects in materials and workmanship for a period of exactly one (1) year from the original date of purchase, subject to the following terms and conditions herein. If CINIOS determines a product to be defective within the warranty period, the Company will either repair or replace the unit at its sole option and discretion.

Warranty covers only LCD televisions and any included accessories in the original product package. Covered units must be purchased and physically located in the fifty (50) United States, Canada, or Mexico. For product warranty outside of those locations, please contact your local distributor or retailer where you purchased the product.

There will be no charge for parts or labor during the warranty period to the original purchaser. Replacement parts and units may be new, rebuilt, or refurbished at the Company's option and sole discretion. Replacement and repaired parts and units are warranted for the remaining portion of the original warranty period or for ninety (90) days from warranty service or replacement, whichever is later. All replaced parts and products become the sole property of the Company.

After the warranty period expires, any and all product repair costs are the sole responsibility of you, the purchaser.

Obtaining Warranty Service

To obtain warranty service in the 50 United States, Canada, or Mexico you must first contact CINIOS Technical Support to receive a return authorization using one of these methods:

- by email at: Support@CINIOS.com
- by website contact at: www.CINIOS.com

For product warranty support outside the 50 United States, Canada, or Mexico, please contact your local distributor or retailer where you purchased the product to obtain authorized warranty service.

Do NOT return a unit to the Company or its authorized service center(s) without first confirming the warranty status and receiving a return authorization number from CINIOS Technical Support. Units sent improperly will be refused delivery.

Proof of purchase in the form of a sales receipt, invoice, or copy thereof specifying the original date of purchase must be presented within the warranty period to obtain covered warranty service.

Types of Service

Units 37" or larger may be eligible for domestic in-home diagnostic and warranty services, subject to geographic availability. In-home service requires complete and easy access to the unit and does not include de-installation or re-installation of the product. However, in some cases, it may be necessary to remove and send the unit to a CINIOS service center for repair.

In those instances when in-home service is provided, the Company will pay for and provide the shipping to and from the same customer location. Should in-home service not be provided, the unit must be sent to a CINIOS service center using prepaid freight in its original packaging.

Units less than 37" must be sent to a CINIOS service center using prepaid freight in its original packaging. The company is not responsible for transportation costs to the service center; however the company will pay for and provide return shipping to the customer. Use of alternate packaging is not recommended, however if necessary, the purchaser should ensure product protection equal or greater than the original packaging protection is provided. The Company is not responsible for product damage due to inadequate packaging materials.

Pre-authorization is required before sending any unit to a Company service center.
It is recommended that you acquire insurance and tracking of any product shipment.

Limitations and Exclusions

This one-year limited warranty only covers defects in materials and workmanship. Items not covered include but are not limited to: cosmetic damage, normal wear and tear, commercial use, misuse, abuse, negligence, signal issues, power surges, connection to improper voltages, damage from shipping, acts of nature or war, any sort of customer misuse or operation for which is was not intended, improper installation or setup, customer modifications, and repairs or adjustments by unauthorized service facilities.
Units with unreadable, altered, or removed factory applied serial numbers, "image burn-in", or for routine maintenance are not covered. This warranty does not cover products sold "AS IS", "FACTORY RECERTIFIED", "REFURBISHED", or by a non-authorized reseller or retailer.

This warranty only covers new CINIOS products, applies strictly to the original purchaser, and is not transferable.

THERE ARE NO EXPRESS WARRANTIES OTHER THAN THOSE LISTED OR DESCRIBED ABOVE. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE PERIOD OF TIME SET FORTH ABOVE. THE COMPANY'S TOTAL LIABILITY FOR ANY AND ALL LOSSES AND DAMAGES RESULTING FROM ANY CAUSE WHATSOEVER SHALL IN NO EVENT EXCEED THE PURCHASE PRICE OF THE DISPLAY. THE COMPANY SHALL NOT BE RESPONSIBLE FOR LOSS OF USE, COMMERCIAL LOSS, LOST REVENUE OR LOST PROFITS, OR OTHER INCIDENTAL OR CONSEQUENTIAL DAMAGES. Some states do not allow limitations on how long an implied warranty lasts or the exclusion of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

THIS WARRANTY IS SUBJECT TO CHANGE WITHOUT NOTICE. Check at www.CINIOS.com for the most current warranty version.

Personal Data

If your CINIOS product is capable of storing personal data and other information, ALL CONTENTS WILL BE DELETED DURING MOST IN-HOME AND ALL SHIP-IN WARRANTY SERVICE. If this occurs, your product will be restored and configured as originally

purchased. Recovery and reinstallation of user data is not covered under this Limited Warranty.