EDGE
OWNER'S MANUAL

Thank you for purchasing the RedFox EDGE Bluetooth sport headset. To get the most enjoyment from your EDGE and to learn how to properly operate and use this product please read this manual carefully.

A. INTRODUCTION:

Wireless Bluetooth Technology:

- The EDGE is a Bluetooth stereo headset that can be connected with smart phones, iPods, PDA's, computers, Bluetooth TV's, or other Bluetooth equipped devices wirelessly. The EDGE is equipped with Bluetooth V2.1+EDR. Bluetooth communication range is up to 10M (CLASS II standard).

EDGE Bluetooth Sport Headset Features:

- Our sleek exterior and portable design lets you enjoy stereo music during any activity. The idea for the design of the EDGE comes from studies in advanced somatology. Getting rid of disturbing, distracting, tangling and potentially dangerous wires frees you up to fully enjoy your audio and phone devices. Unique and intelligent functions insure you will not miss any mobile calls while you enjoy your music.

B. USE RANGE:

- Pair with any Bluetooth enabled mobile phone to wireless enjoy mobile phone music and audio while never missing an incoming call.
- Pair with PC (with Bluetooth function or connect with the RedFox SIDEKICK) and wireless enjoy network music, QQ, SKYPE, or any other audio available;
- Pair with iPod or MP3 player (with Bluetooth function or connect with the RedFox SIDEKICK) and wireless enjoy your music or audio.
- Pair with your TV (with Bluetooth function or connect with the RedFox SIDEKICK) and wireless enjoy your favorite shows without disturbing others.

C. PACKING LIST:

- EDGE Bluetooth Sport Headset 1pc
- USB Charging cable 1pc
- Quick Start Card 1pc


D. TO START USING:

1. Charge your EDGE Bluetooth Sport Headset:

- Your EDGE Bluetooth sport headset has a built-in rechargeable lithium battery. Before your first use, please charge it at least 4 hours to fully charge the lithium battery. Connect the enclosed USB cable directly to a USB wall charger or your computer to charge. (We suggest that you not use the car charger for the first charge) After this initial charge, a normal re-charge of 1 -2 hours should be enough. When charging your EDGE, the blue light will be on; when the battery is full the blue light will turn off. A fully charged battery can support about 5 - 7 hours of continuous music or talk.

EDGE
OWNER'S MANUAL

2. Button Definition and Function:

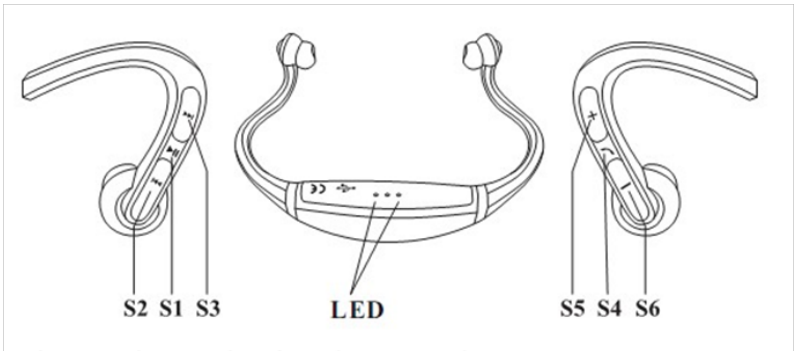

- S1 Play/Pause/Refuse call
- S2 Track forward
- S3 Track Back
- S4 Multi Use Button – Answer call, On/Off, Bluetooth Pairing Mode
- S5 Volume up "+"
- S6 Volume down "-"
- LED Red & Blue work light indicators

3. How to Pair to Bluetooth Devices:
Pairing is a process to connecting Bluetooth devices to each other so that they communicate. It will create a permanent and safe link between your devices and provide them with quick Bluetooth link without using any password.

- ***First step:*** With your EDGE powered off, press S4 button and hold for about 8-10 seconds until red & blue LED lights start quickly flashing alternately, which indicates you are in pairing mode.
- ***Second step:*** While in paring mode, search for "RedFox EDGE" on your Bluetooth device.
- ***Third step:*** If you are asked to enter a Pin-Code, use 0000.
- ***Fourth step:*** When pairing is successful you will hear 2 beeps on the headset and the red & blue LED lights will begin to flash slowly, single & stereo are connected successfully.

  Note:
  If the EDGE cannot find the pairing device within 3 minutes, it will automatically shutdown.
  If you have not put the EDGE in pairing mode, your mobile phone or other Bluetooth device cannot find the EDGE, please insure the EDGE is in pairing status and your phone or other Bluetooth device is in Bluetooth search mode.

4. Start-up and Shutdown:

- ***To turn on your EDGE:*** With the EDGE turned off: Press S4 key for 4 -6 seconds, the red and blue lights will come on and you will hear 2 beeps on the headset. Release the S4 key.

- ***To turn off your EDGE:*** Press S4 key 3 - 4 seconds, the red & blue lights flash quickly one time, the headset beeps once and the lights turn off. When Searching for equipment or when no device is in range of the headset, it will automatically shut down after not making a connection in 1 minute.

E. BASIC USE:

Dial, Talk, and End Phone Calls:

- ***Dial a call:*** Dial the call using the phone's keypad, or press S1 twice to activate SIRI and some other voice dial programs so that you can voice dial through your EDGE.
- ***Answer an incoming call:*** If you are enjoying music or other audio on your EDGE and you receive a call, your music or audio will automatically pause and you will hear the ring. Press the phone button (S4) once to answer the call, press the play/pause button (S1) for one second to ignore the call. When your call ends your music or audio will automatically resume. Your EDGE has a built in mic, just speak in your normal voice and the party you are speaking to will hear you clearly. If you are not listening to other audio and receive a call while paired to your EDGE, simply press the phone button (S4) once to answer the call.
- ***End call:*** Press the phone button (S4) once to end the call, or wait for the other party to disconnect.
- *NOTE: During a phone call you can adjust the volume by using the volume up or down buttons (S5 or S6)*

Enjoy Stereo Music, Pandora, iHeart, eBooks, Podcasts and Other Audio:

You must have successfully paired your EDGE with your mobile phone, iPod, MP3 player or other audio device to enjoy the music or audio on your EDGE.

- ***Playing Music:*** Press the S1 PLAY/PAUSE key once to start or stop music or audio.
- ***Track Forward:*** Press S3 key once to skip to the next song or chapter.
- ***Track Back:*** Press S2 key once to return to the previous song or chapter.
- *NOTE: Based on different Bluetooth versions and firmware for different devices, if the EDGE is left in stand-by mode, the Bluetooth connection may be automatically cut off. Simply power the EDGE off, then back on, or go to settings on your device and select RedFox EDGE to reconnect.*

PC and PDA Connect with Headset

The EDGE can be also connected with PC or PDA equipped with Bluetooth, please refer to your PC or PDA user manual.

F. IMPORTANT INFORMATION:

Troubleshoot and LED Indicators:

- ***Red light flashes slowly:*** The EDGE is low on power, please turn off and charge it as soon as possible.
- ***The headset will not be start-up after charging for 20 minutes:*** The EDGE needs to be charged for at least 40 minutes for start-up.
- ***No indicator LED during charge:*** If the battery power was completely drained, or if you have not used your EDGE for a long time, when you initially try to charge the EDGE there

may be no indication light until enough charge has returned to the battery to power the LED lights.

- ***No sound on the EDGE:***
  1. Make sure the EDGE had been paired successfully with the audio device.
  2. Make sure the EDGE had been powered on.
  3. Make sure the distance between the EDGE and audio device does not exceed 10 meters.
  4. Make sure your audio device is charged and powered on.
  5. Some brands of smart phones only support one Bluetooth headset at a time. If more than one Bluetooth headset is paired to your smart phone,the connection may be interrupted.
- ***After fully charging, why does my EDGE not work with my mobile?:*** Make sure your mobile's Bluetooth is on and paired with your EDGE.
- ***Can my EDGE work with any phone?:*** No. It can only work with phone which has Bluetooth.
- ***What is the effective distance for EDGE and a Bluetooth device?:*** The EDGE operates under Class II standards with an effective distance is 10 meters, but that may vary depending on the specific environment you are in and your devices specifications. Some Bluetooth devices effective distance may be less than 10 meters.
- ***When my Bluetooth device is searching the EDGE, why do several Bluetooth devices appear?:*** When in search mode, your phone or Bluetooth device will search for all Bluetooth transmitters within range. Once your phone or Bluetooth device has scanned for active devices, "RedFox EDGE" will appear on your phone or Bluetooth device so you can be sure you are pairing to the correct device.
- ***Why can't my phone or Bluetooth device find my EDGE?:*** If your EDGE isn't in pairing mode, your phone or Bluetooth device cannot find it. Before using your phone or Bluetooth device to search for the EDGE, make sure the EDGE is in pairing mode. (Refer to D3 in this user's manual for detailed instructions).
- ***Do I need to pair my devices each time I use my EDGE?:*** No. The EDGE and the phone or Bluetooth device only require pairing the first time they are used together.
- ***What should I do if the volume is too low on my EDGE?:***
  1. The volume on your EDGE will only go as high as the volume level set on your transmitting device (Phone or other Bluetooth device). Insure the volume is turned up on your Phone or other Bluetooth device. Note: This provides a safety feature when using with children as you can control the maximum volume at the transmitting unit.
  2. Insure the volume is at the appropriate level on your EDGE. Use the volume up or down buttons on the EDGE to insure you have the volume turned up.
  3. Insure the pause button has not been pushed on the EDGE.
- ***Why does my EDGE stop work suddenly?:***
  1. No power. When the battery is low the red indicator will flash and the headset will beep twice.
  2. Insure you did not inadvertently reach up and press the phone button for 4 – 6 seconds and turn the EDGE off.

G. EDGE MAINTENANCE:

- If you use charging cords or wall plugs with inappropriate voltage regulations it can damage the EDGE and shorten the battery life.
- If you attempt to disassembly your EDGE, it voids the warranty and may cause the EDGE to break.
- Do not place the EDGE in dusty environments.
- Use the clean, soft and dry fabric to clean your EDGE.
- When you are not using the EDGE, please put it into its EVA case or its original packing.
- Do not let children play EDGE they may hurt themselves or break the EDGE.
- Do not put the EDGE in extremely hot or cold environments; otherwise the EDGE may not work for a while

Information about the Battery:
The EDGE comes with a new battery: Before you use the EDGE for the first time charge the battery for at least 4 hours.

Battery Maintenance:

- If used properly the battery life should be long lasting.
- The optimal temperature for charging is 10 to 45 .
- Charging at room temperature will result in the largest capability.
- Using the EDGE in low temperatures will cause a reduction in the battery capability.
- If the EDGE is not going to be used for prolonged period, you need to charge it at least 1 time every 2 months.

G. FEATURES AND SPECIFICATIONS:
- Wireless enjoyment of your stereo music and audio files from Bluetooth enables devices
- Wireless, hands free phone calls
- Intuitive built in buttons to control music (play/pause, track forward/back, volume up/down)
- High sensitivity, Omni-directional microphone design, voice clarity with no echo

- Product Name: EDGE
- Product Type: Wireless Bluetooth Stereo Headset
- Edition: Bluetooth V2.1+EDR
- Frequency coverage: 2.402GHZ~2.480GHZ ISM Band
- Sensitivity: -80dbm
- Wireless Transmitter Standard: CLASS 2
- Channel: 79channels of 1Mhz BW
- Contact Terms: Point-to-Point
- Transmit Range: <=10M
- Frequency Response: 20HZ-20KHZ
- S/N rate: 80db>
- Speak power rate: 2X10mW
- Status Indication: LED indicator

- Pairing products: AD2P, ACVRP
- Battery: L-ion. 3.7V 150mA
- Charge Time: 1-2H
- Charge Power: PC USB 5V
- Operate hours: more than 5 hours (battery saturation)

WARNING
YOU ARE AWARE THAT PERMANENT HEARING LOSS MAY OCCUR IF EARPHONES OR HEADPHONES ARE USED AT INAPPROPRIATE VOLUMES. EXPOSURE TO NOISE FROM EARPHONES OR HEADPHONES IN EXCESS OF 85 DECIBELS FOR MORE THAN EIGHT HOURS A DAY WILL LIKELY CAUSE IRREPARABLE HEARING DAMAGE.

Please refer to www.RedFoxWireless.com for full warranty and product safety information.