USER MANUAL

Wireless door chime with temperature indicator ,150m range

DESCRIPTION

- Choice of 32 chime sounds
- Adjustable volume
- 16 codes selectable
- 200m distance in open air

RECEIVER :

- LED indicator
- 32 chime sounds selectable; Adjustable volume
- Temperature indoor
- Temperature outdoor
- Week indicator
- Date indicator
- Time indicator
- With bracket to stand on desk
- 3x 1.5V LR6 AA batteries (not included)
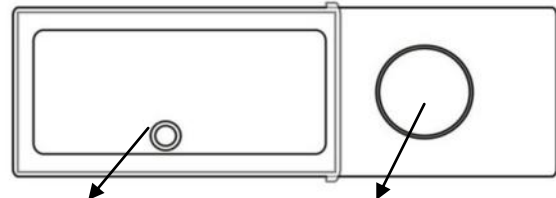
TRANSMITTERS :

- LED indicator
- IP44
- With rain cap
- Transmission frequency: 433-434 MHz
- 2x 1.5V LR03 AAA batteries (not included)
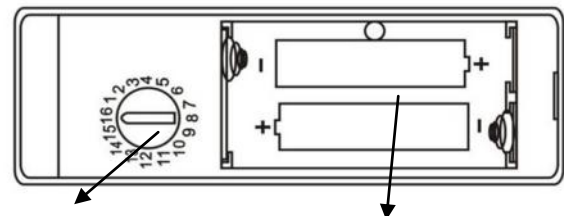
INSTALLATION

TRANSMITTER :

- Open the battery cover, install 2x 1.5v AAA batteries; take note of the polarities (+ -)
- Set the codes: the transmitter and receiver have the 16 codes selector. It can work only the transmitter and receiver match the same code.
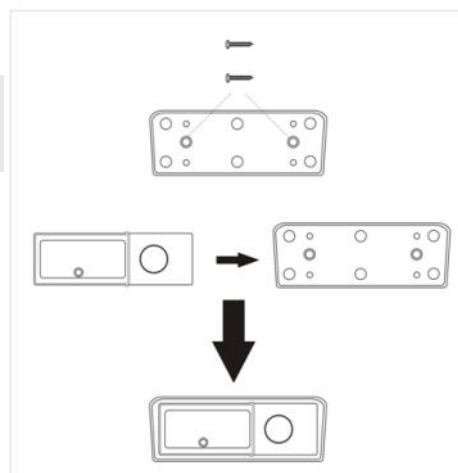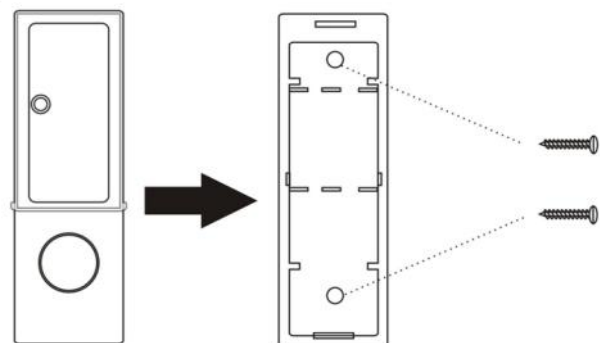
TRANSMITTER :

- LED indicator
- Push button

- Codes selector (1-16)
- 2x 1.5V LR03 AAA batteries

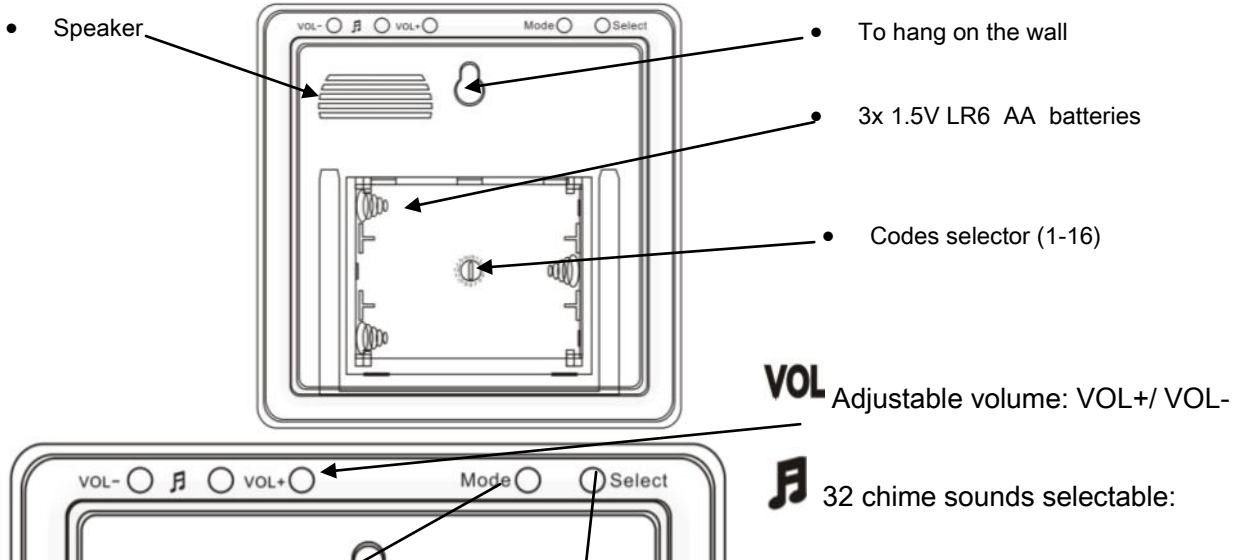- Screw fixing to the rain cap or using Double Sides Adhesive Tape

- **Rain cap**
- Fix the transmitter to the rain cap
- Screw fixing to the wall

INSTALLATION

RECEIVER :

- Open the battery cover, install 3x 1.5v AA batteries; take note of the polarities (+ -)
- Set the codes: the transmitter and receiver have the same16 codes selector. It can work only the transmitter and receiver match the same code.

- Speaker

- To hang on the wall

- 3x 1.5V LR6 AA batteries

- Codes selector (1-16)

VOL Adjustable volume: VOL+/ VOL-
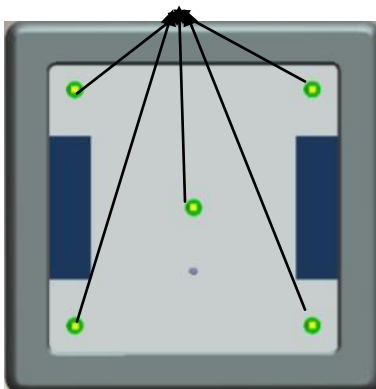
♫ 32 chime sounds selectable:

- **Mode:** including:
  - Week indicator
  - Date indicator
  - Time indicator
  - Temperature indoor
  - Temperature outdoor

- **Select.** After you chose a Mode (e.g. Date indicator) by pushing the "Mode" button, you can push the "Select " button to fix; and the relevant number will flash, push the "Select " button, then you can edit and make the correct data, etc.

- By using the "Mode" and "Select " key, you can make the correct data

```
Sun  Mon  Tue  Wed  Thu  Fri  Sat
         13/07/2010

         12:00 AM
                  PM

Out 🏠          In 🏠

13.8 ℃      17.6 ℃
     ℉           ℉
```
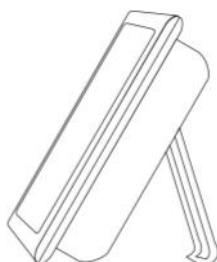
- Outside temperature is updated every 3mn, so once device has been installed, end –user may need to wait few minutes to get accurate temperature.

- LED indicator

- With bracket to stand on desk

- DC : 5V DC 200mA