


**En Español**

## 1

### Verify Box Contents

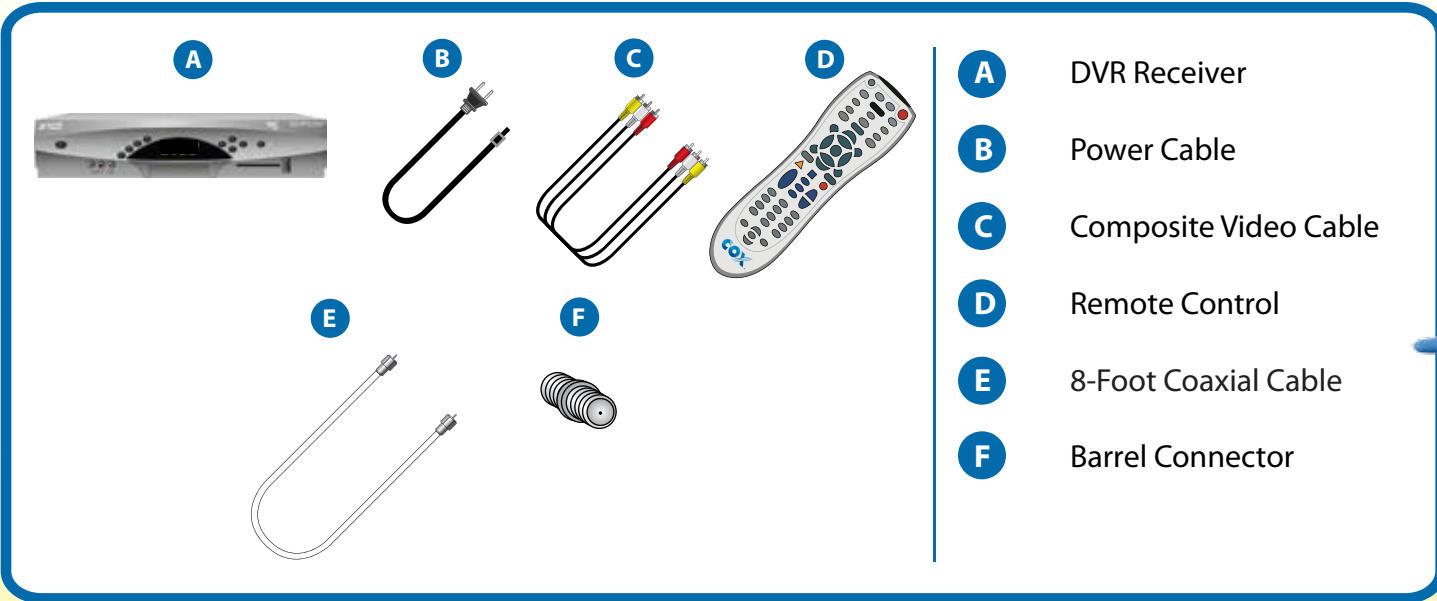


- A** DVR Receiver
- B** Power Cable
- C** Composite Video Cable
- D** Remote Control
- E** 8-Foot Coaxial Cable
- F** Barrel Connector



## 2

### Connect Receiver to an Active Cable Outlet

Connect one end of Part (E) to the wall outlet and the other end to the "Cable In" connection of part (A).

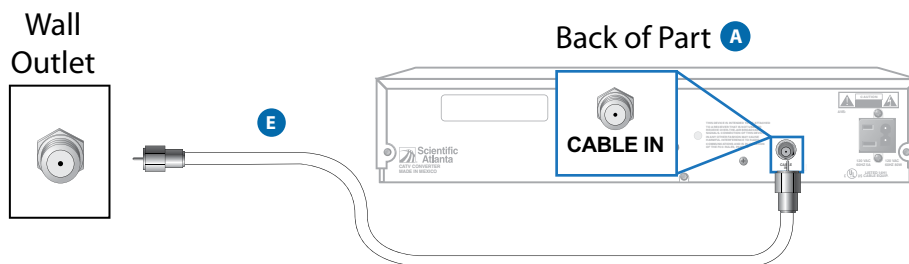


**Note:** Ensure that your connections from the wall outlet to the "Cable In" connector are tightened. Do not use a wrench to tighten the connection. You can use part (F) to connect to the wall outlet if you do not have a wall plate connection.

## 3

### Connect Your DVR Receiver to Your TV (Choose one option)


#### TV w/Coaxial Cable Connection

Connect one end of Part (E) to the "Cable Out" connection on Part (A) and connect the other end to the "Cable In/Ant-1" connections on your TV.

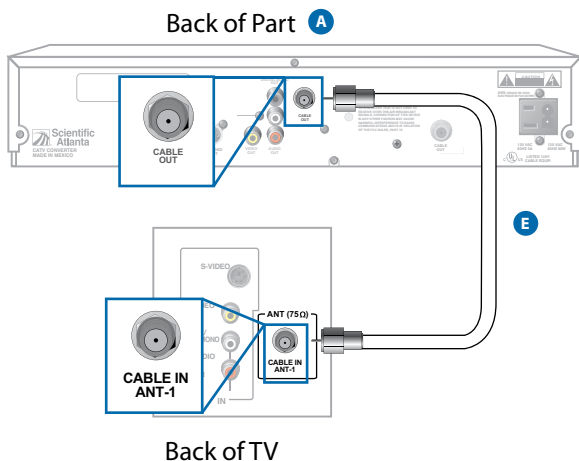

#### TV w/Composite Video Cable Connection

Connect one end of Part (C) to the "Video Out & Audio Out" connections on Part (A), connect the other end of Part (C) to the "Video In & Audio In" connections on your TV.

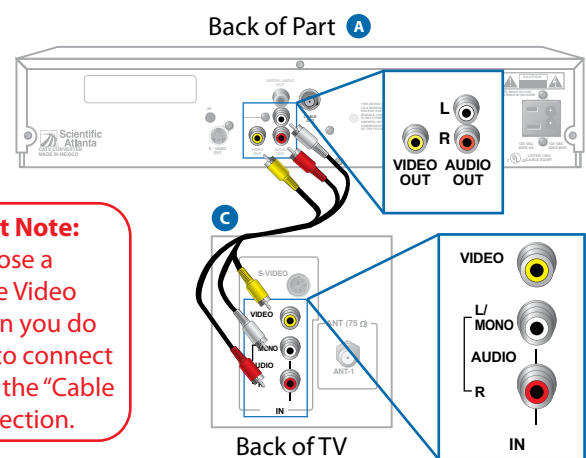


**OR**

**Important Note:** If you choose a Composite Video connection you do not need to connect part (E) to the "Cable Out" connection.

## 4

### Connect Your Receiver to a Power Outlet

Connect the power cord to the receiver and to the power outlet (see illustration below). **Do not press the power button** on the receiver yet.

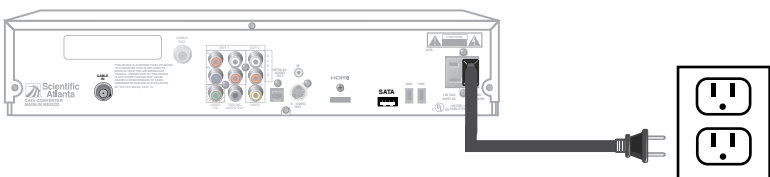

Please wait for the current time to display on the receiver (see illustration below). This may take up to 10 minutes. Once the time displays on the receiver, press the power button. **Connect all receivers before proceeding to step 5.**




## 5

### Activate your equipment

Once you have connected all of your equipment you will need to activate it following the steps below:

1. You will need your order number, this can be found in the following locations:
  - On your UPS label above your name (see illustration)
  - On your Cox Store receipt
  - On your confirmation email
2. Call the activation line toll free at **866-318-0958**.
3. When prompted to, **say or press 1**.
4. After calling the activation line, please wait up to 10 minutes for your service to be activated on your TV. If you are unable to view your channels, please call us back.

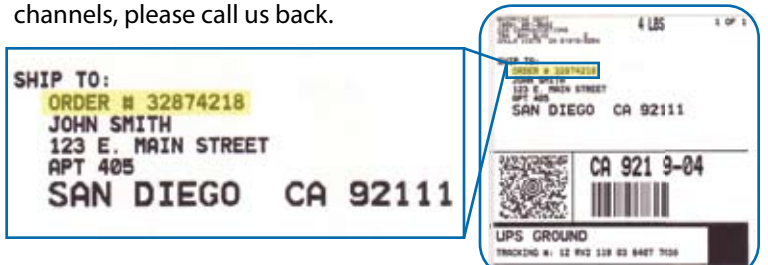

### Tips for Self Activation Success

- ▶ For instructions on how to program your remote to work with your TV, DVD, and cable receiver see **page 3** of the **Cox User Manual** or visit [remotes.cox.com](http://remotes.cox.com)
- ▶ To familiarize yourself with the features of your Cox High Definition Cable service and other Cox services please refer to your **Cox User Manual**.



# COX Digital Video Recorder *Self Activation Kit*

1

## Verifique Los Contenidos de la Caja

English

- A** Recibidor DVR
- B** Cable de Electricidad
- C** Cable de Video Compositivo
- D** Control Remoto
- E** Cable Coaxial de 8 pies
- F** Conector de Barril



2

## Conecte su Recibidor a una Conexión de Cable

Conecte un lado de Parte (F) al enchufe de cable en la pared, conecte el otro lado a la conexión marcada "Cable In" de parte (A).

**Nota Importante:** Puede usar la parte (F) para conectar su cable a la pared si no tiene una placa de conexión.

3

## Conecte su Recibidor a su Televisión (Escoja una opción)

### Televisor con Conexión de Cable Coaxial

Conecte un lado de Parte (E) a la conexión marcada "Cable Out" en Parte (A) y conecte el otro lado a la conexión marcada "Cable In/Ant-1" en su televisor.

### Televisor con Conexión de Cable de Video Compositivo

Conecte un lado de Parte (C) a la conexión marcada "Video Out y Audio Out" de Parte (A), conecte el otro lado de Parte (C) a la conexión marcada "Video In y Audio In" en su televisor.

**Nota Importante:** Si escoge usar la conexión de cables compositivos no necesita conectar Parte (E) a la conexión marcada "Cable Out".

4

## Conecte su Recibidor a un Enchufe Eléctrico

Conecte el cable de corriente al receptor y a la apertura de conexión (vea la ilustración abajo). **No presione el botón de encender** en el receptor todavía.

Por favor espere que se muestre la hora actual en el receptor (vea la ilustración abajo). Esto puede tardarse hasta 10 minutos. Una vez se muestre le hora en el receptor, presione el botón de encender.

**Conecte todos los receptores antes de proceder al paso 5.**

5

## Active su equipo

Una vez que usted haya conectado todo su equipo necesitará activarlo siguiendo los siguientes pasos:

- Necesitará su número de orden, éste puede ser encontrado en los lugares siguientes:
  - En su etiqueta de UPS sobre su nombre (vea la ilustración)
  - En su recibo de la tienda de Cox
  - En su confirmación por mensaje electrónico.
- Llame a la línea de activación al **866-318-0958**.
- Cuando le pidan una opción, **diga o presione el 1**.
- Luego de llamar a la línea de activación, por favor espere hasta 10 minutos para que su servicio sea activado en el TV. Si todavía no puede ver los canales, vuelva a llamarnos.

### Claves para el éxito de la Auto-Activación

- ▶ Para las instrucciones en cómo programar su control remoto para trabajar con su TV, DVD, y el receptor de cable vea la **página 3** del **User Manual de Cox** o visite [remotes.cox.com](http://remotes.cox.com)
- ▶ Referir al **User Manual de Cox** para aprender de todas las opciones de Cox High Definition Cable y los otros servicios de Cox.

