

DILOG

HIGH DEFINITION DIGITAL CABLE RECEIVER
PVR READY / DC-250HD

Användar manual



Viktigt

Denna manual hjälper dig bli bekant med din DILOG DC-250HD och de många bra funktioner och fördelar DILOG DC-250HD har. Läs nogra igenom alla säkerhets och användningsinstruktioner innan du börjar använda din nya digitalbox. Förvara alltid manualen på samma ställe så att du enkelt hittar den om du behöver den vid senare tillfälle.

Förklaring av symboler i manualen:

 Note	Indikerar viktig eller nyttig information.
 Warning!	Indikerar fara.
"MENU" (Text inom citationstecken)	Indikerar en knapp på fjärrkontrollen eller digital boxen.
	För att minimera risken för elektriska stötar, ta aldrig bort höljet (eller bakdelen) från digital boxen. Det finns inga delar i digital boxen som användaren själv kan reparera. Låt enbart ett auktoriserat servicecenter serva digital boxen.
	Indikerar farlig spänning inne i digital boxen som kan leda till elektrisk stöt eller personskada.
	Indikerar att viktiga hanterings- och underhållsinstruktioner medföljer digital boxen.



Manufactured under license from Dolby Laboratories.

"Dolby" and the double-D symbol are trademarks of Dolby Laboratories.





HDMI, the HDMI Logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.

Säkerhet och försiktighetsåtgärder

Viktigt när du installerar digital boxen:

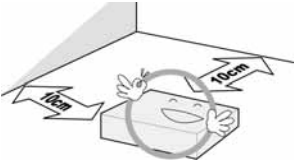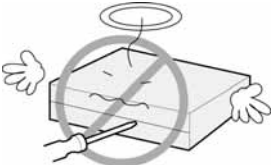Placera digital boxen på en jämn yta 	Installera inte digital boxen i kyla eller direkt soljus 
Lämna ett mellanrum på 10cm runt digital boxen 	Öppna aldrig digital boxens kåpa. 

Användning och skötsel av digital boxen

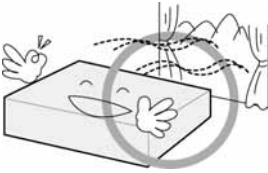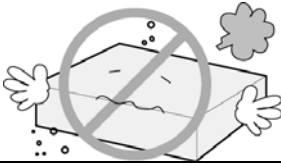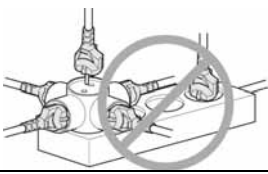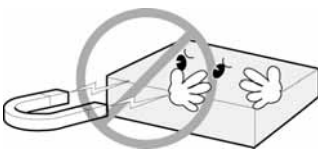
Placera digital boxen på en väl ventilerad plats 	Placera digital boxen på en plats där damm och annat material inte kan samlas 
Koppla inte in digital boxen med andra elkablar än de medföljande i förpackningen 	Placera inte digital boxen där den kan utsättas för extrema vibrationer eller magnetiska fält. 
Placera inte saker ovanpå digital boxen 	Ställ inte saker som innehåller vätska ovanpå digital boxen 

Skall du resa bort eller inte använda boxen under en tid, koppla ur strömsladden från väggen.

Innehållsförteckning

Kapitel 1. Innan du börjar	5	4.7 Hantera favoritkanallistor	30
1.1 Funktioner	6	4.8 Byta kanal	32
1.2 Paketets innehåll	6	4.9 Titta på programguiden	32
1.3 Produktbeskrivning	8	4.10 Titta på text-TV	33
1.3.1 Front Panelen	8	4.11 Växla mellan TV och Radio	36
1.3.2 Baksidan	9	4.12 Ändra videoformat	36
1.4 Fjärrkontrollen	10	4.13 Inspelning och uppspelning	37
Kapitel 2. Anslutningar	13	4.13.1 Direktinspelning	37
2.1 Ansluta TV & VCR	14	4.13.2 Normal inspelning	38
2.2 Ansluta optisk S/PDIF	17	4.13.3 Schemalagd inspelning	40
2.3 Uppstart	17	4.13.4 Uppspelning av inspelade filer	42
Kapitel 3. Grundinställningar	19		43
Kapitel 4. Hantering	25	4.13.6 Bokmärken	44
[Grundfunktioner]	24	Kapitel 5. Inställningar	45
4.1 Byta kanal	24	5.1 Kanalsökning	47
4.2 Ställa in volymen	24	5.2 Kanalhantering	47
4.3 Programinformation	27	5.3 Användarinställningar	48
4.4 Ändra textningsspråk	26	5.4 Verktyg	48
4.5 Ändra ljudspråk	27	5.4.1 USB	49
[Avancerade funktioner]	28	5.5 CAS	49
4.6 Hantera kanallistor	28	5.5.1 Smart Card-status	50
4.6.1 Visa kanallista	28	Kapitel 6. Appendix	60
4.6.2 Söka efter kanal	29	6.1 Problemsökning	52
4.6.3 Redigera kanal	29	6.2 Specifikation	53

Kapitel 1

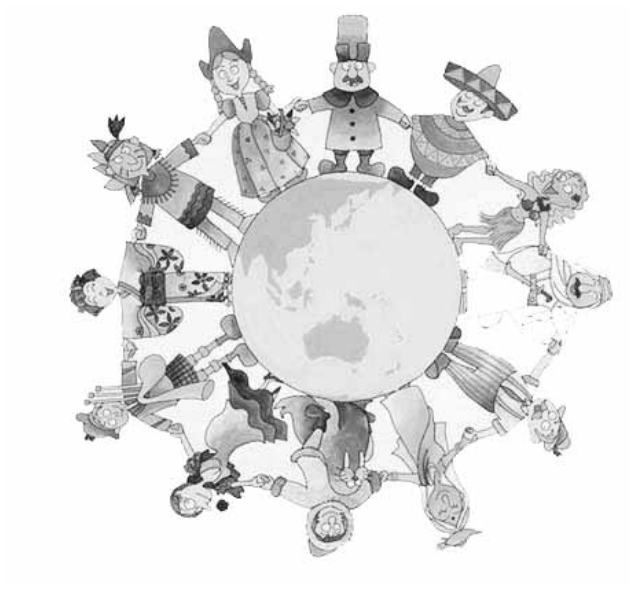

Innan du börjar

1.1 Funktioner

DC-250HD är bland marknadens bästa digitala kabelmottagare för HD (high definition) sändningar. DC-250HD använder den senaste MPEG-4-teknologin som gör att du kan njuta av TV program med absolut bästa bildkvalitet. Den enkla anslutningen, det lätthanterliga gränssnittet och kristallklart Dolby AC-3 digitalt ljud via elektrisk S/PDIF gör upplevelsen än bättre.

DC-250HD erbjuder dessutom Elektronisk Program Guide (EPG) för att enkelt få en översikt av programtablån.

Specifikation.


- MPEG-2 & H.264(MPEG-4 Part10,MPEG-4/AVC) support
- Full DVB-C Standard support
- European digital cable standard ETSI EN 300 429
- Tuner Loop-Through output (Full band) support
- MPEG-1 Layer I & II, MPEG-2 Layer II, CD audio support
- MPEG2 AAC, MPEG4 AAC audio decoding support
- DTS with Transcoded Multichannel HE-AAC Audio Output Support
- S/PDIF for Digital Audio Output
- Dolby Digital and Dolby Digital plus support.
- Mono, Left, Right, Stereo, Audio Output Support
- Easy & Fast Auto Programming, Intuitive User Interface
- Various Video Display Format With PAL 576i/576p/720p/1080i 50 Support
- Various Video Aspect Ratio With 4:3, Letter Box, Full Screen And 16:9 Support
- CVBS, HDMI, SCART, Video Output Support
- Software Upgrade Via USB 2.0
- Software Upgrade via Over the air support.
- Separated TV/Radio/All List & Favorite Group List
- Multi Language Support (*Customer Option)
- Conax CAS v7 / CryptoGuard Chipset Pairing (Smart Card Reader For Embedded CAS Support)
- 4-Digit 7-Segments Front LED Numerical Display For Service Number and Time Display
- Luxury Touch panel
- USB PVR Ready.

Funktioner

- Kraftfulla och lätthanterliga funktioner för redigering (läsa, radera, byta namn på kanaler och favoritgrupper)
- Elektronisk Program Guide (EPG) för programinformation direkt på skärmen
- Flerspråks support
- Automatisk samt manuell sökningsfunktion
- Föräldrakontroll genom barnlås
- Text-TV textning med hjälp av VBI och OSD

1.2 Paketets innehåll

Kontrollera att följande artiklar finns i paketet:

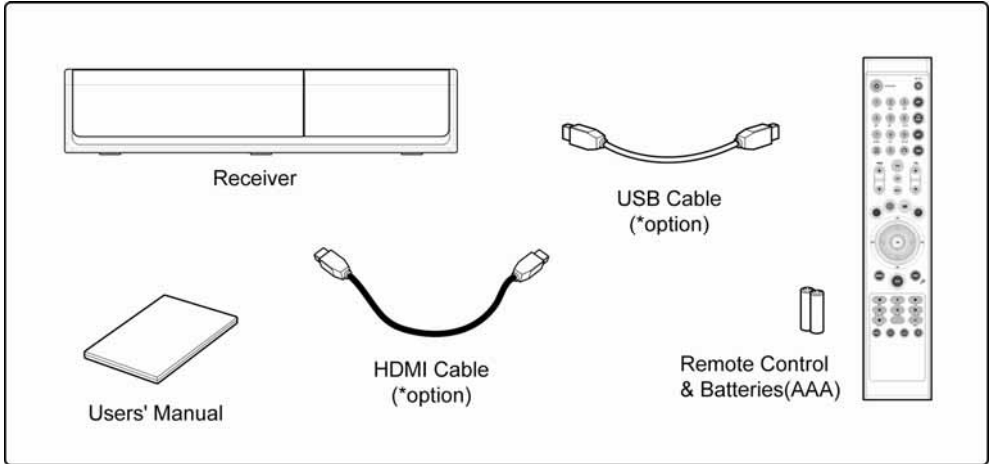


Note

- Det kan förekomma ändringar av produktinnehållet
- Kablar som inte finns med ovan måste köpas separat

1.3 Produktbeskrivning

1.3.1 Frontpanel

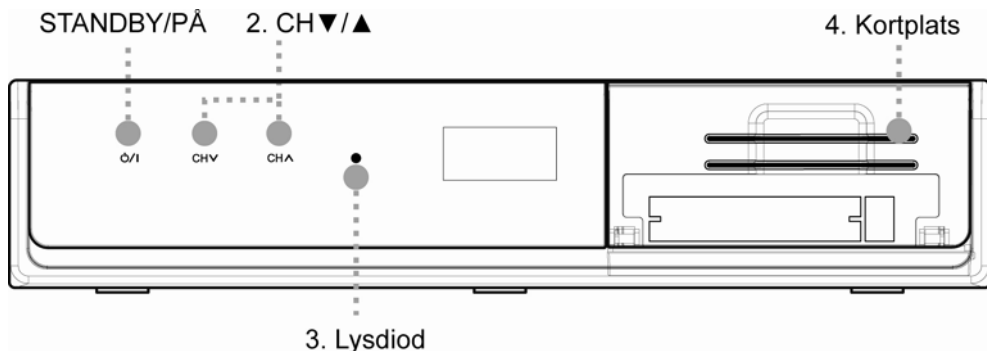

1. STANDBY/PÅ

- Växlar den digitala mottagaren mellan standby och användningsläge
- Användningsläge: Frontpanel visar aktuellt kanalnummer, Ö/I, CH ▲/▼.
- Aktivt standby läge:
 - Frontpanel visar aktuell tid och Ö/I.
 - Växla mellan aktivt standby läge och användningsläge genom att trycka på [Ö/I] på frontpanelen
- Passivt standby läge (funktion som drar mindre än 1W)
 - Frontpanelen visar bara Ö/I.
 - Växla från användningsläge till aktivt standby läge genom att trycka på [Ö/I] på frontpanelen i 4~5 sekunder

2. CH ▼/▲


Byter kanal upp/ned och flyttar pekaren upp/ner i menyläget

3. Lysdiod


Blinkar grönt då fjärrkontrollen används för att indikera kontakt.

4. Kortplats

Kortplats för programkort.

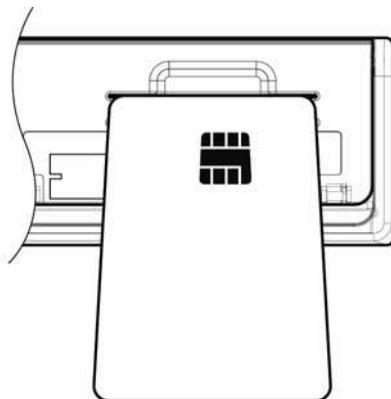

1.3.2 Baksida

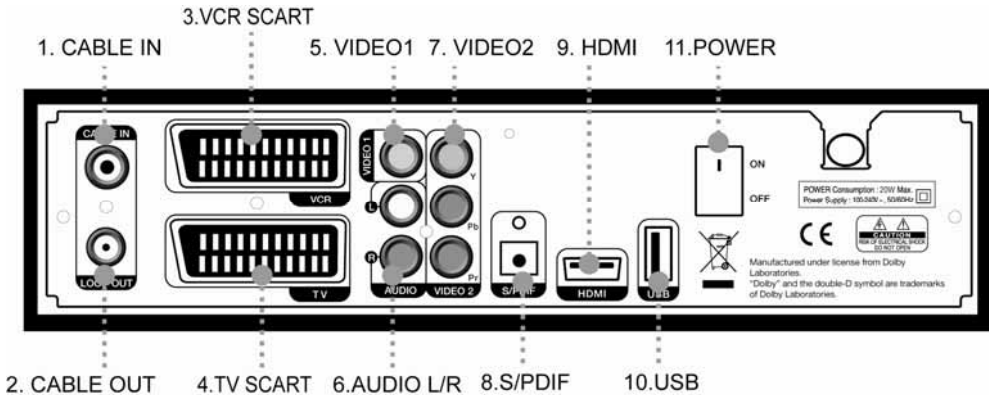

1. CABLE IN

Anslut inkommande antennkabel från väggen

2. CABLE OUT

För vidarekoppling av antenn till annan digitalbox.

3. VCR SCART

Ansluter till din video med en scart-kabel

4. TV SCART

Ansluter till din TV med en scart-kabel

5. VIDEO1

Komposit signal till TV eller video via RCA kabel

6. AUDIO L/R

Anslutning till ljudingångar på din TV/Video med RCA-kabel

7. VIDEO2 (YPbPr)

Ej tillgänglig på denna modell

8. S/PDIF

Digital S/PDIF för tillkoppling till extern förstärkare

9. HDMI

HDMI kontakt för inkoppling av TV (rekommenderas för bästa bildåtergivning)


10. USB

Ansluter en extern USB-lagringsenhet såsom en USB-hårddisk eller USB-minne. Används även för mjukvaru uppdatering.

11. STRÖMBRYTARE

Används för att slå på och av huvudströmmen

1.4 Fjärrkontrollen

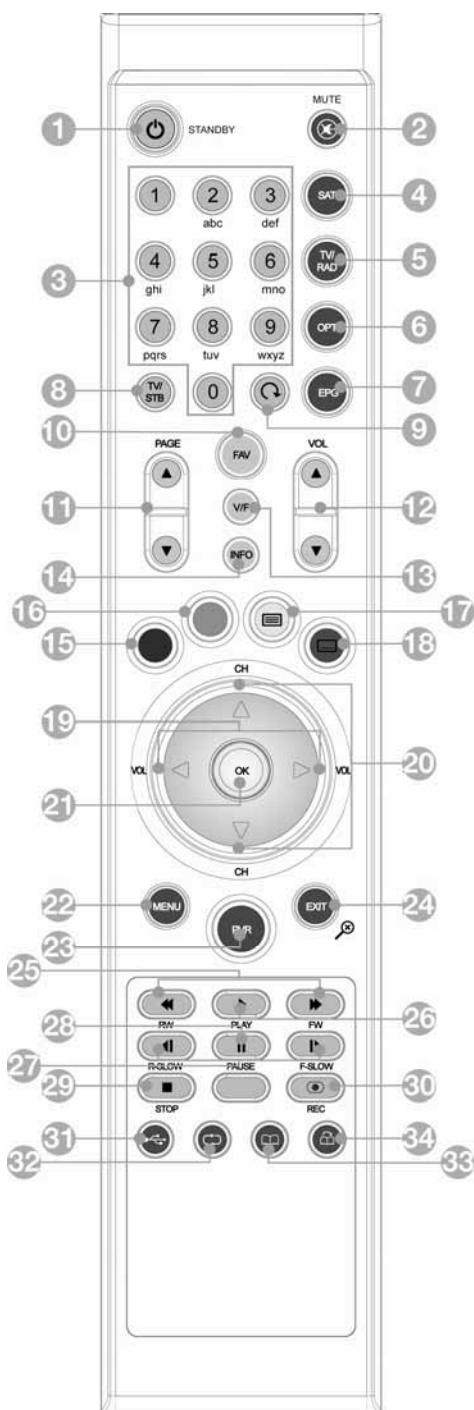

1. STANDBY ()

Växlar digitalboxen mellan standby-läge och på.

- Växlar den digitala mottagaren mellan standby- och användningsläge
- Användningsläge: Frontpanel visar aktuellt kanalnummer, **CH ▲/▼**.
- Aktivt Standby-läge:
 - Frontpanel visar aktuell tid och **CH**.
 - Växla mellan aktivt standby-läge och användningsläge genom att trycka på [**CH**] på frontpanelen
- Passivt Stand-by läge (funktion som drar mindre än 1W)
 - Frontpanelen visar bara **CH**.
 - Växla från användningsläge till aktivt standby-läge genom att trycka på [**CH**] på frontpanelen i 4~5 sekunder

2. MUTE ()

Stänger av ljudet

3. SIFFERKNAPPAR (0~9)

Väljer TV/Radio kanalnummer eller bokstäver.

4. SAT ()

Väljer specifik satellit.

5. TV/RAD ()

Växlar mellan TV och Radio.

6. OPT ()

Visar ljud, text-TV, och textningslista

7. EPG ()

Visar Elektronisk Program Guide. Tryck igen för att återgå till normalläge

8. TV/STB ()

Frigör SCART kontakten

9. Växla kanal (↺)

Återgå till föregående kanal

10. FAV (FAV)

Du kan skapa favorittistor genom att trycka på "MENU"-knappen och sen ändra kanalläge genom att trycka på "FAV"-knappen.

11. PAGE (▲/▼)

Byt mellan TV/Radio kanaler utan att visa OSD.

12. VOL (▲/▼)

Ökar/minskar volymen för TV/Radio utan att visa OSD.

13. V/F (V/F)

Växla upplösning mellan 1080i/720p/576p/576i & Auto.

14. INFO (INFO)

Visar kanalinformation

15. Röd

16. Grön

17. Text-TV (≡)

Gå in i text tv läge

18. Textning (☐, "Blå knapp")

Visar tillgängliga textningsspråk på den aktuella kanalen.

19. VOL ◀/▶

Ökar/minskar volymen för TV/Radio eller ändrar värdet där förprogrammerade värden finns.

20. CH ▲/▼

Ändra TV/Radiokanaler upp och ner.

21. OK (OK)

För att välja en meny eller bekräfta ett val och för att visa kanallistan medan man ser på ett program.

22. MENU (MENU)

Visar OSD-menyn.

23. PVR (PVR)

Visar listan med inspelade filer.

24. EXIT (EXIT)

För att gå ur nuvarande meny eller för att avbryta det pågående valet i meny läge.

25. Snabbspolning bakåt/framåt



För att spola tillbaka/framåt i uppspelningsläge. När du trycker , ökar uppspelningshastigheten i 4 steg. (x 2, x 4, x 8, x16). Och när du trycker , ökar tillbakaspolningshastigheten i 4 steg (x 1, x 2, x 4, x8).

26. Uppspelning (▶)

Startar uppspelning och återgår till normalläge från snabbspolningsläge.

27. Långsam spolning bakåt/framåt



För att ändra uppspelningsläget till slowmotion-läge

28. Pause (⏸)

För att pausa uppspelningen.

29. Stop (■)

För att stoppa uppspelningen eller inspelningen

30. Inspelning (⏻)

För att spela in pågående program eller visa inspelnings menyn i inspelningsläget.

31. USB (USB)

För säker borttagning av USB

32. Repeat (↺↻)

När du trycker på knappen så ändras upprepningsläget mellan specifik sekvens upprepning/alla sekvenser upprepning/stäng av upprepningsläget.

33. Index (📖)


Skapar eller tar bort nuvarande index. En inspelad fil kan innehålla upp till 64 indexeringar.

34. Gå till nästa index (📖)

Används för att gå till nästa index.

**Note : Vinkel vid användning av fjärrkontrollen.**

Fjärrkontrollen kan användas upp till 7meter från digital boxen och med en 30-graders vinkel från mottagardioden.

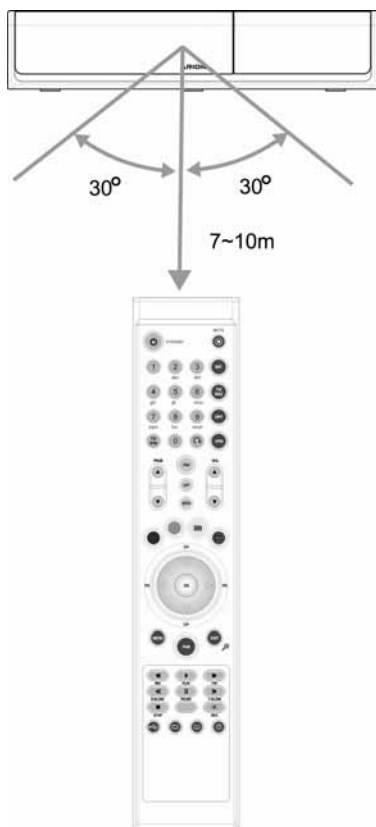

Kapitel 2



Anslutningar


Detta kapitel beskriver hur du ansluter digital boxen till andra enheter. Välj det alternativ som passar ditt system.

 **Note** : Om du stöter på problem eller har några frågor när du installerar digital boxen, var vänlig kontakta din återförsäljare.

2.1 Ansluta TV & VCR


1. Ansluta en TV med HDMI (Om din TV har en HDMI-ingång)

- 1) Anslut TV-antennen till CABLE på digital boxen
- 2) Anslut TV:ns RF-IN till digital boxens LOOP OUT
- 3) Anslut digitalboxens HDMI-utgång till din TV:s HDMI-ingång

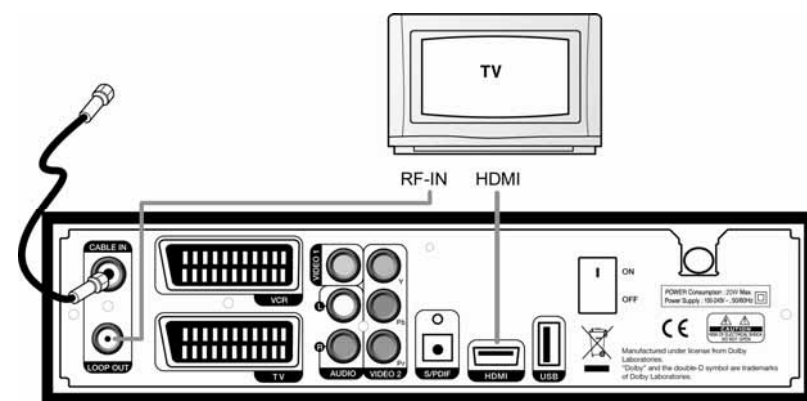

2. Ansluta en TV och VCR med SCART-kabel


- 1) Anslut TV-antennen till CABLE IN på digitalboxen
- 2) Anslut VCR:ens RF-IN till digitalboxens LOOP OUT
- 3) Anslut VCR:ens RF-OUT till TV:ns RF-IN
- 4) Anslut videon och TV:ns audio till digitalboxens VIDEO 1 respektive AUDIO L/R
- 5) Anslut en fullkopplad scart kabel mellan mottagarens TV scart kontakt och din Tv scart ingång

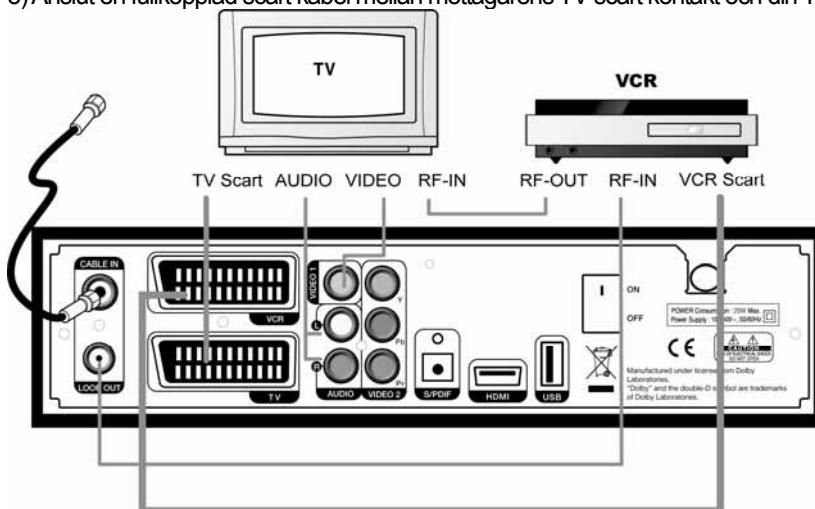

2.2 Anslut optisk S/PDIF


Om du tittar på ett program som har Dolby Digital-ljud kan du välja att ta ut flerkanalsljud från boxen till din Dolby-digital dekodare/förstärkare.

Anslut en optisk S/PDIF-kabel mellan boxens S/PDIF utgång och Dolby-digital dekodern/förstärkaren.

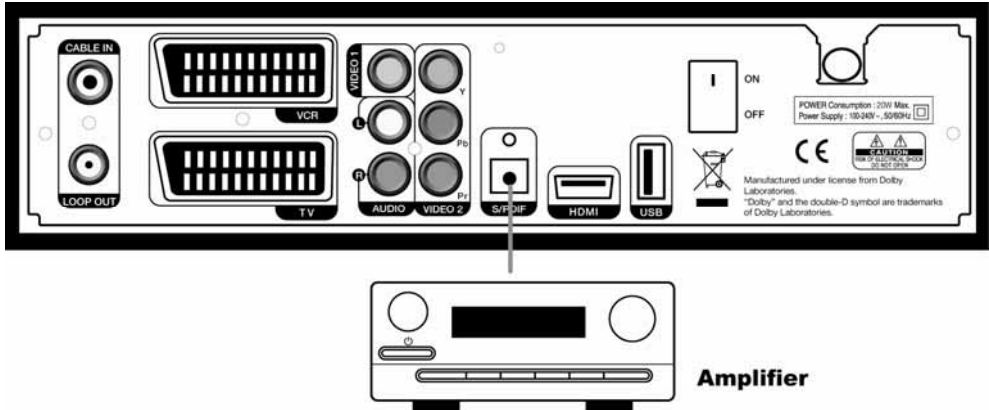


2.3 Anslut USB-kabeln

Anslut USB-kabeln till din hårddisk/ ditt USB minne.

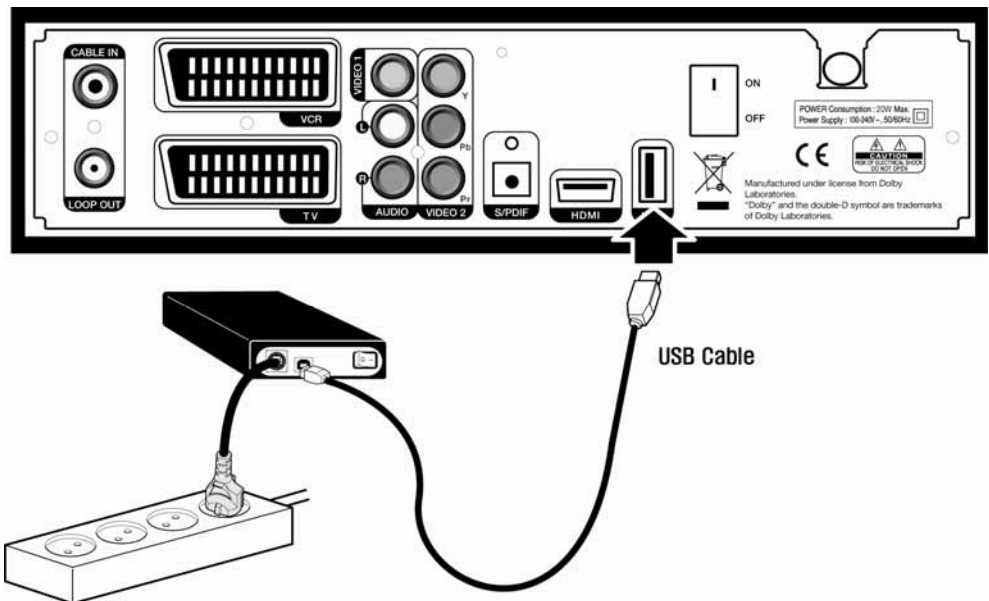


2.4 Uppstart

1. Anslut digitalboxens nätsladd till ett eluttag och tryck sen på "power"-knappen på digitalboxens baksida för att starta boxen.

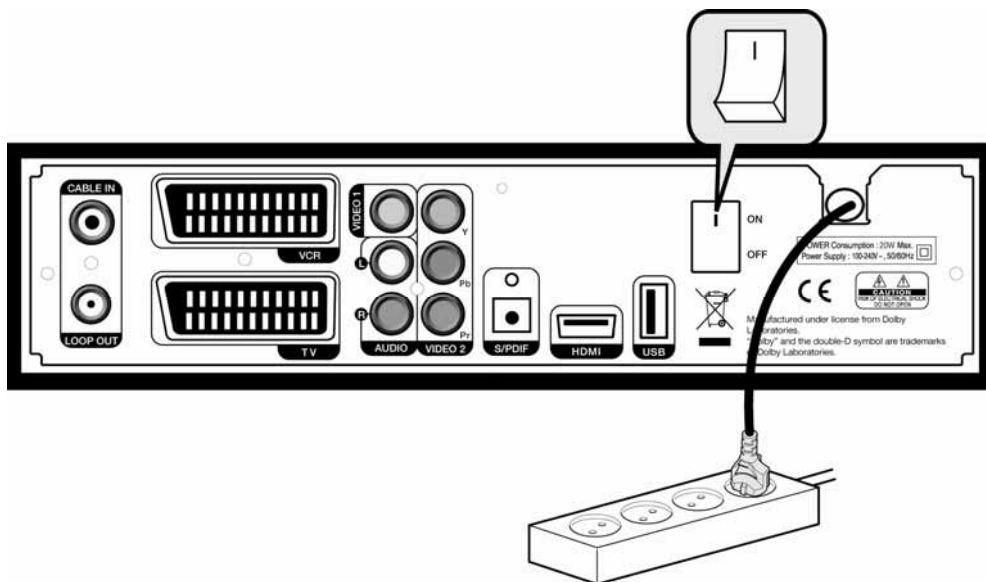

2. Första gången du sätter på digitalboxen kommer den automatiskt att visa guiden för grundinställningar. Nästa kapitel ger en detaljerad beskrivning av grundinställningar.

Kapitel 3

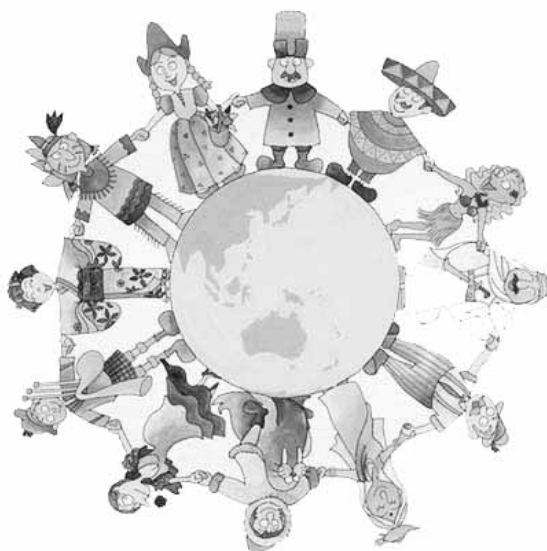

Grundinställningar

Innan du kan börja titta på TV måste en grundinställning och en kanalsökning göras. När denna är genomförd kan du börja titta på TV eller lyssna på radio

Warning!

- En ofullständig grundinstallation kan innebära att du inte kan se på de kanaler du har i utbudet.
- Om du inte ser rutan nedan efter det att du startat boxen, tryck två gånger på knappen "V/F." Fortsätt tills du ser bilden nedan:

1. Sätt på TV och digitalbox. Följ instruktionen på skärmen. Klicka på "Blå"-knappen för att starta grundinstallationen.



2. Välj lämpligt språk från listan genom att använda “ ”-knapparna och tryck sen på “Blå”-knapp för att gå vidare i installationen.



3. Klicka på “Blå”-knapp för att gå vidare i installationen.



4. Välj anslutningssätt genom att använda “ ”-knapparna och tryck sedan ”Blå”-knapp. Om du väljer ”avancerad” ska du välja primärt, sekundärt ljud, primär, och sekundär undertext genom att använda “ ”-knapparna.



5 Välj Ljud, Textning, språk etc. genom att använda “ ”-knapparna och klicka sen på ”Blå”-knapp.



6. Välj TV-format mode genom att klicka på “ ”-knapparna och klicka sen på “Blå”-knapp



7. Nu kommer kanalsöknings bilden upp på skärmen. Klicka på ”Blå”-knapp för att komma till nästa steg i installationen.



8. När kanalsökningen är klar kommer detta meddelande upp på skärmen.




Note

Om du stöter på problem eller har några frågor under installationen, vänligen kontakta din lokala återförsäljare eller installatör.

Nu har du gått igenom alla steg för att kunna titta på TV eller lyssna på radio. Klicka på "blå knapp" för att gå ur grundinställningen. För en mer detaljerad beskrivning hur du använder digitalboxen, se kapitel 4.

Kapitel 4

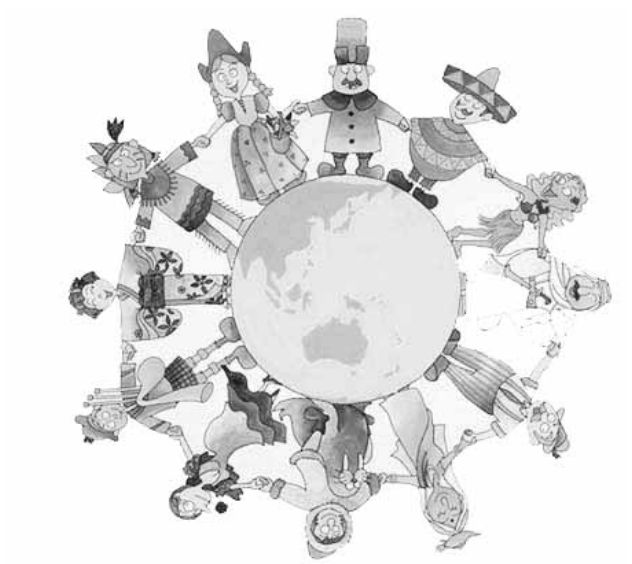

Hantering

[Grundfunktioner]

4.1 Byta kanal

Det finns flera olika sätt att byta kanal.



- Klicka på "CH upp/ned" på fjärrkontrollen för att ändra kanal stegvis.
- Klicka på "OK"-knappen för att visa kanallistan, välj sedan önskad kanal.
- Klicka på "växla kanal knappen" på fjärrkontrollen för att gå till föregående kanal. (pil symbol)
- Knappa in önskat kanalnummer genom att använda "0-9"-knapparna.
- Klicka på "EXIT"-knappen för att dölja kanallistan.

4.2 Ställa in volymen

Du kan ändra volymen på nuvarande kanal.



- Klicka på "V</>" för att ändra volymen.
- Klicka på "MUTE" för att stänga av ljudet helt eller sätta på det igen.
- Klicka på "OPTION"-knappen för att ändra inställningarna för ljudet. Du kan välja mellan stereo eller flerkanalsljud om detta finns tillgängligt i utsändningen.



Note : Justering av volym fungerar även om du är inne i en meny, indikator för ljudjustering visas dock inte.


SWEDEN

4.3 Programinformation

Du får fram informationsfönstret genom att klicka på "INFO"-knappen medan du tittar på ett program. Klicka på "EXIT"-knappen för att dölja programinformationen.

Step 1: Grundinformation

Grundinformationen ser ut som nedan:

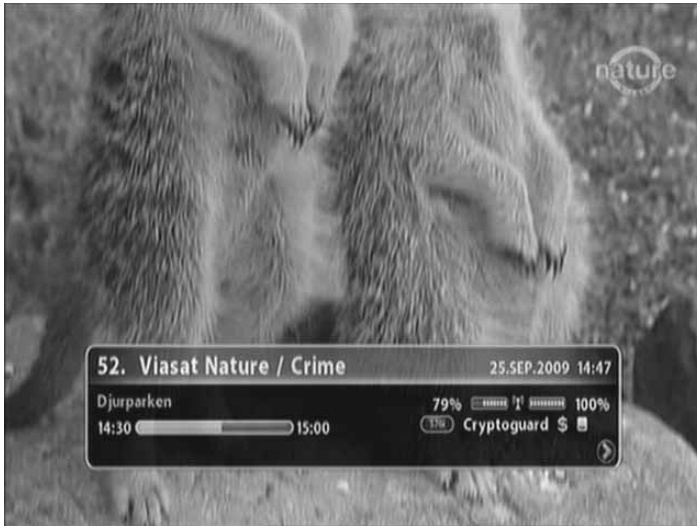

Step 2: Detaljerad programinformation

Du kan även titta på detaljerad programinformation om programmet du tittar på just nu. Klicka på "INFO"-knappen igen medan bas information visas. Klicka på "EXIT"-knappen för att dölja informationen.



4.4 Ändra textningsspråk

Om programmet du tittar på har textningsinformation kan du välja textningsspråk.

1. Klicka på "Blå"-knapp för att visa en lista över tillgängliga språk.



2. Välj önskat språk genom att använda "▲▼"-knapparna, och klicka sedan på "OK"-knappen. Textningsspråket kommer att visas längst ner på skärmen. ,



3. Välj "OFF" i textningsspråkslistan för att se programmet utan text.



Note : Du kan välja ett förvalt textningsspråk genom att trycka på "MENU"-knappen och välja Användarinställning/språkinställning/primär undertext.

4.5 Ändra ljudspråk.

Om programmet du tittar på erbjuder flera olika ljudspråk kan du välja önskat språk.

1. Klicka på "OPTIONS"-knappen för att visa en lista över tillgängliga ljudspråk. Om menyn inte är i ljudspråksläge, tryck på "◀▶"-knappen.



2. Välj önskat ljudspråk genom att använda "▲▼"-knapparna och klicka sen på "OK"-knappen. Ljudspråket ändras omedelbart.



Note : Du kan välja ett för inställt ljudspråk genom att klicka på "MENU"-knappen och välja Användarinställningar/språkinställning/primärt ljud

Avancerade funktioner

4.6 Hantera kanallistan

4.6.1 Visa kanallistan

1. Medan du tittar på ett program klickar du på "OK"-knappen för att visa vald kanallista.



- FAV: Visar favoritkanallistor
- Grön: Redigerar kanallistoma.

2. Flytta markören till önskad kanallista genom att använda "▲▼"-knapparna och klicka på "OK"-knappen för att ändra kanal.



Note

Klicka på "FAV"-knappen för att växla mellan de olika kanallägena som tex "ALL, FAV1~4, osv". Se kapitel 4.7 Hantering av favoritkanallistor för mer information.

4.6.2 Sortera kanaler

1. Klicka på "OK"-knappen medan du tittar på ett program för att visa vald kanallista.
2. Om kanallistan inte är favoritlistan, klicka på "fav"-knappen för att välja favoritkanallistan .
3. Klicka på "Röda"-knappen för att välja sorteringsalternativ som till exempel alfabetisk ordning, datum osv.



4. Klicka på "PAGE ▲▼"-knapparna för att flytta dig mellan kanalema.

4.6.3 Redigera kanaler

Du kan redigera varje kanal, t.ex. ändra namn, låsa och favoritgrupp..

1. Klicka på "OK"-knappen när du tittar på ett program för att visa vald kanallista.
2. Klicka på "Gröna"-knapp för att redigera kanalen.



3. Du kan låsa, ändra namn på kanalen och ändra till annan favoritgrupp. Gå till önskad meny genom att använda "▲▼"-knapparna och tryck sen på "OK"-knappen.
4. När du klickar på "EXIT"-knappen efter avslutad kanalredigering kommer ett konfirmeringsfönster att visas på skärmen. Flytta pilen till "OK" och klicka på OK-knappen för att spara dina ändringar.

4.7 Hantera favoritkanallistor

Du kan skapa och redigera favoritkanallistor eller grupper..

1. Tryck på "MENU"-knappen .

2. ① Gå till "redigera" menyn genom att använda "▲▼"-knapparna och sen trycka på "OK" - knappen.

② Välj redigera favoriter genom att använda "▲▼"-knapparna och sen trycka på "OK" - knappen.



3. Klicka på "FAV"-knappen för att se favoritkanalgrupperna..



Note

- **Röd** : Låser/öppnar kanaler
- **FAV**: Väljer favorit grupp
- **OK**: Läger till/tar bort kanaler till/från önskad favoritgrupp.
- **EXIT**: Avslutar och sparar ändringar



Note : FAV1~4 är för inställda namn. Du kan döpa om dem till vad du vill.

4. Du kan redigera favoritkanallistorna eller grupperna. Välj favoritgrupp genom att använda “▲▼”-knapparna och tryck sedan på “OK”-knappen. Om du vill lägga till kanaler, välj önskad kanal och tryck sen på “OK”-knappen.

Redigera favoriter

522000KHz/6875Ks/64 QAM Fav1

5 Kanal 5	\$	1 Viasat Sport HD	\$
9 Kanal 9	\$	2 Viasat Nature / Crime	\$
40 TV4 Fakta	⬆ \$	3 TV4 Fakta	\$
52 Viasat Nature / Cr..	⬆ \$		
95 Viasat Sport HD	⬆ \$		

Green Callout Box:

- : Växlar till höger kolumn
- **Röd** : Låser/öppnar kanaler
- **Grön**: Ändrar ett kanalnamn
- **FAV**: Väljer favoritgrupp
- **OK**: Tar bort/lägger till kanaler från/till önskad favoritgrupp.
- **EXIT**: Avslutar och sparar ändringar.

Pink Callout Box:

- : Växlar till vänster kolumn.
- **OK** : Tar bort kanaler i favoritgrupp.
- **RÖD**: Låser/öppnar kanaler
- **Grön**: Flyttar kanaler till önskad plats
- **Gul**: Ändrar ett gruppnamn .
- **FAV**: Väljer favoritgrupp
- **EXIT**: Avslutar och sparar ändringar.

5. Om du vill spara ändringarna, klicka på “MENU”- eller “EXIT”-knappen efter du redigerat favoritkanalen.

4.8 Byta kanal

1. Tryck på "OK"-knappen för att visa Alla Kanaler eller favoritkanallistan beroende på nuvarande kanal-läge.



2. Välj kanal-läge genom att använda "◀▶" - knapparna och tryck sen på "OK" - knappen.

4.9 Titta på programguiden

Programguiden visar information om varje kanal – per datum och tid.

1. Tryck på EPG-knappen.



Note

- **Röd:** Ändrar tablåläge
- **Grön:** Visar kanalgruppema
- **Gul:** Hoppa till nästa dag.
- **Blå:** Reserverar inspelning
- **INFO:** Visar detaljerad EPG


2. Tryck på "INFO"-knappen för att se information om valt program.



4.10 Text-TV

Text-TV är bara tillgängligt när programmet erbjuder text-TV-service.

1. Tryck på "Gul knapp". Text-TV kommer nu att visas på skärmen .

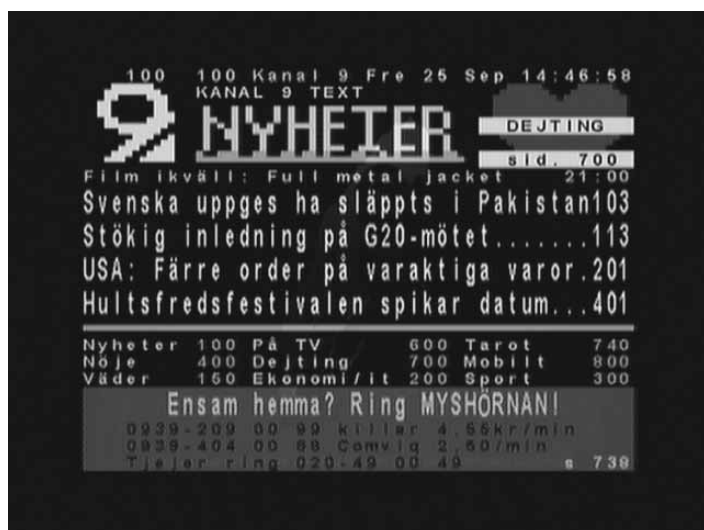

2. Välj sida genom att använda "0-9"-knapparna (100-899)

3. Tryck på "EXIT"-knappen för att gå ur text-TV-läget.

4.13 Inspelning och uppspelning

DC-250HD har tre olika inspelningsvarianter. Direkt inspelning, normal inspelning och schemalagd inspelning.

4.13.1 Direktinspelning

Direktinspelningsfunktionen sparar automatiskt en timme av programmet du tittar på och lägger detta temporärt på den externa hårddisken. Detta gör att du kan titta på programmet som du tittar på en videofilm, du kan alltså spola tillbaka, spola framåt, visa repris och pausa.

1. Tryck på "MENU"-knappen för att komma till direktinspelningsfunktionen.

Flytta markören till "Verktyg"-menyn och tryck på "OK"-knappen.

- ① Välj USB-menyn genom att använda "▲▼"-knappen och tryck sen på "OK"-knappen.
- ② Gå till "val" genom att använda "▲▼"-knappen och tryck sen på "OK"-knappen
- ③ Välj "tidsfördröjning" genom att använda "▲▼"-knappen, välj sedan "aktivera" och "exit" för att spara.



- Varje gång du tittar på ett TV-program så kommer det nu automatiskt att spelas in.
- Tryck på “▶”-knappen för att visa status-listen på inspelningen. Status-listen visar status för pågående inspelning och mängden temporärt sparad data.



- ◀ ▶ : Ändrar uppspelning till slowmotion.
- : Flyttar till önskad position medan status-listen visas. Ändrar volym i TV-läge
- ◀ ▶ : Flyttar till önskad position medan status-listen visas. Ändrar uppspelningshastighet i uppspelningsläge.

- Om du byter till en annan kanal avbryts direktinspelningen på föregående kanal och startar om på den nya kanalen. Föregående sparad data raderas automatiskt.

4.13.2 Normal inspelning

Normal inspelning sparar programmet direkt. Du kan även här titta på programmet och använda funktioner som spola tillbaka, spola framåt, repris, paus och inspelning..

- Tryck på “MENY”-knappen för att välja inspelningsinställning.
 - Gå till “Verktyg”-menyn genom att använda “▲▼”-knapparna och tryck sen på “OK”-knappen.
 - Välj USB-menyn genom att använda “▲▼”-knapparna och tryck sen på “OK”-knappen.
 - Välj “inspelning”



2. Tryck på "Röd" knapp för att starta inspelningen direkt för programmet du tittar på. Tryck på "MENU"-knappen för att gå ur inspelningsfönstret, och efter det kommer ett index-nummer att synas på skärmens övre högra hörn.



Du kan också starta en normal inspelning på någon av följande sätt:

- ① Använd "inspelning" i USB-menyn.
- ② Använda schemalagd inspelning.



Note : Vissa menyer, t.ex. sök kanal och redigera, fungerar inte i inspelningsläge.

3. Om du trycker på "■"-knappen för att stoppa en inspelning kommer listan över inspelade program att visas på skärmen igen.



4. ① Gå till önskad fil genom att använda "▲▼"-knapparna, och tryck sen på "■"-knappen.
- ② Tryck på "EXIT" och sen på "OK"-knappen och inspelningen avbryts.



Note : Det finns begränsningar när det gäller att byta kanal under en inspelning.

4.13.3 Schemalagd inspelning

Schemalagd inspelning sparar önskat program automatiskt. Du kan sen titta på programmet och använda funktioner som spola tillbaka, spola framåt, repris, paus och inspelning.

1. Tryck på "MENU"-knappen

① Gå till "Användarinställningar" genom att använda "▲▼"-knapparna och tryck sen på "OK"-knappen.

② Välj "Timer" genom att använda "▲▼"-knapparna och tryck sen på "OK"-knappen.



2. Timerinställningsfönstret syns nu på skärmen. Tryck på "röd" knapp för inspelningsalternativ.



3. Välj läget “spela in” genom att använda “< >” - knapparna, och välj sedan kanal, tid och längd.



4. Varje gång du trycker på “EXIT”-knappen efter avslutad inställning syns följande meddelande på skärmen. Flytta markören till “OK” och tryck på “OK”-knappen för att spara dina ändringar.



4.13.4 Uppspelning av inspelade filer

Så här gör du för att spela upp inspelade filer.

1. Tryck på "PVR"-knappen för att visa fil-listan.
2. Välj önskad fil för uppspelning genom att använda "▲ ▼" - knapparna och tryck sen på "OK" - knappen.



- **Röd:** Låser/öppnar markerad fil.
- **Grön:** Raderar markerad fil
- **Gul:** Ändrar namn på vald fil.
- **Blå:** Visar alternativen (sortera filer, skapa mapp och flytta filer till folder)

Note :

① Du kan börja titta på en film som håller på att spelas in ② Filmen som är under inspelning markeras med röd färg. ③ Du kan inte byta kanal under uppspelning av film utan måste först stänga av uppspelningen och sedan byta kanal

3. Om du trycker "▶" knappen kan du se var i uppspelningen du är. Du kan också använda trick mode funktionerna såsom slow motion (◀▶), pause (⏸), repeat(↺).

Note : Repetition av uppspelning

Du kan välja en specifik sekvens av en inspelad fil och spela upp den om och om igen.



- ① Tryck på "▶" -knappen för att visa aktivitets-listen. Tryck på "↺" -knappen för att ställa in startposition. Gå till önskad position genom att använda "▲ ▼" - knapparna. Tryck på "↺" -knappen igen för att ställa in slutposition.

Efter detta spelas den önskade sekvensen upp om och om igen. Om du vill stoppa repetitionsläget trycker du på "↺" under repetitionsuppspelningen

4. Tryck på "■" -knappen för att stoppa uppspelningen och titta på program som sänds just nu.

4.13.5 Index funktion

Du kan enkelt söka efter speciella sekvenser som du märkt under en uppspelning.

1. Tryck på "📖"-knappen vid önskad sekvens under uppspelning av inspelad fil. Bokmärket OSD syns i övre högra hörnet.



 **Note** : En inspelad fil kan markeras med upp till 64 bokmärken.

2. Tryck på "📖"-knappen igen för radera ett bokmärke.
3. Tryck på "📖"-knappen för att gå till nästa bokmärke

Kapitel 5



Inställningar

Detta kapitel beskriver hur du söker efter kanaler, redigerar kanaler, språkställningar (OSD, timer)

1. Tryck på "MENU"-knappen för att visa OSD-menyn..
2. Gå till lämplig meny genom att använda "▲▼"-knapparna och tryck sen på "OK"-knappen för att välja undermeny.



Note

- Tryck på "EXIT"-knappen för att gå tillbaka till föregående steg.
- Tryck på "MENU"-knappen för att lämna inställningsmenyn.
- Menyprogrammet visar knappar som kan användas i varje steg av inställningen.

5.1 Söka kanal

Du kan söka kanal.



- **Manuell sökning:** Söker efter kanaler manuellt
- **Automatisk sökning:** Söker efter kanaler automatiskt.

- ① Gå till kanalsökning genom att använda “▲▼”-knapparna och tryck sen på “OK”-knappen
- ② Gå till önskad undermeny genom att använda “▲▼”-knapparna och tryck sen på “OK”-knappen

 **Note** : Vänta alltid tills sökningen är klar. Stoppar du en pågående sökning kanske inte alla kanaler i ditt utbud sparas i kanallistan.

5.2 Kanalhantering

Du kan redigera kanaler och favoritkanaler.



- **Redigera kanal:** Redigerar kanaler.
- **Redigera favorit:** Skapar/redigerar favoritkanal

- ① Gå till "redigera" menyn genom att använda “▲▼”-knapparna och sen tryck på “OK”-knappen.
- ② Gå till önskad undermeny genom att använda “▲▼”-knapparna och tryck sen på “OK”-knappen

5.3 Användarinställning

Du kan ställa in ytterligare funktioner såsom språk, skärm, A/V-utgång, klocka och timer, och låsningsfunktion..




- **Språk:** Väljer språk för tex meny, ljud, textning
- **OSD:** anger visningstiden för informationslisten, OSD-genomskinlighet o.s.v
- **Inställning av utgångar:** Inställning av TV scart, bildformat, TV upplösning, ljudläge/fördröjning och HDCP på/av.
- **Tidsinställning:** Ställer in klocka och timer.
- **Lås:** Ställer in åldersgräns och lösenord.

- ① Gå till användarinställningsmenyn genom att använda “▲▼” - knapparna och tryck sen på “OK” - knappen
- ② Gå till önskad undermeny genom att använda “▲▼” - knapparna och tryck sen på “OK” - knappen.

5.4 Verktyg

Här kan du se systeminformation, signal nivå, göra fabriks återställning, uppgradera s/w och se HDMI-information.

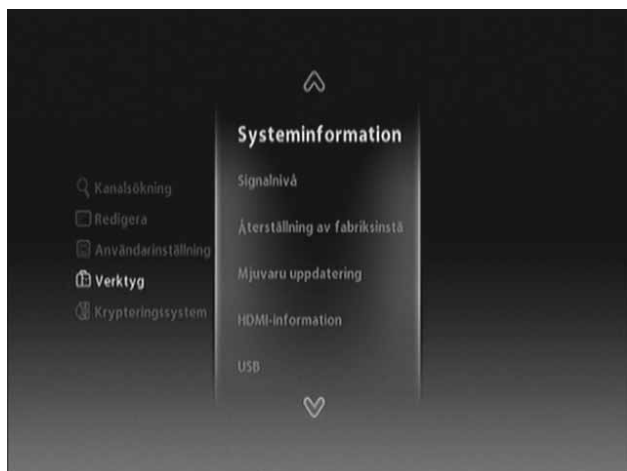

- **Systeminformation:** Visar systemversion
- **Signallivå:** Visar signallivå
- **Återställning:** Återställer digitalboxen till grundinställningen.
- **Mjukvaruuppgadering:** Uppdaterar boxens mjukvara
- **HDMI-Information:** Visar HDMI-information
- **USB:** Visar information om USB-enheten

- ① Gå till “Verktyg”-menyn genom att använda “▲▼” - knapparna och tryck sen på “OK” - knappen.
- ② Gå till önskad undermeny genom att använda “▲▼” - knapparna och tryck sen på “OK” - knappen.

5.4.1 USB

Här kan du se information om hårddisken och USB-enheten, inspelning och direktinspelningen..



- **Lagringsinfo:** Visar information om USB-enheten som tex modellnamn, återstående lagringsutrymme etc..
- **Format:** Formaterar usb enheten.
- **Val:** Direktinspelning spelar in programmet temporärt
- **Inspelning:** Spelar in program
- **Filhantering:** Visar filerna på USB-enheten
- **Säker USB borttagning:** Säker borttagning av USB-enheten.

① Flytta markören till USB-menyn genom att använda “▲▼” - knapparna och tryck sen på “OK” - knappen.

② Gå till önskad undermeny genom att använda “▲▼” - knapparna och tryck sen på ”OK” - knappen

5.5 Krypteringssystem

Du kan se aktuell status på programkortet



- Conax / CryptoGuard
- Mailbox

① Flytta markören till Krypteringssystems-menyn genom att använda “▲▼” - knapparna och tryck sen på “OK” - knappen

② Gå till önskad undermeny genom att använda “▲▼” - knapparna och tryck sen på “OK” - knappen

5.5.1 Smart Card-status

Du kan se diverse status för ett smart card



- Subscription Status
- Event Status
- Tokens Status
- Change CAPIN
- Maturity Rating
- About Conax CA: Show conax pairing id (CHIP_ID) and Smart card id (Card Number).
- CryptoGuard

① Flytta markören till CAS undermeny genom att använda “▲▼” - knapparna och tryck sen på “OK” - knappen

② Gå till önskad undermeny genom att använda “▲▼” - knapparna och tryck sen på “OK” - knappen



Appendix

6.1 Problemsökning

Om digitalboxen inte fungerar som den ska efter att du gjort en felsökning, vänligen kontakta en auktoriserad leverantör. Öppna inte digitalboxen. Det kan leda till elektriskt shock och att garantin förloras.

Problem	Möjlig anledning	Åtgärd
Frontpanelens display tänder inte upp.	Nätkabeln är inte ansluten eller strömbrytare på mottagarens baksida ej påslagen	Kontrollera att nätkabeln är ansluten till vägguttaget, slå på brytaren på boxens baksida
Ingen bild, inget ljud	Felkoppling av ljud/video-utgången från digitalboxen till TV:n	Anslut audio/-video-utgången till TV:n på korrekt sätt.
	TV:n är inte påslagen	Sätt på TV:n
	Digitalboxen är i standby-läge	Ändra till normalläge
	Ingen eller dålig signal-meddelande kommer upp på displayen??	Anslut antennkabeln korrekt
Fjärrkontrollen fungerar inte	Inga batterier/urladdade batterier.	Byt batterier (båda)
	Fjärrkontrollen är inte riktad mot digitalboxen	Rikta fjärrkontrollen mot digitalboxen.
	Digitalboxen är i standby-läge	Ändra till normal läge.
Dålig bild eller dåligt ljud i tv eller radio-läge	Dålig signalmottagning	Stäng av och sätt på STB.

6.2 Specification

1. Tuner & Demodulator

RF Input Range	VHF Low CH.E2 ~ CH.S6 (50.5MHz ~ 142.5MHz) VHF High CH.S7 ~ CH.S36 (149.5Mhz ~ 426.0MHz) UHF CH.S37 ~ CH.E69 (434.0Mhz ~ 858.0MHz)
Input Connector	IEC-DIN(IEC 169-2) Female
Output Connector	IEC-DIN(IEC 169-2) male (With Loop-Through Output)
Input/Output Impedance	75[Ohm],Unbalanced
Signal Input Level at QEF	20 ~ -67 dBm at (64QAM, SR=6.875Msps) 20 ~ -64 dBm at (128QAM, SR=6.875Msps) 20 ~ -61 dBm at (256QAM, SR=6.875Msps)
PLL X-tal Frequency	4 Mhz
Intermediate Frequency	36.125 Mhz(Center)
IF Bandwidth	8MHz
QAM Demod-IC	TDA10023(NXP)
FEC	Annex A/C
Modulation Format	16, 32, 64, 128, 256 QAM
Symbol Rate	1.0 Msps ~ 7.0 Msps
Roll-Off Factor	0.13, 0.15
Supporting System	European digital cable standard ETSI EN 300 429 Loop-Through output (Full band) Compliant

2. MPEG TS A/V Decoding

Transport Stream Format	MPEG-2/MPEG-4 Part10 AVC/H.264 HD HP@L4.0 (MPEG-2 ISO/IEC 13818 Transport stream Specification)
Profile Level	“MPEG-2 MP@HL”, H.264(MPEG-4 Part10 AVC) HD MP@L4.0
Input Rate	Maximum 31.668450Mb/s, 27.709893Mb/s
Video Aspect Ratio	4:3, Letter Box, 16:9, Pan & Scan
Video Display Resolution	1920x1080i, 1280x720p, 720x576p ,720x576i @ 50Hz
Audio Decoding Format	MPEG-1 Layer 1,2 / MPEG-2 Layer 2 Dolby Digital Down-mix PCM with Decoded Stereo AAC Stereo
Audio Output Mode	Mono, Left, Right, Stereo, Dolby Digital bit-streams

3. AV and Data Output

CVBS(Composite Video)	1 Jack(RCA Type)
S/PDIF Dolby Digital Interface	1 Optical(Fiber Optic Type)
Stereo Audio	L/R 1 Set(2xRCAArray Type)
HDMI/HDCP	1 HDMI™ Connector(HDCP copy protection)
SCART Interface	TV/VCR(CVBS, RGB)
USB2.0 Host Interface	A-Type Horizontal Connector (Firmware Upgrade Port & USB PVR)

4. Conditional Access Interface

Smart Card Reader	1 Slot For Embedded CAS Support(Conax CAS v7 / CryptoGuard)
PCMCIA	N/A

5. System Resource Information

Main Processor	ST40 32-bit Superscaler RISC CPU_400 Dhrystone 2.1 MIPS@266MHz
Flash ROM	Default 8Mbytes(Secure Flash)
Program & Graphic DDR SDRAM	Default 192Mbytes(Program 128Mbytes & Graphic 64Mbytes)
Serial EEPROM	Default 128Kbits

6. Power Supply

Input Voltage	AC 100-240V ~ 50/60Hz
Power Consumption	Maximum 10Watts(Under 1Watts in Standby Mode)
Protection	Separate Internal Fuse
Type	SMPS(Switching Mode Power Supply)
Safety And EMI	For Country Regulation

7. Physical Specification

Dimension(WxDxH)	260x180x55[mm]
Net Weight	About 2.0Kg
Operation Temperature	+5°C ~ +50°C
Storage Temperature	-40°C ~ 65°C

DILOG

**HIGH DEFINITION DIGITAL CABLE RECEIVER
PVR READY / DC-250HD**

User Manual



Notice

This manual can help you to become familiar with how-to-use and the many great features of the high definition digital Cable receiver DC-250HD. All the safety and operating instructions should be read before the DC-250HD is operated. Please keep the manual in a fixed place so that it can be easily referred to later.

The following symbols will serve as follows:

 Note	Indicates any other additional important or helpful information.
 Warning!	Indicates warning information.
"MENU" (Double quotation marks)	Indicates a button on the remote control or the product.
	To reduce the risk of electric shock, do not remove cover (or back). No user serviceable parts inside. Refer servicing to qualified service personnel.
	Indicates dangerous voltage inside the product that presents a risk of electric shock or personal injury.
	Indicates important-operating and maintenance instructions accompanying the product.


Manufactured under license from Dolby Laboratories.

"Dolby" and the double-D symbol are trademarks of Dolby Laboratories.




HDMI, the HDMI Logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.

Safety and Precautions

<Attention when installing the product>

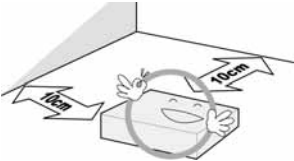Install on an even plane. 	Don't install in the cold or under direct sunlight. 
Leave a minimum 10cm gap all around the product. 	Don't disassemble, repair, or reorganize the product. 

<Use and care of the product >

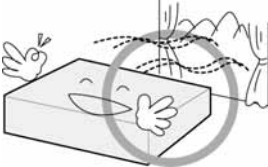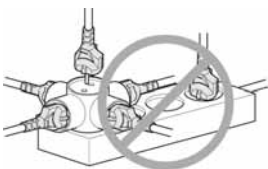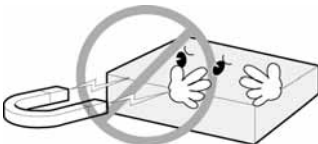
Place the product in a well-ventilated area. 	Place the product where dust and other materials do not build up. 
Don't plug in with several other power plugs. 	Don't place the product where there are extreme vibrations or near magnetic forces. 
Don't place objects on top of the product. 	Don't place cups that hold water or other liquids on top of the product. 

“The main plug is used to disconnect the device. The disconnected device shall remain readily operable.”

Table of Contents

Chapter 1. Before You Begin	5	4.7 Managing Favorite Channel Lists	32
1.1 Features	6	4.8 Changing Channel Mode	34
1.2 Package Contents	6	4.9 Viewing Program Guide	34
1.3 Names of Each Part	8	4.10 Viewing Teletext	35
1.3.1 Front Panel	8	4.11 Switching TV and Radio	36
1.3.2 Rear Panel	9	4.12 Changing Video Format	36
1.4 Names of Remote Button	10	4.13 Recording & Playback	37
Chapter 2. Connections	13	4.13.1 Instant Recording	37
2.1 Connecting a TV & VCR	14	4.13.2 Normal Recording	38
2.2 Connect the Optical S/PDIF	17	4.13.3 Reservation Recording	40
2.3 Starting Up	17	4.13.4 Recorded File playback	42
Chapter 3. Basic Settings	19	4.13.5 Bookmark	44
Chapter 4. Operations	25	Chapter 5. Settings	45
[Basic Functions]	26	5.1 Channel Search	47
4.1 Changing Channels	26	5.2 Channel Manager	47
4.2 Adjusting Volume	26	5.3 User Setting	48
4.3 Viewing Program Information	27	5.4 Tools	48
4.4 Changing Subtitle Language	28	5.4.1 USB	49
4.5 Changing Audio Language	29	5.5 CAS	49
[Advanced Functions]	30	5.5.1 Status of Smart Card	50
4.6 Managing Channel List	30	Chapter 6. Appendix	51
4.6.1 Displaying Channel List	30	6.1 Trouble Shooting	52
4.6.2 Searching Channel	31	6.2 Specification	53
4.6.3 Editing Channels	31		

Chapter 1

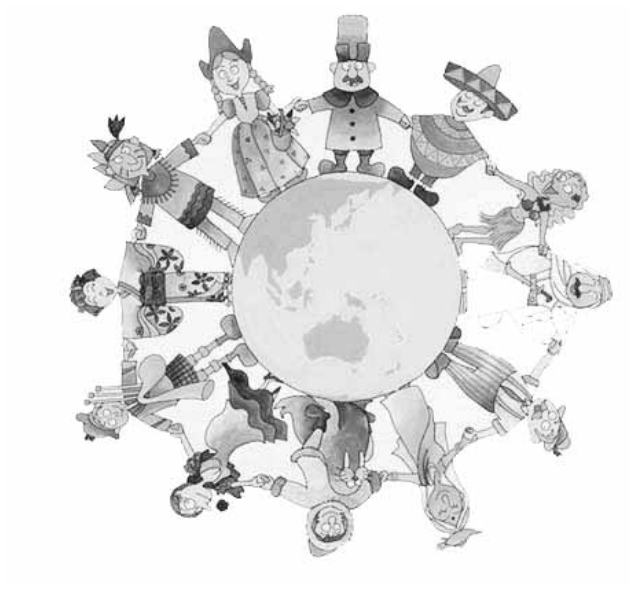

Before You Begin

1.1 Features

The DC-250HD is one of the best Digital Cable receivers for the new High-Definition Multimedia Interface. The DC-250HD adopts the latest MPEG-4 technology thus you can enjoy the various TV and radio programs. The simple connection and easy-of-use operation, user-friendly three-dimensional OSD, highest quality audio output with S/PDIF for Dolby AC-3 Digital Audio.

Furthermore, the DC-250HD provides the enhanced Electronic Program Guide(EPG), various utilities, and various channel sorting.

<Main Features>


- Fully Compliant to MPEG-2 & H.264(MPEG-4 Part10,MPEG-4/AVC) Standard
- Fully Compliant to DVB-C Standard
- Compliant European digital cable standard ETSI EN 300 429
- Tuner Loop-Through output(Full band) Compliant
- MPEG-1 Layer I & II, MPEG-2 Layer II, CD quality audio sound
- MPEG2 AAC, MPEG4 AAC audio decoding support
- DTS with Transcoded Multichannel HE-AAC Audio Output Support
- S/PDIF for Digital Audio Output
- Dolby Digital and Dolby Digital plus support.
- Mono, Left, Right, Stereo, Audio Output Support
- Easy & Fast Auto Programming, Intuitive User Interface
- Various Video Display Format With PAL 576i/576p/720p/1080i 50 Support
- Various Video Aspect Ratio With 4:3, Letter Box, Full Screen And 16:9 Support
- CVBS, HDMI, SCART, YPbPr Video Output Support
- Software Upgrade Via USB 2.0
- Software Upgrade via Over the air support.
- Separated TV/Radio/All List & Favorite Group List
- Multi Language Support (*Customer Option)
- Conax CAS v7 / CryptoGuard Chipset Pairing (Smart Card Reader For Embedded CAS Support)
- 4-Digit 7-Segments Front LED Numerical Display For Service Number and Time Display
- Luxury Touch panel
- USB PVR Ready.

<Other Features>

- Powerful and easy functions for editing (Lock, Delete, Rename Channel & Favorite group)
- Electronic Program Guide (EPG) for On Screen Channel Information
- Multi-language Function
- Auto searching & manual searching function
- Parental lock function
- Teletext and subtitle supported by VBI and OSD

1.2 Package Contents

Please check to make sure the following contents are in the product package.

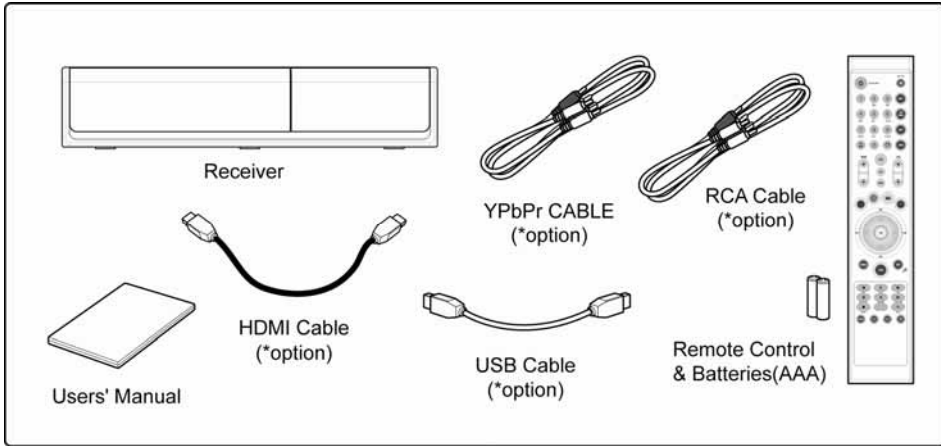


Note

- Product contents may be subject to change.
- Cables not specified above must be purchased separately.

1.3 Names of Each Part

1.3.1 Front Panel

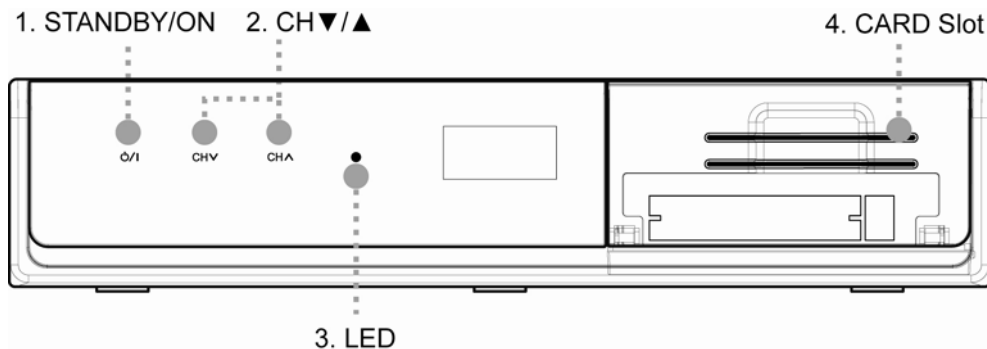

1. STANDBY/ON

Switches the digital receiver between standby mode and operation mode.

- Operation mode: Front Panel displays the 7-Segment (current service number), **⏻/I**, CH **▲/▼**.
- Active Standby Mode:
 - Front Panel displays the 7-Segment (current time) and **⏻/I**.
 - Switches between active standby mode and operation mode by pressing [**⏻/I**] on the front panel
- Passive Standby Mode (less than 1W power consumption function)
 - Front Panel display only **⏻/I**.
 - Switches by pressing [**⏻/I**] on the front panel for 4~5 seconds from operation mode or active standby mode.

2. CH ▼/▲


Changes channels in the No-menu State and moves the cursor up/down in the Menu state.

3. LED


Remote (Green LED): Lights in yellow to indicate the remote is in operation properly.

4. CARD Slot

Card slot for Conax / CryptoGuard program card.

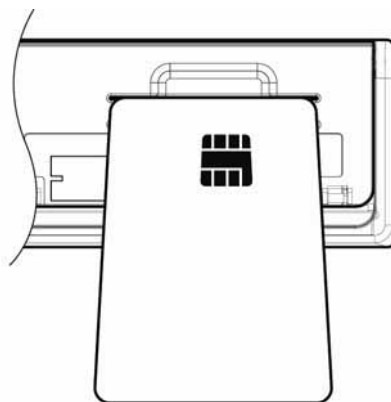

1.3.2 Rear Panel

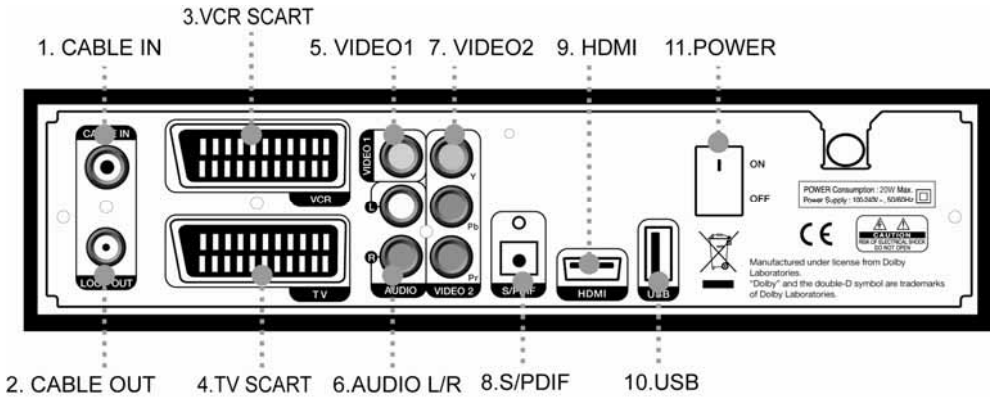

1. CABLE IN

Connect to Antenna Cable.

2. CABLE OUT

Connect LOOP OUT to another set-top box via a Loop-through cable.

3. VCR SCART

Connect this connector to your VCR via a SCART cable.

4. TV SCART

Connect this connector to your TV via a SCART cable.

5. VIDEO1

Connect VIDEO to video input of your TV or VCR via a RCA cable.

6. AUDIO L/R

Connect AUDIO L/R to the matching Audio Inputs of your TV/VCR via a RCA cable.

7. VIDEO2 (YPbPr)

Connect Y/Pb/Pr output of VIDEO2 to Y/Pb/Pr video input of your TV via a RCA cable.

8. S/PDIF

Connect S/PDIF to audio input of your amplifier with optical digital port via an optical cable.

9. HDMI

If you have TV supporting HDMI, connect HDMI to your TV using a HDMI cable.


10. USB

USB2.0 connector for software upgrade & PVR function by external HDD.

11. POWER

Switches the product on/off.

1.4 Names of Remote Button

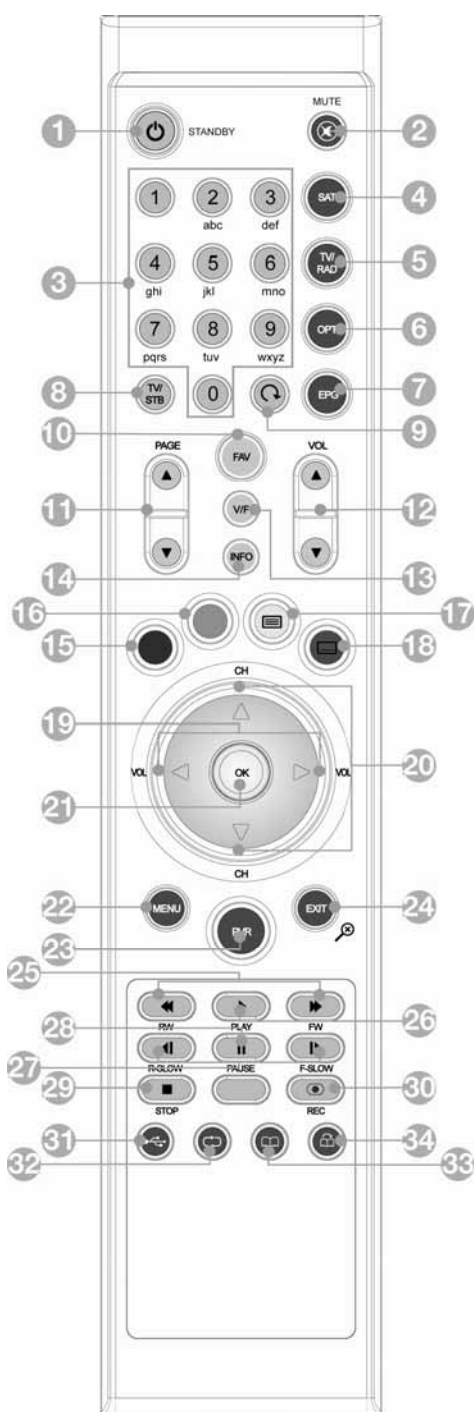

1. STANDBY ()

Switches the digital Receiver between standby mode and operation mode.

- Operation mode: Front Panel displays the 7-Segment (current service number), , CH /▼.
- Active Standby Mode:
 - Front Panel displays the 7-Segment (current time) and .
 - Switches between active standby mode and operation mode by press in RCU.
- Passive Standby Mode (less than 1W power consumption function)
 - Front Panel display only .
 - Switches by pressing in RCU for 4~5 seconds from operation mode or active standby mode.

2. MUTE ()

To mute the sound.

3. NUMERICAL BUTTONS (0~9)

To enter a TV/Radio channel number or characters.

4. SAT ()

To select the specific satellite.

5. TV/RAD ()

To switch the product TV or Radio.

6. OPT ()

To show the audio, teletext, and subtitle list(s).

7. EPG ()

To display the Electronic Program Guide. Press again to return to the normal mode.

8. TV/STB ()

To select the input source between digital Cable broadcasts and TV.

9. Recall ()

To return to the previous chosen channel.

10. FAV ()

You can register the favorite channels by pressing the "MENU" button, and then change the channel mode by pressing the "FAV" button.

11. PAGE ()

To change the TV/Radio channels without displaying the OSD.

12. VOL ()

To change the TV/Radio volume without displaying the OSD.

13. V/F ()

Video output format to 1080i/720p/576p/576i & Auto.

14. INFO ()

To display the information about the channel.

15. Red**16. Green****17. Teletext** (, hereafter "Yellow")

To display the teletext information about the channel if applicable.

18. Subtitle (, hereafter "Blue")

To display the provided subtitle language lists of the current channel.

19. VOL

To increase or decrease TV/Radio volume level or change the value of an item with preprogrammed values. The "◀" button can be used as a backspace to cancel the numerical input.

20. CH

To change the TV/radio channels Up/Down.

21. OK ()

To select a menu or confirm the user's action and display the channel list during watching a program.

22. MENU ()

To display the menu OSD.

23. PVR ()

To show the recorded file or MP3 file list.

24. EXIT ()

To exit from the current menu or cancel the current operation in menu state.

25. Fast Rewind/Forward ()

To rewind/forward the playback during the recorded file playback. Whenever you press , the forward playback speed increases by 4 steps (x 2, x 4, x 8, x16). And whenever you press , the rewind playback speed increases by 4 steps (x 1, x 2, x 4, x8). If you press the button in the progress bar state, DC-250HD resumes to the playback with normal speed after 20 seconds backward/forward rewind.

26. Playback ()

To show the progress bar. If you press the button in the trick mode or paused state, DTA-9500N resumes to the playback with normal speed.

27. Slow Rewind/Forward ()

To change the playback speed into the slow motion mode.

28. Pause ()

To pause the playback.

29. Stop ()

To stop the playback or the recording.

30. Recording ()

To record the current channel or show the record menu in the recording state.

31. USB ()

To remove the USB safely.

32. Repeat ()

Whenever you press the button, the repeat mode

changes sequentially such as a specified block repeat→all block repeat→the repeat mode Off.

33. Bookmark ()

To add or delete the current position as a bookmark. Up to 64 bookmarks for one recorded file can be set up.


34. Changing the Position of the Bookmark ()

To go to the next bookmark position.


35. Showing and changing the Size of

Note : Angle of remote control use

The remote control can be used at a distance of up to 7 to 10 meters, and at an angle of 30 degrees from the remote control led.

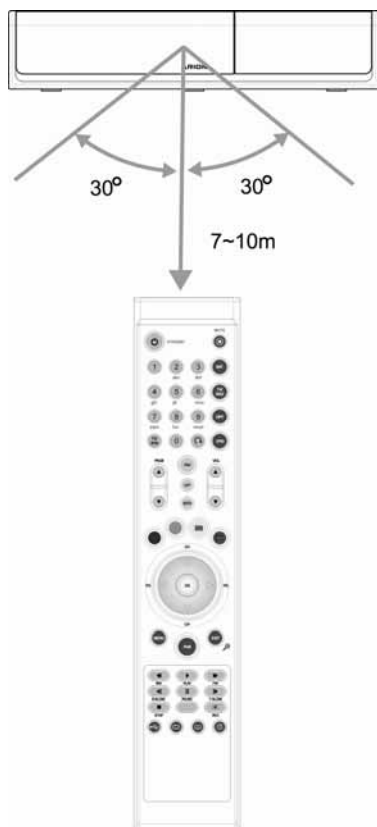

Chapter 2

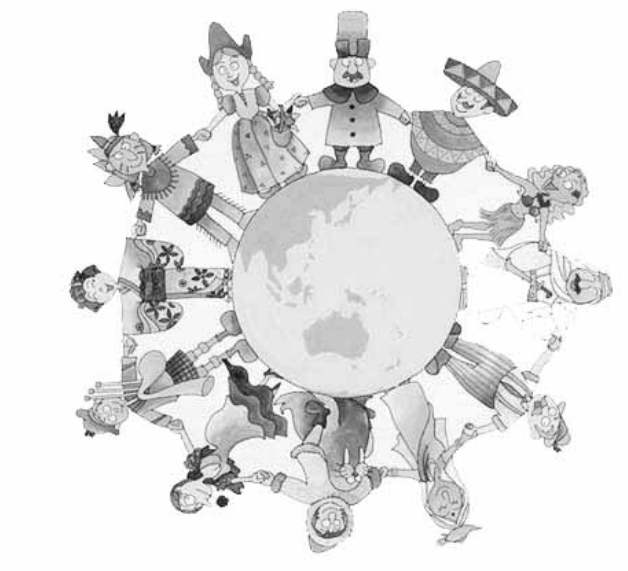

Connections

This chapter describes how to connect the product to your home entertainment system. Choose the most appropriate procedure depending on your environments.




Note : If you encounter with any problems or have any questions during connecting the product, please contact your local product distributor.

2.1 Connecting a TV & VCR


1. Connecting a TV with YPbPr (If your TV has YPbPr input)

- 1) Connect the TV antenna to the CABLE IN of the product.
- 2) Connect the RF-IN of TV to the LOOP OUT of the product.
- 3) Connect the VIDEO2 (YPbPr) to YPbPr input of your TV.
- 4) Connect the AUDIO L/R to Audio input of your TV.

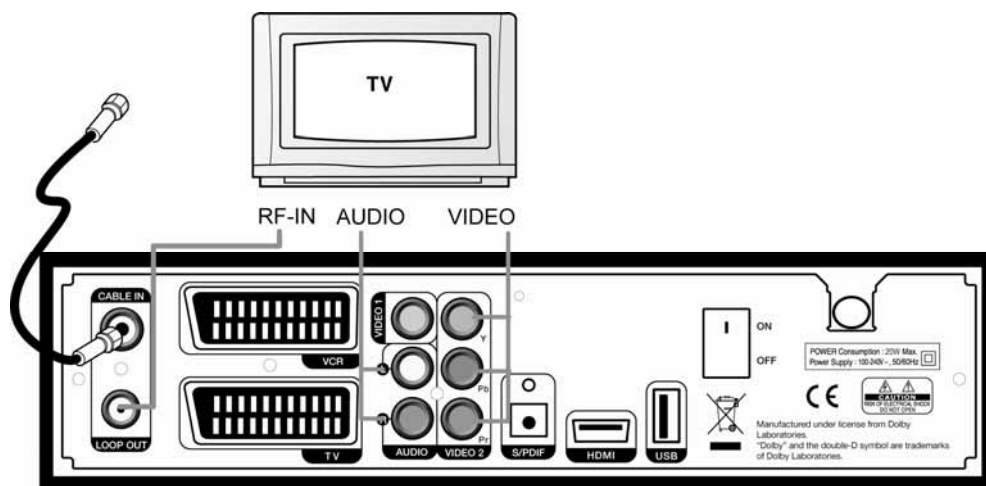


2. Connecting a TV with HDMI (If your TV has HDMI input)

- 1) Connect the TV antenna to the CABLE IN of the product.
- 2) Connect the RF-IN of TV to the LOOP OUT of the product.
- 3) Connect the HDMI output to HDMI input of your TV.

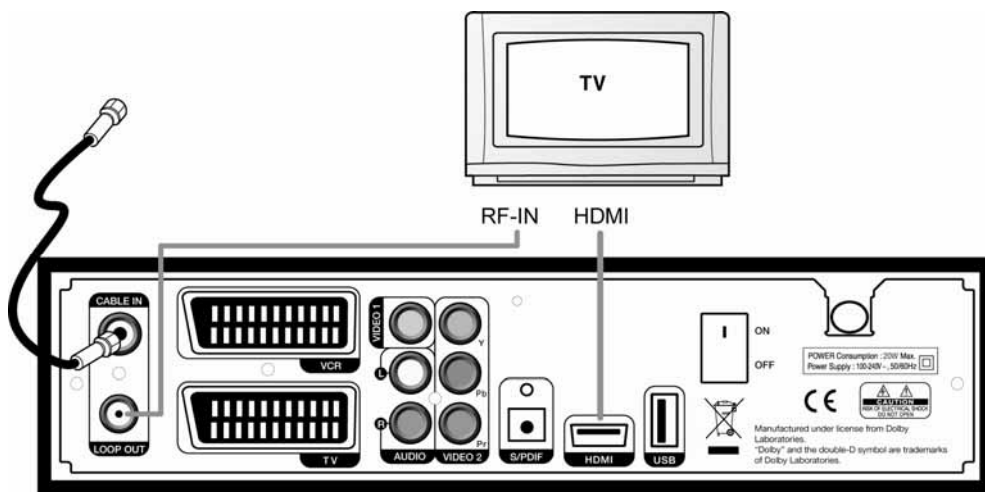

3. Connecting a TV and VCR with a Scart Cable


- 1) Connect the TV antenna to the CABLE IN of the product.
- 2) Connect the RF-IN of VCR to the LOOP OUT of the product.
- 3) Connect the RF-OUT of VCR to the RF-IN of TV.
- 4) Connect the Video and Audio of TV to the VIDEO1 and AUDIO L/R of the product.
- 5) Connect the TV Scart of TV to TV SCART with fully featured Scart cable.

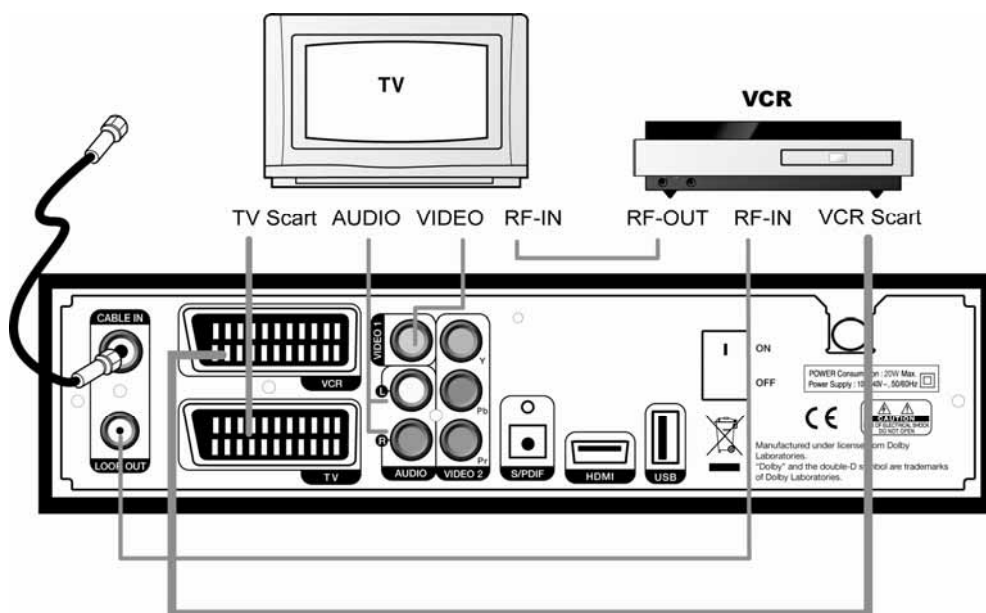

2.2 Connect the Optical S/PDIF


If you watch a program encoded by a Dolby Digital, you can enjoy the higher quality sound of the Dolby Digital audio.

Connect the optical S/PDIF to Dolby Digital decoder or Digital television.

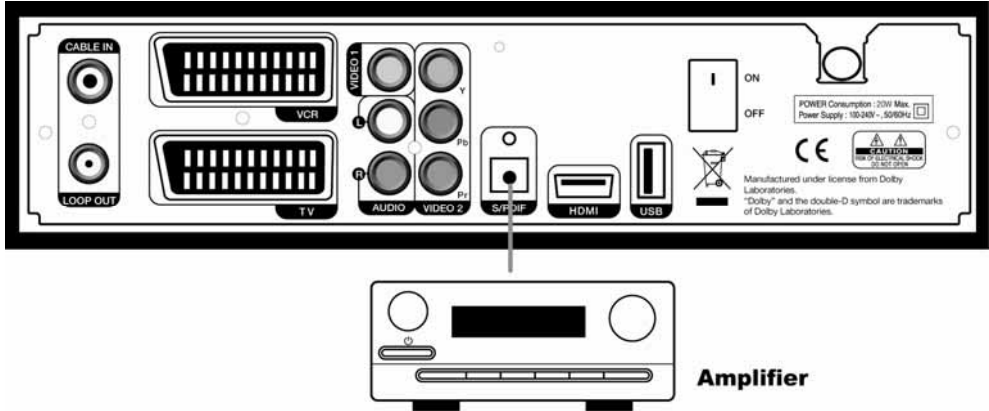


2.3 Connect the USB

Connect the USB to your HDD.

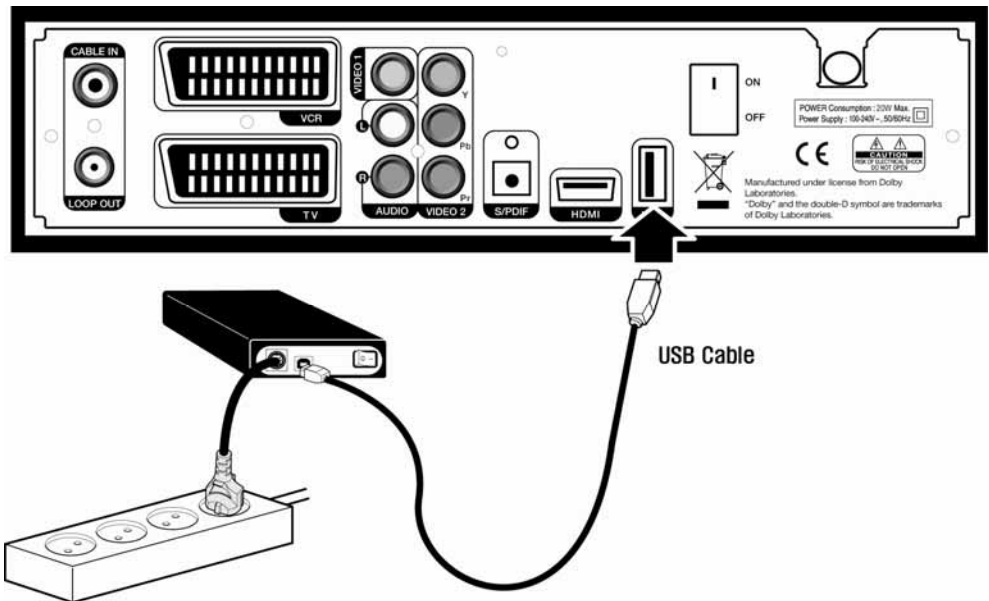


2.3 Starting Up

1. Connect the power cord of the product to a power outlet and press the “Power” button at the rear panel to turn the product on.

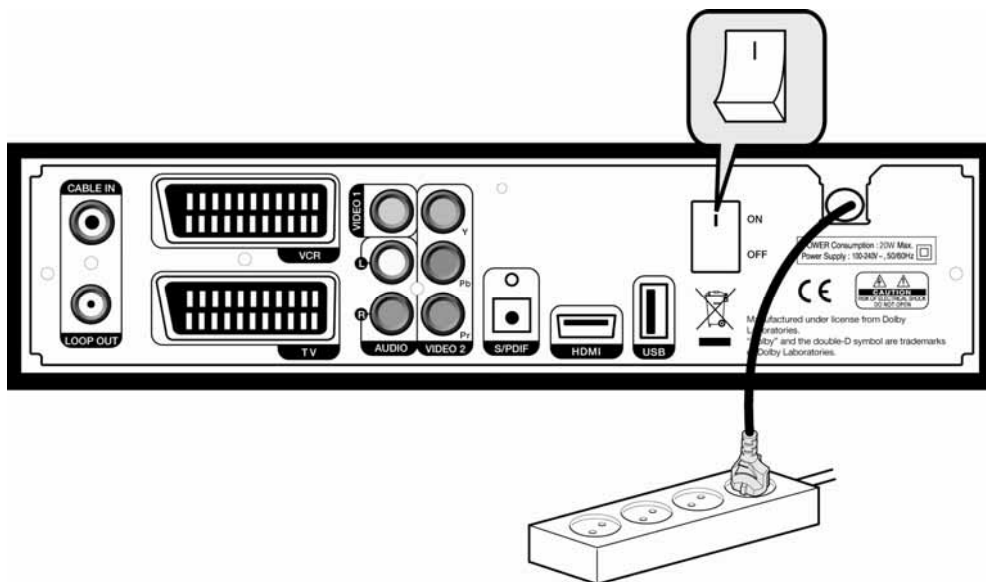

2. The first time you power up the product, it will display the initial screen then some parameters for system configuration should be set. Refer to the following chapter for detailed information about the basic settings.

Chapter 3

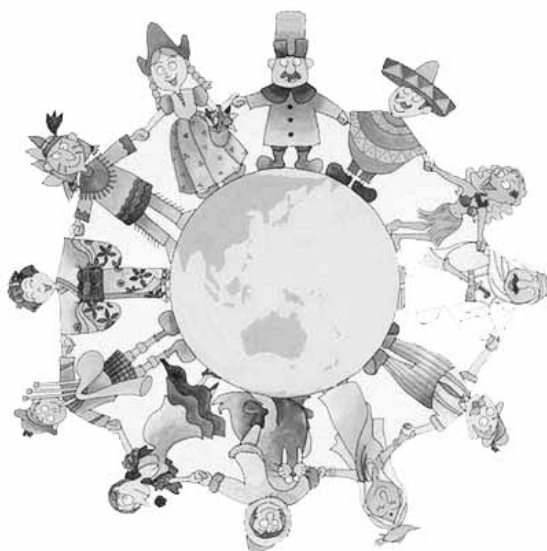

Basic Settings

If you use the product for the first time after connecting, you have to perform basic settings. Once the setup procedure is finished successfully, you can start watching TV or listening to radio.

Warning!

- Press the “MENU” button to save the previous input information and exit the basic settings. If you exit the basic settings without fully completing the setting procedures, you may not watch any broadcasting normally.
- If there is any disagreement between the current setting and TV type, any picture will not appear. You should change the video format by pressing the “V.Format.” Press the “V.Format” button twice until you can see any picture on TV screen.


1. Turn on your TV and the product. Follow the instruction on the screen. Press the “Blue” button to start to perform basic setting.




2. Select the appropriate language from the list using the “ ” button and press the “Blue” button to move to the next setting.



3. Press the “Blue” button to move to the next setting.

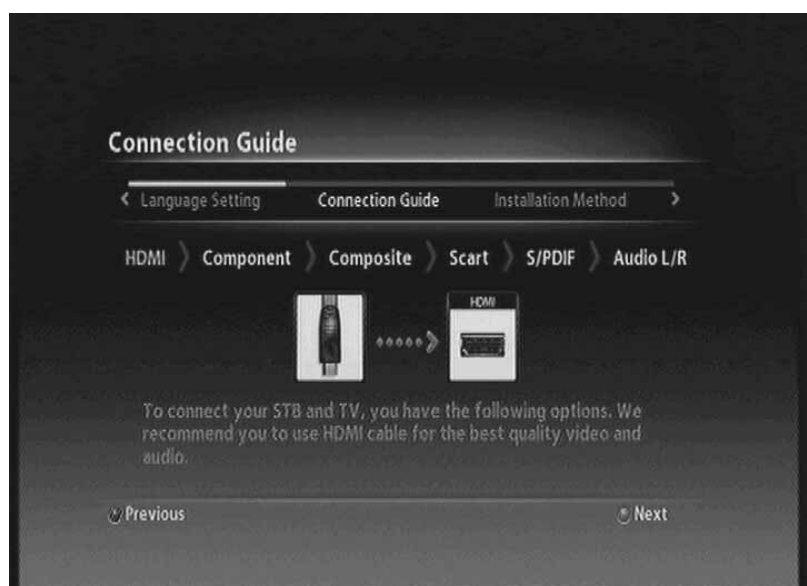


4. Select the installation method using the “ ” button and press the “Blue” button. If you select the ‘advanced’ method, you should select primary audio, secondary audio, primary subtitle, and secondary subtitle the “ ” button.

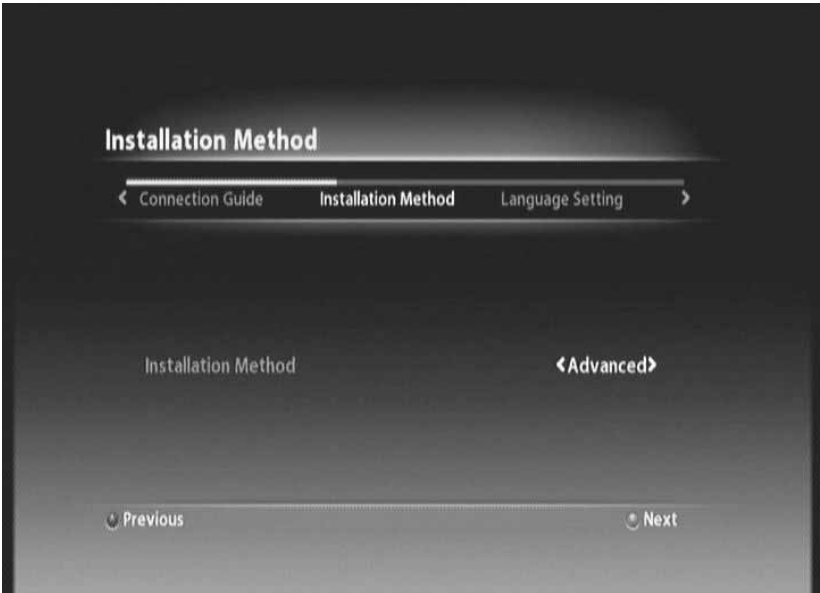

5. Select the Audio, Subtitle language the “ ” button and press the “Blue” button.



6. Select the screen mode the “ ” button and press the “Blue” button.

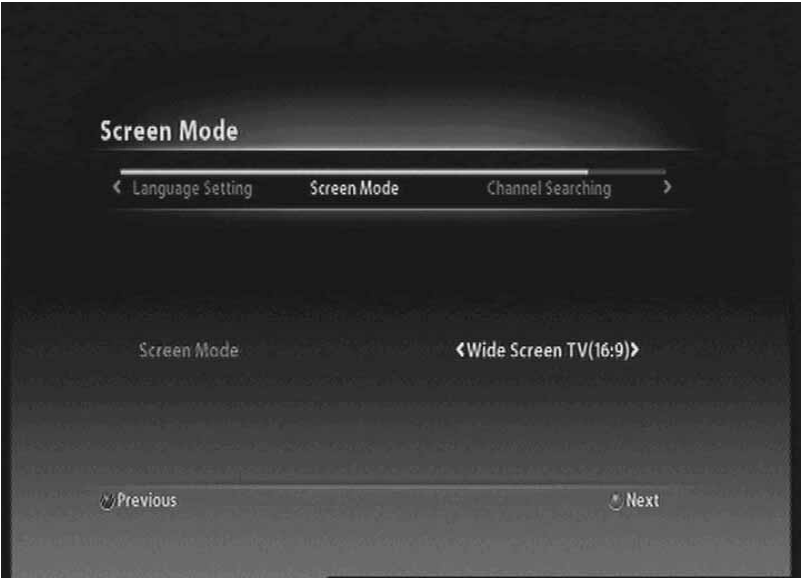

7. The channel(s) searching screen will appear. Press the “Blue” button to move to the next setting.



8. When completing basic settings, the following message will appear.



Note

If you encounter with any problems or have any questions when setting up the antenna, please contact your local product installer or distributor.

Now you have completed all steps required for watching TV or listening to radio. Press the "MENU" button to exit the basic settings. For detailed information about how to use the product, refer to Chapter 4.

Chapter 4



Operations

[Basic Functions]

4.1 Changing Channels

There are several ways to change the channels.



- Press the “P+/-” button on the remote control to access the channels sequentially.
- Press the “OK” button to display TV channel list, and then select the desired channel.
- Press the “Blue” button on the remote control to move to the previous channel.
- Enter your desired channel number using the “0~9” button directly.
- Press the “EXIT” button to hide TV channel list.

4.2 Adjusting Volume

You can change the volume level of the current channel.



- Press the “V+/-” button to adjust the volume.
- Press the “MUTE” button to turn the sound off and on again
- Press the “OPTION” button to change the audio mode.

 **Note** : During setting up the Menu (ex, EPG, Edit channel, etc), you can also change the volume level using the lower “V +/-” button without OSD.

4.3 Viewing Program Information

You can view the **2 steps** information window by pressing the “INFO” button while watching a program. Press the “EXIT” button to hide the program information.

Step 1: Basic Information

The Basic Information is displayed as following on the screen.



Step 2: Detailed Information

You can see detailed information about the current program. Press the “INFO” button to view detailed information during the Basic information is displayed. Press the “EXIT” button to hide the program information.



4.4 Changing Subtitle Language

If the current program provides Subtitle information, you can select the subtitle language.

1. Press the “SUBT” button to display the subtitle language list.



2. Select the desired subtitle language using the “▲▼” button, and press the “OK” button. The subtitle language will be displayed at the bottom of the screen.



3. Select 'OFF' from the subtitle language list not to display subtitle from the screen.



Note : You can select a default subtitle language by pressing the “MENU” button and selecting the User Setting–Language–Primary Subtitle menu in order.

4.5 Changing Audio Language

If the current program provides multiple audio languages, you can select the desired language.

1. Press the “OPTIONS” button to display the audio language list. If the mode is not the audio language, press the “◀▶” button.



2. Select the desired audio language using the “▲▼” button, and press the “OK” button. The audio language will be changed immediately.

 **Note** : You can select a default audio language by pressing the “MENU” button and selecting the User Setting–Language–Primary Audio menu in order.


[Advanced Functions]

4.6 Managing Channel List

4.6.1 Displaying Channel List

You can see various channel lists and change the channels from the channel list more conveniently.

1. Press the “OK” button while watching a program to display the selected channel list.

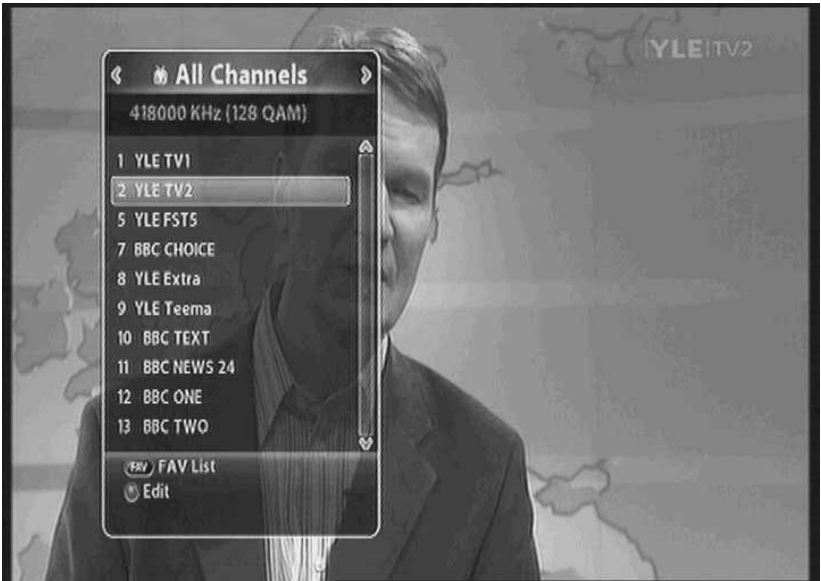

- FAV: Shows the favorite channel lists.
- Green: Edits the channel lists.

2. Move to the desired channel using the “▲▼” button and press the “EXIT” button to change the channel.

Note

Press the “FAV” button to switch among the channel modes such as ‘ALL, FAV1~4, etc’. Refer to **Chapter 4.7 Managing Favorite Channel Lists** for more information.

4.6.2 Searching Channel

You can search the specific channel among favorite channel lists more conveniently.

1. Press the “OK” button while watching a program to display the selected channel list.
2. If the channel list is not the favorite channel, press the “◀▶” button to select the favorite channel list.
3. Press the “Red” button to select the sorting mode such as alphabetic order, date, and etc.



4. Press the “PAGE ▲▼” button to move to the previous/next page.

4.6.3 Editing Channels

You can edit (such as lock, rename, and favorite group) each channel.

1. Press the “OK” button while watching a program to display the selected channel list.
2. Press the “Green” button to edit the channel.




3. You can lock, rename, and change to other favorite groups each channel. Move to the desired menu using the “▲▼” button and press the “OK” button.
4. Whenever you press the “EXIT” button after completing channel edit, the confirmation message will appear. Move cursor to the “OK” button and press the “OK” button to save the changes.

4.7 Managing Favorite Channel Lists

You can create and edit favorite channel list(s) or group(s).

1. Press the “MENU” button.
2. Move to the Channel Manager menu using the “▲▼” button and press the “OK” button.
Select the Edit Favorite menu using the “▲▼” button and press the “OK” button.

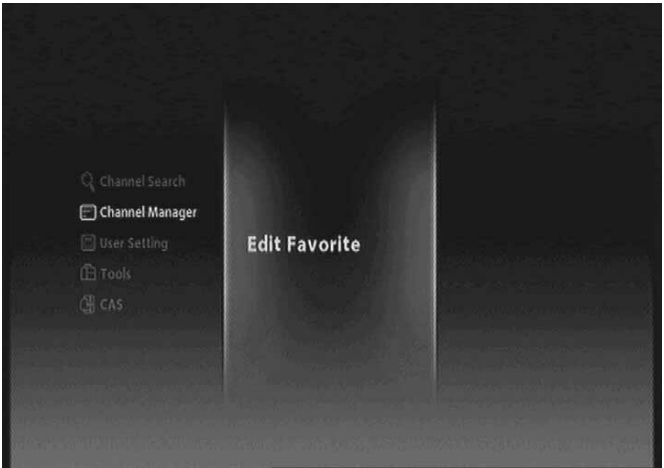

3. Press the “FAV” button to view the favorite channel groups.




Note

- **Red** : Locks/unlocks channel(s).
- **FAV**: Selects the favorite group.
- **OK**: Adds/deletes the channel(s) to the desired favorite group.
- **EXIT**: Exits to save the changes.



Note : FAV1~4 are default name. You can also rename them for your convenience.

4. You can edit favorite channel list(s) or group(s). Select the Favorite group using the “▲▼” button and press the “OK” button. If you want to add channel(s), select the desired channel, and then press the “OK” button.

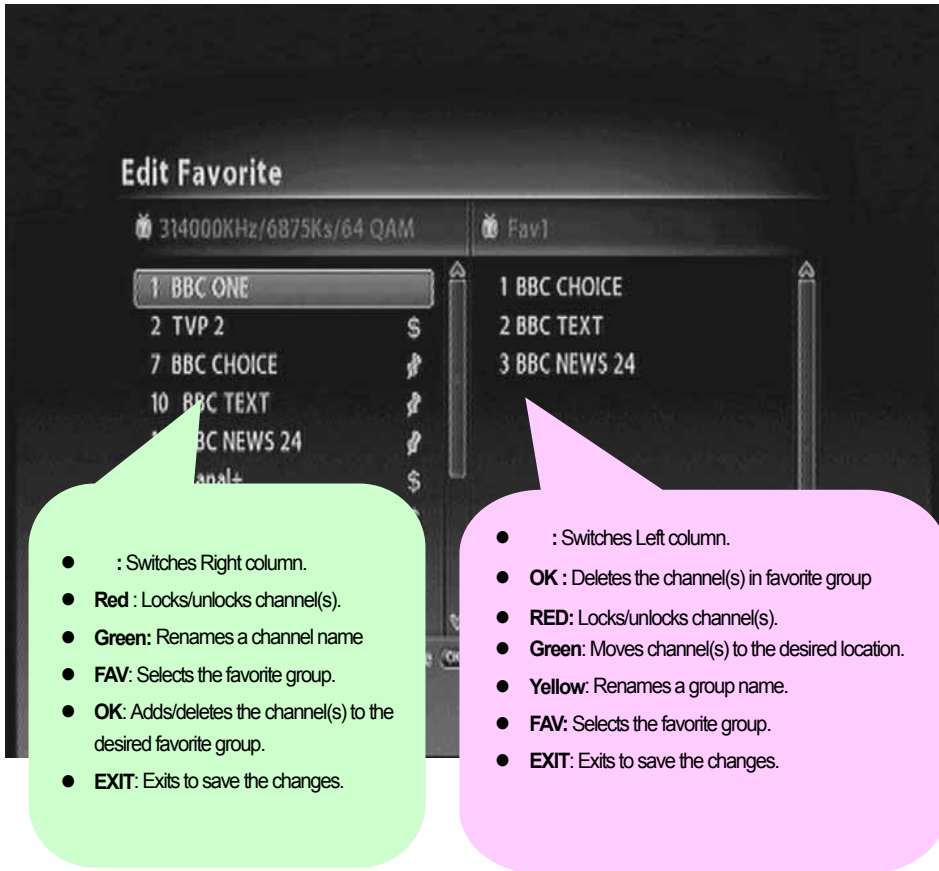

5. If you want to save the changes, press the “MENU” or “EXIT” button after editing favorite channel.

4.8 Changing Channel Mode

You can change the channel mode by group.

1. Press the “OK” button to display All Channel or Favorite Channel lists according to the current channel mode.



2. Select the channel mode using the “◀▶” button and press the “OK” button.

4.9 Viewing Program Guide

The Program Guide shows program information about each channel-by date and time.


1. Press the “EPG” button.



Note

- **Red:** Changes the schedule mode.
- **Green:** Views the channel group(s).
- **Yellow:** Moves to the Next Day.
- **Blue:** Makes a reservation.
- **INFO:** Views detail EPG.

2. Press the “INFO” button to view daily schedule for the selected channel.

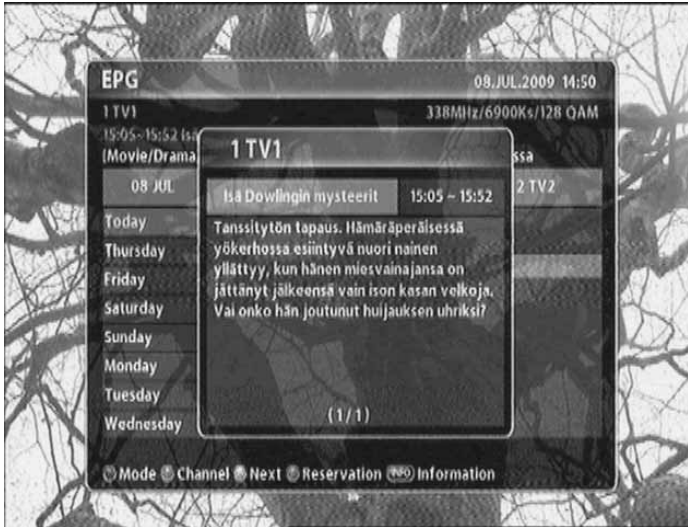

4.10 Viewing Teletext

Teletext Service is text data service from Service Provider. It is available only when the program provides teletext data service.

1. Press the “TEXT” or “OPTIONS” button. Teletext Service Data is displayed.



2. Select the page using the “0~9” buttons (100~899).

3. Press the “EXIT” button to the previous screen.

4.11 Switching TV and Radio

Press the "TV/RADIO" button to switch TV and Radio.



4.12 Changing Video Format

Press the V.Format" button. You can select the video output format among 576i, 576p, 720p, 1080p and auto.



4.13 Recording & Playback

DC-250HD provides three recording modes such as the instant recording, the normal recording, and the reservation recording.

4.13.1 Instant Recording

The instant recording function automatically saves one hour amount of the broadcasting program to the external HDD temporarily, so that you can watch program as you watch a video tape using functions such as rewind, fast forward, replay and pause.


1. Press the "MENU" button to enable the instant recording.

Move to the Tools menu using the button and press the "OK" button.

Select the USB men using the "▲▼" button and press "OK" button.

Move to the Instant Recording sub-menu using the "▲▼" button, and press the "OK" button.

Select the Enable using the " " button.

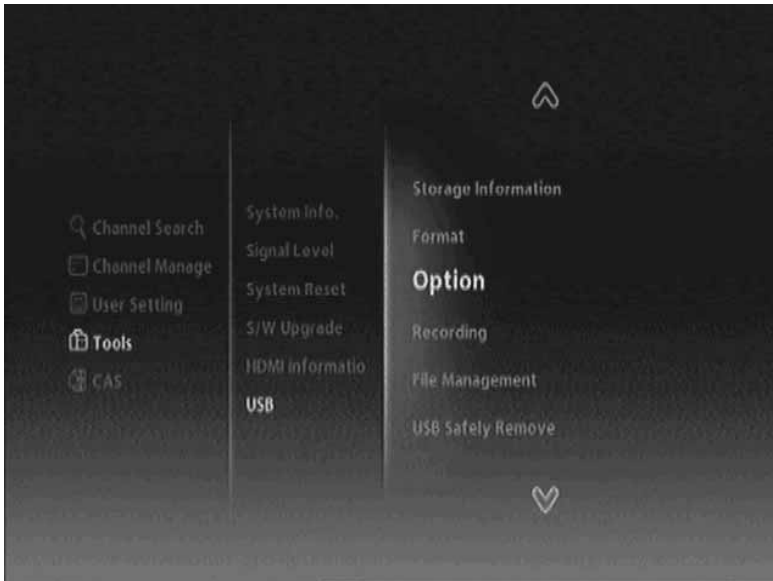

2. Whenever you watch a program, it starts to record the current channel automatically.
3. Press the “▶” button to display the progress bar. The progress bar shows the current operation status and an amount of temporarily saved data.



- ◀ ▶ : Changes the playback speed into slow motion mode.
- : Moves to the desired position during the progress bar is displayed. Or changes the volume in on-air mode.
- ◀ ▶ : Moves to the desired position during the progress bar is displayed. Or changes the playback speed in the playback mode.

4. If you move to other channel, it stops instant recording and restarts instant recording. The previous saved data is deleted.

4.13.2 Normal Recording

The normal recording function saves the program at once. You can also watch program using functions such as rewind, fast forward, replay, pause, and recording.

1. Press the “MENU” button to set the recording options.

Move to the Tools menu using the “▲ ▼” button and press the “OK” button.

Select the USB menu using the “▲ ▼” button and press the “OK” button.

Set the recording options.



Note

- You can only change the duration option during the recording.
- The mode provides the Normal and EPG time option. You can select the EPG time option when there is any EPG data.

2. Press the “Red” button to start recording immediately for the program you are watching. Press the “MENU” button to exit the recording option window, and then the index number message will appear on the upper right corner.



You can also start the normal recording like this: using the Recording of USB Menu. using the Reservation Recording.



Note : Some menus (such as Search Channel, Edit) don't work during the recording.

3. If press the “■” button to stop recording, it shows the recording file lists.



4. Move to the desired file using the “▲▼” button, and press the “■” button. Press the “EXIT” and “OK” button then the recording is stopped.



Note : There is limitation to change the channel during the recording.


4.13.3 Reservation Recording

The reservation recording function saves the desired programs automatically. You can watch program using functions such as rewind, fast forward, replay, pause, and recording.

1. Press the “MENU” button to set the reservation recording options.

Move to the User Setting menu using the “▲▼” button and press the “OK” button.

Select the Timer menu using the “▲▼” button and press the “OK” button.

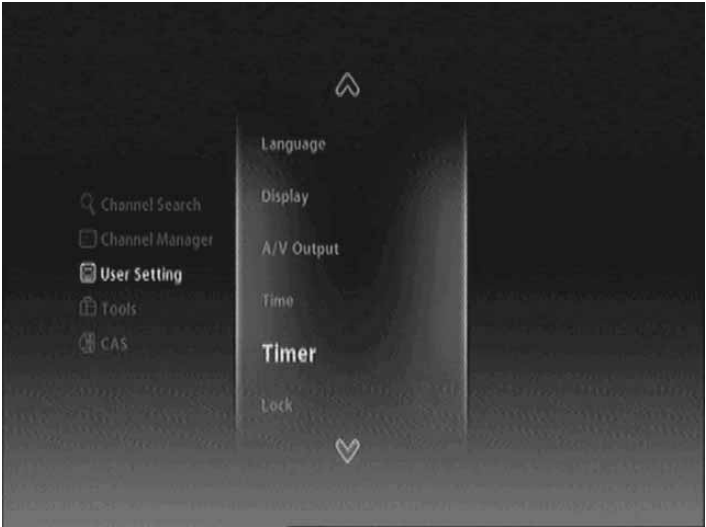

2. The Timer Setting window will appear. Press the “Red” button to set the recording options.



3. Set the Mode to 'Record' using the “ ” button, and then set the Cycle, Time, and Duration.




4. Whenever you press the “EXIT” button after completing setup, the following message will appear. Move cursor to the “OK” button and press the “OK” button to save the changes.



4.13.4 Recorded File Playback

You can play the recorded file by selecting a desired file.

1. Press the "PVR" button to display the file list. Or press the "OK" button during the playback.
2. Select the desired file to playback using the "▲ ▼" button, and then press the "OK" button.

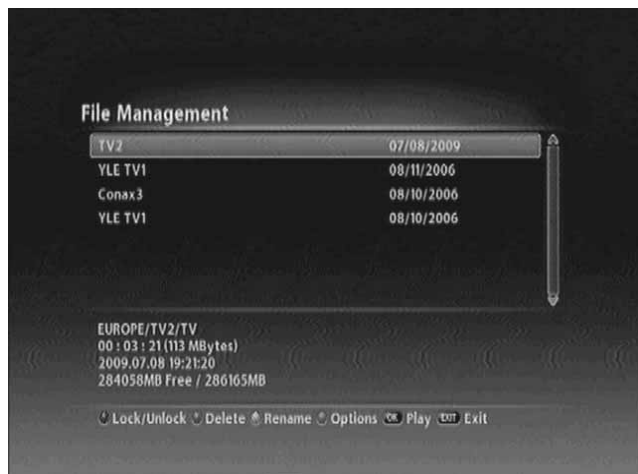

- **Red:** Locks/unlocks the specified file.
- **Green:** Deletes the specified file.
- **Yellow:** Renames the specified file.
- **Blue:** Shows the Options (Sorts the files, creates older, and moves file to folder).

Note :

You can record the playback file during the playback. The file name on recording is in different color. You can't change the channel during the recorded file playback. You should stop the playback, and then change the channel. If you choose the recording file, the channel is changed to the same channel.

3. Press the "▶" button to display the progress bar. And you can perform time shift operations like VCR functions such as slow rewind/forward (◀ ▶), pause (⏸), repeat (↺), and replay (↻).

Note : How to Repeat A-B

You can **select** a specific block within a recorded file and play it back repeatedly.



Press the "▶" button to display the progress bar. Press the "↺" button to set the start position. Move to the desired position using the "◀ ▶" button. Press the "↺" button again to set the end position.


Then the program plays the selected block repeatedly. If you stop the repeat mode, press the "↺" button during repeating the selected block.

4. Press the "■" button to stop the playback, and you can watch the current channel on air.

4.13.5 MP3 File Playback

You can listen to the MP3 file by selecting a desired file.

1. Press the “PVR” button to display the file list. Or press the “OK” button during the playback.
2. Select the desired file to playback using the “▲ ▼” button, and then press the “OK”.

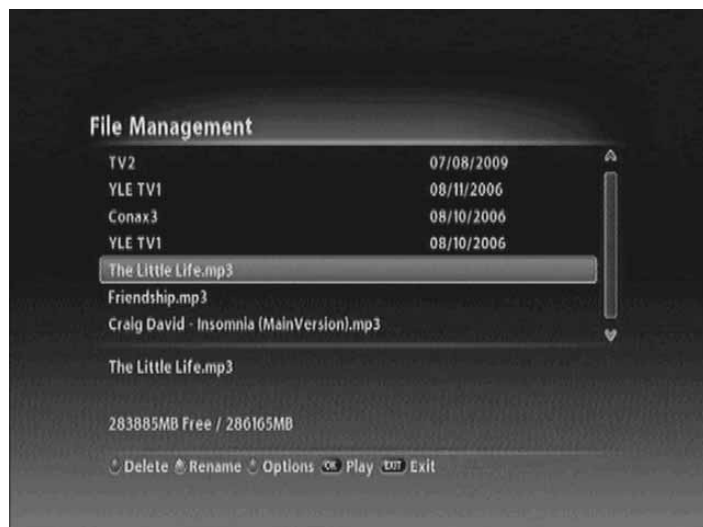

4.13.6 Bookmark

You can search positions very quickly and easily by bookmark during the recorded file playback.

1. Press the “” button at the desired position to set a bookmark during a recorded file playback.
The bookmark OSD will appear on the upper right corner during on air mode.



Note : Up to 64 bookmarks for one recorded file can be set up.

2. Press the “” button again to delete a bookmark.
3. Press the “” button to go to the next bookmark.


Chapter 5



Settings

This chapter describes how to search for channels, edit channel, setup for language (OSD, Timer, etc.), and show tools.

1. Press the “MENU” button to display the Menu OSD.
2. Move to the appropriate Menu using the “▲▼” button, and then press the “OK” button to select the sub-menu.

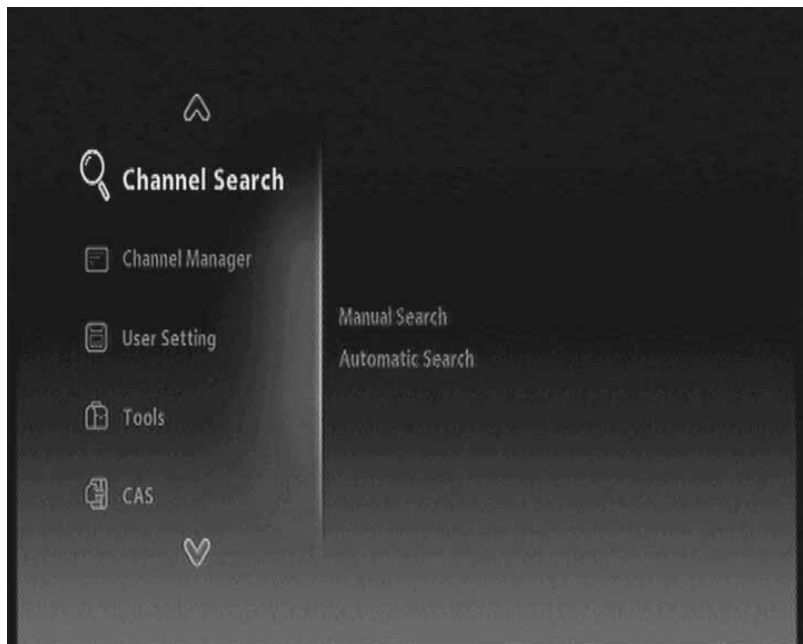


Note

- Press the “EXIT” button to return to the previous stage.
- Press the “MENU” button to exit the setting menu.
- The menu program shows buttons that can be used at every stage of setup.

5.1 Channel Search

You can search channel.

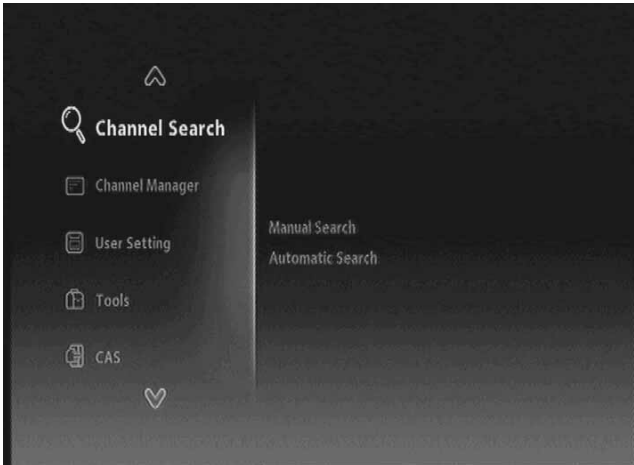

- **Manual Search:** Searches the channel manually.
- **Automatic Search:** Searches the channel automatically.

Move to the Channel Search menu using the “▲▼” button and press the “OK” button.
Move to the desired sub-menu using the “▲▼” button, and press the “OK” button.

 **Note** : Please wait for finishing the Search. If you want to stop the Search, press the “EXIT” button anytime. If the Search is stopped or finished, the searched information is automatically saved.

5.2 Channel Manager

You can edit channel(s) and favorite channel(s).




- **Edit Channel:** Edit Channel.
- **Edit Favorite:** Creates/edits favorite channel.

Move to the Channel Manager menu using the “▲▼” button and press the “OK” button.
Move to the desired sub-menu using the “▲▼” button, and press the “OK” button.

5.3 User Setting

You can setup additional function such as Language, Display, A/V Output, Time & Timer Setting, and Lock Control.

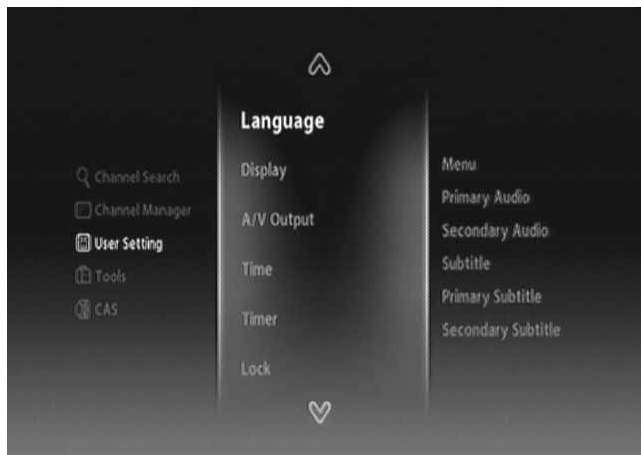


- **Language:** Selects the language such as menu, primary/secondary audio, subtitle, and primary/secondary subtitle.
- **Display:** Sets the infobar display time, OSD transparency, and load default.
- **A/V Output:** Sets the connected devices such as TV scart, Screen mode, TV aspect ratio, audio mode/delay and HDCP on/off.
- **Time & Timer:** Sets the time and timer.
- **Lock:** Sets the age lock and password.

Move to the User Setting menu using the “▲▼” button and press the “OK” button.

Move to the desired sub-menu using the “▲▼” button, and press the “OK” button.

5.4 Tools

You can view the system information, signal level, system reset, s/w upgrade, and HDMI information.

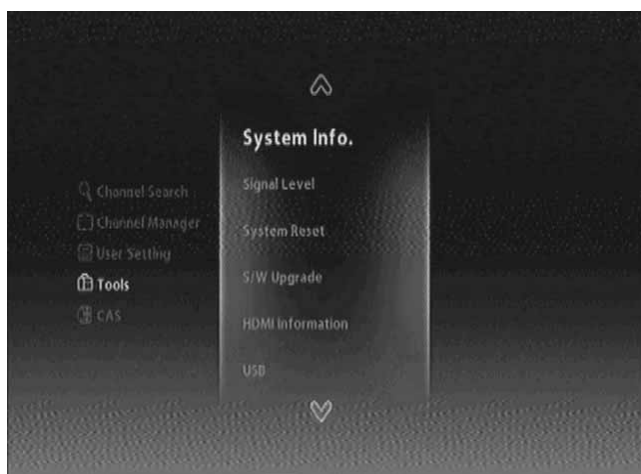


- **System Information:** Shows the system version.
- **Signal Level:** Shows the signal level.
- **System Reset:** Restores to the default setting.
- **S/W Upgrade:** Updates the program.
- **HDMI Information:** Shows the HDMI information.
- **USB:** Shows the USB device information.

Move to the Tools menu using the “▲▼” button and press the “OK” button.

Move to the desired sub-menu using the “▲▼” button, and press the “OK” button.

5.4.1 USB

You can view the USB device (hard disk and USB flash drive) information, the hard disk format, the recording, and the instant recording.

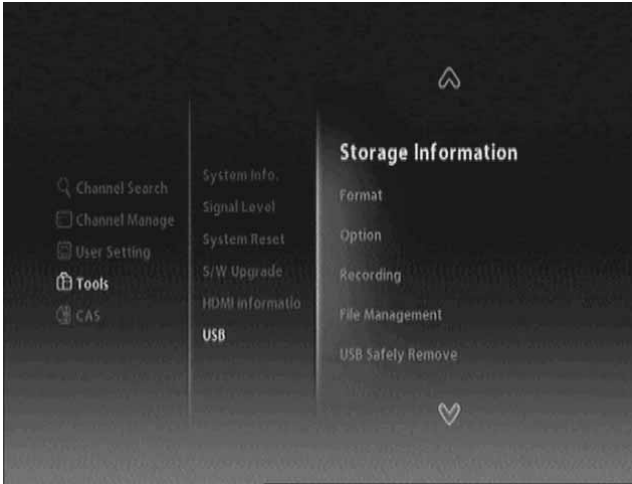

- **Storage Information:** Shows the USB device information such as the model name, the remained storage, and etc.
- **Format:** Formats the USB device.
- **Option:** Instant Recording Records the programs temporarily.
- **Recording:** Records the programs.
- **File Management:** Display the files of USB device.
- **USB Safely Remove:** Safely removes USB device.

Move to the USB menu using the “▲▼” button and press the “OK” button. Move to the desired sub-menu using the “▲▼” button, and press the “OK” button.

5.5 CAS

You can view the current status of smart cart.




- Conax / CryptoGuard
- Mailbox

Move to the CAS menu using the “▲▼” button and press the “OK” button.

Move to the desired sub-menu using the “▲▼” button, and press the “OK” button.

5.5.1 Status of Smart Card

You can see the various status of smart card.

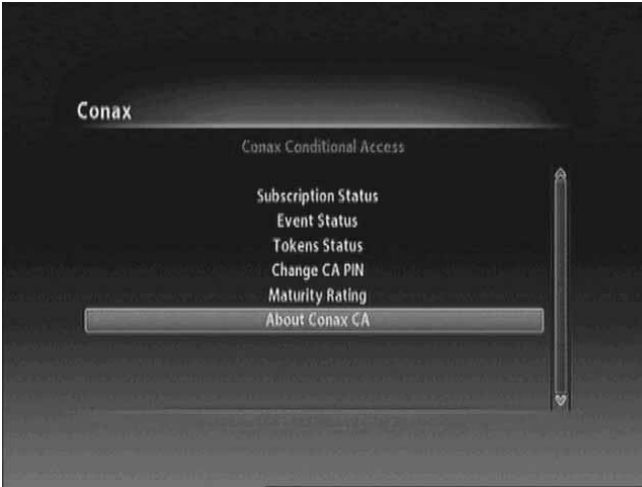

- Subscription status
- Event Status
- Tokens Status
- Change CA PIN
- Maturity Rating
- About Conax CA: Show conax pairing id (CHIP_ID) and Smart card id (Card Number).
- CryptoGuard

Move to the CAS sub-menu using the “▲▼” button and press the “OK” button.

Move to the desired sub-menu using the “▲▼” button, and press the “OK” button.

Chapter 6



Appendix

6.1 Trouble Shooting

If the product does not work properly after checking it, please **contact your local dealer**. Don't open the product. It may result in a dangerous electric shock and will invalidate your warranty

Problem	Possible Causes	What to do
The display on front panel does not light up.	The main power cable is not connected.	Check that the main power cable is plugged in to the wall outlet.
No picture, no sound.	Wrong connection of the audio/video output of the product to TV.	Connect the audio/video output of the product to TV correctly.
	TV power off.	Turn TV on.
	The product is standby mode.	Change the mode to the normal mode.
	No or Bad signal message appears.	Connect the antenna cable correctly.
The remote control unit (RCU) does not working.	No Batteries.	Change the batteries (both).
	The RCU is incorrectly aimed.	Aim the RCU properly to the product.
	The product is standby mode.	Change the mode to the normal mode.
Bad picture or noisy sound in the TV or radio mode.	Bad reception of the signal.	Turn off/on the STB.

6.2 Specification

1. Tuner & Demodulator

RF Input Range	VHF Low CH.E2 ~ CH.S6 (50.5MHz ~ 142.5MHz) VHF High CH.S7 ~ CH.S36 (149.5MHz ~ 426.0MHz) UHF CH.S37 ~ CH.E69 (434.0MHz ~ 858.0MHz)
Input Connector	IEC-DIN(IEC 169-2) Female
Output Connector	IEC-DIN(IEC 169-2) male (With Loop-Through Output)
Input/Output Impedance	75[Ohm], Unbalanced
Signal Input Level at QEF	20 ~ -67 dBm at (64QAM, SR=6.875Msps) 20 ~ -64 dBm at (128QAM, SR=6.875Msps) 20 ~ -61 dBm at (256QAM, SR=6.875Msps)
PLL X-tal Frequency	4 Mhz
Intermediate Frequency	36.125 Mhz(Center)
IF Bandwidth	8MHz
QAM Demod-IC	TDA10023(NXP)
FEC	Annex A/C
Modulation Format	16, 32, 64, 128, 256 QAM
Symbol Rate	1.0 Msps ~ 7.0 Msps
Roll-Off Factor	0.13, 0.15
Supporting System	European digital cable standard ETSI EN 300 429 Loop-Through output (Full band) Compliant

2. MPEG TS A/V Decoding

Transport Stream Format	MPEG-2/MPEG-4 Part10 AVC/H.264 HD HP@L4.0 (MPEG-2 ISO/IEC 13818 Transport stream Specification)
Profile Level	"MPEG-2 MP@HL", H.264(MPEG-4 Part10 AVC) HD MP@L4.0
Input Rate	Maximum 31.668450Mb/s, 27.709893Mb/s
Video Aspect Ratio	4:3, Letter Box, 16:9, Pan & Scan
Video Display Resolution	1920x1080i, 1280x720p, 720x576p, 720x576i @ 50Hz
Audio Decoding Format	MPEG-1 Layer 1,2 / MPEG-2 Layer 2 Dolby Digital Down-mix PCM with Decoded Stereo AAC Stereo
Audio Output Mode	Mono, Left, Right, Stereo, Dolby Digital bit-streams

3. AV and Data Output

Analog Component YPbPr	1 Set(3xRCA Vertical Array Type)(**Optional)
CVBS(Composite Video)	1 Jack(RCA Type)
S/PDIF Dolby Digital Interface	1 Optical(Fiber Optic Type)
Stereo Audio	L/R 1 Set(2xRCAArray Type)
HDMI/HDCP	1 HDMI™ Connector(HDCP copy protection)
SCART Interface	TV/CR(CVBS, RGB)
USB2.0 Host Interface	A-Type Horizontal Connector (Firmware Upgrade Port & USB PVR)

4. Conditional Access Interface

Smart Card Reader	1 Slot For Embedded CAS Support(Conax CAS v7 / CryptoGuard)
PCMCIA	N/A

5. System Resource Information

Main Processor	ST40 32-bit Superscaler RISC CPU_400 Dhrystone 2.1 MIPS@266MHz
Flash ROM	Default 8Mbytes(Secure Flash)
Program & Graphic DDR SDRAM	Default 192Mbytes(Program 128Mbytes & Graphic 64Mbytes)
Serial EEPROM	Default 128Kbits

6. Power Supply

Input Voltage	AC 100-240V ~ 50/60Hz
Power Consumption	Maximum 20Watts(Under 1Watts in Standby Mode)
Protection	Separate Internal Fuse
Type	SMPS(Switching Mode Power Supply)
Safety And EMI	For Country Regulation

7. Physical Specification

Dimension(WxDxH)	260x180x55[mm]
Net Weight	About 2.0Kg
Operation Temperature	+5°C ~ +50°C
Storage Temperature	-40°C ~ 65°C

