

WARRANTY INFORMATION

SERVICE INSTRUCTIONS

- DO NOT attempt to repair or adjust any electrical or mechanical functions on this unit. Doing so will void the warranty.
- If you have any questions regarding this unit's operation or believe any repair is necessary, please write to our Consumer Service Department.
- If you need to exchange the unit, please return it in its original carton, with a sales receipt, to the store where you purchased it. If you are returning the unit more than 30 days after the date of purchase, please see the enclosed warranty.
- If you have any other questions or comments, see our correspondence below or visit our website at www.holmesproducts.com.

JCS/THG, LLC
303 NELSON AVENUE
NEOSHO, MO 64850

For your own records, staple or attach your sales receipt to this manual. Also, please take a moment to write the store name/location and date purchase below.

STORE NAME: _____

LOCATION: _____

DATE PURCHASED: _____

(STAPLE RECEIPT HERE)

© 2006 JCS/THG, LLC
Holmes® and the Holmes logo® are registered trademarks of JCS/THG, LLC.

INFORMACION DE LA GARANTIA

INSTRUCCIONES PARA REPARACIONES

- NO intente reparar o ajustar ninguna función eléctrica o mecánica de esta unidad. El hacerlo invalidará la garantía.
- Si tuviese cualquier pregunta sobre la operación de esta unidad o considera que requiere alguna reparación, escríbale a nuestro Dpto. de Servicios.
- Si necesita cambiar la unidad, devuélvala en su caja original, con el recibo de compra, a la tienda donde la haya comprado. Si devuelve la unidad más de 30 días después de la fecha de compra, vea la garantía adjunta.
- Si tiene algún comentario o pregunta acerca del funcionamiento de la unidad, o cree que debe ser reparada, escriba a nuestro Departamento de servicio al cliente o visite nuestro sitio de Internet en www.holmesproducts.com.

JCS/THG, LLC
303 NELSON AVENUE
NEOSHO, MO 64850

Grape o adjunte su recibo de compra a este manual para no perderlo. También, tómese un momento para anotar a continuación el nombre/dirección del negocio y la fecha de compra.

NOMBRE DE LA TIENDA: _____

DIRECCIÓN: _____

FECHA DE COMPRA: _____

(GRAPE EL RECIBO AQUÍ)

© 2006 JCS/THG, LLC
Holmes® y el Holmes logo® son marcas registradas de JCS/THG, LLC.

WARRANTY INFORMATION

THREE (3) YEARS LIMITED WARRANTY

SAVE THIS WARRANTY INFORMATION

- A. This Warranty applies only to the original purchaser of this product.
- B. This Warranty applies ONLY to repair or replacement of any supplied or manufactured parts of this product that, upon inspection by JCS/THG, LLC authorized personnel, is shown to have failed in normal use due to defects in material or workmanship. JCS/THG, LLC will determine whether to repair or replace the unit. This Warranty does not apply to installation expenses.
- C. Operating this unit under conditions other than those recommended or at voltages other than the voltage indicated on the unit, or attempting to service or modify the unit, will render this WARRANTY VOID.
- D. Unless otherwise proscribed by law, JCS/THG, LLC shall not be liable for any personal injury, property or any incidental or consequential damage of any kind resulting from malfunctions, defects, misuse, improper installation or alteration of this product.
- E. All parts of this product excluding filters, which are covered under separate warranty, are guaranteed for a period of 3 years as follows:
- Within the first 30 days from date of purchase, the store from which you purchased your product should replace this product if it is defective in material or workmanship (provided the store has in-stock replacement.) If you intend to assert any claim in connection with the product, please follow the instructions in paragraph F.
 - Within the first 36 months from date of purchase, JCS/THG, LLC will repair or replace the product if it is defective in material or workmanship, subject to the conditions in paragraph G.
- F. If you have any other problem or claim in connection with this product, please write to our Consumer Service Department.
- G. IMPORTANT RETURN INSTRUCTIONS. Your Warranty depends on your following these instructions if you are returning the unit to JCS/THG, LLC:
- Carefully pack the item in its original carton or other suitable box to avoid damage in shipping.
 - Before packing your unit for return, be sure to enclose:
 - Your name, full address with zip code and telephone number
 - A dated sales receipt or PROOF OF PURCHASE,
 - Your \$5.00 check for return shipping and handling, and
 - The model number of the unit and the problem you are having. (Enclose in an envelope and tape directly to the unit before the box is sealed.)
 - JCS/THG, LLC recommends you ship the package U.P.S. ground service for tracking purposes.
 - All shipping charges must be prepaid by you.
 - Mark the outside of your package:

HOLMES
JCS/THG, LLC
303 NELSON AVENUE
NEOSHO, MO 64850

SHIPPING AND HANDLING CHARGES: \$5.00 (USD)

This Warranty gives you specific legal rights, and you may have other rights which vary from state to state. The provisions of this Warranty are in addition to, and not a modification of, or subtraction from, the statutory warranties and other rights and remedies contained in any applicable legislation. To the extent that any provision of this Warranty is inconsistent with any applicable law, such provision shall be deemed voided or amended, as necessary, to comply with such law.

Printed in China

INFORMACION DE LA GARANTIA

GARANTIA LIMITADA DE TRES (3) AÑOS

CONSERVE ESTA INFORMACION DE LA GARANTIA

- A. Esta garantía es válida solamente para el comprador original de este producto.
- B. Esta garantía cubre ÚNICAMENTE la reparación o reemplazo de cualquier parte provista o fabricada de este producto que, luego de ser inspeccionadas por personal autorizado de JCS/THG, LLC Presente fallas en su utilización normal debido a defectos de material o mano de obra. JCS/THG, LLC determinará si la unidad será reparada o reemplazada. Esta garantía no cubre gastos de instalación.
- C. El operar esta unidad bajo condiciones distintas a las recomendadas o con voltajes distintos a los indicados en la unidad, o cualquier intento de reparación o modificación de la unidad, ANULARA LA GARANTIA.
- D. A menos que la ley estipule lo contrario, JCS/THG, LLC no será responsable por lesiones personales, daños a la propiedad ni por daños y perjuicios por daños accidentales o consecuenciales de tipo alguno resultantes del mal funcionamiento, defectos, mal uso, instalación inadecuada o alteración de este artefacto.
- E. Todas las partes de este producto, con excepción de los filtros, los que están cubiertos por una garantía separada, están garantizadas por un término de tres (3) años de la siguiente forma:
- Dentro de los 30 días a partir de la fecha de compra, la tienda donde ha comprado este producto lo reemplazará en caso de presentar defectos de materiales o mano de obra (siempre que la tienda cuente con unidades disponibles). Si planea efectuar un reclamo con relación a este producto, siga las instrucciones del punto F.
 - Dentro de los treinta seises meses a partir de la fecha de compra, JCS/THG, LLC reparará o reemplazará el producto en caso de presentar defectos de materiales o mano de obra, sujeto a las condiciones del punto G.
- F. Si tiene cualquier otro problema o reclamo con relación a este producto, por favor escriba a nuestro Departamento de Servicio al Consumidor.
- G. IMPORTANTES INSTRUCCIONES PARA LA DEVOLUCION. Su garantía depende de como siga estas instrucciones al retornar la unidad a JCS/THG, LLC:
- Empaque cuidadosamente el producto en su caja original u otra caja adecuada para evitar que se dañe durante el envío.
 - Antes de empaquetar su unidad para devolverla, asegúrese de incluir:
 - Su nombre, dirección completa con código postal y número de teléfono
 - Un recibo de compra fechado o COMPROBANTE DE COMPRA,
 - Un cheque por \$5.00 para los gastos de envío, y
 - El número de modelo de la unidad y el problema que tiene. (Póngalo en un sobre y péguelo a la unidad antes de cerrar la caja).
 - JCS/THG, LLC le recomienda enviar la unidad por medio del servicio terrestre de U.P.S. para poder hacer el seguimiento del transporte.
 - Usted debe pagar todos los gastos de envío por adelantado.
 - Escriba lo siguiente en la parte de afuera del paquete:

HOLMES
JCS/THG, LLC
303 NELSON AVENUE
NEOSHO, MO 64850

GASTOS DE ENVÍO: \$5.00 (USD)

Esta garantía le otorga derechos legales específicos, y usted puede también tener otros derechos los que varían de estado a estado. Todo lo estipulado en esta garantía se adiciona, sin modificar o sustituir, las garantías legales y otros derechos y recursos incluidos en cualquier legislación que corresponda. En caso de que cualquier estipulación de esta garantía sea inconsistente con cualquier ley correspondiente, dicha estipulación será considerada anulada o modificada, de ser necesario, para cumplir con dicha ley.

9100020005453

HCH4077UM06ESM1

Impreso en China

Holmes®

Owner's Guide

HCH4077



Oscillating Ceramic Heater

PLEASE READ AND SAVE THESE IMPORTANT INSTRUCTIONS

Holmes®

Manual del propietario

HCH4077



Calefactor de cerámica oscilante

LEA Y CONSERVE ESTAS INSTRUCCIONES IMPORTANTES

PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS

Thank you for purchasing this Holmes® product. We understand the value of quality and are committed to making superior products that stand the test of time. We trust this product will exceed your expectations of quality and reliability. We hope that you enjoy this product and will consider purchasing another Holmes® product in the future. To see our full product line or if you have any questions or comments about this product, please visit our website at: www.holmesproducts.com.

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

1. Read all instructions before using the appliance.
2. To avoid fire or shock hazard, plug the appliance directly into a 120V AC electrical outlet.
3. The heater is hot when in use. To avoid burns, DO NOT let bare skin touch hot surfaces. If provided, use handles when moving this heater. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 ft (0.9 m) from the front of the heater and keep them away from the sides and rear.
4. DO NOT run cord under carpeting. DO NOT cover cord with throw rugs, runners, or the like. Arrange cord away from traffic area and where it will not be tripped over.
5. This heater is not intended for use in bathrooms, laundry areas and similar indoor location. NEVER locate heater where it may fall into a bathtub or other water container.
6. Extreme caution is necessary when any heater is used by, or near children or invalids, and whenever the heater is left operating and unattended.
7. Always unplug the heater when not in use.
8. When unplugging, be sure to pull by the plug and not the cord.
9. DO NOT insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
10. DO NOT operate heater with a damaged cord or plug, or after the heater malfunctions, has been dropped or damaged in any manner. Return appliance to manufacturer for examination, electrical or mechanical adjustment, or repair.
11. A heater has hot and arcing or sparking parts inside. DO NOT use it in areas where gasoline, paint, or flammable liquids are used or stored.
12. Use appliance only for intended household use as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons. The use of attachments not recommended or sold by JCS/THG, LLC may cause hazards.
13. DO NOT use outdoors.
14. To prevent a possible fire, DO NOT block air intakes or exhaust in any manner. DO NOT use on soft surfaces, like a bed, where openings may become blocked.
15. To disconnect heater, turn controls to OFF, then remove plug from outlet.
16. Avoid the use of an extension cord because the extension cord may overheat and cause a risk of fire. However, if you have to use an extension cord, the cord shall be No. 14 AWG minimum size and rated not less than 1875 watts.
17. If the heater will not operate, see specific instructions on Auto Safety Shut-off.

THIS PRODUCT IS EQUIPPED WITH A POLARIZED PLUG (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact qualified personnel to install the proper outlet.

DO NOT DEFEAT THE SAFETY PURPOSE OF THIS POLARIZED PLUG IN ANY WAY




LEA Y CONSERVE ESTAS INSTRUCCIONES IMPORTANTES DE SEGURIDAD

Gracias por comprar este producto Holmes®. Nosotros entendemos el valor de la calidad y nos comprometemos a hacer productos superiores que soportan el paso del tiempo. Confiamos que este producto superará sus expectativas de calidad y confiabilidad. Esperamos que disfrute este producto y que considere adquirir otros productos Holmes® en el futuro. Para ver nuestra línea completa de productos o si tiene alguna pregunta o comentario acerca de este producto, visite nuestro sitio Web: www.holmesproducts.com. Debe tomar precauciones básicas de seguridad siempre que utilice aparatos eléctricos para reducir el riesgo de incendio, descarga eléctrica y daños personales, incluyendo lo siguiente:

1. Lea completamente las instrucciones antes de utilizar el aparato.
2. Para evitar incendio o descarga eléctrica, enchufe el aparato directamente en un tomacorriente de 120V CA.
3. El calentador se calienta al usarlo. Para evitar quemaduras, NO toque las superficies calientes con la piel. Si existen, utilice las manijas para mover la unidad. Mantenga los materiales combustibles, como muebles, almohadones, sábanas, papeles, ropa y cortinas a por lo menos 3 pies (0.9m) de la parte delantera del calefactor y manténgalos alejados de los costados y de la parte de atrás.
4. NO instale el cable debajo de alfombras. NO cubra el cable con alfombrillas, tapetes o similares. Coloque el cable fuera de las zonas de tráfico y donde nadie se pudiera tropezarse con él.
5. Este calefactor no está diseñado para ser utilizado en baños, lavaderos y zonas similares de interiores. NUNCA coloque el calefactor donde pueda caerse dentro de una bañera u otro recipiente con agua.
6. Debe tener mucho cuidado cuando el calefactor es utilizado por, o cerca de niños o inválidos, y siempre que se deje el calefactor prendido y desatendido.
7. Siempre desenchufe el calefactor cuando no lo utilice.
8. Al desenchufarlo, asegúrese de tirar del enchufe y no del cable.
9. NO inserte o permita que ningún objeto extraño entre por las rejillas de ventilación o de salida ya que pueden ocasionar una descarga eléctrica o incendio, o dañar el calefactor.
10. NO utilice el calefactor si el cable o el enchufe están dañados o luego de una falla, se haya caído o haya sufrido cualquier tipo de daño. Devuelva el aparato al fabricante para su inspección, ajuste eléctrico o mecánico, o reparación.
11. Un calefactor tiene partes calientes y que pueden producir chispas en su interior. NO lo utilice en áreas donde se utiliza o se guarda gasolina, pintura o líquidos inflamables.
12. Utilice el aparato únicamente para el para el hogar indicado en este manual. Cualquier uso distinto al recomendado por el fabricante puede causar incendio, descarga eléctrica, o daños personales. El uso de accesorios no recomendados o que no sean vendidos por JCS/THG, LLC puede ser peligroso.
13. NO utilizar en el exterior.
14. Para prevenir la posibilidad incendio, NUNCA tape la entrada o salida de aire. NO lo utilice sobre superficies blandas, como una cama, donde se pueden obstruir las aberturas.
15. Para desconectarlo, gire el control a la posición OFF, luego quite el enchufe del tomacorriente.
16. Evite el uso de un cable de alargo ya que puede sobrecalentar y producir un incendio. Sin embargo, si debe utilizar un cable de alargo, el cable debe ser como mínimo AWG No. 14 y especificado para 1875 vatios como mínimo.
17. Si el calefactor no funciona, vea las instrucciones específicas del apagado automático de seguridad.

ESTE APARATO TIENE UN ENCHUFE POLARIZADO PARA CA (corriente alterna) con una clavija más ancha que la otra y que entra completamente en un tomacorriente polarizado en una sola posición. De no ser así, invértalo, y si aún así no entra completamente, llame a un electricista calificado para que instale un tomacorriente apropiado.

NO INTENTE ENGAÑAR ESTE DISPOSITIVO DE SEGURIDAD DEL ENCHUFE EN FORMA ALGUNA.



FEATURES - OPERATIONS

18. DO NOT attempt to repair or adjust any electrical or mechanical functions on this unit. Doing so will void your warranty. The inside of the unit contains no user serviceable parts. All servicing should be performed by qualified personnel only.
19. Discontinue use if plug or outlet is hot. It is recommended that the outlet be replaced if plug or outlet is hot to touch.

PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS

AUTO SAFETY SHUT-OFF WITH CERAMIC CONTROL

This heater is equipped with a patented, technologically-advanced, safety system that requires the user to reset the heater if there is a potential overheat situation. When a potential overheat temperature is reached, the system will automatically shut the heater off. It can only resume operation when the user resets the unit.

To Reset the Heater:

1. Turn MODE to OFF and THERMOSTAT to HI.
2. Unplug unit, wait 30 minutes.
3. Plug in and turn ON.

TECHNICAL SPECIFICATIONS

- Wattage: 1500 W (+5% -15%)
- Working voltage: 120V AC/60Hz

PRE-OPERATING INSTRUCTIONS

1. Carefully remove your heater from the box. (Please save the carton for off-season storage.)
2. Make sure the unit is in the OFF position before plugging the heater into the outlet.
3. Place heater on firm level surface.
4. Avoid overloading your circuit by not using other high wattage appliances in the same outlet. At 1500 Watts, this unit draws 12.5 Amps.

OPERATING INSTRUCTIONS

1. For heater operation, please set the Thermostat all the way to HI (see Figure 1 and Figure 2).
2. Turn the Selector Control to desired heat setting (LOW for 750W or HI for 1500W) (see Figure 2).
3. The Power Light will remain lit during operation.

OSCILLATING INSTRUCTIONS

Prior to turning "on" the oscillation switch, set the Selector Control knob to the desired comfort setting (HI (●) or LO (○)). To stop oscillation, turn the oscillation switch to "off (○)" (see Figure 2). Please do not manually turn the unit. The unit is designed to turn only by motorized oscillation.

THERMOSTAT INSTRUCTIONS

Setting the Thermostat

1. Prior to setting the thermostat, steps 1 & 2 of the OPERATING INSTRUCTIONS must be completed to allow the heater to operate and warm up the room/area.
2. When the desired temperature/comfort level is reached, lower the thermostat setting until the fan/heater stops operating.
3. The Temperature light will turn on and remain lit when the pre-set temperature is reached.
4. The control will now automatically maintain the pre-set temperature level by turning the heater ON and OFF. The thermostat is now set.

CLEANING / MAINTENANCE TROUBLESHOOTING

NOTE: It is normal for the heater to cycle ON and OFF as it maintains the preset temperature. To prevent the unit from cycling, you need to raise the thermostat setting.

CLEANING/MAINTENANCE

Removable Dust Prefilter:

1. Every few weeks check the condition of the prefilter on the rear of the heater.
2. Remove the inlet grill and remove the prefilter and wash it in warm soapy water. Rinse and dry the filter before replacing.

During Season Care:

1. Always unplug the heater before cleaning.
2. Clean the unit with a soft cloth moistened with a mild soap solution.
3. NEVER use abrasive or flammable solvents to clean the unit.
4. After cleaning, be sure to completely dry the unit with a cloth or towel.

After Season Care:

1. Store heater in a cool, dry location.
2. The manufacturer recommends that you store the unit in its original carton.

TROUBLESHOOTING

If your heater fails to operate:

- UNPLUG THE UNIT
- Make sure the electrical outlet or circuit breaker is working.
- Check for obstructions. If you find an obstruction turn the heater OFF, and unplug the unit. Carefully remove the obstruction and follow the reset instructions.

Please DO NOT attempt to open or repair the heater. Please see the Warranty for Service Instructions or call consumer service at 1-800-5-HOLMES.

ILLUSTRATIONS

Figure 1


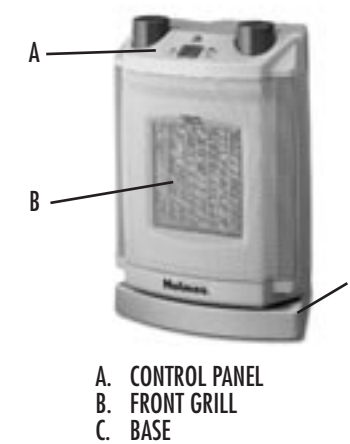


Figure 2

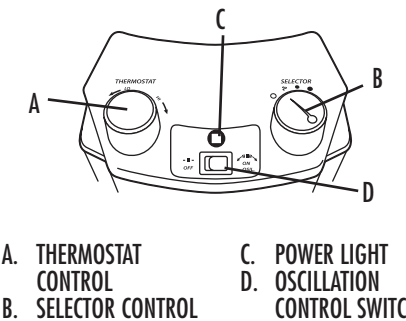

CARACTERISTICAS Y OPERACIONES

18. NO intente reparar o ajustar ninguna función eléctrica o mecánica de esta unidad. El hacerlo invalidará la garantía. La unidad no contiene partes reparables por el usuario. Toda reparación debe ser realizada únicamente por personal calificado.
19. Deje de usarlo si el cable o el enchufe se calientan. Se recomienda que reemplace el tomacorriente si el enchufe o el tomacorriente se calientan.
4. Evite sobrecargar el circuito eléctrico evitando utilizar otro aparato de alta potencia en el mismo tomacorriente. A 1500 Vatios, esta unidad consume 12,5 Amperes.

INSTRUCCIONES DE FUNCIONAMIENTO

1. Para operar el calefactor, lleve el control del termostato hasta su límite, hasta alcanzar la posición HI. (Ver Figura 1 y Figura 2).
2. Gire el selector de control a la posición de calor deseado (LOW para 750 W o HI para 1500 W) (vea la Figura 2). La luz piloto permanecerá encendida durante el funcionamiento.

INSTRUCCIONES PARA LA OSCILACION

Antes de mover el interruptor a la posición ON, gire la perilla selector a la posición de confort deseado Alto o Bajo (HI (●) o LOW (○)). Para detener la oscilación, mueva el interruptor de oscilación a la posición "off (○)" (vea la Figura 2). No gire manualmente la unidad, la misma está diseñada para oscilar únicamente por medio motorizado.

INSTRUCCIONES PARA EL MANEJO DEL THERMOSTATO

Calibrado del termostato

1. Antes de calibrar el termostato, deberán completarse los pasos 1 y 2 de las INSTRUCCIONES DE FUNCIONAMIENTO, a fin de permitir el funcionamiento del calefactor para el calentamiento de la habitación /zona.
2. Una vez alcanzada la temperatura del nivel de confort, reduzca el calibrado del termostato de la unidad hasta que se detenga el ventilador del calefactor.
3. La luz piloto se prenderá una vez que se alcance el calibrado de la temperatura.
4. El control se mantendrá ahora dentro del nivel precalibrado, determinando el arranque y detención (ON y OFF) del calefactor. El termostato quedará ahora calibrado.

NOTA: Será normal el ciclo del calefactor entre las posiciones de arranque y detención (ON y OFF) a fin de mantener la temperatura seleccionada. Para suspender el ciclo de la unidad, deberá usted elevar el ciclo del termostato.

LIMPIEZA / MANTENIMIENTO DIA GNOSTICO DE PROBLEMAS

LIMPIEZA / MANTENIMIENTO

Filtro de entrada removible:

1. Revise el estado del filtro de entrada ubicado en la parte posterior del calefactor luego de algunas semanas de uso.
2. Quite la rejilla de entrada y quite el filtro, lávelo con agua tibia jabonosa. Enjuague y seque el filtro antes de volverlo a instalar.

Durante la temporada:

1. Siempre desenchufe el calefactor antes de limpiarlo.
2. Limpie la unidad con un trapo suave humedecido con agua y detergente.
3. NUNCA utilice solventes abrasivos o inflamables para limpiar la unidad.
4. Después de limpiarla, asegúrese de secar completamente la unidad con un trapo o toalla.

Después de la temporada:

1. Guarde el calefactor en un lugar frío y seco.
2. El fabricante recomienda guardar la unidad en su caja original.

DIAGNOSTICO DE PROBLEMAS

Si su calefactor no funciona:

- DESENCHUFE LA UNIDAD
- Asegúrese de que el tomacorriente o llave térmica funcionen correctamente.
- Verifique que no haya ninguna obstrucción. Si encuentra una obstrucción, apague el calefactor, y DESENCHUFÉLO. Quite cuidadosamente la obstrucción y siga el procedimiento para reiniciar la unidad.

NO intente abrir o reparar el calefactor. Por favor, vea la garantía para las instrucciones de reparación o llame al servicio del consumidor al 1-800-5-HOLMES.

INSTRUCCIONES

Figura 1

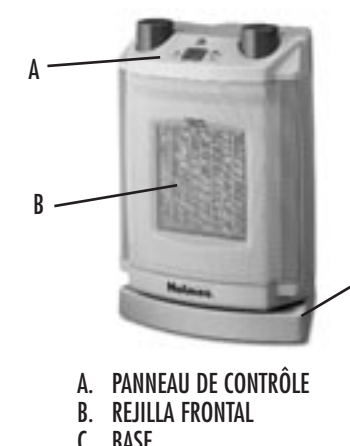


Figura 2

