



**GOCLEVER**  
INFINITE INVENTION

## **GOCLEVER TAB S73**



**USER'S MANUAL**  
**INSTRUKCJA OBSŁUGI**

[www.goclever.com](http://www.goclever.com)

## Declaration of Conformity

Hereby GOCLEVER Technology declares that the product complies with the essential requirements and other provisions of Directive 199/5/WE.

## Environmental Protection

The device is subject to the WEEE Directive 2002/96/EC. The symbol next to mean that the product must be disposed of separately and should be shipped to the appropriate collector. This allows you to limit pollution and the impact on human health.

Also like to inform that our company has the obligations under the Act on waste electronic equipment, including in his collection, treatment, recovery and recycling is supported by KARAT ELECTRO-RECYCLING Ltd. If you have any questions or concerns you can contact Karat call 056-623-80-91.

## Responsibility

GOCLEVER Technology Company nor any of its licensors shall not be liable for any loss of data or profits, as well as for any other consequential or indirect damages resulting from the use of equipment brand, in any case and the maximum permitted by law. GOCLEVER Technology is not responsible for any problems related to the malfunctioning of the operating system and applications operating under its control.

## Changes

GOCLEVER Technology reserves the right to revise this document and the specifications of the device, without notice to you. These features and images may vary depending on the services offered by the operator and software version of the device.

## Before using

Remember that the battery is not charged. Opening or attempt to disassemble the outer casing of the device will void the warranty.

Google is a registered trademark, and Google Maps is a trademark of Google Inc.. in the United States and other countries. YouTube is a trademark of Google Inc..

GOCLEVER Technology Company is not liable for technical or editorial errors or for omissions contained herein is not responsible for incidental or consequential damages resulting from furnishing this material.

Information is presented in such a state in which you adopt them, and are not covered by any warranty. Subject to change without notice. GOCLEVER Technology Company reserves the right to change the contents of this document without prior notice. The manual describes basic functions of the device.

## Security

Please refer to these guidelines. Failure to comply with them may cause danger to life or health or may be illegal. For further information, please read the entire podręcznikiem. Urządzenie was designed to operate from battery and mains supply with the charger. Using the device in a different way can be dangerous and will void the warranty.

## Charging Battery

The unit should be connected only to a power source in accordance with the parameters set out in the specification. In case of doubt as to the type of power source required, consult an authorized service provider or local power company. If the product is powered from a battery or other sources, follow the instructions supplied with the product.

The impact of external factors and the electromagnetic field

The device is not waterproof. Make sure that it was always dry, protect from moisture. The device also must be protected against high and low temperatures, dust, sand, do not expose it to shock, throw, as this may damage it or its components.

Do not use the device in a damp and very high or low temperatures.

Do not leave the device in the vehicle or in places where temperatures exceed 50 degrees Celsius.

Do not use the equipment on board aircraft and in areas where it is not allowed to use equipment that may emit an electromagnetic field for example a hospital, petrol station, a warehouse of explosives violations of these rules may result in fire or explosion.

Do not use the device while driving.

Do not use the device near strong electromagnetic sources, such as microwave ovens, sound speakers, TV and radio.

Use only original manufacturer-approved accessories, or accessories that do not contain metals.

#### Service and Repair

For repair use the authorized service and qualified staff, any attempt to repair yourself, or by unauthorized service will void the warranty.

## Tab of Contents

Introducing your GoClever TAB S73 .....	2
Battery .....	4
SD card.....	5
Home screen and Application list.....	6
HDMI & Host.....	8
Language & keyboard.....	9
Manage Applications.....	10
Music .....	11
Photo .....	12
Video.....	13
Wi-Fi .....	14
Browser.....	15
Gmail .....	17
Maps .....	19
Market.....	21
YouTube.....	22
Recorder .....	23
Camera .....	24

## Introducing your GoClever TAB S73

Product Name	Tablet PC
Product Model	GOCLEVER TAB S73
CPU	ARM Cortex A8 Samsung 1 GHz 3D Graphic Accelerator
Chipset	Samsung S5PV210
Screen	Size 7 inch; Resolution WVGA 800*480; Color 16 million colors;
Touch Screen	Capacitive Dual-Touch
Memory	DDR2 512MB cache
Storage	Built-in flash memory 4GB Support external microSD card, maximum capacity of 32GB
Graphics card	Power SGX535
Camera	1.3MP Front Camera
Speaker	Hi-fi stereo speakers
Battery	Built-in 3000mAh Li-ion Rechargeable Battery
Power adapter	DC 9V/1.5A
Ports	1x USB 2.0 Host; 1xUSB2.0 OTG; 1x Headphone; 1xAC power; 1x microSD Card; 1x miniHDMI 1.3
OS	Google Android 2.2 (Market, Flash 10.1)
Network	IEEE802.11b/g wireless network; 3G (optional)
Video resolution	Max support 1920*1080
Video	AVI RM/RMVB FLV DAT VOB WMV MPG MPEG-1 MPEG-2 MPEG-11 MP4 M4V VC-1 etc.
Audio	MP3 WMA AAC FLAC WAV OGG APE etc.
GPS	Selectable
Included in Box	Host cable; Power adapter; Mini USB Cable; Earphone; Manual; warranty card
Weight	330g
Size	193*118*13.3mm
Color	Silvery grey
Application	Web Browsing; Email; QQ MSN SKPE; Games; E-book; Text processing; Video player; Music player; Others supporting Android 2.2 OS Programs; Built-in Google map etc.

## Features



<b>Power key</b>	Press and hold to power on/off the TAB S73. Short press to put the TAB S73 into sleep mode. press any key will awaken TAB S73.
<b>Home key</b>	Press to return to the Home screen from anywhere. Press and hold to rotate the Applications window
<b>Menu key</b>	Press to open a list of actions available on the current screen. Press and hold to see the menu shortcuts for that screen. The shortcuts will blink in place as you hold down the <b>Menu</b> key.
<b>Back key</b>	Press to go back to the previous screen or to dismiss a dialog box or menu.
<b>Power switch</b>	Slide to turn on/off the device power.

## Battery

You can charge your TAB S73 via charger. MID has an internal charging battery. We suggest to charge up the battery when the battery power is low.


### Charge via the charger

1. Plug in the Power adapter to Power adaptor port of device, Battery charge LED will light up. Charging procedure will be completed once the LED turns green.
2. During battery charging, you can operate TAB S73.

The charging time will be longer when operating and charging at same time.

### Battery Status view

1. Touch **settings**. Touch **Advanced setting**.
2. Touch Battery information.

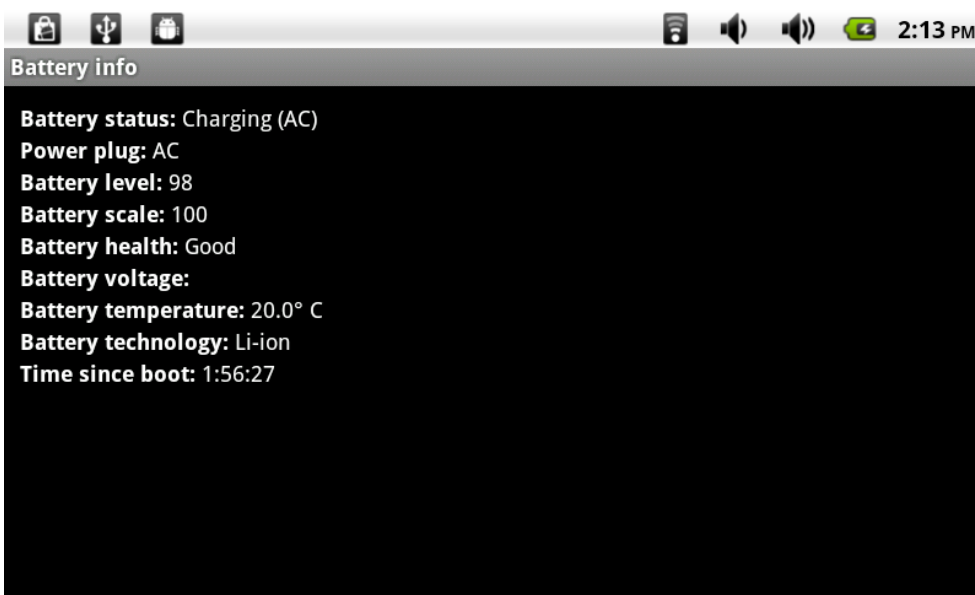

## SD card

Your device comes with a removable microSD memory card where you can store multimedia files, such as video clips, music tracks, sound files, and images.

### Copy files to the memory card

You can transfer files such as music and pictures between your TAB S73 and your computer.

To view files on your TAB S73, just launch the appropriate application and navigate to the file within that application.


1. Connect your TAB S73 to your computer using the USB cable.
2. On the home screen, press the **Menu** key.
3. Touch **Notifications**, touch **USB connected**.
4. Touch **Turn on USB storage**.
5. On your computer, go to the **Removable Disk** folder.
6. Locate the files on the computer that you want to copy to your TAB S73.
7. Copy and paste files to the desired location in the **Removable Disk** folder.

### Delete files on the memory card

1. Locate the file that you want to delete.
2. Touch and hold the file name.
3. Touch **Delete**.

### View available memory space

1. Touch **settings**, Touch **SD card & Device storage** to view available memory space for your memory card and TAB S73.

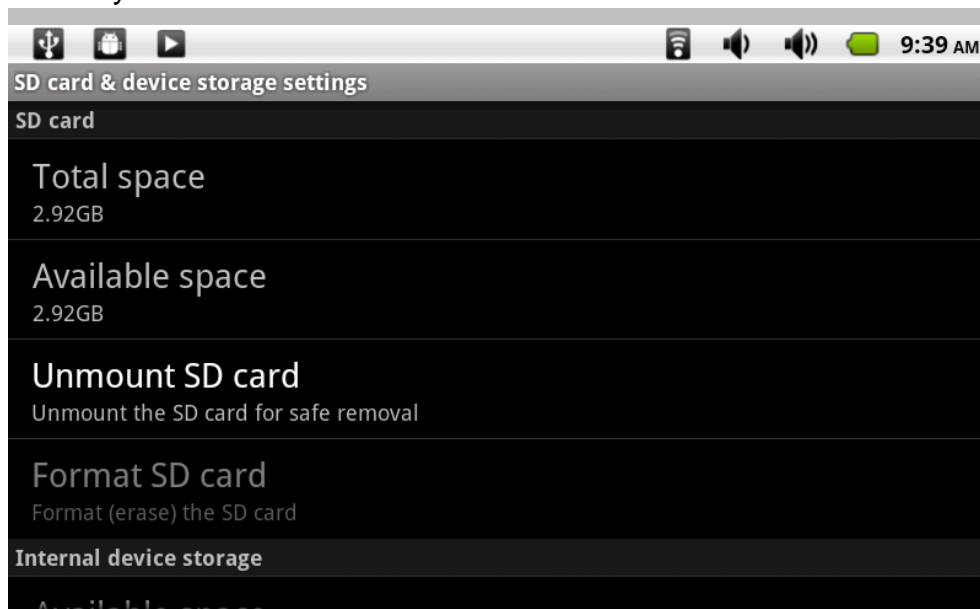



## Home screen and Application list

The Home screen is your starting point for using all the applications on your TAB S73 .You can customize your Home screen to display applications, shortcuts, and widgets.

To open the application list, tap on the Home screen.



## Notification and connection icons


Along the top of your screen is the status bar. On the left side, icons will appear, notify you of new messages, upcoming calendar events, alarms, and more. On the right side of the status bar, you will see the connection status icons.

## Read notifications

When you see a notification in the status bar, tap the bar and slide your finger down the screen to open the list of notifications.





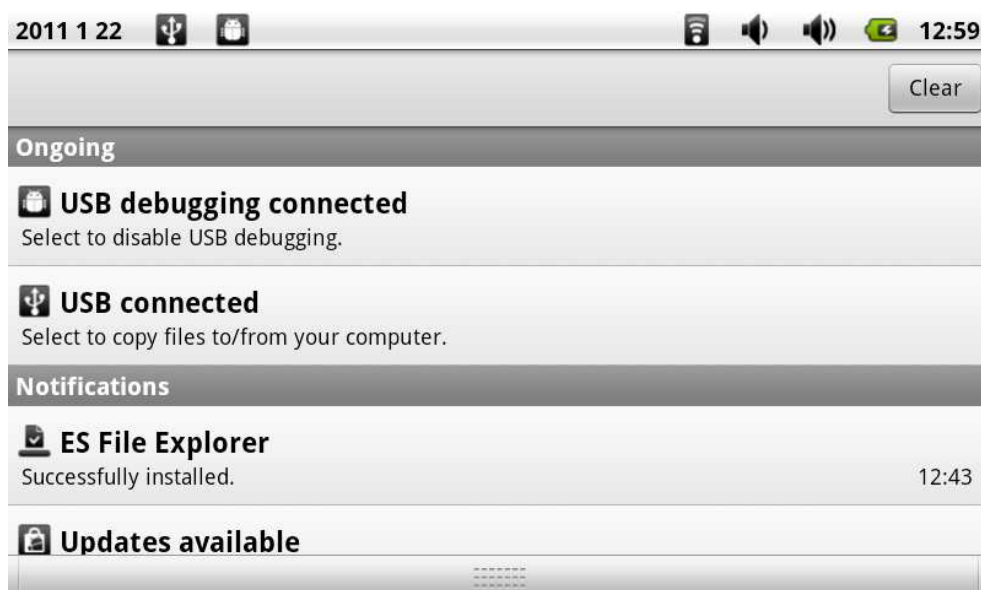













To open the notification, tap the item.

To clear notifications, Touch **Clear** at the top of the notification window.



To close the notification window, slide your finger up the screen.


Icons of Status Bar:

	New e-mail message		Downloading
	Upcoming event		Content downloaded
	Song is playing		Alarm is set
	SD card is full		Data is syncing
	Battery change indicators		Wi-Fi service connected
	No SD card		Battery is charging
	USB connected		Wireless services are off
	warning		Silent mode
	Volume reduction		Volume increase

## HDMI & Host

### Using the HDMI output

1. Touch **settings**, touch **Display**.
2. Touch **HDMI**, select an output mode.
3. Press **Back**, Touch **Sound**.
4. Touch **HDMI switch** to open the sound of HDMI.
5. Connect your TAB S73 to your display using the HDMI cable.

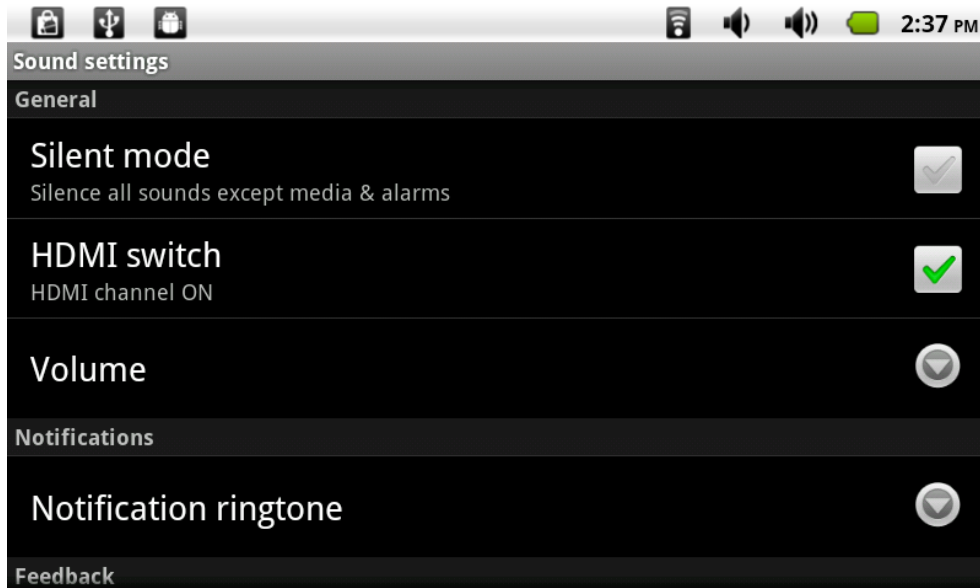

## USB Host

USB host supports USB-mouse, USB-keyboard and other peripherals.

## Language & keyboard

### Language


You can setting language TAB S73.To setting

1. Touch **settings**, touch **language & keyboard**.
2. Touch **Select language**.
3. Touch the language that you want to setting.

### Keyboard

You can setting keyboard for TAB S73.To setting

1. Touch **settings**, touch **language & keyboard**.
2. Touch the keyboard that you want to use.

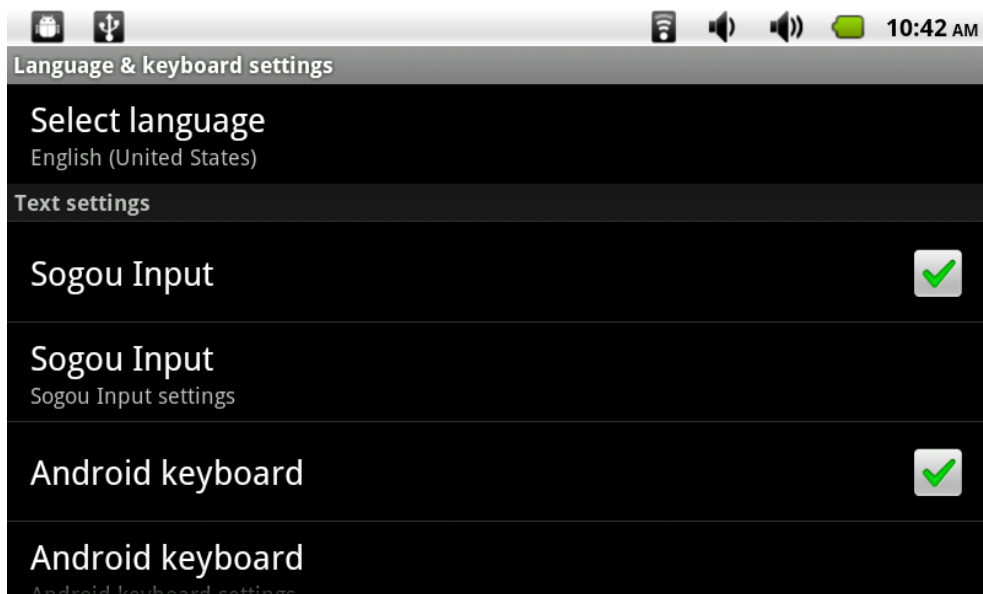

You can install other keyboard for TAB S73.


## Manage Applications

### Allow install of non-Market applications

1. Touch **settings**.
2. Touch **Applications**.
3. Touch **Unknown sources**.

### Uninstall Application

1. Touch **settings**.
2. Touch **Applications**.
3. Touch **Manage applications**.
4. Touch the application that you want to Uninstall.
5. Touch **Uninstall**.
6. Touch **OK**, Touch **OK**.

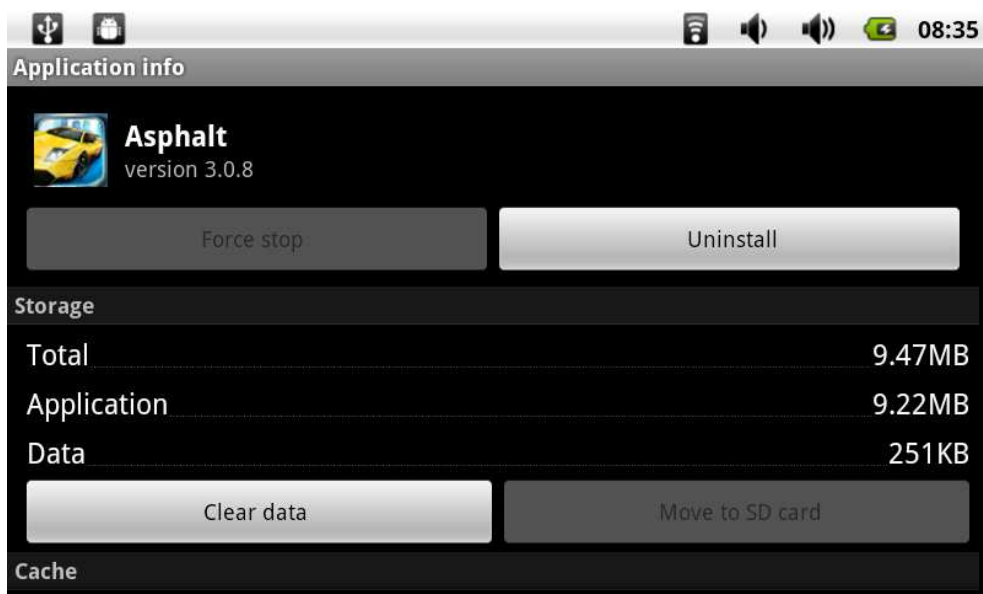

## Music

Your music is organized into four categories: Artists, Albums, Songs, and Playlists. Select a category to view the lists within each. Once in a category, keep selecting until you reach the music you want to play. For example, if you select the Artists category, you will see a list of artists in A-Z order, the list opens to display that artist's albums. Select an album, and the album's song list displays.

Your MID703 will play the following music file formats: Mp3, WMA, OGG, WAV, and MIDI.



### Access and play music

1. On the home screen touch the **Application** button.
2. Touch **Music**, Touch **Songs**. You can also touch **Artists**, **Albums**, or **Playlists**.
3. Touch the song to play.

### Add songs to new play list

2. On the home screen, touch the **Application** button.
3. Touch **Music**. Touch **Songs**.
4. Touch and hold the song that you want to add to the play list.
5. Touch **Add to playlist**.
6. Touch **New**.
7. Type the name for the play list.
8. Touch **Save**.

### Delete play lists


1. On the home screen, touch the **Application** button.
2. Touch **Music**, touch **Playlist**.
3. Touch and hold the play list you want to delete.
4. Touch **Delete**

## Photo

Your TAB S73 can play the photo file formats as follows: JPG、BMP、PNG、GIF. You can keep these files in SD card.

Slideshow the photos:

1. Copy the photo to SD card.
2. On the home screen touch the **Application** button.
3. Touch **Gallery**.
4. Touch the folder of photos. Touch the photo.
5. Touch **Slideshow**.

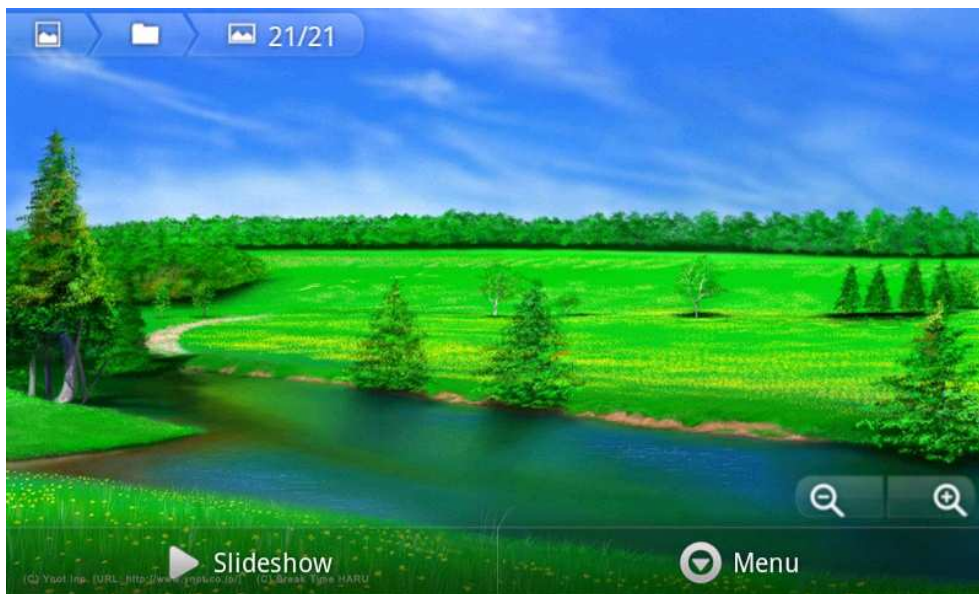

## Video

Your TAB S73 can play the video file formats as follows: RMVB、RM、AVI、MP4、WMV、3GP、MPG. You can save these files on SD card.

Play a video:

1. Copy the video to SD card.
2. On the home screen touch the **Application** button.
3. Touch **UTPlay**.
4. Touch the video.






## Wi-Fi

Your TAB S73 can connect to Wi-Fi networks. To connect

1. Touch **settings**, touch **wireless & networks**.
2. Touch **Wi-Fi** to turn it on. Touch **Wi-Fi settings**. Your TAB S73 scans for available Wi-Fi networks.
3. Touch the Wi-Fi network that you want to connect to.
4. Touch **Connect**. Some network may need you input the password.

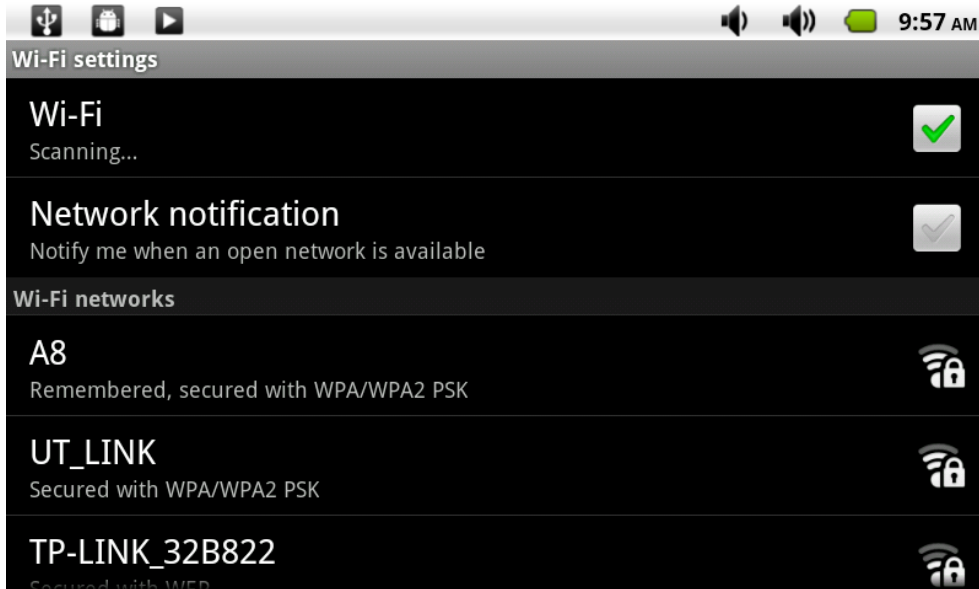

On the Wi-Fi settings screen, press the **Menu** key, touch **Advanced**, you will get more settings for Wi-Fi.

## Browser


### Go to your home page

The Browser always opens to the last Web page you were viewing.

The first time you enter the Browser after powering on, your home page will display.


### Change your home page

1. Touch **Browser**.
2. Press the **Menu** key.
3. Touch **more**, touch **settings**, touch **Set home page**.
4. Type the site address and touch **OK**.

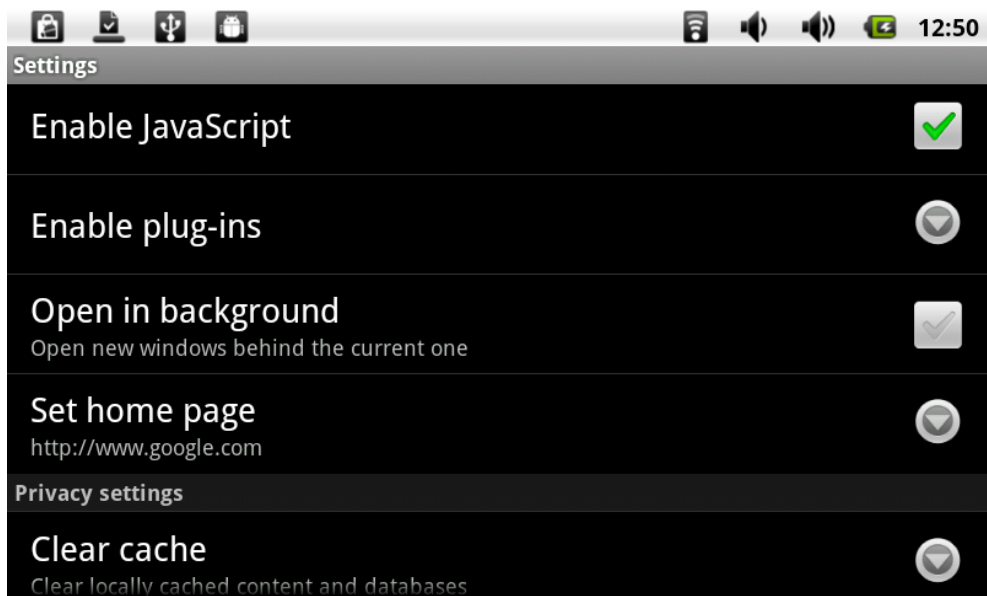

### Visit Web pages

1. Touch **Browser**.
2. Press the **Menu** key.
3. Touch **address bar**.
4. Type the Web address, touch **Go**.

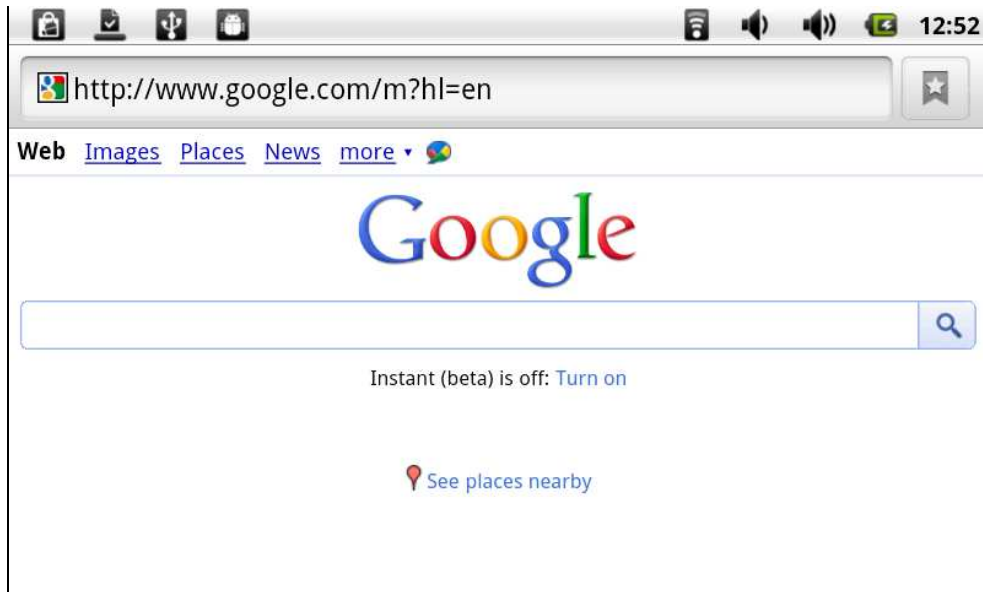


Need network connection

## Gmail

With Gmail, all your messages on the same subject are threaded together into conversations. To read the messages in a conversation, open the conversation and scroll through the individual messages. The most recent message appears at the bottom.

All the Gmail that you fetch to your TAB S73 is delivered to your Inbox and the Inbox is your default Gmail view. The total number of unread messages displays in the title bar and individual unread messages display in bold. If you have labeled a message, its label appears in a colored rectangle to the left of the date.

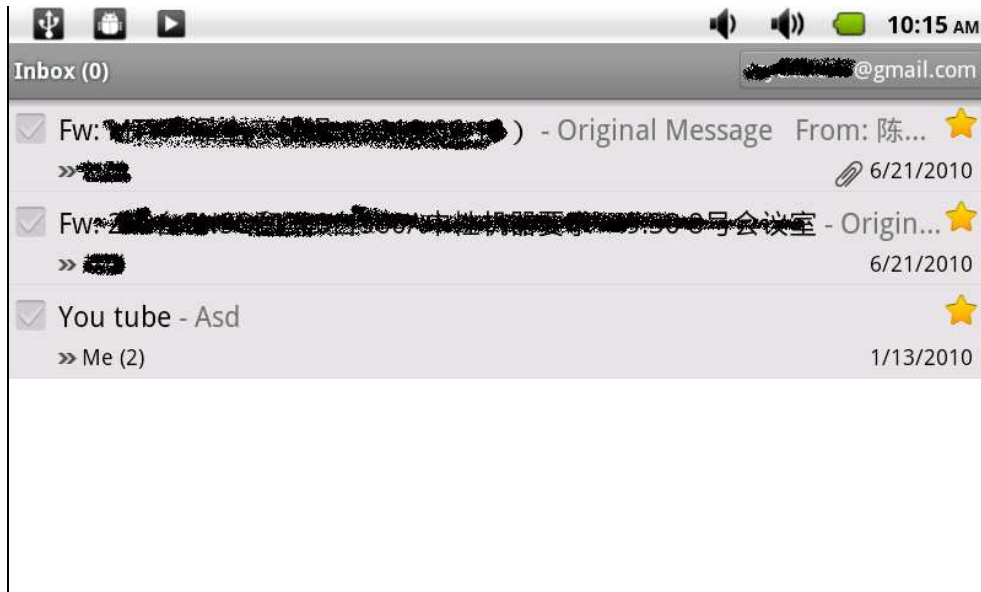


### Read new messages

1. On the home screen, touch **Gmail** to display your inbox.
2. Touch a message to read.

### Write new messages

1. On the Home screen, touch **Gmail** to display your Inbox.
2. Press the **Menu** key.
3. Touch **Compose**.
4. Type a name or e-mail address in the **To** field. Matching contacts will appear. Select the contact or continue typing.
5. Type the subject and message.
6. To attach pictures, press the **Menu** key and touch the picture to attach.
7. Touch **Send**.

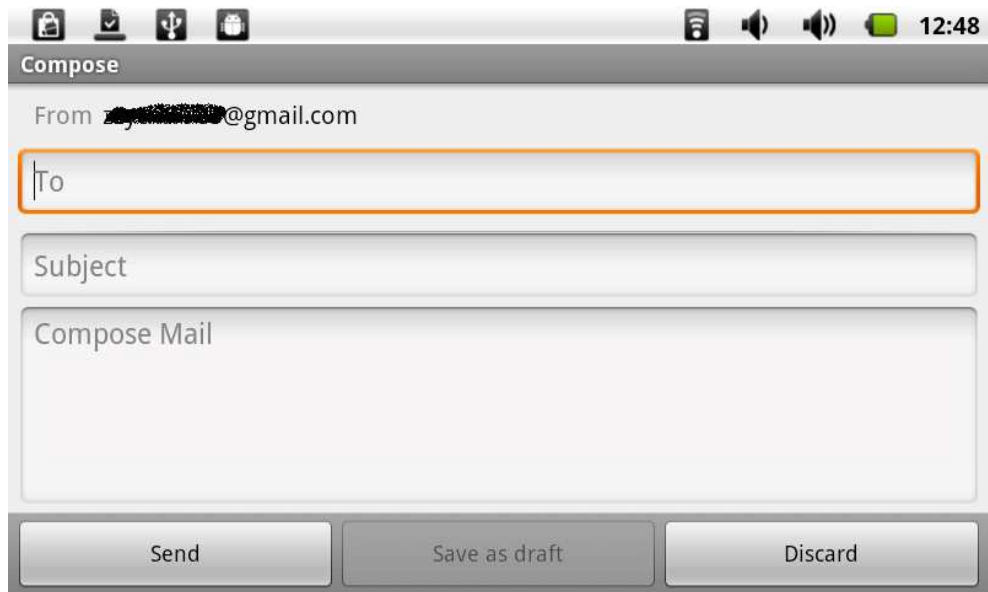

Need network connection


## Maps

### Find a location

1. On the Home screen, touch the **Application** button.
2. Touch **Maps**.
3. Press the **Menu** key.
4. Touch **Search**.
5. Type an address. Touch **Go**.
6. Touch to see the result on a map.

### Get direction

1. On the Home screen, touch the **Application list** button.
2. Touch **Maps**.
3. Press the **Menu** key. Touch **Directions**.
4. At the **From** field, type your starting address, at to **To** field, type your destination address. Touch **Go**.

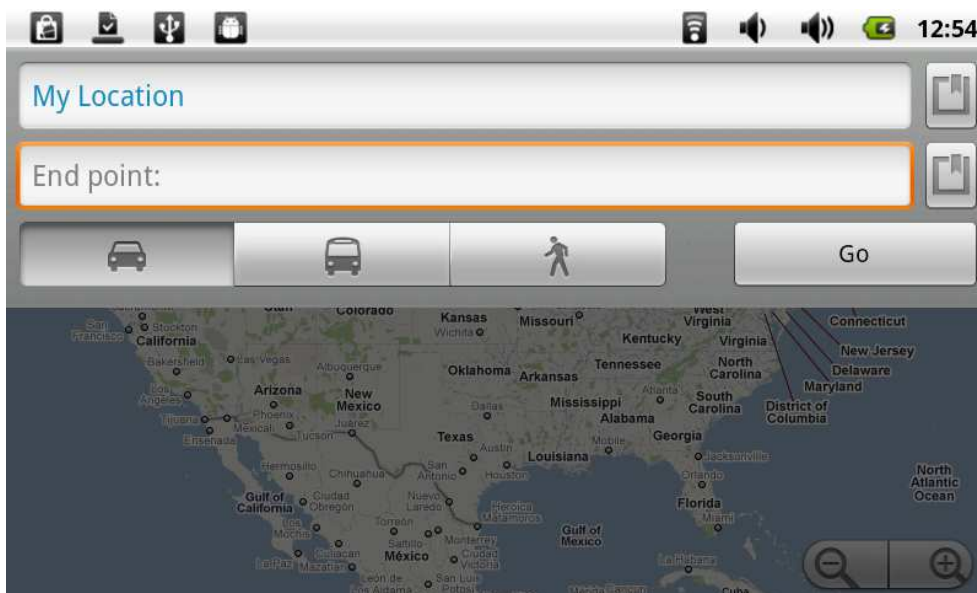

### Change map mode

Maps gives you both map and satellite of the area you are viewing. To view satellite, traffic, or street view.

1. On the Home screen, touch the **Application** button.
2. Touch **Maps**.
3. Press the **Menu** key.
4. Touch **Map mode**.
5. Touch **satellite**, **Traffic**, or **Street View**.



Need network connection

## Market

Market provides you with direct access to software developers throughout the world. It is the place to go find fun games and cool applications.

## Browse contents

When you first enter Market, you will see featured items, a list of item categories, a link to search, and a link to My downloads.

Scroll through the featured items or select a category to browser its contents, then select a subcategory. Within each subcategory you can select to view items sorted By popularity or By date. Note that all items in s subcategory are listed in each tab, those in the By popularity tab are sorted most popular to least popular, and those in the By date tab are sorted newest oldest.






## YouTube

YouTube is a free online video streaming service that allows anyone to view and share videos that have been uploaded by the YouTube members. You do not need a YouTube account to browse and view videos.

### Watch YouTube videos

1. On the Home screen, touch the **Application** button.
2. Touch **YouTube**. The main YouTube screen appears showing popular video categories.
3. Touch the category and the video in that category.

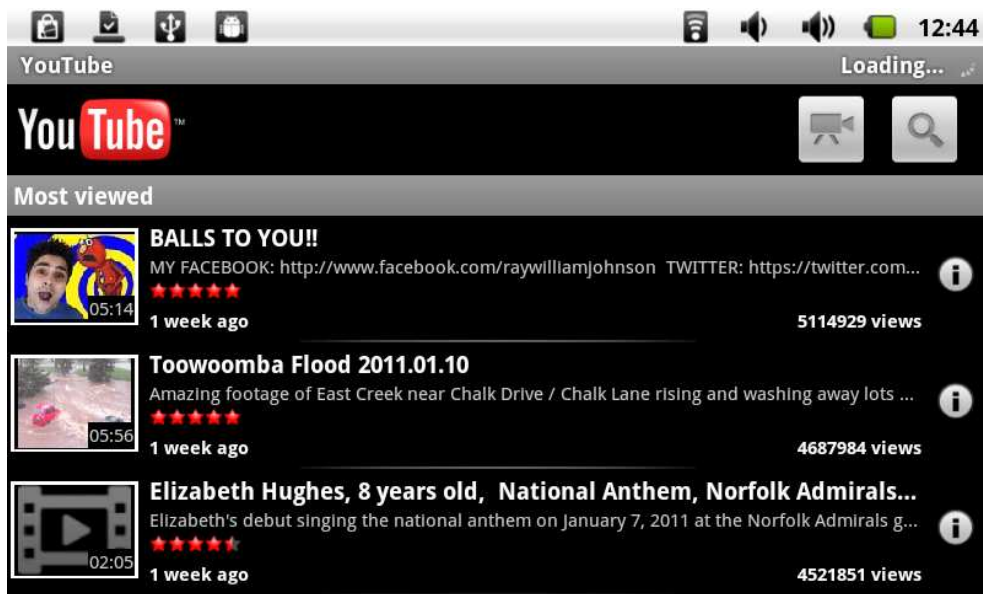


### Search for YouTube videos

1. On the Home screen, touch the **Application** button.
2. Touch **YouTube**. The main YouTube screen appears showing popular video categories.
3. Press the **Menu** key.
4. Touch **Search**. Type your search.
5. Touch **Search**.

## Recorder

### A sound recording and playback:

1. On the Home screen, touch the **Application** button.
2. Touch **Sound Recorder**.
3. Touch **Record** and Touch **Stop** when the sound recording is completed.
4. Touch **Use this recording**.
5. On the Home screen, touch the **Application** button.
6. Touch **Music**.
7. Touch **Playlists** ,touch **My recordings**.
8. Touch the recordings to play.

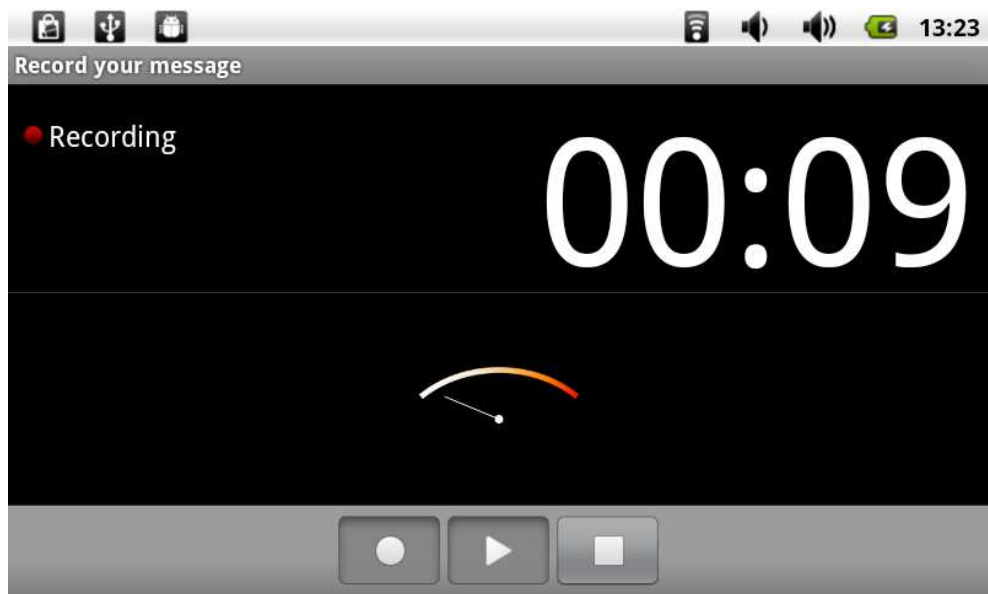

## Camera

### Shooting and playback a video:

1. On the Home screen, touch the **Application** button.
2. Touch **Camera**.
3. Drag the button to the **shooting mode**.
4. Touch **Shooting**. When finished recording press the **Stop**.
5. On the Home screen, touch the **Application** button.
6. Touch **Gallery**. And found this video just taken.
7. Touch the video and Select a video player to play.

### Photo shoot

1. On the Home screen, touch the **Application** button.
2. Touch **Camera**.
3. Drag the button to the **photo mode**.
4. Touch **shooting**.



#### Deklaracja zgodności

Niniejszym GOCLEVER Technology oświadcza iż produkt jest zgodny z zasadniczymi wymogami oraz pozostałymi postanowieniami Dyrektywy 199/5/WE.

#### Ochrona środowiska

Urządzenie podlega dyrektywie WEEE 2002/96/EC. Symbol obok oznacza, że produkt musi być utylizowany oddzielnie i powinien być dostarczony do odpowiedniego punktu zbierającego odpady. Pozwala to ograniczać zanieczyszczenie środowiska i pozytywnie wpływa na ludzkie zdrowie.

Informujemy ponadto, iż nasza firma w zakresie obowiązków wynikających z ustawy o zużytym sprzęcie elektronicznym, w tym w zakresie jego zbierania, przetwarzania, odzysku i recyklingu jest obsługiwana przez KARAT ELEKTRO-RECYKLING Sp.z o.o. W razie jakichkolwiek pytań lub wątpliwości możecie się Państwo kontaktować z Karat pod numerem telefonu 056-623-80-91.

#### Odpowiedzialność

Firma GOCLEVER Technology ani żaden z jej licencjobiorców nie ponosi odpowiedzialności za jakąkolwiek utratę danych lub zysków, jak również za żadne inne wtórne i pośrednie szkody powstałe w wyniku użytkowania urządzeń marki, w żadnym wypadku i maksymalnym dopuszczalnym przez prawo zakresie. GOCLEVER Technology nie odpowiada za problemy związane z nieprawidłowym działaniem systemu operacyjnego i aplikacji działających pod jego kontrolą.

#### Zmiany

GOCLEVER Technology zastrzega sobie prawo do dokonywania zmian w niniejszym dokumencie jak i specyfikacji urządzenia, bez konieczności informowania o tym użytkownika. Opisane funkcje oraz obrazki mogą się różnić w zależności od usług oferowanych przez operatora jak i wersji oprogramowania danego urządzenia.

#### Przed użyciem

Pamiętaj, że akumulator nie jest naładowany. Otwarcie lub próba rozebrania zewnętrznej obudowy urządzenia powoduje utratę gwarancji.

Google jest zastrzeżonym znakiem towarowym, a Google Maps jest znakiem handlowym firmy Google, Inc. w Stanach Zjednoczonych i innych krajach. YouTube jest znakiem towarowym firmy Google, Inc.

Firma GOCLEVER Technology nie ponosi odpowiedzialności za błędy techniczne lub redakcyjne ani za pominięcia w niniejszym tekście; nie ponosi również odpowiedzialności za szkody przypadkowe lub następne spowodowane korzystaniem z niniejszego materiału.

Informacje są przedstawione w takim stanie, w jakim przyjmuje je użytkownik, i nie są objęte żadną gwarancją. Mogą ulec zmianie bez powiadomienia. Firma GOCLEVER Technology zastrzega również prawo do zmiany zawartości niniejszego dokumentu bez uprzedniego powiadomienia. W podręczniku zostały opisane tylko podstawowe funkcje urządzenia.

#### Bezpieczeństwo

Należy zapoznać się z tymi wytycznymi. Niezastosowanie się do nich może spowodować powstanie zagrożenia życia lub zdrowia albo może być niezgodne z prawem. Aby uzyskać dalsze informacje, należy zapoznać się z całym podręcznikiem. Urządzenie zostało stworzone do pracy przy zasilaniu akumulatorowym jak i podłączeniu do sieci elektrycznej za pomocą ładowarki. Korzystając z urządzenia w inny sposób może być niebezpieczne i

spowoduje utratę gwarancji.

#### Ładowanie

Urządzenie należy podłączać tylko do źródeł zasilania zgodnych z parametrami określonymi w specyfikacji. W przypadku wątpliwości co do typu wymaganego źródła zasilania należy skonsultować się z autoryzowanym punktem usługowym lub lokalnym dostawcą energii elektrycznej. Jeśli produkt zasilany jest z akumulatora lub innych źródeł, należy przestrzegać instrukcji dołączonej do produktu.

#### Oddziaływanie czynników zewnętrznych oraz pola elektromagnetycznego

Urządzenie nie jest wodoodporne. Należy dopilnować, aby zawsze było suche, chronić przed wilgocią. Urządzenie należy chronić również przed wysokimi oraz niskimi temperaturami, zapyleniem, piaskiem, nie należy narażać go na wstrząsy, rzucać nim, gdyż może to spowodować jego uszkodzenie, bądź jego elementów.

Nie korzystać z urządzenia w pomieszczeniach wilgotnych i w bardzo wysokich lub niskich temperaturach.

Nie pozostawiaj urządzenia w pojazdach ani miejscach, w których temperatura może przekroczyć 50 stopni Celsjusza.

Nie korzystaj urządzenia na pokładzie samolotu oraz w miejscach gdzie nie jest dozwolone korzystanie z urządzeń mogących emitować pole elektromagnetyczne Np. szpital, stacja benzynowa, magazyn materiałów wybuchowych; nieprzestrzeganie tych zasad może spowodować pożar lub wybuch.

Nie korzystaj z urządzenia podczas prowadzenia samochodu.

Nie korzystaj z urządzenia w pobliżu źródeł silnego promieniowania elektromagnetycznego, takich jak kuchenki mikrofalowe, głośniki, telewizory a nawet radia.

Stosować tylko oryginalne akcesoria zalecane przez producenta albo akcesoria, które nie zawierają metali.

#### Serwis i naprawy

Do napraw korzystaj z autoryzowanego serwisu i wykwalifikowanego personelu, wszelkie próby naprawy samodzielnej, bądź też przez nieautoryzowany serwis będzie skutkować utratą gwarancji.


## Spis treści

Wprowadzenie <b>GoClever TAB S73</b> .....	2
Bateria .....	4
Karta microSD .....	5
Ekran główny oraz lista aplikacji .....	6
HDMI & Host.....	8
Język & klawiatura .....	9
Zarządzanie aplikacjami .....	10
Muzyka .....	11
Zdjęcia .....	12
Video.....	13
Wi-Fi .....	14
Przeglądarka.....	15
Gmail .....	17
Mapy .....	19
Market.....	20
YouTube.....	21
Dyktafon .....	22
Kamera .....	23

## Wprowadzenie GoClever TAB S73

Product Name	Tablet PC
Product Model	GOCLEVER TAB S73
CPU	ARM Cortex A8 Samsung 1 GHz 3D Graphic Accelerator
Chipset	Samsung S5PV210
Screen	Size 7 inch; Resolution WVGA 800*480; Color 16 million colors;
Touch Screen	Capacitive Dual-Touch
Memory	DDR2 512MB cache
Storage	Built-in flash memory 4GB Support external microSD card, maximum capacity of 32GB
Graphics card	Power SGX535
Camera	1.3MP Front Camera
Speaker	Hi-fi stereo speakers
Battery	Built-in 3000mAh Li-ion Rechargeable Battery
Power adapter	DC 9V/1.5A
Ports	1x USB 2.0 Host; 1xUSB2.0 OTG; 1x Headphone; 1xAC power; 1x microSD Card; 1x miniHDMI 1.3
OS	Google Android 2.2 (Market, Flash 10.1)
Network	IEEE802.11b/g wireless network; 3G (optional)
Video resolution	Max support 1920*1080
Video	AVI RM/RMVB FLV DAT VOB WMV MPG MPEG-1 MPEG-2 MPEG-11 MP4 M4V VC-1 etc.
Audio	MP3 WMA AAC FLAC WAV OGG APE etc.
GPS	Selectable
Included in Box	Host cable; Power adapter; Mini USB Cable; Earphone; Manual; warranty card
Weight	330g
Size	193*118*13.3mm
Color	Silvery grey
Application	Web Browsing; Email; QQ MSN SKPE; Games; E-book; Text processing; Video player; Music player; Others supporting Android 2.2 OS Programs; Built-in Google map etc.

## Opis przycisków

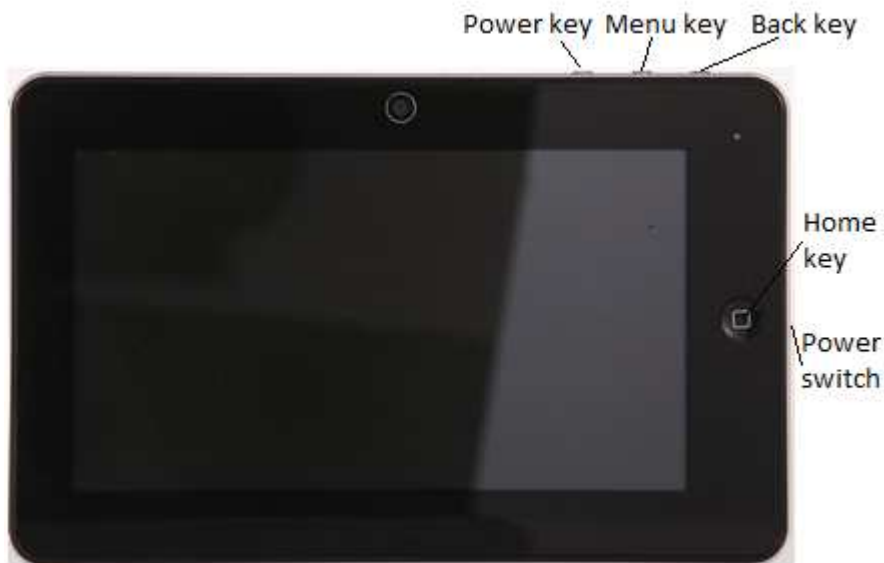

<b>Power key</b>	Wciśnij i przytrzymaj aby włączyć lub wyłączyć TAB S73. Krótkie wciśnięcie włącznika powoduje przejście urządzenia w stan uśpienia a ponowne wciśnięcie wzbudzenie.
<b>Home key</b>	Przycisk ten służy do powrotu do ekranu głównego. Wciśnięcie i przytrzymanie powoduje wyświetlenie okna z ostatnio uruchamianymi aplikacjami.
<b>Menu key</b>	Wciśnięcie tego przycisku powoduje wyświetlenie listy opcji danego okna.
<b>Back key</b>	Wciśnięcie tego przycisku powoduje powrót do poprzedniego okna.
<b>Power switch</b>	Power switch służy do pełnego wyłączenia urządzenia. Aby włączyć urządzenie należy do ustawić w pozycji <b>on</b> a następnie użyć <b>Power key</b> .



## Bateria


Tablet TAB S73 powinien być ładowany wyłącznie ładowarką z zestawu. Urządzenie posiada wbudowaną baterię litowo-jonową. Nie należy używać urządzenia na zbyt niskim stanie baterii gdyż może to powodować problemy z działaniem urządzenia.

## Ładowanie urządzenia

1. Podłącz ładowarkę do urządzenia w gniazdo ładowania, Po podłączeniu ładowarki na urządzeniu zapali się dioda ładowania, kiedy dioda zmieni kolor na zielony znaczy że bateria jest naładowana w 100%.
2. Podczas ładowania urządzenia TAB S73 można z niego korzystać, wydłuży to jednak process ładowania urządzenia.

## Podgląd stanu baterii

1. Dotknij na ekranie **Settings** następnie na liście **Advanced setting**.
2. Następnie **Battery information**.

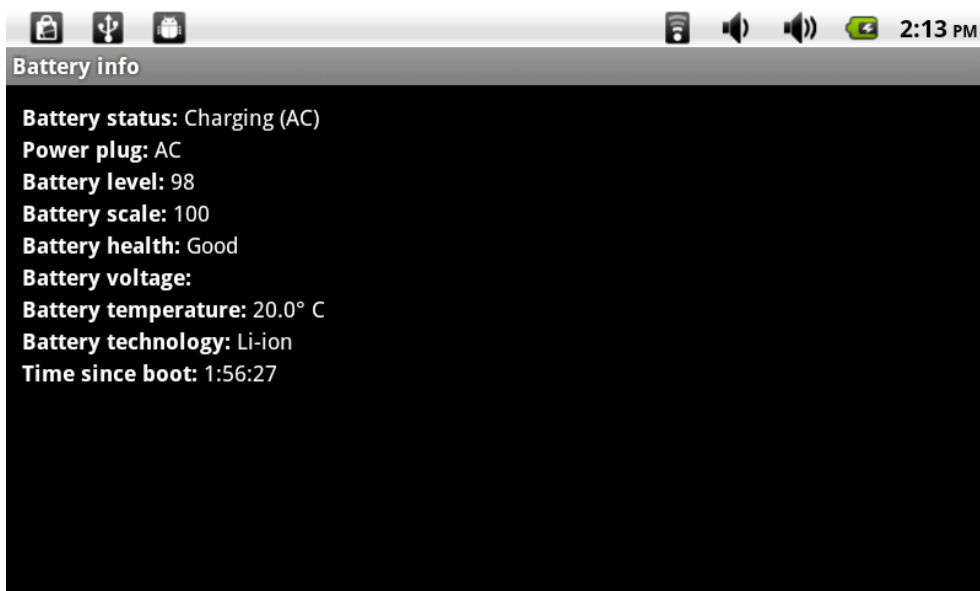

## Karta microSD

Urządzenie obsługuje karty microSD HC do 32GB można na karcie przechowywać dane typu muzyka, filmy, zdjęcia itd.

## Kopiowanie plików na pamięć urządzenia oraz kartę microSD

Po podłączeniu urządzenia pod komputer możesz kopiować pliki z urządzenia do komputera oraz z komputera do urządzenia.

Aby połączyć z komputerem TAB S73 należy:


1. Podłącz urządzenie TAB S73 z komputerem przy pomocy kabla USB.
2. W oknie głównym wciśnij przycisk **Menu**.
3. Dotknij **Notifications**, następnie **USB connected**.
4. Dotknij **Turn on USB storage**.
5. Komputer teraz powinien wykryć pamięć flash urządzenia oraz kartę jeśli znajduje się w urządzeniu.
6. Teraz możesz skopiować do pamięć urządzenia pliki.
7. Po skończeniu kopiowania należy wybrać **Turn off USB storage**.

## Kasowanie plików

1. Odszukaj w urządzeniu plik który chcesz usunąć.
2. Dotknij i przytrzymaj na pliku aż wyświetli się okno dialogowe.
3. Odszukaj na liście **Delete**.

## Podgląd wolnego miejsca na karcie pamięci

1. Dotknij **settings**, na liście dotknij **SD card & Device storage**, w tym oknie uzyskasz informacje na temat wolnej pamięci na karcie oraz wolnej pamięci w urządzeniu TAB S73.

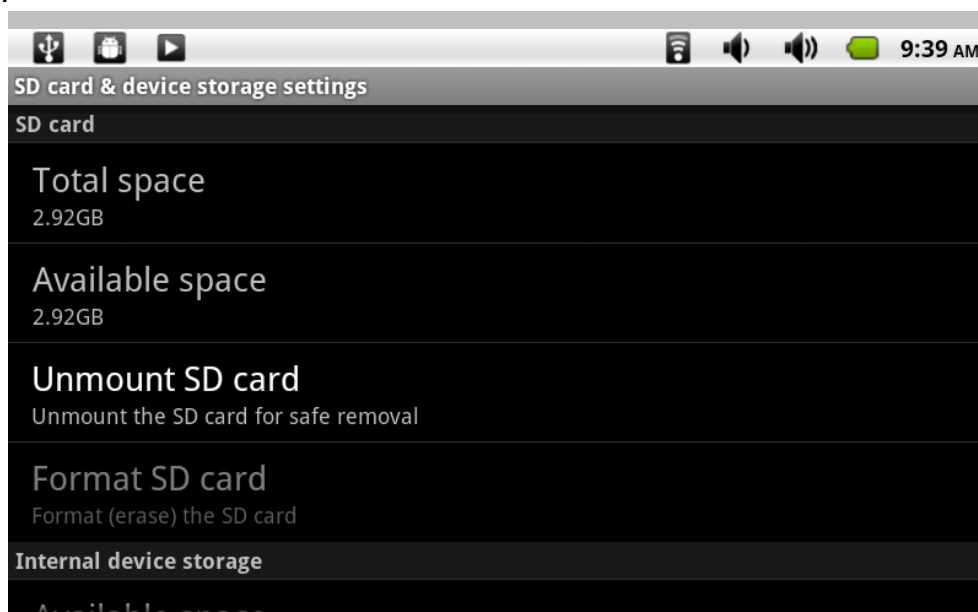

## Ekran główny oraz lista aplikacji

Ekran główny wyświetla się po włączeniu urządzenia, możesz na nim umieszczać skłóty, widżety, ekran główny składa się z pięciu ekranów.

Aby uruchomić listę aplikacji należy dotknąć ikonę **Application** prawa strona ekranu głównego.



## Powiadomienia oraz ikony na pasku statusu.


Na górze ekranu głównego jest pasek statusu. Po lewej stronie wyświetlają się informacje na temat nowych wiadomości email, alarmów, wydarzeń z kalendarza, dostępnych aktualizacjach aplikacji, informacji na temat karty microSD. Po prawej stronie na temat połączeń np. Wi-Fi.

## Odczytywanie powiadomień

Kiedy na pasku pojawi się powiadomienie aby je odczytać, należy dotknąć na pasek a następnie przeciągnąć w dół ekranu i wtedy zobaczymy listę powiadomień.

Aby odczytać powiadomienie dotknij dane powiadomienie na liście.

Aby wykasować wszystkie powiadomienia, Dotknij **Clear** prawy górny róg listy powiadomień.

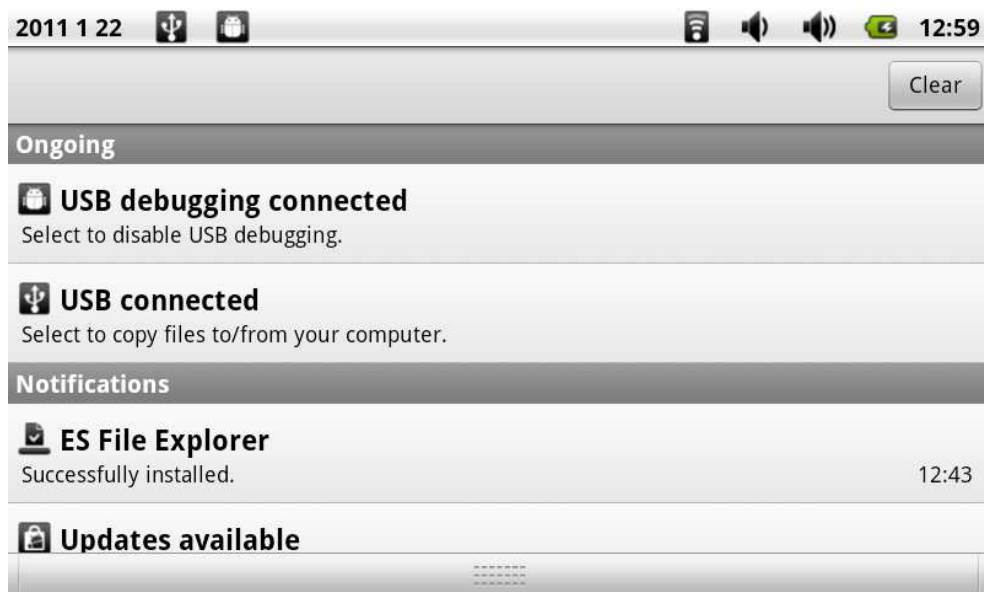

Ikony na pasku statusu ekranu głównego:

	Nowy e-mail		Pobieranie trwa
	Zbliżające się wydarzenie		Zakończenie pobierania
	Odtwarzana jest muzyka		Budzik skonfigurowany
	Karta pamięci pełna		Synchronizacja danych
	Stan naładowania baterii		Połączenie Wi-Fi
	Brak karty microSD		Ładowanie baterii
	Połączenie USB		Tryb samolotowy wszystkie połączenie bezprzewodowe wyłączone
	Ostrzeżenie		Tryb wyciszenia
	Przyciszenie głośności		Zwiększanie głośności


## HDMI & Host

### HDMI wyjście

1. dotknij **Settings**, następnie dotknij **Display**.
2. Dotknij **HDMI**, wybierz rozdzielczość wyjścia.
3. Wciśnij przycisk **Back**, następnie dotknij **Sound**.
4. Dotknij **HDMI switch** aby aktywować dźwięk na wyjściu HDMI.

**UWAGA ! Po wybraniu tej opcji głośnik urządzenia zostanie wyłączony. Aby dźwięk był z głośnika urządzenia należy odznaczyć tę opcję.**

Połącz urządzenie z urządzeniem na którym ma być wyświetlony obraz kablem HDMI 1.3 obraz będzie wyświetlany jednocześnie na ekranie TAB S73 jak i na podłączonym urządzeniu.

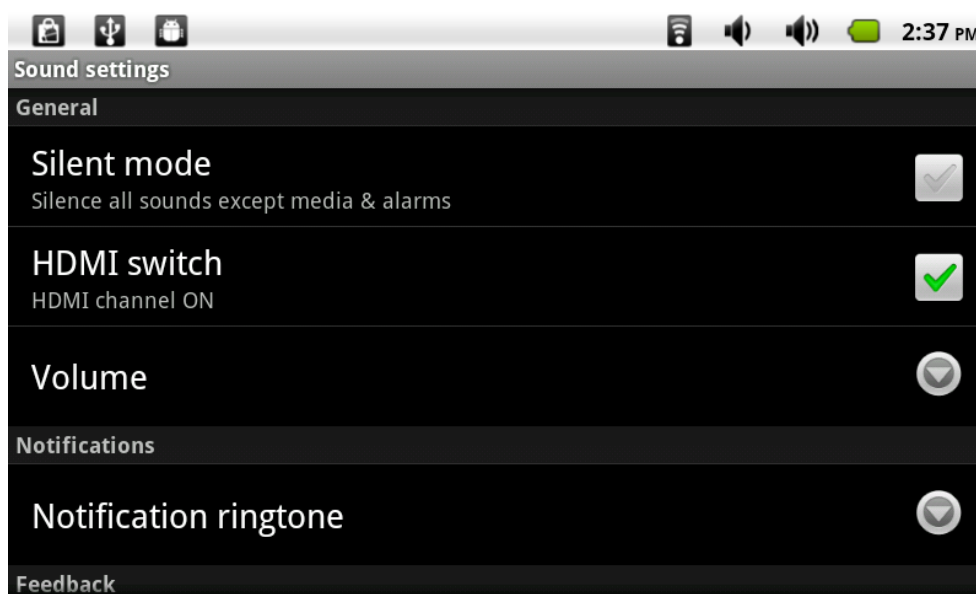

### USB Host

Pozwala na podłączenie myszki, klawiatury oraz pamięci np. PenDrive.

**UWAGA ! System Android obsługuje wyłącznie format plików FAT oraz FAT32.**

## Język & klawiatura

### Język


Aby wybrać język w urządzeniu

1. Dotknij **Settings**, następnie **language & keyboard**.
2. Dotknij **Select language**.
3. Na liście odszukaj i wybierz język. Wbrany język zatwierdź dotknięciem.

### Klawiatura

Możesz wybrać rodzaj klawiatury ekranowej:

1. Dotknij **Settings**, następnie **language & keyboard**.
2. Wybierz klawiaturę która ma być domyślnie użyta.

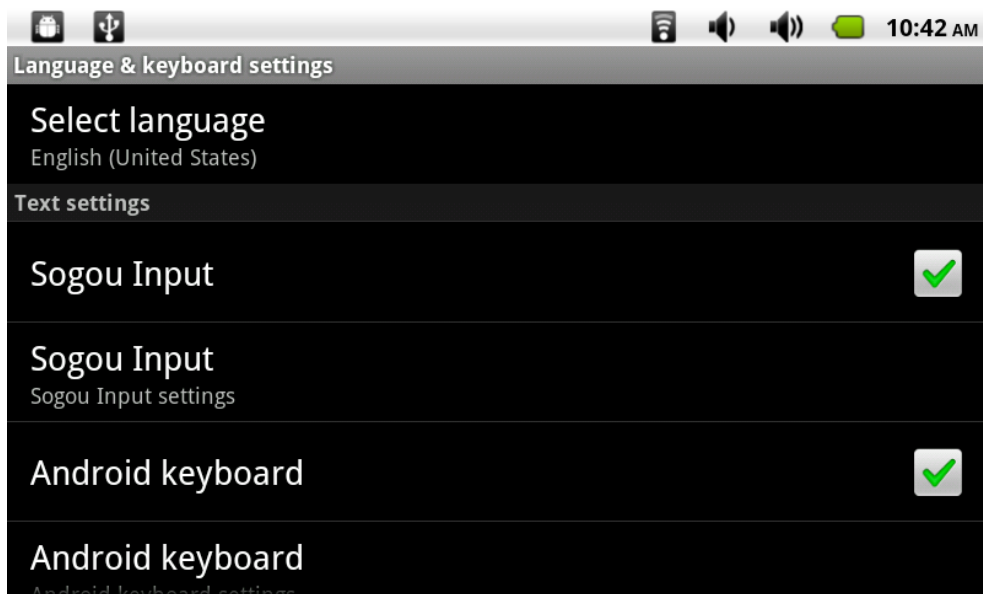

Można również zainstalować dodatkowe klawiatury ekranowe.


## Zarządzanie aplikacjami

Aby była możliwa instalacja aplikacji nie pochodzących z Google Market

1. Dotknij **Settings**.
2. Dotknij **Applications**.
3. Dotknij aby zaznaczyć **Unknown sources**.

## Deinstalacja aplikacji

1. Dotknij **Settings**.
2. Następnie **Applications**.
3. Dotknij **Manage applications**.
4. Wybierz na liście aplikację która ma zostać odinstalowana.
5. Dotknij **Uninstall**.
6. Następnie dotknij **OK** aby potwierdzić.

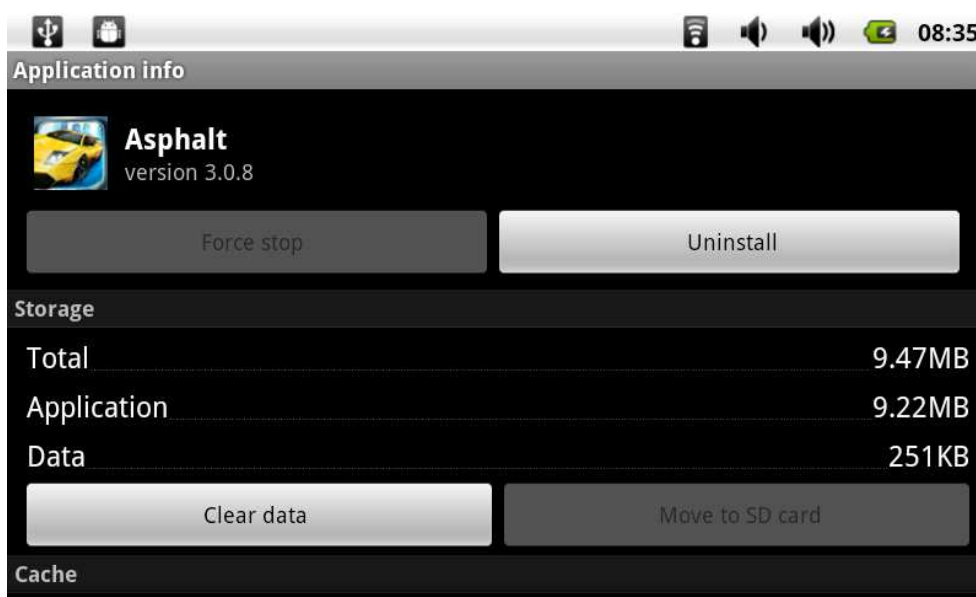

## Muzyka

Muzyka zostanie posegregowana według kategorii: Artists, Albums, Songs oraz Playlists. Wybierz daną kategorię aby zobaczyć listę utworów. Po wybraniu kategorii odszukaj utwór który ma zostać odtworzony.

TAB S73 obsługuje następujące formaty: Mp3, WMA, OGG, WAV, and MIDI.



### Uruchomienie player audio

1. Na ekranie głównym dotknij ikonę **Application**.
2. Dotknij **Music**, wybierz kategorię **Songs**, **Artists**, **Albums**, lub **Playlists**.
3. Dotknij na piścionce która ma zostać odtworzona.

### Tworzenie nowej listy piścionek

1. Na ekranie głównym dotknij ikony **Application**.
2. Dotknij **Music** następnie kategorii **Songs**.
3. Dotknij i przytrzymaj na piścionce która ma zostać dodana do listy.
4. Wybierz **Add to playlist**.
5. Następnie **New**.
6. Wpisz nazwę nowej listy piścionek.
7. Dotknij **Save** aby zapisać listę.

### Kasowanie listy piścionek

1. Na ekranie głównym dotknij ikony **Application**
2. Dotknij **Music** następnie kategorii **Playlist**.
3. Dotknij i przytrzymaj na wybranej liście piścionek.
4. Wybierz **Delete** aby ją wykasować.




## Zdjęcia

TAB S73 obsługuje następujące format plików graficznych: JPG, BMP, PNG, GIF. Pliki powinny być przechowywane na karcie microSD.

Uruchomienie pokazu slajdów z zdjęć:

1. Zapisz pliki na karcie.
2. Na ekranie głównym dotknij ikony **Application**.
3. Dotknij **Gallery**.
4. Teraz wybierz katalog.
5. Dotknij **Slideshow**.

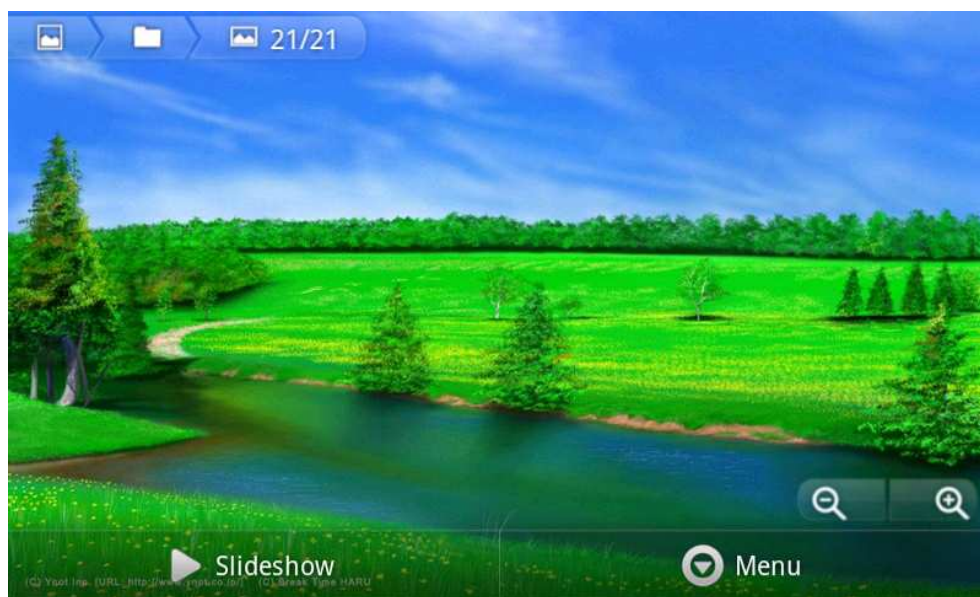

## Video

TAB S73 obsługuje następujące format plików video: RMVB, AVI, MP4, WMV, 3GP, MPG.

Aby odtworzyć plik video:


1. Zapisz pliki video na karcie.
2. Na ekranie głównym dotknij ikony **Application**.
3. Dotknij **UTPlay**.
4. Wybierz plik video który ma być odtworzony.



## Wi-Fi

TAB S73 może się łączyć z sieciami typu Wi-Fi. Aby połączyć się z siecią Wi-Fi

1. Dotknij **Setting** wybierz **wireless & networks**.
2. Dotknij **Wi-Fi** aby włączyć kartę Wi-Fi. Następnie **Wi-Fi settings**. S73 wyszuka automatycznie dostępne sieci.
3. Wybierz sieć z którą chcesz się połączyć.
4. Dotknij **Connect**. Wprowadź hasło w przypadku sieci zabezpieczonych.

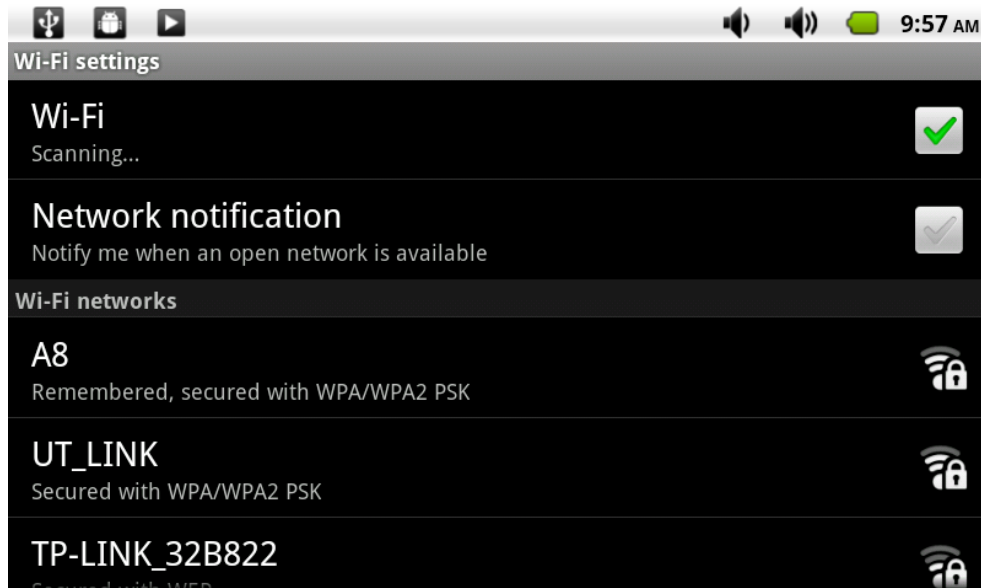


W oknie **Wi-Fi settings** wciśnij klawisz **Menu** wybierz **Advanced** aby uzyskać więcej opcji oraz numer MAC karty Wi-Fi.

## Przeglądarka

Po uruchomieniu zostanie wyświetlona strona startowa.


### Aby zmienić stronę startową

1. Dotknij **Browser**.
2. Wciśnij przycisk **Menu**.
3. Dotknij **more** wybierz **settings** następnie **Set home page**.
4. Wprowadź adres strony i zatwierdź **OK**.

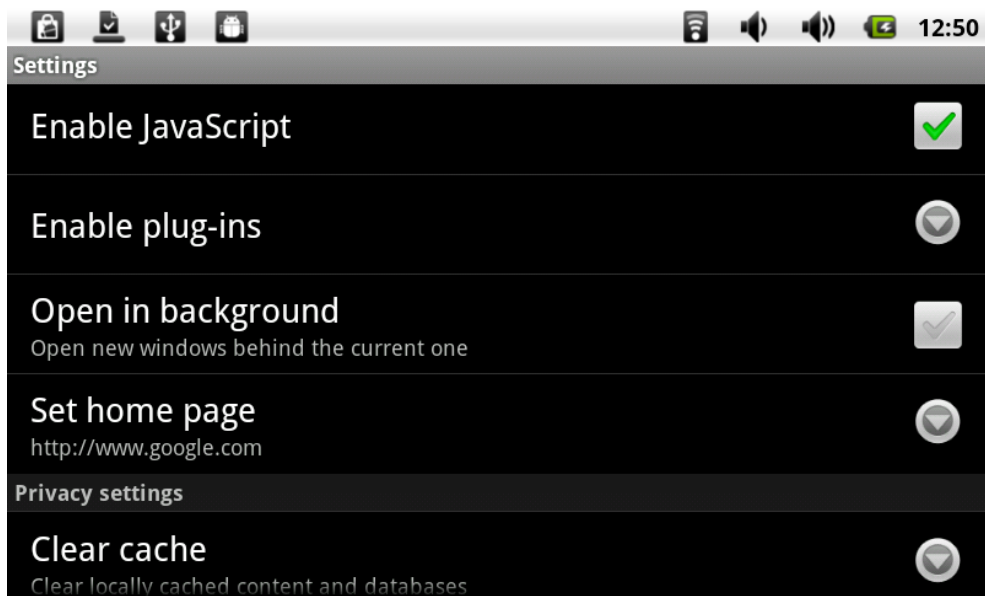

## Otwieranie stron internetowych


1. Dotknij **Browser**.
2. Wciśnij przycisk **Menu**.
3. Dotknij **address bar**.
4. Wprowadź adres strony i wybierz **Go**.

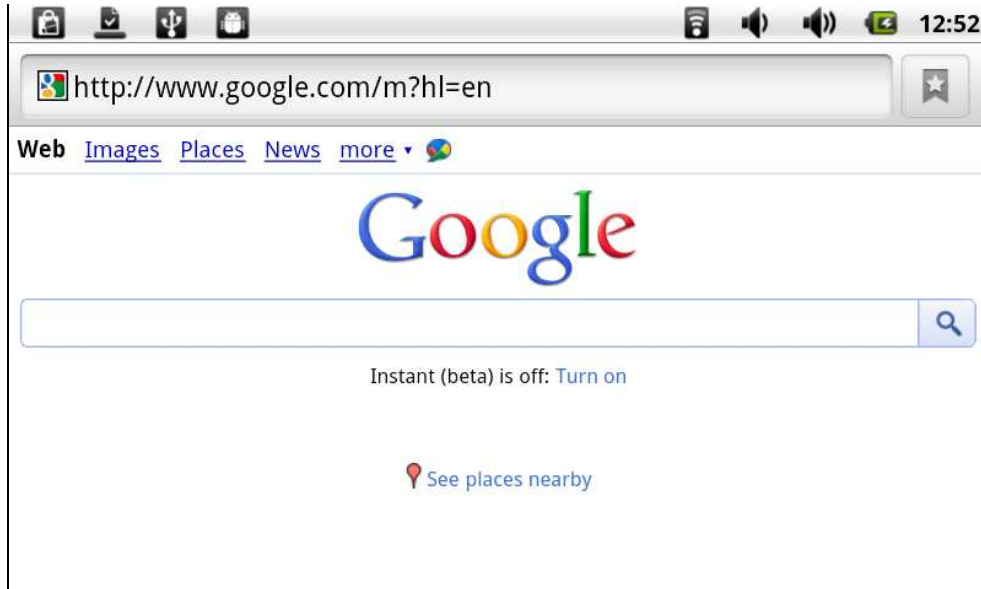

Wymaga połączenia z internetem.

## Gmail

Wszystkie wiadomości na ten sam temat są połączone razem w jeden wątek. Aby przeczytać wiadomości w konwersacji, otwarte rozmowy należy przewijać poszczególne wiadomości. Najnowsze wiadomości pojawia się na dole. Wszystkie wiadomości Gmail znajdują się w skrzynce odbiorczej oraz skrzynka odbiorcza jest domyślnym widokiem Gmail. Całkowita liczba nieprzeczytanych wiadomości wyświetla się na pasku tytułu a liczba nieprzeczytanych wiadomości wyświetlania pogrubioną czcionką. Jeśli masz otrzymasz wiadomość, na pasku statusu pojawi się ikona w kształcie koperty.

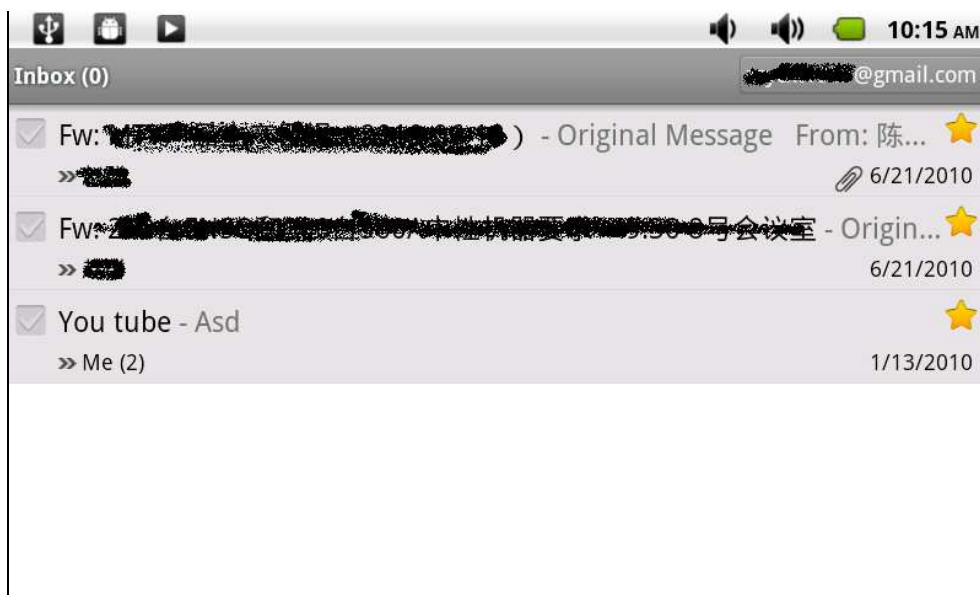


### Odczytywanie wiadomości

1. Na ekranie głównym dotknij **Gmail**.
2. Na liście wybierz i dotknij wybraną wiadomość.

### Tworzenie wiadomości

1. Na ekranie głównym dotknij **Gmail**.
2. Wcisnij przycisk **Menu**.
3. Dotknij **Compose**.
4. Wprowadź adresata, temat oraz treść wiadomości.
5. Aby załączyć zdjęcie wciśnij przycisk **Menu** następnie wybierz plik który ma być w załączniku.
6. Dotknij **Send**.

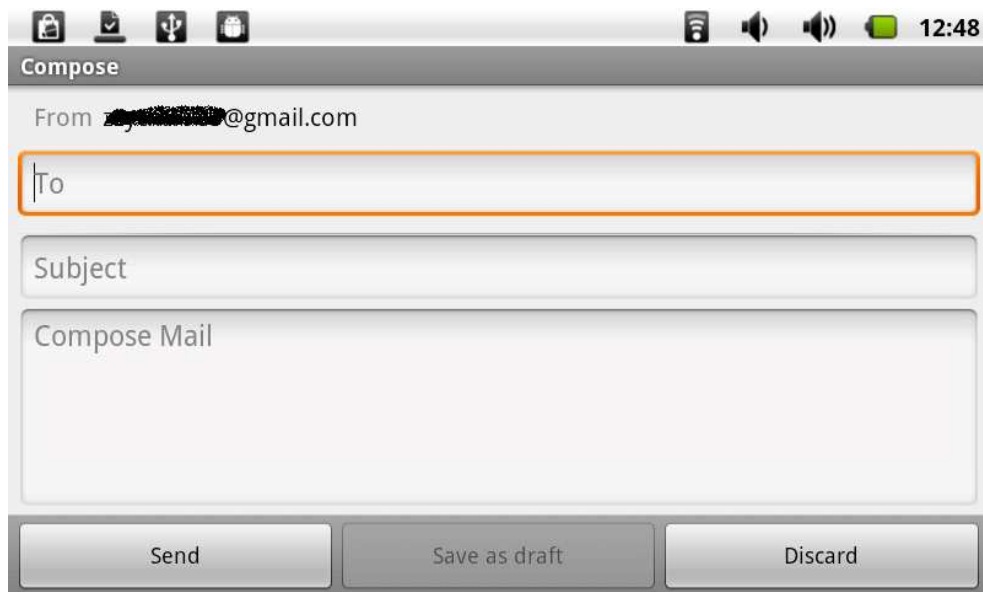

Wymaga połączenia z internetem.

## Mapy

### Aby wyszukać lokalizację

1. Na ekranie głównym dotknij ikony **Application**.
2. Dotknij **Maps**.
3. Wciśnij przycisk **Menu**.
4. Dotknij **Search**.
5. Wprowadź adres i dotknij **Go**.
6. Dotknij wyszukaną lokalizację aby zobaczyć ją na mapie.

### Zmiana trybu wyświetlania mapy

Mapa posiada możliwość wyświetlania mapy standardowej oraz widoku satelitarnego jednocześnie.

1. Na ekranie głównym dotknij ikony **Application**.
2. Dotknij **Maps**.
3. Wciśnij przycisk **Menu**.
4. Dotknij **Map mode**.
5. Wybierz **satellite**, **Traffic** (nie działa w Polsce), or **Street View**.



Wymaga połączenia z internetem.



## Market

Market oferuje bezpośredni dostęp do aplikacji tworzonych przez programistów na całym świecie. To jest miejsce, gdzie można znaleźć tysiące gier oraz aplikacji.

**UWAGA ! Należy utworzyć konto pocztowe Gmail to poprawnego działania Marketu.**

## Przeglądanie Marketu

Kiedy pierwszy raz zostanie uruchomiony Market. Widać listę kategorii, link do wyszukiwania oraz link do moich pliki do pobrania.

Wybierz kategorię aby przeglądać jego zawartość, a następnie wybierz podkategorię. W każdej podkategorii możesz wybrać, aby wyświetlić elementy posortowane według popularności lub daty. Zauważ, że wszystkie aplikacje w podkategorii są posortowane według najbardziej popularne do najmniej popularnych lub są posortowane na najnowsze do najstarsze.




## YouTube

YouTube to bezpłatna internetowa usługa transmisji strumieniowej, który pozwala każdemu na przeglądanie i udostępnianie filmów wideo, które zostały przesłane przez użytkowników YouTube. Nie trzeba mieć konta w YouTube, aby przeglądać i oglądać filmy wideo.

### Korzystnie z YouTube

- Na ekranie głównym dotknij ikony **Application**.
- Dotknij **YouTube**. Zostaną wyświetlone najbardziej popularne w danym dniu klipy.

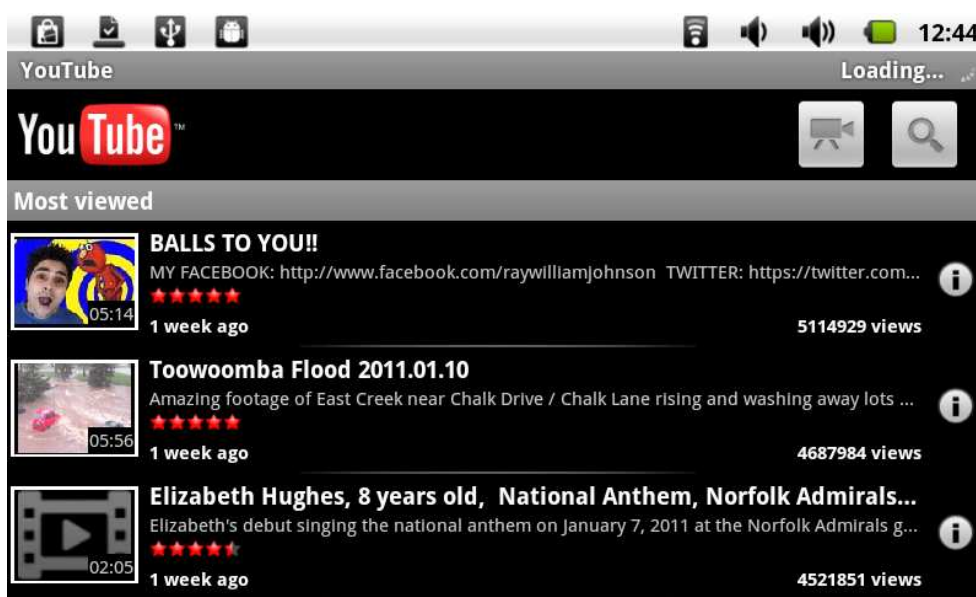


### Wyszukiwanie w YouTube

- Na ekranie głównym dotknij ikony **Application**.
- Dotknij **YouTube**.
- Wciśnij przycisk **Menu**.
- Wybierz **Search**. Wprowadź nazwę klipu który chcesz wyszukać..
- Wybierz **Search** aby wyszukać.

## Dyktafon

### Nagrywanie dźwięku i odtwarzanie:

1. Na ekranie głównym dotknij ikony **Application**.
2. Dotknij **Sound Recorder**.
3. Dotknij **Record** aby nagrywać oraz dotknij **Stop** aby zatrzymać nagrywanie.
4. dotknij **Use this recording**.
5. Na ekranie głównym dotknij ikony **Application**
6. Dotknij **Music**.
7. Dotknij **Playlists** wybierz **My recordings**.
8. Dotknij nazwę pliku na liście aby odtworzyć.

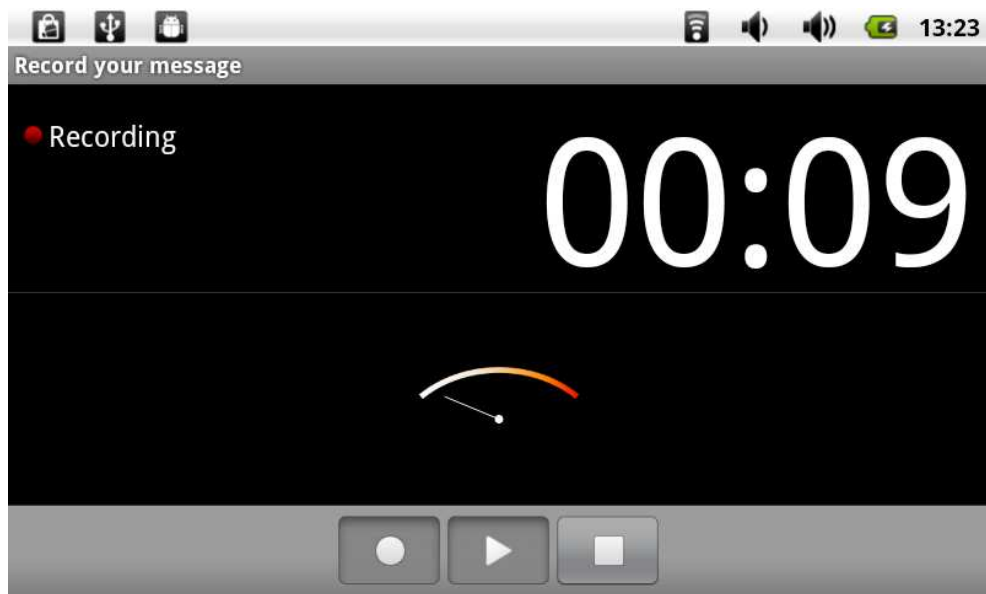

## Kamera

### Nagrywanie i odtwarzanie video:

- a. Na ekranie głównym dotknij ikony **Application**.
- b. Dotknij **Camera**.
- c. Wybierz tryb pracy kamery **shooting mode**.
- d. Dotknij **Shooting**. Aby zakończyć nagrywanie dotknij **Stop**.
- e. Na ekranie głównym dotknij ikony **Application**.
- f. Dotknij **Gallery**. Odrzukaj video.
- g. Dotknij video aby odtworzyć.

### Fotografowanie

1. Na ekranie głównym dotknij ikony **Application**.
2. Dotknij **Camera**.
3. Wybierz tryb pracy kamery **photo mode**.
4. Dotknij **shooting**.



**Manufacturer:**

**GOCLEVER TECHNOLOGY CO., LTD.**

BlockD, Century Holiday Plaza,  
No 9030 Shen Nan Road, Nanshan district,  
Shenzhen, China. Post Code: 518053

深圳市南山区深南大道 9030 号世纪假日广场 D 座 3105 室