




MANUAL DE INSTRUCCIONES
PARLANTE ACTIVO MULTIMEDIA (15")
BB-5531USBTL



ESTIMADO CLIENTE

Con el fin de que obtenga el mayor desempeño de su producto, por favor lea este manual de instrucciones cuidadosamente antes de comenzar a utilizarlo, y guárdelo para su futura referencia. Si necesita soporte adicional, no dude en escribir a: info@premiermundo.com



	PRECAUCIÓN RIESGO DE CHOQUE ELÉCTRICO , NO ABRA	
<p>Precaución: Para reducir el riesgo de choque eléctrico, no retire la cubierta, no hay partes manipulables por el usuario al interior de la unidad. Refiera todo mantenimiento o intervención técnica a personal técnico calificado.</p>		
	<p>Este símbolo indica la existencia de voltaje peligroso al interior de esta unidad, que constituye un riesgo de choque eléctrico.</p>	
	<p>Este símbolo indica que hay importantes instrucciones de operación y mantenimiento en la literatura que acompaña a esta unidad.</p>	

LÍNEAS DE SERVICIO AL CLIENTE PREMIER

Venezuela:	0800 – ELECTRIC (353-2874)
Panamá:	507 300-5185
Sitio Web:	www.premiermundo.com
E-mail:	servicioalcliente@premiermundo.com

NOTA

Nos reservamos el derecho de modificar las especificaciones, características y/u operación de esta unidad sin previo aviso, con el fin de continuar las mejoras y desarrollo del mismo.


INSTRUCCIONES GENERALES

- No sobrecargue la unidad para evitar daños en la misma.
- No coloque objetos tales como candelabros sobre la unidad o justo a su lado, esto con el fin de evitar incendios.
- Esta unidad solo debe ser usada en interiores. En caso de ser usada en exteriores, asegúrese que no esta expuesta a la lluvia ni humedad.
- Cuando no use la unidad, desconéctela del tomacorriente.
- Desconecte la unidad del tomacorriente antes de limpiarla o realizar reparaciones es la misma.
- Asegúrese que la unidad es colocada en una superficie plana y estable.
- Esta unidad puede ser colgada. En caso de colgarla, asegúrese que usa los materiales adecuados y lo suficientemente resistentes para sostener la unidad, de igual manera asegúrese que nadie se ubica debajo de la unidad mientras esta se encuentre colgada, esto para evitar cualquier tipo de accidente.
- No coloque sobre la unidad objetos con líquidos en su interior, tales como vasos de agua o floreros, ya que estos podrían regarse y causar choques eléctricos.
- Si desea transportar la unidad, use un medio adecuado con el fin de evitar lastimar su espalda.
- Si la unidad presenta fallas en su funcionamiento, contacte a un agente calificado para su reparación. Nunca intente reparar la unidad usted mismo.
- Desconecte la unidad durante tormentas.
- Ubique el cable de energía de tal manera que nadie pueda tropezarse en el ni colocar objetos pesados sobre el.
- Ajuste el nivel de volumen de la unidad al nivel mínimo antes de encenderla.
- Evite que los niños jueguen con esta unidad.

OPERACIÓN DE LA UNIDAD


- Antes de encender la unidad, baje el nivel de volumen al nivel mínimo.
- Conecte la fuente de audio al conector de entrada apropiado.
- Otro parlante puede ser conectado al puerto de salida, por ende varios parlantes pueden ser conectados en cadena.
- Conecte a un tomacorriente que sea compatible con el voltaje de la unidad.
- Encienda la fuente de audio y la unidad.
- Ajuste el nivel de volumen al nivel deseado.
- Ajuste los niveles de bajos y agudos de la unidad.

CONTROLES Y CONEXIONES

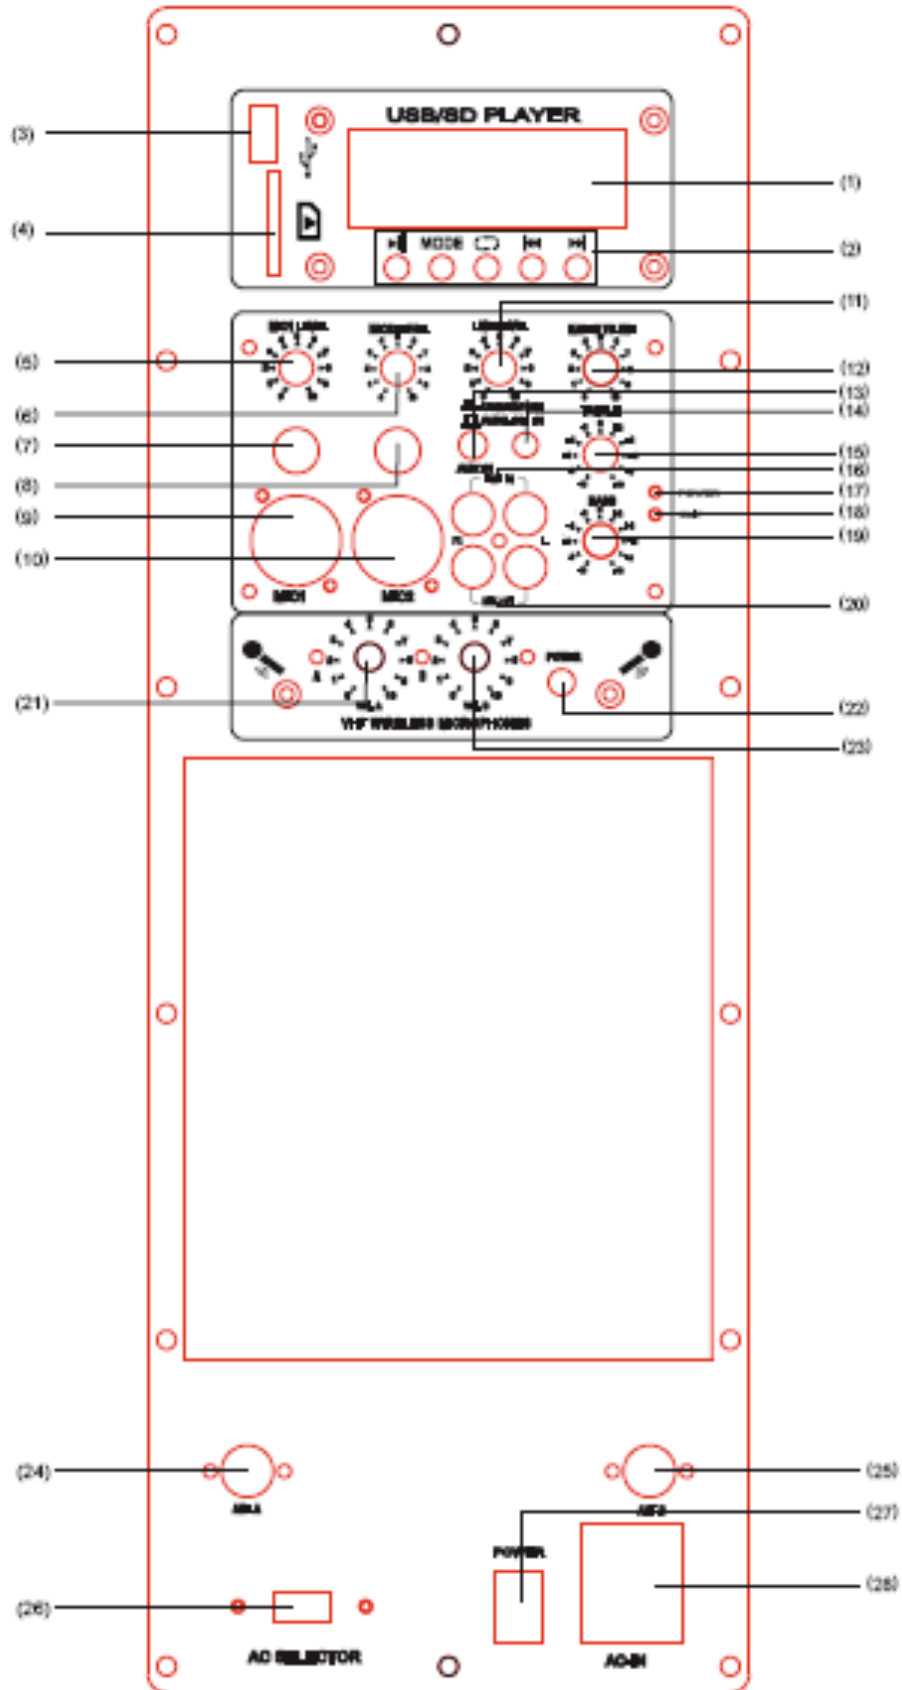

1. Pantalla LCD
2. Control MP3 (Botón Reproducir/Pausar, Botón Modo, Botón repetir, Botón Anterior/VOL-, Botón Siguiente/VOL+)
3. Entrada USB (El máximo de capacidad soportado es de 32GB).
4. Entrada de tarjeta de Memoria (El máximo de capacidad soportado es de 32GB).
5. Volumen de micrófono 1
6. Volumen de micrófono 2
7. Entrada de micrófono 1 de 6.35mm
8. Entrada de micrófono 2 de 6.35mm
9. Entrada de micrófono 1 XLR
10. Entrada de micrófono 2 XLR
11. Control de nivel de entrada de línea
12. Volumen maestro
13. Entrada auxiliar
14. Entrada de línea y selector de reproductor USB/SD
15. Perilla de ajuste de agudos
16. Entrada de línea RCA: Conecte la fuente de sonido a este conector.
17. Indicador LED de potencia: Se iluminara azul cuando la unidad este encendida.
18. Indicador de recorte: se ilumina rojo cuando se este cortando.
19. Control de bajos
20. Salida de línea RCA: esta salida de línea no la puede conectar a un parlante pasivo, la salida de línea necesita ser conectada a un amplificador o a un parlante alimentado con el fin de que funcione correctamente.
21. Volumen A de micrófono inalámbrico.
22. Volumen B de micrófono inalámbrico
23. Interruptor de potencia de micrófono inalámbrico.
24. Antena A de micrófono inalámbrico.
25. Antena B de micrófono inalámbrico.
26. Selector AC 115V/230V.
27. Interruptor de potencia.
28. Fuente de potencia.

OPERACIÓN USB/SD/BLUE-CONNECT

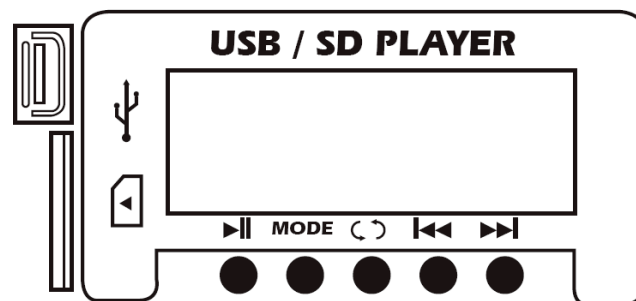

USB/SD


1. Entrada USB o de tarjeta SD
2. Seleccione el modo USB o SD
3. Seleccione una pista a través del control remoto o Anterior/Siguiente en control MP3
4. La capacidad de almacenamiento máximo soportado de USB/SD es de 32GB

Blue-Connect

1. Seleccione el modo Blue-Connect
2. Encienda la función Bluetooth™ en su dispositivo móvil y busque “BB-5531USBTL”
3. Seleccione “BB-5531USBTL” y establezca una conexión
4. Ingrese la contraseña “0000” en caso de requerirla
5. Seleccione una pista y reproduzca a través de su dispositivo de audio externo.

Radio FM

1. Seleccione el modo FM
2. Presione Reproducir/Pausar por 3 segundos y FM empezara a buscar canales disponibles
3. Seleccione el canal manualmente usando los botones Siguiente o Anterior en el control MP3 o selecciónelo usando el control remoto

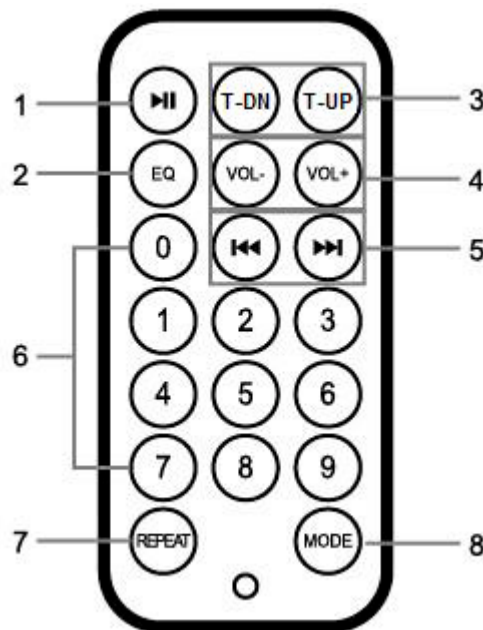CONTROL REMOTO**Sensor del control remoto**

Apunte el control remoto a este sensor directamente en la unidad. El sensor se encuentra ubicado al lado del logo metálico frente al parlante.

1. Reproducir/Pausar
2. Opciones de ecualización
3. Función FM
4. Aumentar / Disminuir volumen
5. Pista Siguiente / Anterior
6. Botones numéricos
7. Repetir actual pista o todas las pistas
8. Presione este botón para seleccionar entre USB, SD, Blue-connect, Entrada FM.

ESPECIFICACIONES

	Parlante de 2x15''
Sistema	Active 2-vias rango completo
Woofers	38cm (15'')
Tweeter	3.5cm (1.4'')
Potencia RMS	150W
Impedancia	8 ohms
Rango de frecuencia	35Hz-20KHz
Conector	XLR/6.35mm/RCA/3.5mm
Nivel de entrada de micrófono	< 8mV
Entrada de línea / nivel de salida	250mV/ 580mV
Voltaje de entrada	AC115/230V 60/50Hz

-
- Las personas y/o Marcas registradas en este manual de instrucciones no están afiliadas a Premier Electric Japan Corp. y aparecen en este Manual con propósitos ilustrativos únicamente.



***INSTRUCTION MANUAL
MULTIMEDIA ACTIVE SPEAKER (15")
BB-5531USBTL***







DEAR CUSTOMER

In order to achieve the best performance of your product, please read this instruction manual carefully before using, and keep it for future reference.



If you need extra support, please write to info@premiermundo.com

	CAUTION	
<p>Caution: To reduce the risk of electric shock do not open this device, there are not serviceable parts for customers. Please refer any maintenance or repair to qualified personnel.</p>		
	<p>This sign means the existence of dangerous voltage at the inside of the unit, which states a risk of electric shock.</p>	
	<p>This sign means that there are important instructions of operation and handling in the manual that comes with this device.</p>	

PREMIER CUSTOMER SERVICE

Venezuela:	0800 – ELECTRIC (353-2874)
Panama:	507 300-5185
Website	www.premiermundo.com
E-mail:	servicioalcliente@premiermundo.com

NOTE

This unit may be submitted to changes in specifications, characteristics and/or operation without prior notice to the user, in order to continue improving and developing its technology.

OPERATION

1. Prior to switching on, turn volume down to minimum.
2. Connect the audio source to the appropriate Input socket.
3. Another Speaker can be connected to the output socket, so that several boxes can be daisy chained.
4. Connect to the mains supply.
5. Switch on the audio source, followed by the active speaker.
6. Set the volume with the applicable control.
7. Adjust the bass + treble.


GENERAL USE INSTRUCTIONS

- Do not overload the box to avoid damage to the speakers.
- Do not place an open fire (candles etc) on top or next to the box- FIRE HAZARD
- For indoor use only. If the box is used outdoors, you need to make sure that no humidity can enter the box.
- When not in use, unplug the unit from the mains.
- Unplug the unit from the mains prior to checking or replacing the fuse.
- Make sure that the box is placed on a stable, strong surface.
- The boxes can be hung. Use only strong and approved mounting materials. During the mounting, make sure that nobody is standing below the mounting area.
- Do not place liquids on the box and protect it against humidity. Humidity can shorten the life time considerably.
- Only use suitable means of transportation if you want to move the box – BEARE OF YOUR BACK!!
- If the unit is damaged to an extent that you can see internal parts, do not plug the unit in a mains Outlet. In this case, please contact PREMIER.
- Always unplug the unit during a thunderstorm or when it is not in use.
- If the unit has not been used for a long period of time, condensation can occur inside the housing. Please let the unit reach room temperature prior to use.
- Never try to repair the unit yourself. It does not contain any user serviceable parts.
- Run the mains lead in such a way that nobody call fall over it and nothing can be put in it.
- Only use the supplied mains lead or another lead recommended by PREMIER.
- Set the unit to the lowest volume prior to switching it on.
- Keep the unit out of the reach of children.

SPECIFICATIONS

	2x15"Speaker Box
System	Active 2-way Full Range
Woofer	38cm (15")
Tweeter	3.5cm (1.4")
Power RMS	150W
Imdedance	8 ohms
Frequency Range	35Hz-20KHz
Connector	XLR/6.35mm/RCA/3.5mm
Mic Input Level	< 8mV
Line Input / Output Level	250mV/ 580mV
Input Voltage	AC115/230V 60/50Hz

CONTROLS AND CONNECTIONS

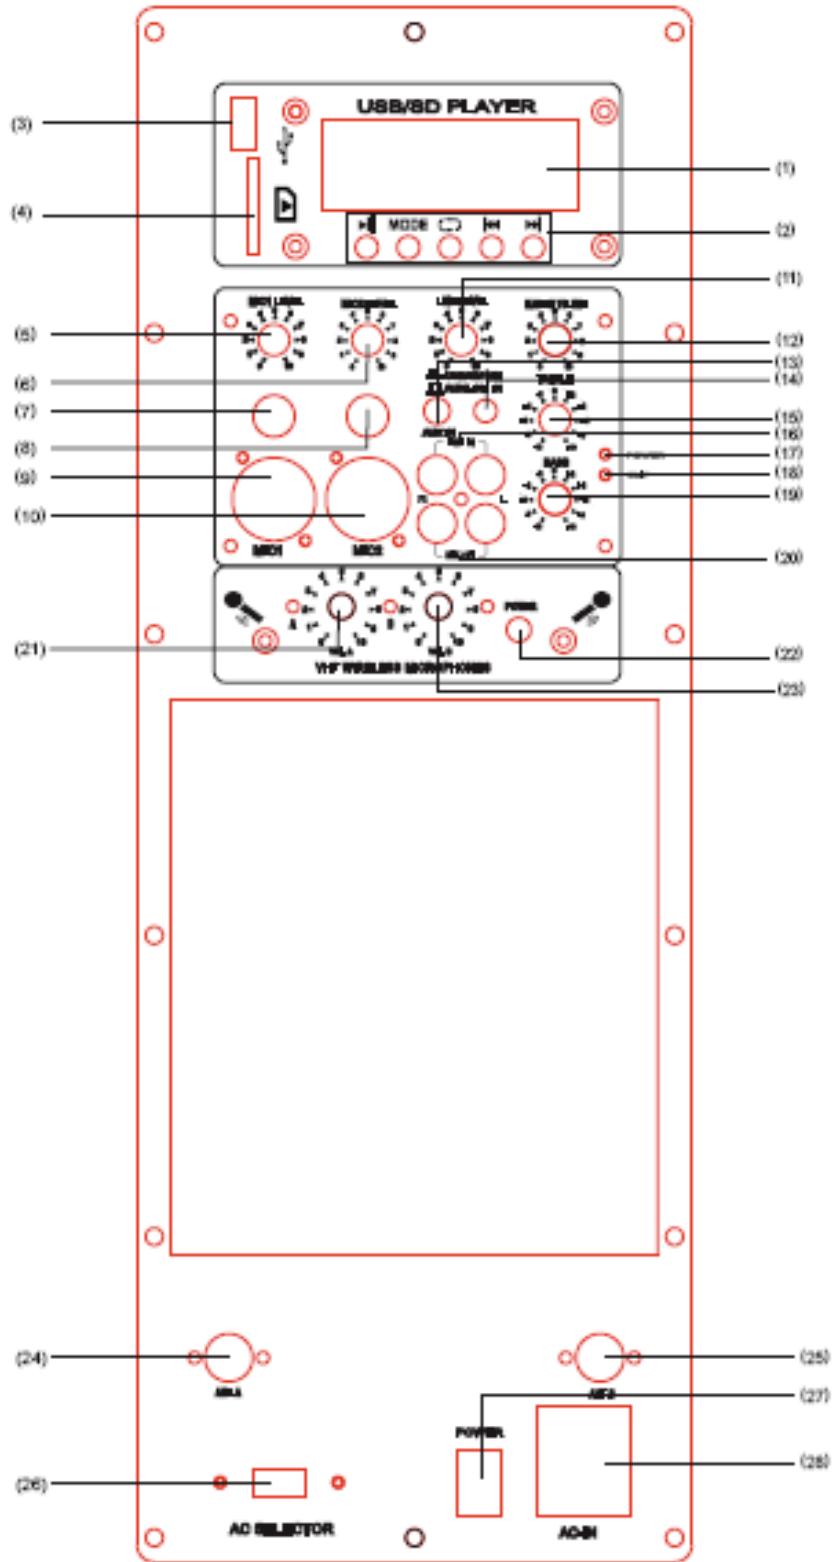

1. LCD SCREEN
2. MP3 CONTROL

Play/Pause Button: The Play/Pause button will control the **BLUE-CONNECT**, USB/ Memory card, FM functions.

MODE Button: Press this button to change USB/ Memory card, **Blue-connect** and FM radio. **Blue-connect** set as default when turning on the speaker.

Repeat Button: Press this button to select between repeating the current track. Repeating all tracks and repeating one tracks on the USB or Memory card. When repeating the current track R1 will display on the screen. When repeating all tracks RA will appear on the screen. When the repeat function is off, RO will display on the screen.

Previous / VOL- Button: Press this button to move to the previous track on the USB , Memory card or **Blue-connect**. Press and hold this button to reduce the volume.

Next / VOL+ Button: Press this button to move to the next track on the USB , Memory card or **Blue-connect**. Press and hold this button to increase the volume.

3. DIGITAL USB INPUT: Insert your Digital USB flash drive into this slot. The unit will only read MP3. WMA files from Digital USB flash drive. The maximum storage size of the USB flash drive cannot exceed 32GB

4. DIGITAL MEMORY INPUT: Insert your Digital Memory card into this slot. The unit will only read MP3. WMA files from Memory card. The maximum storage size of the Memory card cannot exceed 32GB.

5. MIC1 VOLUME: This knob determines the signal level which will be sent by MIC1.

6. MIC2 VOLUME: This knob determines the signal level which will be sent by MIC2.

7. 6.35mm Microphone 1 input: Connect your microphone to these inputs. The microphone volume will be controlled by the microphone knob.

8. 6.35mm Microphone 2 input: Connect your microphone to these inputs. The microphone volume will be controlled by the microphone knob.

9. XLR Microphone 1 input: Connect your microphone to these inputs. The microphone volume will be controlled by the microphone knob.

10. XLR Microphone 2 input: Connect your microphone to these inputs. The microphone volume will be controlled by the microphone knob.

11. Line input level control: This knob determines the signal level which will be sent by Line Input.

12. Master Volume: Turn this knob to adjust the **Blue-connect**, the microphone inputs, line inputs, USB/ SD card inputs and line output volume.

13. AUX IN: is a 3.5mm input for connect phone, ipad, itouch.

14. Line Input & USB/SD player Selector: Press this button to switch between the Line input and the Digital **Blue-connect**/Memory/USB.

15. Treble Knob: Turn this knob to increase the treble on the **Blue-connect** input, USB/ Memory card inputs, microphone, and line input.

16. RCA LINE INPUT: Connect your sound source to this RCA input. The line volume will be controlled by the line level knob.

17. Power LED Indicator: This indicator will illuminate in Blue light when it is power on.

18. Clip Indicator: This indicator will illuminate in Red light when it is clipping.


19. Bass Knob: Turn this knob to increase the Bass for **Blue-connect**/ USB/ Memory card, MIC. And Line inputs.

20. RCA line output: is the line output. It can't connect with a passive Speaker, The line output needs to be connected to an amplifier or a powered loudspeaker in order to function properly.

21. Wireless microphone A Volume

22. Wireless microphone B Volume
23. Wireless microphone Power Switch
24. Wireless microphone Antenna A
25. Wireless microphone Antenna B
26. 115V/230V AC Selector
27. Power Switch
28. Power supply: Connect the power cord here. The power switch should be set to the off position before the power supply is connected.

USB/SD/BLUE CONNECT/FM OPERATION:

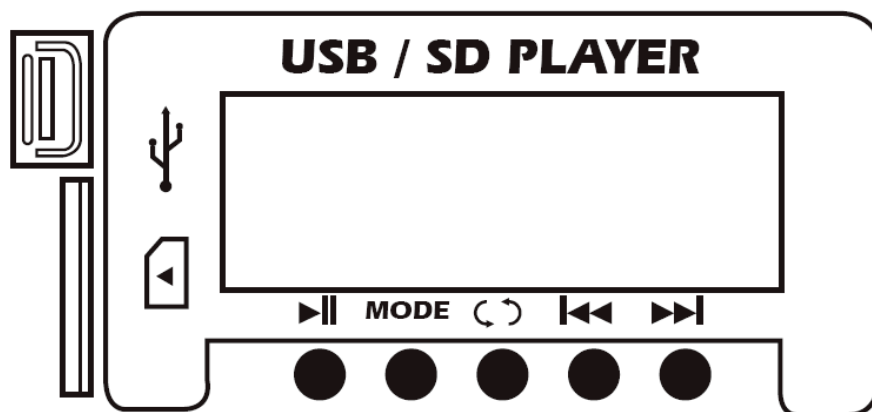


- USB/SD**
1. INPUT USB OR SD CARD
 2. SELECT "USB" OR "SD" MODE
 3. SELECT SONG THROUGH REMOTE CONTROL
OR PREVIOUS SONG/NEXT SONG BUTTON ON MP3 CONTROL
 4. USB/SD MAXIMUM STORAGE SUPPORT: 32G

- BT**
1. SELECT "**BLUE-CONNECT**" MODE
 2. TURN ON BLUETOOTH FUNCTION ON YOUR
MOBILE AND SEARCHING THE "BB-5531USBTL" SIGNAL
 3. SELECT "BB-5531USBTL" AND ESTABLISH CONNECTION
 4. INPUT PASSWORD "0000" IF ASK FOR
 5. SELECT THE SONG AND PLAY THROUGH YOUR MOBILE

- FM**
1. SELECT FM MODE
 2. PRESS THE "PLAY/PAUSE" BUTTON LASTING FOR 3 SECONDS
AND THE FM WILL START SEARCHING ALL THE CHANNEL AVAILABLE
 3. SELECT THE CHANNEL THROUGH PREVIOUS
OR NEXT BUTTON ON MP3 CONTROL KEYS OR SELECT BY
REMOTE CONTROL

Remote Control

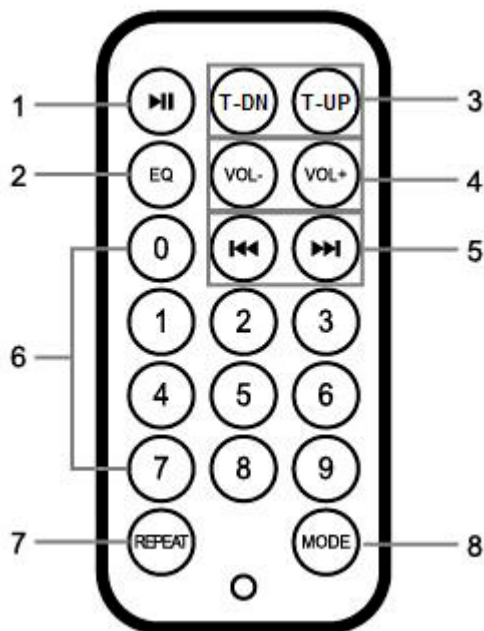

Remote-Sensor:

Point the remote to this sensor to control the unit.

The sensor is near the metal logo, in front of the speakers.

1. Play / Pause
2. Select EQ options
3. FM Function
4. Decrease / Increase Volume
5. Next / Previous track: Press “Next/Previous” to skip to next or previous track; hold “Next/Previous” to fast forward or rewind within the Current track.
6. Track selector keys
7. Repeat the current track or all tracks
8. Press this button to select between the USB, SD, **Blue-connect**, FM input.