RSC-101 User's Guide

How to make start recording:

Button "A"
Power on/off
Play/Stop

Camera

MIC
(Under the
pen clip)

Built-in Rechargeable Battery

Twist for
Writing
pen

- Make sure the slide switch "F" in "**Video record**" mode.
- Press the button "**A**" and hold about 2 seconds to power on. (Orange LED light indicates power on)
- Press the button "**A**" again to start video recording. (LED turns **blue** when recording in process)
- To press the button "**A**" again to stop, it begins to save data and switch it to standby mode. (LED will turns **orange** in a moment after data saved)
- To recording again, press the button "**A**" in standby mode. it will start recording again. (LED will turn to **blue** again)
- To power off, press and hold the button "**A**" about 5 seconds. (LED will off)
- **RSC-101** will turn off automatically in about 60 seconds when in standby mode without using.
- RSC-101 will turn off automatically when run out of battery, but it will save the video files before automatically shutting down.

Switch "F"

Indicating LED
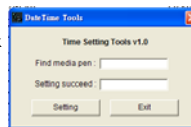Orange / Blue

Reset
button

Video
record
Photograph

How to take photo:
- Be sure the Slide switch "F" in "Photograph" mode.
- Press the button "A" to power on and the orange LED will blink. To press the button "A" again to take photo and the blue LED will flash a second. After completion the photo taking, the LED will turn to orange blanking that is standby for photo taking.
- To press and hold the button "A" about 5 seconds to power off.

How to change clock:
Plug your device to the computer and double click the "Date Time-EN.exe", and then click setting. It will update the time to the device immediately.

How to charge the battery:
- RSC-101 has a build-in 220mAh Polymer Lithium-ion battery.
- Plug it into your computer for battery charging about 2 - 3 hours.
- If using adapter for battery, please use **DC300mA-400mA. Don't charge it over 3 hours which may cause battery failure.**
- The orange LED will flashing while battery charging. the orange LED stop flashing means the battery is full.

Connect to PC with USB cable:
- Connect the device to computer with USB cable for data storage. It is also charging the battery.
- playback the video files via the computer.

User as WebCam:
- Make a copy of folder "Web_Camera_driver" on your PC.
- Press the "power button", hold and plug it into your PC about 8 seconds till a dialogue jumping up and asking you to install the USB WebCam driver, then you can release the button.
- Follow the instruction to complete the installation properly.

Notice:
- When recharging the battery, please make sure to "**Safely Remove Hardware**" the RSC-101 from your Win OS to speed up the recharge process
- If the battery uses off suddenly, it will store the recording video files before it turns off.
- In case of the situation of system halted happen, please use "RESET" button. It will work again.
- Do not push "RESET" button when the device is recording in case of data lost.
- Please Use "**FAT32**" for format.

Product Specification:
- Video compression: AVI video format, 640 x 480
- Voice recording: Yes
- Video playback on PC.
- Battery type: 220mAh Polymer Lithium-ion.
- Battery use time for continuing Video Taping: about 70 +/- minutes according to illumination. With more bright, the recording time is shorter.
- Supports: WinMe/2000/XP/Vista/7/LINUX2.4
- DSC: 1.3M
- VGA: 640 x 480

Other Features:
- Spy Camcorder
- Size of pen: 150(H)×14(D)mm
- Weight : 30g
- Tiny camera, easy to be hidden.

How to change the refill:
- Pull out the writing pen part to change the refill.
- Screw the old refill out.
- Put the new refill in and screw it clockwise. Push writing pen part back for start writing.

Remarks:
If your current Media Player is not working properly, just double clip "Codec-Pack.exe" and it will automatically update your code version.

Codec-Pack.exe