


Register your product and get support at  
[www.philips.com/welcome](http://www.philips.com/welcome)

HP8300/00



**PHILIPS**



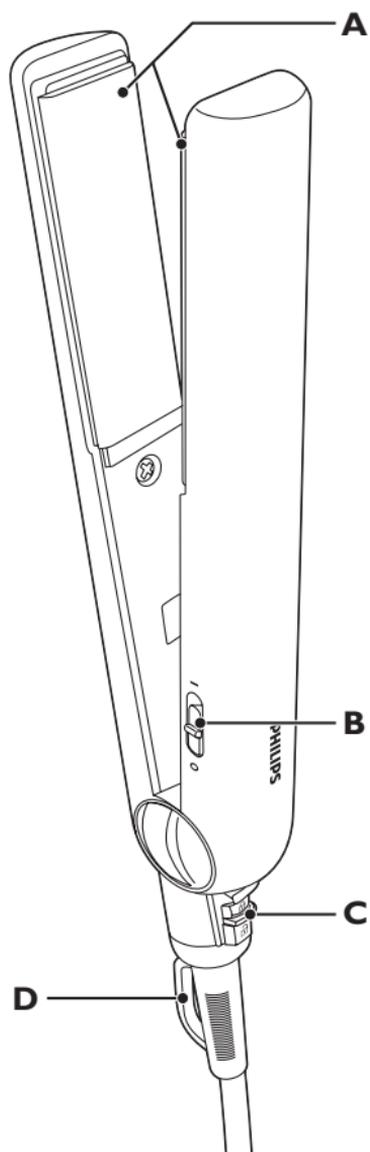



**HP8300/00**

**ENGLISH 6**

**PORTUGUÊS DO BRASIL 11**

## Introduction

Congratulations on your purchase and welcome to Philips!

The new Philips Simply SalonStraight has everything you need to get the long-lasting straight results you want. The ceramic-coated plates ensure ultra-smooth gliding through the hair, allowing you to style at high temperatures in a quick and caring way.

To fully benefit from the support that Philips offers, register your product at [www.philips.com/welcome](http://www.philips.com/welcome).

## General description (Fig. 1)

- A** Ceramic-coated plates
- B** On/off switch
- C** Lock-system
- D** Hanging loop

## Important

Read this user manual carefully before you use the appliance and save it for future reference.

### Danger

- Keep the appliance away from water. Do not use it near or over water contained in baths, washbasins, sinks etc. When you use the appliance in a bathroom, unplug it after use. The proximity of water presents a risk, even when the appliance is switched off (Fig. 2).

### Warning

- Check if the voltage indicated on the appliance corresponds to the local mains voltage before you connect the appliance.
- Check the condition of the mains cord regularly. Do not use the appliance if the plug, the mains cord or the appliance itself is damaged.
- If the mains cord is damaged, you must have it replaced by Philips, a service centre authorised by Philips or similarly qualified persons in order to avoid a hazard.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision

or instruction concerning use of the appliance by a person responsible for their safety.

- Children should be supervised to ensure that they do not play with the appliance.
- Keep the appliance away from non-heat-resistant surfaces and from flammable items. Never cover the appliance with anything (e.g. a towel or clothing) when it is hot.
- Never leave the appliance unattended when it is plugged in.

### **Caution**

- For additional protection, we advise you to install a residual current device (RCD) in the electrical circuit that supplies the bathroom. This RCD must have a rated residual operating current not higher than 30mA. Ask your installer for advice.
- The straightening plates and the plastic parts near the plates reach a high temperature quickly. Prevent the hot surfaces of the appliance from coming into contact with your skin.
- Only use the appliance on dry hair.
- Do not use the appliance on artificial hair.
- Do not leave the plates in your hair for more than a few seconds at a time as this may cause damage to your hair.
- Always unplug the appliance after use.
- Do not wind the mains cord round the appliance.
- Wait until the appliance has cooled down before you store it.
- Keep the straightening plates clean and free of dust and dirt.
- If you use styling products, always clean the appliance and plates after they have cooled down to avoid damage to the straightening plates.
- The plates have a ceramic coating. This coating slowly wears away over time. This does not affect the performance of the appliance.
- If you use the appliance on colour-treated hair, the straightening plates may stain.
- Do not use the appliance for any other purpose than straightening human hair.
- The maximum temperature occurs just after heating up. The actual temperature during use may be lower.

### Electromagnetic fields (EMF)

---

This Philips appliance complies with all standards regarding electromagnetic fields (EMF). If handled properly and according to the instructions in this user manual, the appliance is safe to use based on scientific evidence available today.

#### Using the appliance

#### Straightening your hair

---

Straighteners are powerful styling tools and must always be used with care. As with all straighteners that reach salon high temperatures, do not use the appliance frequently to avoid damage to the hair.

If you use the straightener incorrectly, you could overheat your hair or even burn it. Always follow the steps below:

- 1** Put the plug in the wall socket.
- 2** Set the on/off switch to 'on' (Fig. 3).
- 3** Pull the lock downwards to unlock the appliance if it is locked (Fig. 4).

*Tip: If you lock the plates with the closing lock, the straightener heats up more quickly.*

- 4** Let the appliance heat up for at least 60 seconds.
- 5** Comb or brush your hair so that it is disentangled and smooth. (Fig. 5)

Use a comb to divide the hair into sections. Do not put too much hair in one section.

*Note: It is better to section off the crown area and to straighten the hair underneath first. Then straighten the top area.*

- 6** Take a section that is not wider than 5cm. Place it between the straightening plates and press the handles of the appliance firmly together.

- 7 Slide the straightener down the length of the hair in a few seconds, from root to hair end, without stopping to prevent overheating (Fig. 6).
- 8 Repeat this process after 20 seconds until you have achieved the desired look.
- 9 Let your hair cool down. Do not comb or brush it before it has cooled down, as this would ruin the hairstyle you have just created.

## Cleaning

Never immerse the appliance in water or any other liquid, nor rinse it under the tap.

- 1 Make sure the appliance is switched off and unplugged.
- 2 Let the appliance cool down completely on a heat-resistant surface.
- 3 Clean the appliance with a damp cloth.

## Storage

Never wind the mains cord round the appliance.

- 1 Make sure the appliance is switched off and unplugged.
- 2 Let the appliance cool down on a heat-resistant surface before you store it.
- 3 Use the easy-lock system to lock the straightening plates together before you store the appliance (Fig. 4).
- 4 You can store the appliance by hanging it from its hanging loop.

## Environment

- Do not throw away the appliance with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment (Fig. 7).

## Guarantee & service

If you need service or information or if you have a problem, please visit the Philips website at **[www.philips.com](http://www.philips.com)** or contact the Philips Consumer Care Centre in your country (you find its phone number in the worldwide guarantee leaflet). If there is no Consumer Care Centre in your country, go to your local Philips dealer.

## Introdução

Parabéns pela sua compra e seja bem-vindo à Philips!

O novo Philips Simply SalonStraight tem tudo de que você precisa para obter os resultados de alisamento duradouros tão desejados. As placas com revestimento em cerâmica garantem um deslize ultra-suave pelo cabelo, permitindo uma modelagem a altas temperaturas de um modo rápido e delicado.

Para aproveitar ao máximo o suporte oferecido pela Philips, registre seu produto em [www.philips.com/welcome](http://www.philips.com/welcome).

## Descrição geral (fig. 1)

- A** Placas com revestimento em cerâmica
- B** Botão liga/desliga
- C** Sistema de trava
- D** Argola para pendurar

## Importante

Leia este manual atentamente antes de usar o aparelho e guarde-o para consultas futuras.

### Perigo

- Mantenha o aparelho longe da água. Não coloque-o próximo ou sobre a água contida em banheiras, bacias, pias, etc. Quando usar o aparelho no banheiro, tire-o da tomada após o uso. A proximidade da água é um risco, mesmo quando o aparelho está desligado (fig. 2).

### Aviso

- Antes de ligar o aparelho, verifique se a voltagem indicada no aparelho corresponde à voltagem do local.
- Verifique regularmente o fio. Não utilize o aparelho se o plugue, o fio e/ou o próprio aparelho estiverem danificados.
- Se o fio estiver danificado, deverá ser substituído pela Philips, por uma das assistências técnicas autorizadas da Philips ou por técnicos igualmente qualificados para evitar situações de risco.
- Este aparelho não deve ser usado por pessoas (inclusive crianças) com capacidades físicas, mentais ou sensoriais reduzidas ou pouca

## 12 PORTUGUÊS DO BRASIL

experiência e conhecimento, a menos que sejam supervisionadas ou instruídas sobre o uso do aparelho por uma pessoa responsável por sua segurança.

- Crianças pequenas devem ser supervisionadas para que não brinquem com o aparelho.
- Mantenha o aparelho longe de superfícies não resistentes ao calor e de itens inflamáveis e nunca o cubra (com toalha ou tecido) quando estiver quente.
- Nunca deixe o aparelho ligado sem vigilância.

### **Cuidado**

- Para obter proteção adicional, recomendamos instalar um dispositivo de corrente residual (RCD) no circuito elétrico do banheiro. O RCD deve ter uma corrente de operação residual não superior a 30 mA. Peça informações ao instalador profissional.
- As placas alisadoras e as peças plásticas próximas às placas atingem altas temperaturas rapidamente. Evite que as superfícies quentes do aparelho entrem em contato com a sua pele.
- Só utilize o aparelho em cabelos secos.
- Não use o aparelho em cabelos artificiais.
- Não deixe as placas em contato com os cabelos por mais de alguns segundos, pois isso pode danificá-los.
- Sempre desligue o aparelho após o uso.
- Não enrole o fio em volta do aparelho.
- Deixe-o esfriar antes de guardá-lo.
- Mantenha as placas alisadoras limpas e livres de poeira e sujeira.
- Se você usar produtos modeladores, sempre limpe o aparelho e as placas depois que esfriarem para evitar danificá-las.
- O revestimento em cerâmica das placas se desgasta lentamente com o tempo, mas isso não afeta o desempenho do aparelho.
- Se o aparelho for usado em cabelos tingidos, as placas alisadoras podem ficar manchadas.
- Não use o aparelho para nenhum outro fim além de alisar cabelo humano.
- A temperatura máxima é atingida logo após o aquecimento. A temperatura real durante o uso pode ser mais baixa.

## Campos eletromagnéticos

---

Este aparelho Philips atende a todos os padrões relacionados a campos eletromagnéticos. Se manuseado adequadamente e de acordo com as instruções deste manual do usuário, a utilização do aparelho é segura baseando-se em evidências científicas atualmente disponíveis.

### Utilização do aparelho

#### Alisamento

---

As chapas alisadoras são poderosas ferramentas de modelagem e devem ser usadas com cuidado. Assim como ocorre com todas as chapas alisadoras que atingem temperaturas de modelagem profissional, não use o aparelho freqüentemente para não danificar os cabelos.

Se você usar a chapa alisadora de forma incorreta, poderá superaquecer os cabelos e até mesmo queimá-los. Sempre siga estas instruções

- 1** Conecte o plugue à tomada elétrica.
- 2** Coloque o botão liga/desliga na posição 'ligado' (fig. 3).
- 3** Puxe a trava para baixo e destrave o aparelho, se estiver travado (fig. 4).

*Dica: Se você travar as placas com a trava de fechamento, a chapa alisadora aquecerá mais rapidamente.*

- 4** Deixe o aparelho aquecer por pelo menos 60 segundos.
- 5** Penteie ou escove os cabelos para que fiquem desembaraçados e sedosos. (fig. 5)

Use um pente para dividi-los em mechas uniformes. Não separe mechas muito grossas.

*Nota: é melhor isolar os cabelos no topo da cabeça e começar a alisar a parte de baixo primeiro. Em seguida, alise a parte superior.*

- 6** Separe uma mecha com menos de 5 cm. Coloque-a entre as placas alisadoras e pressione os cabos do aparelho com firmeza.

## 14 PORTUGUÊS DO BRASIL

- 7 Deslize a chapa alisadora ao longo do comprimento dos cabelos por alguns segundos, da raiz até as pontas, sem parar, para evitar o superaquecimento (fig. 6).
- 8 Repita o procedimento após 20 segundos até atingir o visual desejado.
- 9 Aguarde os cabelos esfriarem. Não penteie-os nem escove-os antes disso, pois poderá desmanchar o penteado que você acabou de criar.

### Limpeza

Nunca mergulhe o aparelho na água nem em outro líquido e não lave-o sob a pia.

- 1 Verifique se o aparelho está desligado e desconectado.
- 2 Deixe o aparelho esfriar completamente em uma superfície resistente ao calor.
- 3 Limpe o aparelho com um pano úmido.

### Para guardar a aparelho

Nunca enrole o fio em volta do aparelho.

- 1 Verifique se o aparelho está desligado e desconectado.
- 2 Deixe o aparelho esfriar em uma superfície resistente ao calor antes de guardá-lo.
- 3 Use a trava de fechamento fácil para travar as placas alisadoras juntas antes de guardar o aparelho (fig. 4).
- 4 Você pode guardá-lo pendurando-o pela argola.

### Meio ambiente




- Não descarte o aparelho com o lixo doméstico no final de sua vida útil. Leve-o a um posto de coleta oficial para que possa ser reciclado. Com esse ato, você ajuda a preservar o meio ambiente (fig. 7).

## Garantia e assistência técnica

Se precisar de serviços ou informações ou tiver algum problema, visite o site da Philips em **[www.philips.com](http://www.philips.com)** ou entre em contato com o Centro de Atendimento ao Cliente Philips do seu país (o número de telefone encontra-se no folheto da garantia mundial). Se não existir um Centro de Atendimento ao Cliente Philips no seu país, dirija-se a um representante local da Philips.





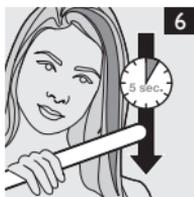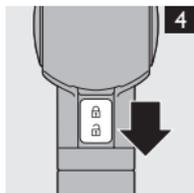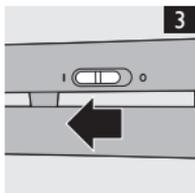





[www.philips.com](http://www.philips.com)



4222.002.7258.2