



**MANUAL DE INSTRUCCIONES
VENTILADOR DE PISO DE 16”
AB-5029PM**



ESTIMADO CLIENTE


Con el fin de que obtenga el mayor desempeño de su producto, por favor lea este manual de instrucciones cuidadosamente antes de comenzar a utilizarlo, y guárdelo para su futura referencia.

Si necesita soporte adicional, no dude en escribir a: info@premiermundo.com



ÍNDICE

INSTRUCCIONES DE SEGURIDAD	2
DESCRIPCIÓN	2
INSTRUCCIONES DE INSTALACIÓN	3
INSTRUCCIONES DE OPERACIÓN	3
DIAGRAMA DE CIRCUITOS	3

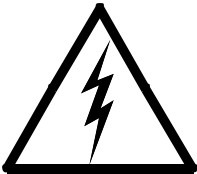	PRECAUCIÓN	
RIESGO DE CHOQUE ELÉCTRICO , NO ABRA		
Precaución: Para reducir el riesgo de choque eléctrico, no retire la cubierta, no hay partes manipulables por el usuario al interior de la unidad. Refiera todo mantenimiento o intervención técnica a personal técnico calificado.		
 	Este símbolo indica la existencia de voltaje peligroso al interior de esta unidad, que constituye un riesgo de choque eléctrico. Este símbolo indica que hay importantes instrucciones de operación y mantenimiento en la literatura que acompaña a esta unidad.	

LÍNEAS DE SERVICIO AL CLIENTE PREMIER

Venezuela:	0800 – ELECTRIC (353-2874)
Panamá:	300-5185
Sitio Web:	www.premiermundo.com
E-mail:	servicioalcliente@premiermundo.com

NOTA


Nos reservamos el derecho de modificar las especificaciones, características y/u operación de este producto sin previo aviso, con el fin de continuar las mejoras y desarrollo del mismo.

INSTRUCCIONES DE SEGURIDAD

- Para prevenir el riesgo de choque eléctrico, no introduzca el cable de poder o el ventilador en agua o en otros líquidos.
- No utilice el ventilador para un propósito diferente para el que fue diseñado.
- Asegúrese de que el voltaje del ventilador coincide con el del área donde lo va a conectar.
- Desconecte el cable de poder cuando no esté utilizando el ventilador y antes de limpiarlo.
- Evite que el cable de poder quede en una posición donde las personas puedan enredarse al caminar.
- El ventilador no está diseñado para uso en exteriores.
- Se requiere estricta supervisión si se encuentran niños cerca.
- Utilice el ventilador sobre una superficie plana y estable.
- Evite colocar el ventilador en un lugar donde esté propenso a caerse.
- Si el ventilador llega a caer al agua, no lo toque, sino que desconecte el cable de poder.
- No introduzca objetos dentro de la rejilla del ventilador cuando esté funcionando.
- Evite utilizar el ventilador si observa alguna falla en el cable de poder o en el ventilador mismo.
- No cubra la rejilla.
- Si el ventilador no va a ser utilizado por un período prolongado desconéctelo, límpielo y guárdelo en el empaque original o uno similar. Antes de utilizarlo de nuevo, verifique que el ventilador está limpio y seco, y que las aspas giren libremente.
- No intente reparar la unidad usted mismo. Remita toda revisión, mantenimiento y reparación a personal de servicio técnico calificado.

DESCRIPCIÓN

1. Rejilla
2. Aspas
3. Rejilla
4. Cubierta del motor
5. Botón de oscilación
6. Motor
7. Tornillo D
8. Tubo de extensión
9. Anillo de ajuste de altura
10. Cubierta de la base
11. Tubo de la base
12. Tornillo A
13. Eje
14. Botones
15. Cierre de rejilla
16. Cubierta del aspa
17. Clip
18. Tornillo de cubierta de rejilla
19. Cubierta de rejilla
20. Base cruzada

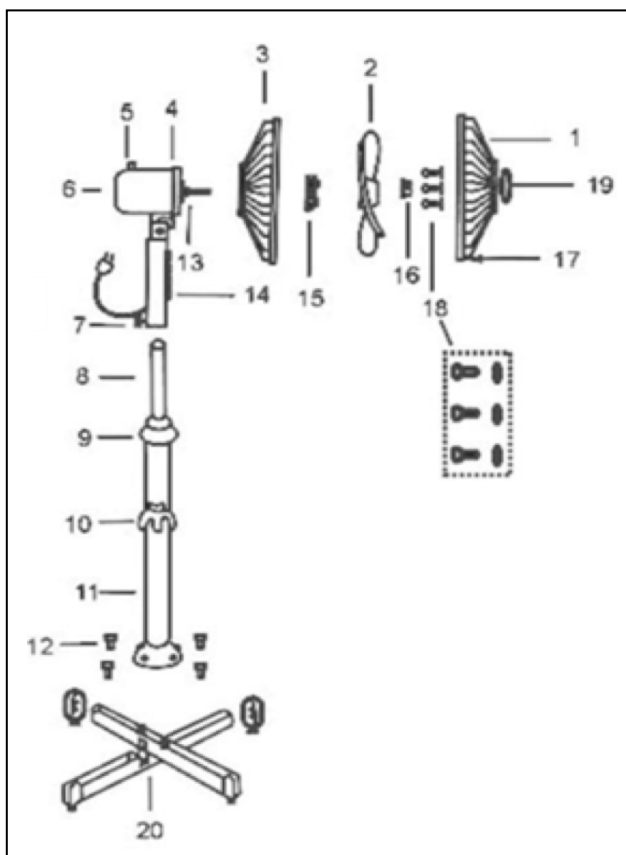

INSTRUCCIONES DE INSTALACIÓN


- Verifique que el contenido del producto esté completo.
 - Verifique que el voltaje de la unidad corresponde con el del área donde la va a conectar.
 - Verifique que el motor puede moverse suavemente.
1. Coloque el tubo en la base con 4 tornillos M5x10.
 2. Fije la base en la base inferior negra con 4 tornillos M4x16 (si está disponible).
 3. Desatornille el bloqueador del tubo. Hale el tubo para lograr una altura adecuada y luego apriete de nuevo.
 4. Desatornille el soporte del tubo. Coloque el cuerpo del ventilador firmemente sobre el tubo y apriete de nuevo el soporte.
 5. Retire la tuerca y coloque la rejilla posterior en frente de la carcasa del motor, y apriete con firmeza. Coloque el aspa en el eje del motor (asegurándose de que encaje correctamente) y apriete el tornillo del aspa.
 6. Coloque la rejilla frontal y cierre con el clip o atornille las rejillas para asegurarlas.

INSTRUCCIONES DE OPERACIÓN

1. Conecte el cable de poder.
2. Gradúe la altura que desee utilizando los tubos.
3. Gradúe la dirección del aspa.
4. Utilice los botones para graduar la velocidad del aire.

DIAGRAMA DE CIRCUITOS

Voltaje AC110V/60Hz
Potencia 40 a 45W

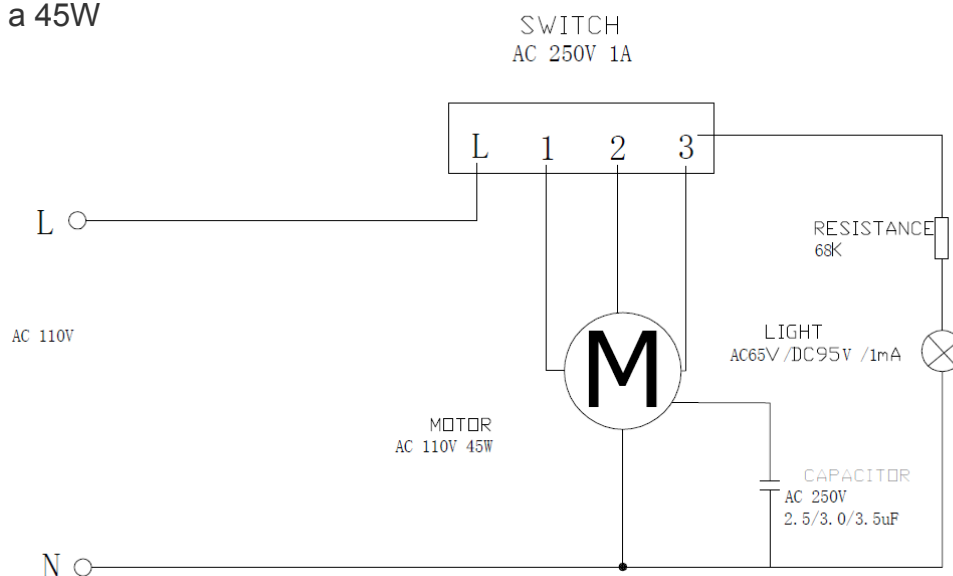

- Las personas y/o Marcas registradas en este manual de instrucciones no están afiliadas a Premier Electric Japan Corp. y aparecen en este Manual con propósitos ilustrativos únicamente.



INSTRUCTION MANUAL
16" STAND FAN
AB-5029PM




DEAR CUSTOMER

In order to achieve the best performance of your product, please read this instruction manual carefully before using, and keep it for future reference.

If you need extra support, please write to info@premiermundo.com

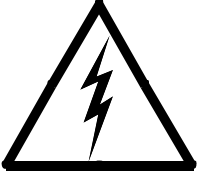

	CAUTION RISK OF ELECTRIC SHOCK, DO NOT OPEN	
Caution: To reduce the risk of electric shock do not open this device, there are not serviceable parts for customers. Please refer any maintenance or repair to qualified personnel.		
	This sign means the existence of dangerous voltage at the inside of the unit, which states a risk of electric shock.	
	This sign means that there are important instructions of operation and handling in the manual that comes with this device.	

PREMIER CUSTOMER SERVICE

Venezuela:	0800 – ELECTRIC (353-2874)
Panama:	300-5185
Website	www.premiermundo.com
E-mail:	servicioalcliente@premiermundo.com

NOTE

This unit may be submitted to changes in specifications, characteristics and/or operation without prior notice to the user, in order to continue improving and developing its technology.


IMPORTANT SAFEGUARDS


When using this electrical appliances, basic safety precaution should always be followed, including the following

- Read all instruction carefully and save these instruction manual for reference.
- To protect again electric shock, do not immerse cord, plug or fan into water or any other liquid.
- Do not use appliance for other than intended use.
- Use the appliance only on the voltage specified on it rating plate (AC110V/60Hz)
- Unplug from outlet when not in use and before cleaning.
- Do not pull the connection cord over sharp edges and never jam it.
- Do not pull the plug out of the socket by pulling the connection cord.
- Do not use outdoors
- Do not use and extension cord, unless the cord has been checked and tested by your electrical authority or a qualified technician.
- Close supervision is necessary when any appliance is used by or near Children.
- Always use your appliance on a suitable level and dry platform.
- Avoid using an appliance where it can fall or be pushed into water.
- Never reach for an appliance after it has fallen into water. Switch off at the mains power point and unplug immediately
- Never attempt to insert any object through the grill when the fan is operating.
- Always disconnect fan when moving from one location to another.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunction. Or has been damaged in any manner, please connect with manufacturer or local distributor.
- Do not cover the grill.
- If the fan is to be stored for an extended period of time or not used regularly, replace it in the original packaging (or Similar) and store it in a dry and clean place. Before using again, check if the unit is clean and dry if the fan blades rotates freely.

Drawing :

1. Grill
2. Blade
3. Grill
4. Motor cover
5. Oscillating knob
6. Motor
7. Screw D
8. Extension pole
9. Height adjustment ring
10. Base cover
11. Base tube
12. Screw A
13. Shaft
14. Piano keys
15. Grill lock
16. Blade cap
17. Clip
18. Grill cover screw
19. Grill cover
20. Cross base

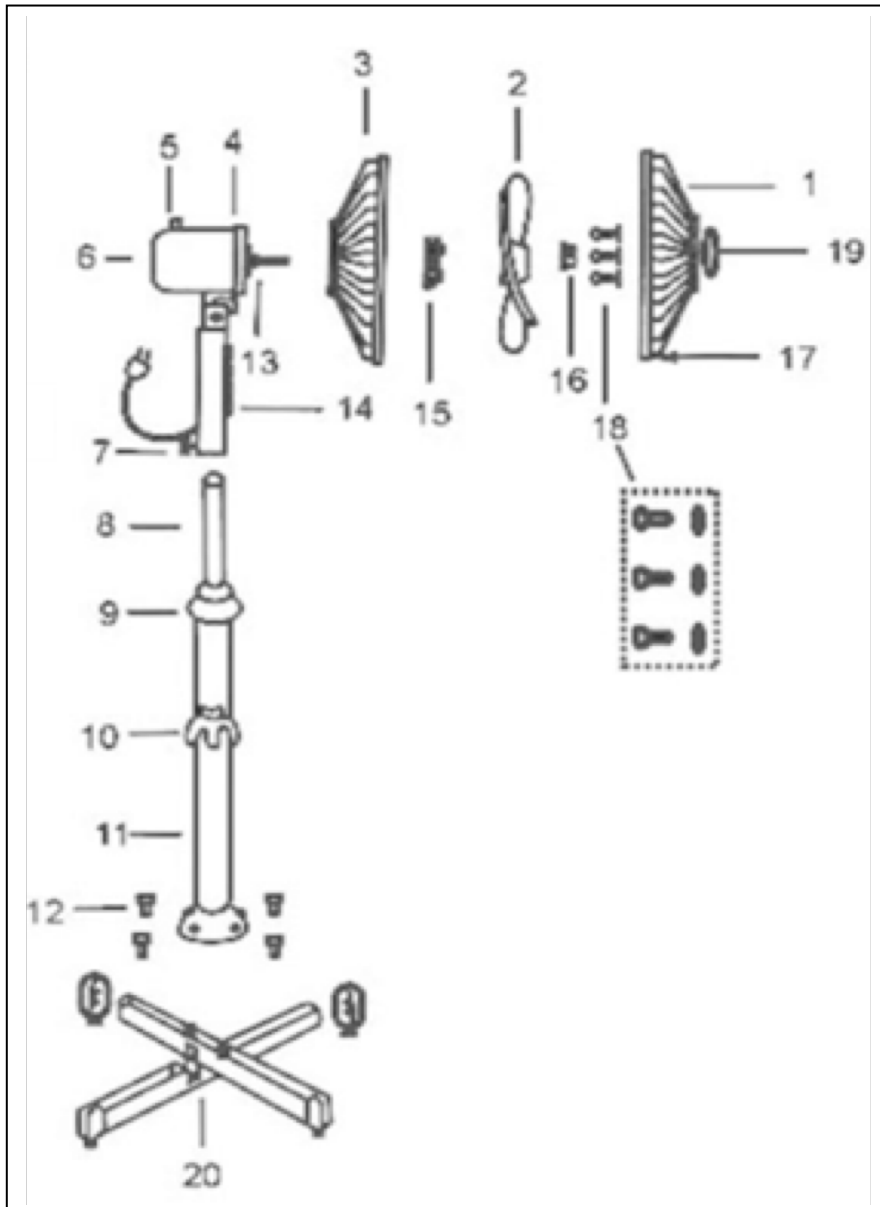

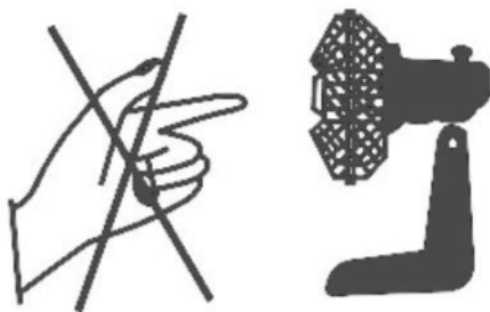

INSTRUCTION MANUAL OF STAND FAN

1. Put the end cap at the end of the cross base.
2. Fasten the lower pipe on the cross base with screw A(4pcs).
3. Slide the base cover onto the cross base along the lower pipe
4. Pull the extension pole out, and then tighten the out-joint.
5. Place the motor and switch box firmly on the top of the extension pole, and tighten screw B.
6. To finish assemble the guard and blade on the front part of the motor.
7. To change the direction and height, loosen the out joint and adjust the extension pole at a suitable position then tighten the out-joint again.
8. If the blade is shaking , please change the blade into another direction, then, try it again.

How to install


Check before installation :

1. Unpack the product to check if all the accessories are available
2. Check the voltage shown in the name plate to see if it accords with the local situation.
3. Check the motor if it can move smoothly

Install :

1. Assemble the pole on the base with 4 screw of M5 X10
2. Fix the base on the black bottom with 4 screw of M4X16. (if it is available)
3. Unscrew Pipe Locker, Pull the stainless pipe at proper height and then tighten the pipe locker again.
4. Unscrew the pipe holder, connect the fan body firmly on the top of the stainless pipe and fasten the pipe holder again.
5. Please take off the nut and put the rear guard into the front of the motor house, tighten the nut firmly, then put the fan blade into the motor axis (be sure to put Horizontal bolt into blade groove) and tighten the blade screw anti-clockwise.
6. Put **front** guard and close clip or screw grills ring to secure guards together.

Circuit diagram

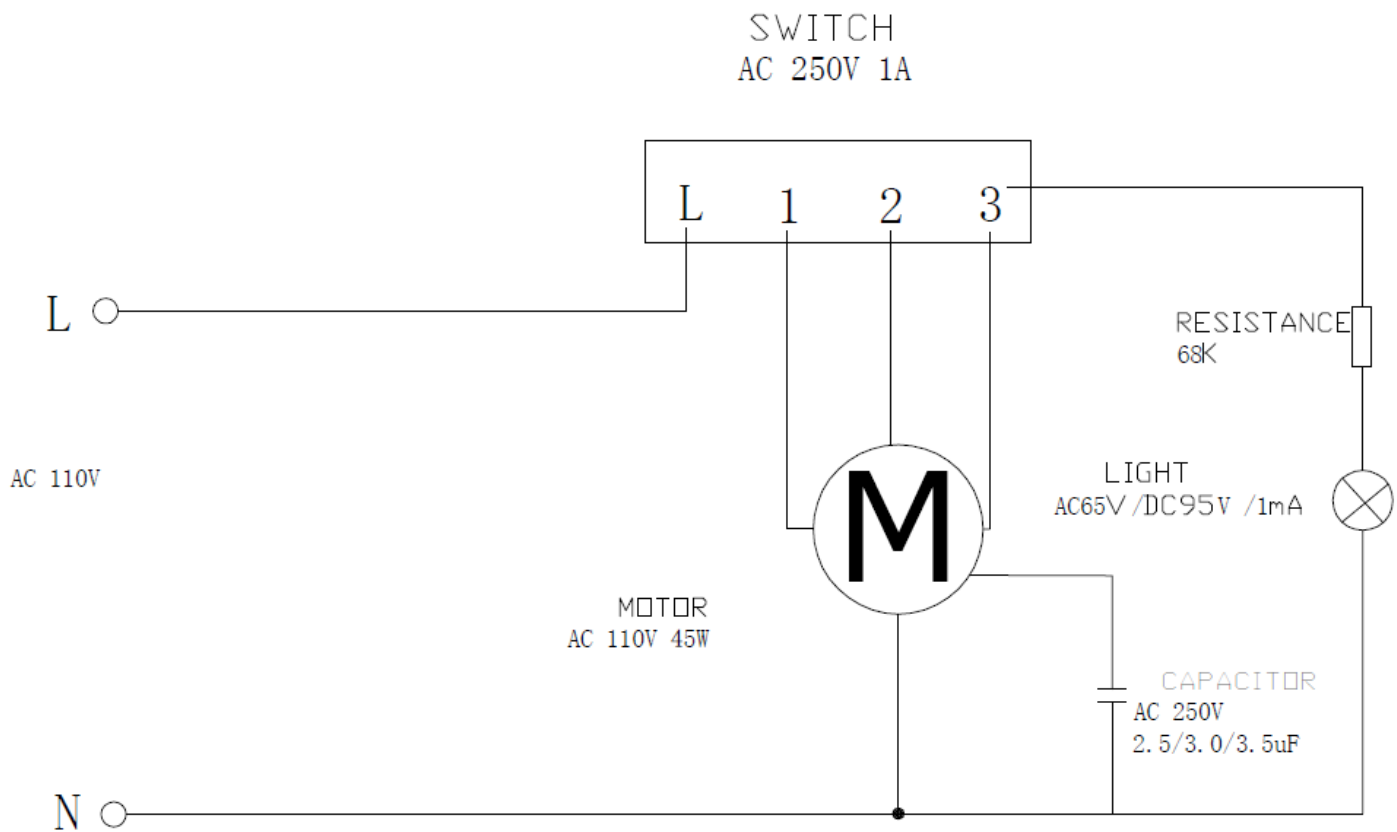

Voltage : AC110V/60Hz
Power : 40 to 45W