

29369

Call Waiting Caller ID Speakerphone with 10 Number Memory User's Guide



EQUIPMENT APPROVAL INFORMATION

Your telephone equipment is approved for connection to the Public Switched Telephone Network and is in compliance with parts 15 and 68, FCC Rules and Regulations and the Technical Requirements for Telecommunication Equipment published by ATCTA.

1. Notification to the Local Telephone Company
On the bottom of this equipment is a label indicating, among other information, the US number and Ringer Equivalence Number (REN) for the equipment. You must, upon request, provide this information to your telephone company.

The REN is useful in determining the number of devices you may connect to your telephone line and still have all of these devices ring when your telephone number is called. In most (but not all) areas, the sum of the RENs of all devices connected to one line should not exceed 5. To be certain of the number of devices you may connect to your line as determined by the REN, you should contact your local telephone company.

A plug and jack used to connect this equipment to the premises wiring and telephone network must comply with the applicable FCC Part 68 rules and requirements adopted by the ACTA. A compliant telephone cord and modular plug is provided with this product. It is designed to be connected to a compatible modular jack that is also compliant. See installation instructions for details.

- Notes
- This equipment may not be used on coin service provided by the telephone company.
 - Party lines are subject to state tariffs, and therefore, you may not be able to use your own telephone equipment if you are on a party line. Check with your local telephone company.
 - Notice must be given to the telephone company upon permanent disconnection of your telephone from your line.
 - If your home has specially wired alarm equipment connected to the telephone line, ensure the installation of this product does not disable your alarm equipment. If you have questions about what will disable alarm equipment, consult your telephone company or a qualified installer.

2. Rights of the Telephone Company
Should your equipment cause trouble on your line which may harm the telephone network, the telephone company shall, where practicable, notify you that temporary discontinuance of service may be required. Where prior notice is not practicable and the circumstances warrant such action, the telephone company may temporarily discontinue service immediately. In case of such temporary discontinuance, the telephone company must: (1) promptly notify you of such temporary discontinuance; (2) afford you the opportunity to correct the situation; and (3) inform you of your right to bring a complaint to the Commission pursuant to procedures set forth in Subpart E of Part 68, FCC Rules and Regulations.

The telephone company may make changes in its communications facilities, equipment, operations or procedures where such action is required in the operation of its business and not inconsistent with FCC Rules and Regulations. If these changes are expected to affect the use or performance of your telephone equipment, the telephone company must give you adequate notice, in writing, to allow you to maintain uninterrupted service.

INTERFERENCE INFORMATION

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference; and (2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna (that is, the antenna for radio or television that is "receiving" the interference).
- Reorient or relocate and increase the separation between the telecommunications equipment and receiving antenna.
- Connect the telecommunications equipment into an outlet on a circuit different from that to which the receiving antenna is connected.

If these measures do not eliminate the interference, please consult your dealer or an experienced radio/television technician for additional suggestions. Also, the Federal Communications Commission has prepared a helpful booklet, "How To Identify and Resolve Radio/TV Interference Problems." This booklet is available from the U.S. Government Printing Office, Washington, D.C. 20402. Please specify stock number 004-000-00345-4 when ordering copies.

HEARING AID COMPATIBILITY (HAC)

This telephone system meets FCC standards for Hearing Aid Compatibility.

US NUMBER IS LOCATED ON THE CABINET BOTTOM
REN NUMBER IS LOCATED ON THE CABINET BOTTOM

INTRODUCTION

CAUTION: When using telephone equipment, there are basic safety instructions that should always be followed. Refer to the IMPORTANT SAFETY INSTRUCTIONS provided with this product and save them for future reference.

Your Caller ID phone stores and displays specific information, provided by your local telephone company, to subscribers of Caller ID or similar caller identification services.

Your Caller ID phone enables you to:

- Identify callers before you answer the phone.
- View the time and date of each incoming call.
- Record up to 75 Caller ID messages sequentially.

IMPORTANT: In order to use all of the features of this telephone, you must subscribe to two separate services available from your local telephone company: the standard Name/Number Caller ID Service to know who is calling when the phone rings and Call Waiting Caller ID Service to know who is calling while you are on the phone.

SHORT GLOSSARY OF TERMINOLOGY USED IN THIS MANUAL

Hook switch. The part of the phone that pops up to activate the phone line when the handset is lifted from the base.

Off-hook. A term used to describe the phone in its active mode when the handset is off of the base cradle or when the SPEAKER button is pressed.


On-hook. A term used to describe the phone in an inactive mode.

ATLINKS USA, Inc.
101 West 103rd Street
Indianapolis, IN 46290
© 2004 ATLINKS USA, Inc.
Trademark(s) © Registered
Mark(s) Registrad(s)
Model 29369
00000747/Rev. 1 E/S
04-49
Printed in China

BEFORE YOU BEGIN

PARTS CHECKLIST

Make sure your package includes the following items:

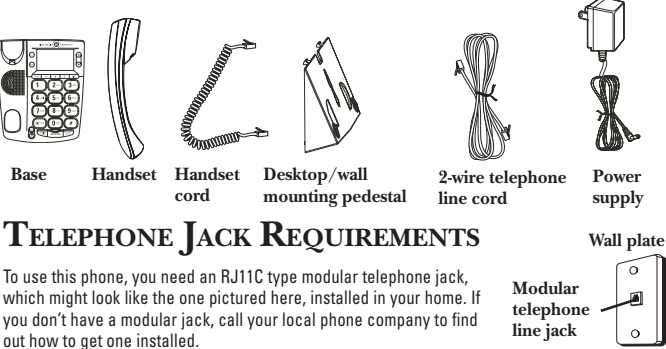

TELEPHONE JACK REQUIREMENTS

To use this phone, you need an RJ11C type modular telephone jack, which might look like the one pictured here, installed in your home. If you don't have a modular jack, call your local phone company to find out how to get one installed.

IMPORTANT INSTALLATION INFORMATION

- Never install telephone wiring during a lightning storm.
- Never touch uninsulated telephone wires or terminals, unless the telephone line has been disconnected at the network interface.
- Use caution when installing or modifying telephone lines.
- Never install telephone jacks in wet locations unless the jack is specifically designed for wet locations.

INSTALLING THE PHONE

Your phone should be placed on a level surface, such as a desk or table top, or you can mount it on a wall. A desktop/wall mounting pedestal is packaged with your phone.

ATTACHING THE DESKTOP PEDESTAL

- Turn the phone over so that the bottom of the base is facing up and the thickest end is facing away from you.
- With the rounded end of the wedge pointing downward, insert the tab on the rounded end of the pedestal into the middle slot on the bottom of the base, then push the pedestal down until the two tabs on the left and right corners of the pedestal snap (lock) into the two upper slots on the bottom of the base.

CONNECTING THE HANDSET

- Connect one end of the coiled handset cord to the jack on the handset.
- Plug the other end of the coiled handset cord to the jack on the base.
- Place the handset in the cradle.

CONNECTING THE TELEPHONE LINE

- Connect one end of the straight telephone line cord to the jack on the back of the base.
- Connect the other end to a wall phone jack.
- Set the RINGER volume switch located at the back of the base to the desired loudness.
 - OFF - Telephone will not ring.
 - LO - Sound will be lowest.
 - HI - Sound will be loudest.

NOTE: The unit is properly installed if you pick up the handset and hear the dial tone. Otherwise, recheck all installation steps.

CONNECTING THE ELECTRICAL POWER

- Plug one end of the power supply cord into the back of the base.
- Plug the other end into an electrical outlet.

CAUTION: Use only the ATLINKS USA, Inc. power supply 5-2498 that came with this unit. Using other power supplies may damage the unit.

WALL MOUNTING

Your speakerphone can also be mounted on a wall plate (not included).

ATTACHING THE WALL MOUNTING PEDESTAL

- Turn the phone over so that the bottom of the base is facing up and the thickest end is pointing away from you.
- If desired gather the extra telephone line cord together and store inside the wall mounting pedestal, and then thread the line cord through the grooves on the pedestal according to the illustration.
- With the rounded end of the pedestal pointing upward, insert the tab on the end of the pedestal into the middle slot on the bottom of the base, then push the pedestal down until the two tabs on the left and right corners of the pedestal snap (lock) into the two lower slots on the bottom of the base.
- Slip the mounting holes over the wall plate posts and firmly slide the unit down into place (wall plate not included).

SETTING UP THE CALLER ID MENU

You should not plug the telephone into the modular jack while setting up the Caller ID menu.

- Press the MENU button, to access the menu feature configuration mode.
 - # 1. >ENG FRA ESP (CID language default English)
 - # 2. CONTRAST (default level is 3).
 - # 3. LOCAL AREA CODE
 - # 4. TONE/PULSE (Default is tone dialing).
- Press the MENU button to scroll through the 4 menu screens.
- Use the ▲ or ▼ buttons to select the desired setting.

NOTE: You have 20 seconds following an entry before the phone returns to the Summary Screen.

DISPLAY LANGUAGE

This adjustment allows you to display the Caller ID prompts in English, French, or Spanish.

- Press the MENU button until *ENG FRA ESP* appears in the display.
- Use the ▲ or ▼ button to select ENG, FRA, or ESP.
- Press MENU button again to save.

CONTRAST

This adjustment allows you to adjust the contrast of the display.

- Press the MENU button until *CONTRAST* shows in the display.
- Use the ▲ or ▼ button to select level 1, 2, 3, 4, or 5.
- Press MENU button again to save.

LOCAL AREA CODE

The telephone uses the programmed area codes to determine the number format to display when a valid Caller ID signal is received. Numbers that match the local area code are displayed as seven digits and are used for dialing back previous numbers. Entering your local area code will also help you immediately know if the call is local or long distance when viewing the CID records in the display.

NOTE: If you make a mistake and want to start over, press the DELETE button to delete all of the digits.

- Press the MENU button until *LOCAL AREA CODE* shows in the display.
- Use the ▲ button to select the correct number or enter directly by using the number pad.
- Use the ▼ button to move to second and third digit locations to make your selections.
- Press the MENU button to save.

DIALING MODE

This adjustment allows you to select tone (touch-tone) or pulse (rotary) dialing.

- Press the MENU button until *TONE/PULSE DIAL MODE* shows in the display.
- Press either ▲ or ▼ button to show the current dialing mode. The default is Tone dialing.
- To change the dialing mode, press the ▲ or ▼ button. The display alternates between the two modes.
- Press the MENU button again to save.

NOTE: The phone will exit Set Up after 20 seconds if no buttons are pressed.
REMINDER: The time and date are programmed automatically when the first Caller ID record is successfully received after set up.

CALLER ID (CID) FEATURES

CID SUMMARY SCREEN

The Summary Screen shows the current time, date, and number of new calls to review. It is displayed until any button is pressed.

NOTE: The number of new calls is displayed until all new calls have been reviewed.

RECEIVING AND STORING CID CALLS

This unit receives and displays information transmitted by your local phone company. This information can include the phone number, date, and time; or the name, phone number, date, and time. The unit can store up to 75 calls for later review. When the memory is full, a new call automatically replaces the oldest call in memory. *NEW* appears in the display for calls received that have not been reviewed.

REVIEWING CID RECORDS

- Press the ▲ or ▼ button to view the call records.
- Press the "▲" button to scroll through the call records from the oldest to the newest.
- Press the "▼" button to scroll through the call records from the most recent to the oldest.
- When all of the records have been viewed, *START/END* appears in the display.

DELETING CID RECORDS

- To delete the record shown in the display, press the DELETE button once.
- To delete all records while reviewing, press and hold the DELETE button for about three seconds. *DELETE ALL?* appears in the display. Press DELETE again to complete.

DIALING BACK

When reviewing Caller ID records, you can dialback the numbers on the display by pressing the DIAL button.

NOTE: If *PICKUP PHONE* shows in the display, no other changes to the number can be made. The information sent from the telephone company is known to be a valid number for dialing back (used only in very limited areas). Once you pickup the phone, the number is automatically dialed.

IF YOU PROGRAMMED YOUR LOCAL AREA CODE

- Use either ▲ or ▼ button to display the number you want to dial.
- Press the DIAL button.
 - If you see a number with seven digits (i.e. 555-1234), then the call is from within your area code. However, this does not guarantee the call is a local call.
 - If you see a number with 11 digits (i.e. 1-234-555-1234), then the call is not from within your area code.

NOTE: A timer (10 seconds on-hook and 3 seconds off-hook) located in the upper right side of the display will start, letting you know how much time is left until the unit returns to the Summary Screen.

- If you are at on-hook and *PICKUP OR ADJ* displays, you can adjust the phone number format by pressing the DIAL button. If the phone is off-hook and *ADJUST* shows in the display, you can adjust the phone number format by pressing the DIAL button. For example, sometimes a 7-digit local number cannot be dialed because it requires a 10-digit or 11-digit format. Press the DIAL button repeatedly to scroll through the 7, 10, and 11-digit numbers.

- 7-digits:** 7-digit telephone number (i.e. 555-5555)
- 10-digits:** 3-digit area code + 7-digit telephone number (i.e. 425-555-5555)
- 11-digits:** long distance code + 1 + 3-digit area code + 7-digit telephone number (i.e. 1-425-555-5555)

- To dial the displayed number, and the phone is on-hook, pick up the handset or press the SPEAKER button before the timer reaches 0. If the phone is off-hook, wait until the time reaches 0. *NOW DIALING* shows in the display and the number is dialed.

IF YOU DID NOT PROGRAM YOUR LOCAL AREA CODE


- Use the ▲ or ▼ button to display the number you want to dial. You will only see 10-digit numbers (i.e. 234- 555-1234).
- See steps 2 through 4 in the previous section to complete the dialback process.

CALLER ID DISPLAY MESSAGES

The following special messages indicate the status of a message or the unit:

BLOCKED CALL	The caller of the incoming call is registered as "Private Number" and their Caller ID information is withheld.
CALL WAITING	Indicates a call is waiting on the line.
LOW	Battery power level is low.
NO CALLS	The caller memory is empty.
START/END	You are at the beginning or the end of the Caller ID memory log.
UNKNOWN CALLER	The incoming call does not have Caller ID service or their service area is not linked to yours. If <i>UNKNOWN CALLER</i> appears along with a calling number, the name information for that number was not available.

SPEAKERPHONE BASICS

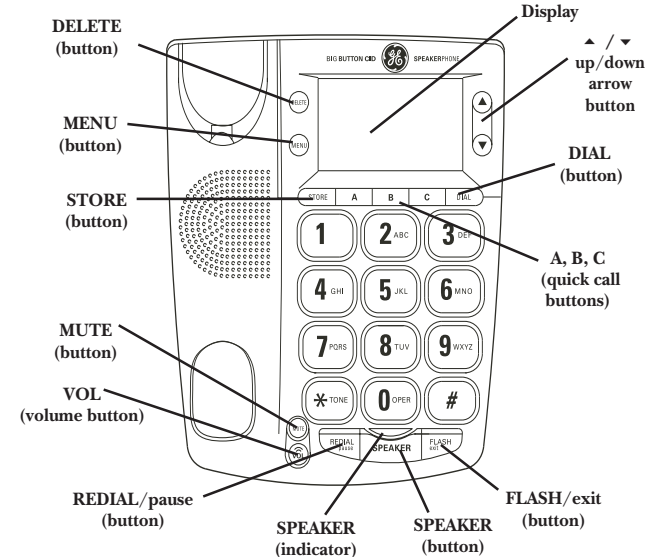

LOCATION

Your phone features a speakerphone for ease of use and convenience during a phone conversation. At any time during a conversation, you can lift the handset to stop using the speakerphone. Likewise, when you are using the handset, press the SPEAKER button and place the handset in the cradle to switch to the speakerphone.

For best speakerphone performance, avoid the following:

- Areas with high background noise. (The microphone might pick up these sounds and prevent the speakerphone from going into the receiving mode when you finish talking.)
- Surfaces affected by vibration.
- Recessed areas such as in a corner, under a cupboard, or next to a cabinet, which can generate an echo effect.

SPEAKERPHONE USE

Note the following guidelines when using the speakerphone:

- The speakerphone works similar to a two-way radio in that you can only listen or talk at one time.
- Stay reasonably close to the phone so that you can be clearly heard by the person to whom you are talking.
- You can adjust the speakerphone volume by pressing the volume button continuously or pressing the review button ▲ or ▼ after pressing the volume button.
- The speakerphone indicator light comes on when the speakerphone is in use.

NOTE: The power supply must be plugged in for the speakerphone to operate.

TELEPHONE BASICS

You can use the telephone by speaking into and listening through the handset, or by using the speakerphone.

RECEIVING A PHONE CALL

- Lift the handset or press SPEAKER to answer the call.
- Replace the handset in the cradle or press the SPEAKER button to hang up.

MAKING A PHONE CALL

- Lift the handset or press the SPEAKER button. Wait for a dial tone.
- Dial the telephone number you want to call.
- Replace the handset in the cradle, or press the SPEAKER button to hang up.

VOLUME

You may adjust the handset and speakerphone volume independently with the VOL button or the ▲ or ▼ buttons. Both handset receiver volume level and speakerphone volume level are saved in memory.

ADJUSTING THE HANDSET RECEIVER VOLUME

While using the handset, you can adjust the speaker volume by pressing the VOL button continuously or pressing the ▲ or ▼ buttons after pressing the VOL button. REC (Handset Receiver) volume shows in the display.

ADJUSTING THE SPEAKERPHONE VOLUME

While using the speakerphone, you can adjust the speaker volume by pressing the VOL button continuously or pressing the ▲ or ▼ buttons after pressing the VOL button. SPK volume level shows in the display.

NOTE: Both handset receiver and speakerphone volume return to the default setting (low) if the unit is power up reset.

REDIAL

You may redial the last number you called by pressing the REDIAL button after you hear a dial tone.

NOTE: The redial feature holds the last number (up to 32 digits) that you dialed in memory. If you pressed any other numbers after dialing the phone number (for example, when accessing a voice-mail system) then those numbers are also dialed.

If you get a busy signal, press REDIAL again without hanging up.

MUTE

Use the MUTE button to interrupt a phone conversation to talk privately with someone else in the room. A conversation can be muted while using the speakerphone or handset.

- Press the MUTE button. The mute indicator lights up.
- Press MUTE again to turn it off.

FLASH

Press FLASH to activate special features of your telephone network, such as call transfer, or special services from your local telephone company, such as call waiting.

TEMPORARY TONE DIALING

If you have pulse (rotary) service and want to access customer calling services (such as telebanking and long distance services) that require tone dialing, you can use this feature to temporarily change from pulse to tone service.

After dialing the telephone number and connecting to the customer calling service,

- Press and release the TONE (*) button.
- When you hang up, the telephone automatically returns to pulse dialing mode.

TIP: Temporary Tone can also be used while storing numbers in memory by pressing TONE (*) at the necessary point in the storage sequence.

MEMORY

You may store information in any of the following memory locations: 0 to 9, or quick call buttons; A, B, or C. See "Storing a Pause in Memory" and "Temporary Tone Dialing" for more information.

NOTE: This model retains all user memory even if power supply or telephone line has been interrupted or disconnected.

STORING A NAME AND NUMBER IN MEMORY

- Press the STORE button. *LOCATION?* shows in the display.
 - Press the desired memory location (0 to 9, or quick call buttons; A, B, or C.)
- NOTE:** You may select memory locations by pressing ▲ or ▼ to scroll through the memory locations or press the 0-9, or quick call buttons; A, B, or C.
- Press the STORE button again to confirm the memory location.
 - NOTE:** If necessary, to erase existing memories, or if you make a mistake, use the DELETE button.
- Use the number keys to enter the telephone number (up to 32 digits) and press the STORE button to save. (The unit will not dial a phone number in this mode.) The cursor automatically moves to the text line for name entry.
- Use the number keys to enter the name of the person associated with the telephone number you just entered. More than one letter is stored in each of the number keys.
 - For example, to enter the name BILL SMITH, press the 2 key twice for the letter B. Press the 4 key 3 times for the letter I. Press the 5 key 3 times for the letter T.
- NOTE:** The flashing cursor automatically moves to the next position or you may press the ▲ or ▼ button to move the cursor to the next position.

Press the 5 key 3 times for the second letter L. Press the arrow key (▲) two times to insert a space, and press the 7 key 4 times for the letter S. Press the 6 key once for the letter M. Press the 4 key 3 times for the letter I. Press the 6 key for the letter T. Press the 4 key twice for the letter H.

- Press the STORE button to save the name.
- To enter another name and number in a different memory location, return to step 1 and repeat the process.

CHANGING A STORED NUMBER

Repeat the storage sequence under Storing A Name and Number in Memory, and use the DELETE button to delete the old number before entering the new number.

ERASING A STORED NUMBER

- Press the STORE button.
- Press the memory location (0 to 9, or quick call buttons; A, B, or C) to be erased.
- Press the DELETE button.

COPYING CALLER ID MEMORIES TO USER MEMORY

- Press the ▲ or ▼ button to view the caller number and name you want to copy.
- Press the STORE button.
- Press the memory location (0-9, or quick call buttons; A, B, or C). The number flashes if there is a number already stored in the memory location.
- Press the STORE button to enter the edit mode, and then press the STORE button again to edit the name.

NOTE: You may select a different memory location by pressing ▲ or ▼ to scroll through the memories or press 0-9, or quick call buttons; A, B, or C.

- Press the STORE button to confirm and save, and wait for three seconds to exit.
NOTE: If the name you want to enter is longer than 12 characters, only the first 12 characters will be copied into memory.

COPYING REDIAL NUMBERS TO MEMORY

- Press the REDIAL button while the phone is on-hook. The display shows *PICKUP PHONE*.
- Press the STORE button.
- Press any key (0-9, or quick call buttons; A, B, or C) for the memory location. The cursor flashes and allows the user to enter the caller's name.
- Press the STORE button twice to confirm and save, and wait for three seconds to exit.

NOTE: If you want to edit the number, press the STORE button again within three seconds. When you are finished, wait three seconds to exit.

DIALING A NUMBER STORED IN MEMORY WHILE ON-HOOK

- Press the DIAL button
- To select a memory, press any key (0-9, or quick call buttons; A, B, or C). The number in that memory location displays.
- NOTE:** You may select a different memory location by pressing ▲ or ▼ to scroll through the memories or pressing key (0-9 or quick call buttons; A, B, or C).
- Press the SPEAKER button, or pick up the handset to dial the displayed number.

DIALING A NUMBER STORED IN MEMORY

- Lift the handset, or press the SPEAKER button.
- Press the DIAL button then press a memory location button.

CASCADE DIALING

This process allows you to dial a succession of stored numbers from separate memory locations. This is useful when you must dial several sequences of numbers, such as with frequent calls via a telephone company long distance provider.

For example	Memory location
Local access number of long distance company	6
Authorization code (ID)	7
Long distance phone number	8

- Pick up the handset or press SPEAKER.
- Press DIAL button, then press number "6" for the memory location.
- Press DIAL button, then press number "7" for the memory location.
- Press DIAL button, then press number "8" for the memory location.
- The number dials automatically.

STORING A PAUSE IN MEMORY

The REDIAL button has dual functionality and becomes a pause button when the STORE button is pressed first. It is valid only when storing a number into memory locations. Use the PAUSE (REDIAL) button to insert a pause when a delay is needed in an automatic dialing sequence. For example, when you must dial a 9 to get an outside line or when you enter codes to access your long distance company.

PRE-DIALING

- With the handset on the cradle, enter the telephone number you wish to call. The telephone number shows in the display.
- Lift the handset or press the SPEAKER button and the number automatically dials.

NOTE: Use the DELETE button to delete an incorrectly entered number.

TROUBLESHOOTING TIPS

- No Dial Tone
 - Check all cabling to make sure that all connections are secure and not damaged.
 - Check hook switch: Does it fully extend when handset is lifted from cradle?
- No Information is Shown After the Phone Rings
 - Are you subscribed to Caller ID service from your local telephone company?
 - Be sure to wait until the second ring before answering.

Phone Dials in Pulse with Tone Service

Teléfono con Altavoz, Identificador de Llamadas y Llamada en Espera, con Memoria de 10 Números

Guía del Usuario

29369

Creemos cosas buenas para la vida.

GLOSARIO DE TÉRMINOS UTILIZADOS EN ESTE MANUAL

Gancho para Colgar (Hook switch): Parte del teléfono que rebota para activar la línea telefónica cuando el auricular se levanta de la base.


Descolgado (Off-hook): Un término que se utiliza para describir el teléfono en su modalidad activa es cuando el auricular está fuera de la base o cuando el botón de altavoz ("SPEAKER") es oprimido.

Colgado (On-hook): Un término que se utiliza para describir el teléfono en su modalidad inactiva.

ANTES DE COMENZAR

LISTA DE PARTES

Asegúrese de que su paquete incluye los siguientes artículos:

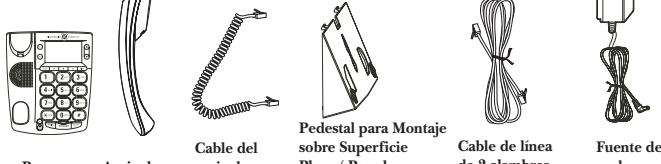

REQUERIMIENTOS PARA ENCHUFE TELEFÓNICO

Para utilizar este teléfono, usted puede necesitar un enchufe modular telefónico tipo RJ11C como el ilustrado aquí, instalado en su hogar. Si usted no tiene este tipo de enchufe, llame a su compañía telefónica local para preguntar cómo conseguirlo.

INFORMACIÓN IMPORTANTE

PARA LA INSTALACIÓN

- Nunca instale cableado telefónico durante una tormenta de relámpagos.
- Nunca toque cables o terminales no aislados, a menos que la línea telefónica haya sido desconectada en la interfaz de la red.
- Utilice precaución cuando instale o modifique líneas telefónicas.
- Nunca instale enchufes telefónicos en localizaciones mojadas, a menos que el enchufe esté específicamente diseñado para mojarse.

PARA INSTALAR EL TELÉFONO

Su teléfono debe ser colocado en una superficie plana como un escritorio o sobre una mesa, o se puede instalar sobre la pared. Un pedestal para montaje de escritorio o de pared viene incluido con su teléfono.

PARA SUJETAR EL PEDESTAL SOBRE ESCRITORIO

- Cuidadosamente volteé el teléfono de cabeza de manera que la parte de abajo quede mirando hacia arriba y el extremo más ancho esté del lado contrario a usted.
- Con la orilla redondeada hacia abajo, introduzca la lengüeta en la orilla redondeada del pedestal dentro de la ranura de en medio en la parte de debajo de la base, y después empuje el pedestal hacia abajo hasta que las dos lengüetas en la esquina izquierda y derecha del pedestal entren en su sitio (queden aseguradas) dentro de las dos ranuras superiores en la parte de debajo de la base.

PARA CONECTAR EL AURICULAR

- Conectar un extremo del cable espiral en el enchufe del auricular.
- Conecte el otro extremo del cable espiral al enchufe en la base.
- Coloque el auricular sobre la base.

PARA CONECTAR EL CABLE DE LÍNEA TELEFÓNICA

- Conecte un extremo del cable de línea telefónica liso dentro del enchufe en la parte posterior de la base.
- Conecte el otro extremo en un enchufe telefónico de pared.
- Coloque el selector del timbre ("RINGER") localizado en la parte posterior de la base en la posición de volumen deseada.

OFF - El teléfono no timbrará

LO - Nivel de sonido más bajo

HI - Nivel de sonido más alto

NOTA: El aparato está instalado adecuadamente si usted levanta el auricular y escucha un tono de marcar. De otra manera, verifique los pasos de la instalación.

PARA CONECTAR A LA

RED DE SUMINISTRO ELÉCTRICO

- Conecte un extremo del cable de la fuente de poder a la parte posterior de la base.
- Conecte el otro extremo a una toma de corriente eléctrica.

! CUIDADO: Utilice únicamente el cable de corriente ATLINKS USA, Inc. 5-2498 que es compatible con esta unidad. El uso de otros cables de corriente puede resultar en daño al aparato.

INSTALACIÓN SOBRE PARED

Su altavoz puede también ser instalado en una placa de pared (no incluida).

PARA SUJETAR EL PEDESTAL PARA PARED

- Voltee la base de cabeza de manera que la parte de abajo de la base quede mirando hacia arriba y el extremo más grueso esté apuntando hacia el lado opuesto a usted.

- Si lo desea, recoja el cable telefónico excedente y guárdelo dentro del pedestal de montaje para pared, y después enhebre el cable de línea a través de las ranuras en el pedestal como se muestra en la ilustración.

- Con la orilla redondeada hacia arriba, introduzca la lengüeta en la orilla del pedestal dentro de la ranura de en medio en la parte de debajo de la base, y después empuje el pedestal hacia abajo hasta que las dos lengüetas en la esquina izquierda y derecha del pedestal entren en su sitio (queden aseguradas) dentro de las dos ranuras inferiores en la parte de debajo de la base.

- Deslice los agujeros para montaje sobre los postcortes de la placa de pared y deslice firmemente hacia abajo o que entre en la pared (placa de pared no incluida).

Si estas medidas no eliminan la interferencia, favor de consultar a su distribuidor o a un técnico de radio/televisión experto por otras sugerencias. También, la Comisión Federal de Comunicaciones (FCC) ha preparado un folleto muy útil, "How To Identify and Resolve Radio/TV Interference Problems" ("Cómo Identificar y Resolver Problemas de Interferencia de Radio/Televisión"). Este folleto se puede obtener del U.S. Government Printing Office, Washington, D.C. 20402. Favor de especificar el número 004-000345-4 cuando haga su pedido.

PARA PROGRAMAR EL MENÚ DEL IDENTIFICADOR DE LLAMADAS (CALLER ID)

Usted no debería conectar el teléfono dentro del enchufe modular mientras esté programando su menú del Identificador de Llamadas.

- Presione el botón MENU para entrar a la opción menú modalidad de configuración.

#1 >ENG FRA ESP (el idioma de fábrica CID es el inglés)

#2 CONTRAST (CONTRASTE) (el nivel de fábrica es 3)

#3 LOCAL AREA CODE (CODIGO DE AREA LOCAL)

#4 TONE/PULSE DIAL MODE (MODO DE MARCACION T/P) (la marcación de fábrica es por tonos)

- Presione el botón $\blacktriangle$ o $\blacktriangledown$ para desplazarse a través de las 4 pantallas de menú, que son

Use los botones $\blacktriangle$ o $\blacktriangledown$ para seleccionar la opción deseada.

NOTA: Usted tiene 20 segundos después de oprimir cualquiera de estas teclas y antes de que el teléfono regrese automáticamente a la Pantalla Sumario.

IDIOMA DE LA PANTALLA

Este ajuste le permite mostrar las indicaciones de la pantalla del Identificador de Llamadas en inglés, francés y español.

- Presione el botón MENU hasta que **ENG FRA ESP** aparezcan en la pantalla.
- Use el botón $\blacktriangle$ o $\blacktriangledown$ para seleccionar ENG, FRA, o ESP.
- Presione el botón MENU para guardar la selección.

CONTRASTE

Este ajuste le permite ajustar el contraste de la pantalla.

- Presione el botón MENU hasta que **CONTRAST** se muestre en la pantalla.
- Use el botón $\blacktriangle$ o $\blacktriangledown$ para seleccionar el nivel 1, 2, 3, 4, 5.
- Presione el botón MENU para guardar la selección.

CLAVE DE ÁREA LOCAL

El teléfono utiliza la clave de área local programada para determinar el formato de números que se muestra cuando se recibe una señal válida del Identificador de Llamadas. Los números que concuerdan con la clave de área local se muestran como números de siete dígitos y se utilizan para volver a marcar números marcados previamente. El inscribir su clave de área local también le ayudará inmediatamente a saber si la llamada es local o de larga distancia cuando usted vea los archivos del Identificador de Llamadas en la pantalla.

NOTA: Si Ud. comete un error y quiere empezar de nuevo, presione el botón DELETE para borrar todos los dígitos.

- Presione el botón MENU hasta que **LOCAL AREA CODE** se muestre en la pantalla.
- Use el botón $\blacktriangle$ para seleccionar el número correcto.
- Use el botón $\blacktriangledown$ para moverse a las ubicaciones de segundo y tercer dígitos para hacer sus selecciones.
- Presione el botón MENU para guardar la selección.

MODALIDAD DE MARCADO

Este ajuste le permite seleccionar la modalidad para marcar por tono (touch-tone) o pulso (rotatorio).

- Presione el botón MENU hasta que **TONE/PULSE DIAL MODE** se muestre en la pantalla

- Presione el botón $\blacktriangle$ o $\blacktriangledown$ para mostrar la modalidad de marcación actual. La marcación de fábrica es por Tonos.

- Para cambiar la modalidad de marcación, presione el botón $\blacktriangle$ o $\blacktriangledown$. La pantalla alterna entre las dos modalidades.

- Presione el botón MENU para guardar la selección.

NOTA: El teléfono saldrá del menú de programación después de 20 segundos si no se oprime ningún botón.

RECUERDE: La hora y fecha se programan automáticamente cuando el primer archivo del Identificador de Llamadas (Caller ID) es recibido exitosamente después de la programación.

FUNCIONES DEL IDENTIFICADOR DE LLAMADAS (CID)

PANTALLA SUMARIO DEL IDENTIFICADOR DE LLAMADAS (CID)

La Pantalla Sumario muestra la hora actual, la fecha actual y el número de nuevas llamadas a ser revisadas. Esta indicación se muestra hasta que cualquier botón sea oprimido.

NOTA: El número de llamadas nuevas se muestra hasta que alguna de las llamadas nuevas haya sido revisada.

PARA REVISAR Y ALMACENAR LLAMADAS DEL IDENTIFICADOR DE LLAMADAS (CID)

Este aparato recibe y muestra información transmitida por su compañía telefónica local. Esta información puede incluir el número telefónico, la fecha, y la hora, o el nombre, el número telefónico, la fecha, y la hora. El aparato almacena hasta 75 llamadas para ser revisadas más tarde. Cuando la memoria está llena, una nueva llamada automáticamente reemplaza a la llamada más vieja en la memoria. La indicación "NEW" aparece en la pantalla para llamadas recibidas que no han sido revisadas.

PARA REVISAR ARCHIVOS DEL IDENTIFICADOR DE LLAMADAS (CID)

- Oprima el botón $\blacktriangle$ o $\blacktriangledown$ para ver los archivos de llamadas.
- Oprima el botón $\blacktriangle$ para recorrer los archivos de llamadas desde el más reciente hasta el más reciente.
- Oprima el botón $\blacktriangledown$ para recorrer los archivos de llamadas desde el más antiguo hasta el más antiguo.
- Cuando todos los mensajes han sido revisados, la indicación "COMIENZO/FINAL" aparece en la pantalla.

PARA BORRAR ARCHIVOS DEL IDENTIFICADOR DE LLAMADAS (CID)

- Para borrar el archivo mostrado en la pantalla, oprima el botón para borrar ("DELETE") una vez.
- Para borrar todos los archivos mientras los revisa, oprima y sostenga el botón para borrar ("DELETE") durante aproximadamente 3 segundos. El aparato le preguntará si quiere borrar y la indicación ("BORRAR TODO?") aparecerá en la pantalla. Oprima el botón para borrar ("DELETE") nuevamente para llevarlo a cabo.

PARA VOLVER A MARCAR (CONTESTANDO UNA LLAMADA)

Cuando usted revisa archivos del Identificador de Llamadas, usted puede volver a llamar los números en la pantalla oprimiendo el botón para marcar ("DIAL").

NOTA: Si la indicación "LEVANTE TELÉFONO" aparece en la pantalla, no pueden hacerse más cambios al archivo. La información que la compañía telefónica le debe sobre que es un número válido para marcarlo (se usa únicamente en áreas limitadas). Una vez que usted levanta el teléfono, el número se marca automáticamente.

SI USTED PROGRAMÓ SU CLAVE DE ÁREA LOCAL

- Utilice cualquiera de los botones para revisar ($\blacktriangle$ o $\blacktriangledown$) para que la pantalla muestre el número que usted desea marcar.

- Oprima el botón para marcar ("DIAL").

- Si usted ve un número con siete dígitos (por ejemplo 555-1234), entonces la llamada se origina en su misma clave de área. Sin embargo, esto no garantiza que sea llamada local.

- Si usted ve un número con ocho dígitos (por ejemplo 1-234-555-1234), entonces esa llamada no se origina en su misma clave de área.

NOTA: Un temporizador (10 segundos con el teléfono colgado y 3 segundos con el teléfono descolgado) localizado en la esquina superior derecha de la pantalla empezará a contar, haciéndole saber cuánto tiempo le queda hasta que el aparato regrese a la Pantalla Sumario.

- Si usted está en modalidad de colgado y la indicación "LEVANTE/AJUSTE" aparece en la pantalla, usted puede ajustar el formato del número, oprimiendo el botón "DIAL". Si el teléfono está descolgado y la indicación "AJUSTE" aparece en la pantalla, usted puede ajustar el formato de números oprimiendo el botón "DIAL". Por ejemplo, algunas veces un número local de 7 dígitos no puede ser marcado porque requiere un formato de 10 de 11 dígitos. Oprima el botón "DIAL" repetidamente para recorrer los números de 7, 10 y 11 dígitos.

7-dígitos: número telefónico de 7 dígitos (por ejemplo, 555-5555).

10-dígitos: dígitos clave de área de 3 dígitos + el número telefónico de 7 dígitos (por ejemplo 425-555-5555).

11-dígitos: dígitos clave de larga distancia 1 + clave de área de 3 dígitos + el número telefónico de 7 dígitos (por ejemplo 1-425-555-5555).

- Presione el número que se muestra en la pantalla, si el teléfono está colgado, levante el auricular u oprima el botón de altavoz ("SPEAKER") antes de que el temporizador llegue a 0. Si el teléfono está colgado, espere a que el temporizador llegue a 0. La indicación "DISCANDO AHORA" aparece en la pantalla y el número se marca.

SI USTED NO PROGRAMÓ SU CLAVE DE ÁREA LOCAL

- Utilice cualquiera de los botones para revisar ($\blacktriangle$ o $\blacktriangledown$) para que la pantalla muestre el número que usted desea marcar. Usted únicamente verá números de 10 dígitos (i.e. 224-555-1234).

- Vea los pasos 2 al 4 en la sección anterior para completar la secuencia para volver a marcar.

MENSAJES EN LA PANTALLA DEL IDENTIFICADOR DE LLAMADAS (CID)

Los siguientes mensajes especiales indican el estado actual de un mensaje o del aparato:

NO CALLS

La memoria del Identificador está vacía.

(NO HAY LLAMADAS)

UNKNOWN CALLER (LLAMADA DESCONOCIDA)

La llamada entrante no tiene servicio de Identificador de Llamadas o su área de servicio no está conectada con la suya. Si la indicación "UN KNOWN CALLER" (llamada desconocida) aparece

junto con el número que llama, la información del

ese número no estará disponible.

BLOCKED CALL (LLAMADA BLOQUEADA)

La persona haciendo la llamada entrante está registrada como "Número Privado" y sus datos de identificación de Llamadas no serán revelados.

CALL WAITING (LLAMADA EN ESPERA)

Indica que una llamada está esperando en la línea.


START/END (PRINCIPIO/FINAL)

Usted está al principio o al final del registro del Identificador de Llamadas.

LOW

El poder de la batería está bajo.

FUNCIONES BÁSICAS DEL ALTAVOZ

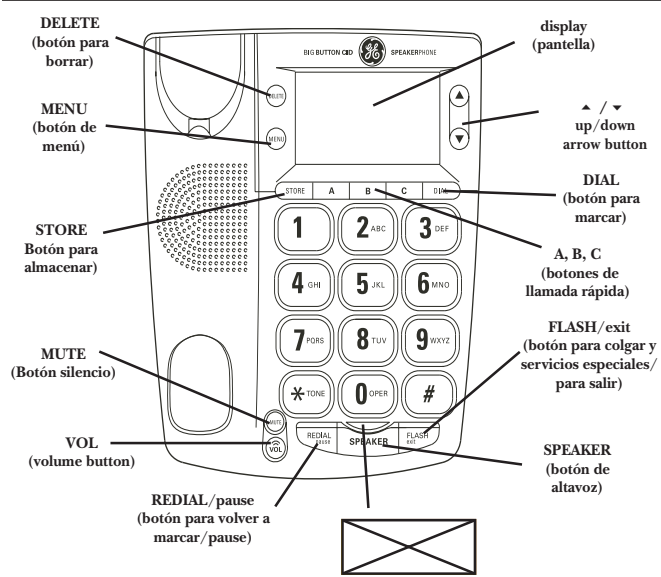

LOCALIZACIÓN

Su teléfono tiene un altavoz para facilitar su uso y la conveniencia durante una llamada telefónica. En cualquier momento durante una conversación, usted puede levantar el auricular y dejar de usar el altavoz. De igual manera, cuando usted use el auricular, oprima el botón del altavoz ("SPEAKER") y coloque el auricular sobre su lugar en la base para cambiar a modalidad de altavoz.

Para el mejor funcionamiento del altavoz, evite lo siguiente:

- Áreas con mucho ruido de fondo. El micrófono puede recoger estos sonidos y evitar que el altavoz pueda cambiarse a la modalidad para recibir sonido cuando usted termina de hablar).
- Superficies afectadas por vibración.
- Áreas remotas, como una esquina, abajo de una gaveta, o junto a un gabinete, los cuales pueden generar un efecto de eco.

USO DEL ALTAVOZ

Siga las siguientes pautas cuando utilice el altavoz:

- El altavoz funciona en una forma similar a un radio bidireccional, en que usted puede únicamente escuchar o hablar a la vez.
- Quédese razonablemente cerca del teléfono para que pueda ser escuchado claramente por la persona con la que está hablando.
- Usted puede ajustar el volumen del altavoz oprimiendo el botón de volumen continuamente u oprimiendo el botón para revisar ($\blacktriangle$ o $\blacktriangledown$) después de haber oprimido el botón de volumen.
- El indicador luminoso del altavoz se encenderá cuando el altavoz está siendo utilizado.

NOTA: La fuente de poder debe estar conectada para que el altavoz funcione.

FUNCIONES BÁSICAS DEL TELÉFONO

Usted puede utilizar el teléfono simplemente hablando o escuchando a través del auricular, o usando el altavoz.

PARA RECIBIR UNA LLAMADA

- Levante el auricular u oprima el botón del altavoz ("SPEAKER") para contestar una llamada.

- Vuelva a colocar el auricular en su sitio sobre la base u oprima el botón del altavoz ("SPEAKER") para colgar.

PARA HACER UNA LLAMADA

- Levante el auricular u oprima el botón de altavoz ("SPEAKER"). Espere al tono de marcar.
- Marque el número al que usted desea llamar.
- Vuelva a colocar el auricular en su sitio sobre la base u oprima el botón del altavoz ("SPEAKER") para colgar.

VOLUMEN

Usted puede ajustar volumen del auricular y del altavoz independientemente con el botón VOLUME o los botones $\blacktriangle$ o $\blacktriangledown$. Tanto el nivel de volumen para el auricular como el del altavoz se ahorran en memoria.

PARA AJUSTAR EL NIVEL DE VOLUMEN DEL AURICULAR

Mientras usa el auricular, y oprima continuamente el nivel de volumen u oprima el botón de volumen ("VOL"), y después oprima los botones de las flechas ($\blacktriangle$ o $\blacktriangledown$). La indicación de volumen del altavoz ("SPK") aparece en la pantalla.

PARA AJUSTAR EL NIVEL DE VOLUMEN DEL ALTAVOZ

Mientras usa el altavoz, oprima continuamente el nivel de volumen ("VOL") u oprima el botón de volumen ("VOL"), y después oprima los botones de las flechas ($\blacktriangle$ o $\blacktriangledown$). La indicación de volumen del altavoz ("SPK") aparece en la pantalla.

NOTA: Tanto el nivel de volumen del auricular como del altavoz vuelven a la programación de fábrica (alto) al reprogramarse el aparato después de un corte de corriente.

PARA VOLVER A MARCAR ("REDIAL")

Usted puede volver a marcar el último número al que llamó oprimiendo el botón "REDIAL" después de que escucha el tono de marcar.

NOTA: La función para volver a marcar mantiene en la memoria el último número que usted marcó (hasta 32 dígitos). Si Ud. presionó algunos otros números después de marcar el número de teléfono (por ejemplo, al acceder un sistema de menú de voz) entonces esos números son marcados también.

Si usted obtiene tono de ocupado, usted puede oprimir el botón "REDIAL" nuevamente sin colgar.

SILENCIAR

Use el botón MUTE para interrumpir una conversación telefónica para hablar en privado con alguien más en la habitación. Se puede silenciar una conversación mientras se usa el altavoz o el auricular.

- Presione el botón MUTE. El indicador de silencio se ilumina.

- Presione MUTE otra vez para desactivarlo.

SERVICIOS ESPECIALES ("FLASH")

Oprima el botón "FLASH" para activar las funciones especiales de la red telefónica, como transferencia de llamada, o servicios especiales de su compañía telefónica local, como llamada en espera.

TONO TEMPORARIO PARA MARCAR

Si usted tiene servicio para marcar por pulso (rotatorio) y quiere tener acceso a los servicios al cliente (como transacciones bancarias y servicios de larga distancia) que requieren servicio de tono, usted puede utilizar esta función para cambiar temporalmente el servicio de pulso a tono.

Después de marcar el número telefónico y conectarse al servicio al cliente,

- Oprima y suelte el botón de tono (TONE "N").
- Cuando usted cuelga, el teléfono automáticamente regresa a la modalidad de marcado por pulso.

SUGERENCIA: El tono temporario también puede ser usado mientras almacena números en la memoria, oprimiendo el botón "TONE" en el momento necesario de la secuencia de almacenar.

MEMORIA

Usted puede almacenar información en cualquiera de las siguientes localizaciones de memoria: teclas numéricas del 0 al 9, o botones de llamada rápida A, B, o C. Vea las secciones "Para Almacenar una Pausa en la Memoria" y "Marcado Temporal por Tono" para mayor información.

NOTA: Este modelo retiene toda la memoria del usuario así si el suministro de energía eléctrica o la línea telefónica han sido interrumpidos o desconectados.

PARA ALMACENAR UN NOMBRE/ NÚMERO EN LA MEMORIA

- Oprima el botón para almacenar ("STORE"). LOCALIZACION? aparece en la pantalla.

- Presione la ubicación de memoria deseada (teclas numéricas del 0 al 9, o botones de llamada rápida A, B, o C).
- NOTA: Usted puede seleccionar localizaciones de memoria oprimiendo $\blacktriangle$ o $\blacktriangledown$ para recorrer las localizaciones de memoria u oprima las teclas numéricas 0 al 9, o botones de llamada rápida A, B, o C.
- Oprima nuevamente el botón para almacenar ("STORE") para confirmar la localización de memoria.

NOTA: Si es necesario borrar memorias existentes, o si usted comete un error, utilice el botón para borrar ("DELETE").

- Utilice el teclado numérico para inscribir el nombre de la persona correspondiente con el número de teléfono que usted acaba de almacenar. Más de una letra es almacenada en cada una de las teclas numéricas.

Por ejemplo, para inscribir "Bill Smith", oprima la tecla del 2 dos veces para la letra B. Oprima la tecla del 4 tres veces para la letra L. Oprima la tecla del 5 tres veces para la L.

NOTA: El cursor parpadeara se mueve automáticamente a la siguiente posición o usted puede oprimir el botón del $\blacktriangle$ o $\blacktriangledown$ para mover el cursor a la siguiente posición.

Oprima la tecla del 5 tres veces para la segunda L. Oprima dos veces el botón de la flecha ($\blacktriangleright$) para introducir un espacio, y oprima la tecla del 7 cuatro veces para la letra S. Oprima la tecla del 6 una vez para la A. Oprima el 4 tres veces para la I. Oprima el 8 una vez para la letra T. Oprima el 4 dos veces para la letra H.

- Oprima el botón "STORE" para almacenar el nombre.

- Presione el botón para almacenar el número.
- Presione el botón para almacenar el número en una localización de memoria diferente, regrese el paso 1 y repita el proceso.

PARA CAMBIAR UN NÚMERO ALMACENADO

Repita la secuencia para almacenar localizada en Para Almacenar un Nombre y Número en la Memoria, y utilice el botón "DELETE" para borrar el número viejo antes de inscribir el número nuevo.

PARA BORRAR UN NÚMERO ALMACENADO

- Oprima el botón para almacenar ("STORE").
- Oprima la localización de memoria (teclas numéricas del 0 al 9, o botones de llamada rápida A, B, o C) que usted quiera borrar.
- Oprima el botón para borrar ("DELETE").

Ajunte su recibo al folio, para futura referencia, o anote la fecha en la que se compró o recibió este producto como regalo. Esta información será valiosa si se llegase a requerir durante el periodo de garantía.

PARA COPIAR LAS MEMORIAS DEL IDENTIFICADOR DE LLAMADAS A LA MEMORIA DEL USUARIO

- Oprima el botón $\blacktriangle$ o $\blacktriangledown$ para ver el número y el nombre de la persona que usted quiera copiar.
- Oprima el botón para almacenar ("STORE").
- Oprima la localización de memoria (teclas numéricas del 0 al 9, o botones de llamada rápida A, B, o C). El número parpadeará si ya hay un número almacenado en esa localización de memoria.
- Oprima el botón para almacenar ("STORE") para entrar en la modalidad para editar, y después oprima nuevamente el botón para almacenar ("STORE") para editar el nombre.

NOTA: Usted puede seleccionar una localización de memoria diferente, oprimiendo el $\blacktriangle$ o $\blacktriangledown$ para recorrer las localizaciones de memoria u oprima las teclas numéricas (0 al 9, o botones de llamada rápida A, B, o C).

NOTA: Si el nombre que usted quiere inscribir es más largo que 12 caracteres, únicamente los primeros 12 caracteres serán copiados en la memoria.

PARA COPIAR NÚMEROS A MARCAR

NUUEVAMENTE EN LA MEMORIA

- Oprima el botón para volver a marcar ("REDIAL") mientras el teléfono está colgado. La pantalla muestra la indicación "PICKUP PHONE".
- Oprima el botón para almacenar ("STORE").
- Oprima cualquier tecla numérica (0 al 9, o botones de llamada rápida A, B, o C) para la localización de memoria. El cursor parpadeará y le permite al usuario inscribir el nombre de la persona que llama.
- Oprima el botón para almacenar ("STORE") dos para confirmar y salvar, y espere tres segundos para salir.