
This leaflet contains specific operating information for your model. Save this leaflet with the Use and Care Book which also came with your washer.

FOR BEST RESULTS, READ AND BECOME FAMILIAR WITH BOTH.

Automatic Clothes Washer


Model WWA5600B

Operating Instructions for your washer

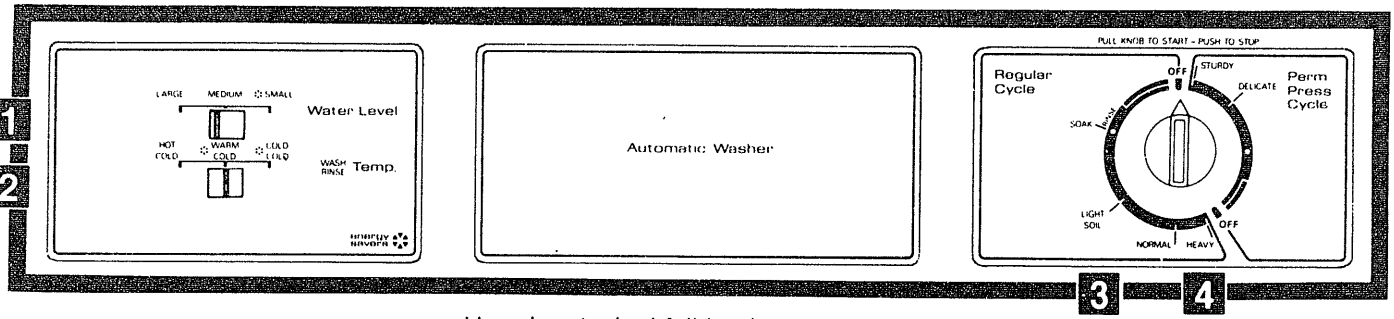

Sort clothes and load washer properly.

- Sort clothes carefully by fabric type, weight, color and amount of soil. See your Use and Care Book for sorting help.
- Remove Filter-Flo® pan. The underside of the lid is a good place to put the pan while loading or unloading clothes.

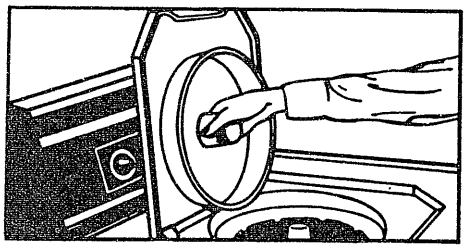

- Load clothes into the wash basket being careful not to overload. Clothes level should be below the retaining ring.

Here is a typical full load:

3 Double Sheets
6 Long Sleeve Shirts
3 Boxer Shorts
6 Standard Pillow Cases
5 T-shirts
4 Pair Trousers
6 Handkerchiefs

Note: When washing stockings, panty hose and other easily tangled items, always handle separately. To minimize tangling, the use of a net laundry bag is recommended.

- Position *Filter-Flo* pan on agitator and add measured amount of detergent. *Be sure to read the Detergents section of your Use and Care Book.*
- Refer to your Use and Care Book for more information on loading clothes, detergents, and other laundry products.
- Close lid. Washer will fill but not agitate or spin with lid open.

Set the controls.

See the Controls Setting Guide below.

1 Select Water Level.


SMALL: Washer is less than ½ full of clothes

MEDIUM: Between ½ and ⅔ full

LARGE: Over ⅔ full

2 Select Wash and Rinse Temperature.

3 Push Cycle Selector Knob in and turn clockwise to your selected wash setting.

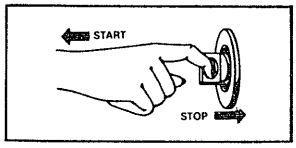

4 Pull Cycle Selector Knob out to start the washer. If you wish to change setting after washer has started, push Cycle Selector Knob in to stop the washer and reset to the new position. Setting can be changed at any time.

Controls Setting Guide

Some adjustment to these recommendations may be desirable depending on your particular washing conditions.

	Cottons & Linens				Permanent Press		Polyester Knits Synthetics & Blends	
Fabric	Work clothes, dungarees, etc. with heavy soil	Work clothes, dungarees, etc. with normal soil	White or Colorfast	Bright Colors	Heavy or Oily Soil	Normal or Light Soil	Heavy or Oily Soil	Normal or Light Soil
Wash/Rinse Temperature	Hot/Cold	Hot/Cold or Warm/Cold	Hot/Cold or Warm/Cold	Warm/Cold	Hot/Cold	Warm/Cold	Warm/Cold	Warm/Cold
	Regular				Permanent Press			
Cycle Selector Setting	Normal—for small loads. Heavy—for all other loads.	Normal	Normal	Normal or Light Soil	Sturdy	Sturdy or Delicate	Sturdy	Sturdy or Delicate

Part No. 141A7449 P372 Rev. 2
10-83

GENERAL ELECTRIC

UC18
EFFDATE 4-25-84

49-9383-2


Tips to Help You Select Settings

Regular Cycle—
Provides longer wash time for most cottons, linens, work and play clothes.

Perm Press Cycle—
For permanent press and delicates. An extended cool-down spray rinse is provided to minimize the setting of wrinkles.

Soak Setting—
Use with most soaking aids to loosen embedded soils and stains.


What Happens in Each Setting (Approximate Minutes)

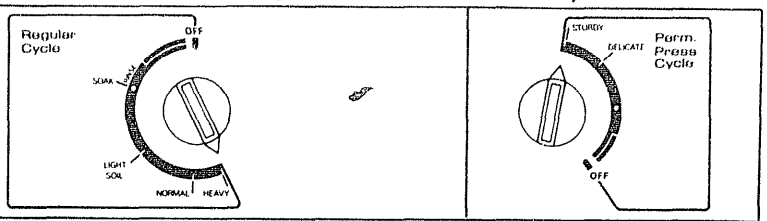


Cycle Selector Settings	Regular				Perm. Press	
	Heavy	Normal	Light Soil	Soak	Sturdy	Delicate
Wash	19	15	6		10	4
Spin	3½	3½	3½		2½	2½
Rinse	3½	3½	3½	3½	3½	3½
Spin	7	7	7	7	4½	4½
Total Time	35	31	22	11	22½	16½

NOTES:

- Total time includes pauses between each phase of the cycle.
- Total times do not include water fill times. Fill times vary depending on household water pressure and your selected water level.

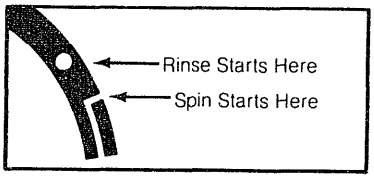

How to Use the Soak Setting

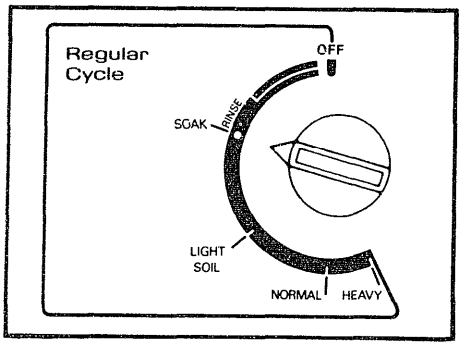

- **"SOAK"** setting temperature will automatically be cold.
- If a hot or warm soak is desired, set the WASH/RINSE TEMPERATURE switch to "HOT/COLD" or "WARM/COLD" and turn the Cycle Selector Knob to "NORMAL" in the Regular Cycle. Start the washer. After washer fills and begins to agitate, push in the Cycle Selector Knob and turn to "SOAK." Pull out the Cycle Selector Knob to complete the cycle.
- **For an extended soak** allow the washer to fill and agitate for a few minutes to dissolve the soaking agent. Then push in the Cycle Selector Knob to stop the washer (keep lid closed) and allow to soak for as long as desired. After desired soak period, pull out the Cycle Selector Knob to complete the cycle.

Your Direct Line to General Electric
The GE Answer Center™ 800.626.2000

BEFORE OPERATING YOUR WASHER
Read your Use and Care Book. It contains IMPORTANT CAUTIONS for the PERSONAL SAFETY of those using the appliance.

BEFORE YOU CALL FOR SERVICE
Check the Problem Solver in your Use and Care Book. It lists many minor causes of operating problems that you can correct yourself and may save you an unnecessary service call.

Part No. 141A7449 P372 Rev. 2
Pub. No. 49-9383—2

General Electric Company
Appliance Park
Louisville, Kentucky 40225

Model
WWA5600B

10-83

GENERAL ELECTRIC