automatic clothes washer
model WWA8300V
OPERATING INSTRUCTIONS

SAVE THESE INSTRUCTIONS WITH YOUR USE AND CARE BOOK

Before operating your washer, READ YOUR USE AND CARE BOOK.


It contains valuable information about sorting and loading, laundry additives, stain removal and IMPORTANT CAUTIONS FOR THE PERSONAL SAFETY OF THOSE USING THIS APPLIANCE.

SORT AND LOAD

- **Remove filter pan.** (The underside of the lid provides a convenient resting place for the filter pan while loading and unloading clothes.)
- **Add sorted laundry to wash basket.** See your Use and Care Book for sorting details.
- **A typical full load:**

3 double sheets	5 T-shirts
4 long sleeve shirts	3 pair of trousers
5 bath towels	7 wash cloths
4 standard size pillow cases	6 handkerchiefs

- **Replace filter pan and add measured amount of detergent as recommended on detergent package.** Note: Because of variations in contents, some granular detergents may be difficult to dissolve. If this is a problem:

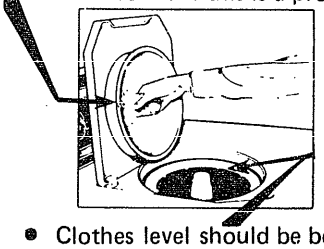


  - After loading the clothes, put the detergent in the wash basket next to the agitator, or,
  - Use a liquid detergent.

- Clothes level should be below the clothes retaining ring.
- **For use of Bleach Dispenser,** see back page. For use of fabric softener and other laundry aids, see your Use and Care Book.

SET THE CONTROLS

Refer to CONTROLS SETTING GUIDE below.

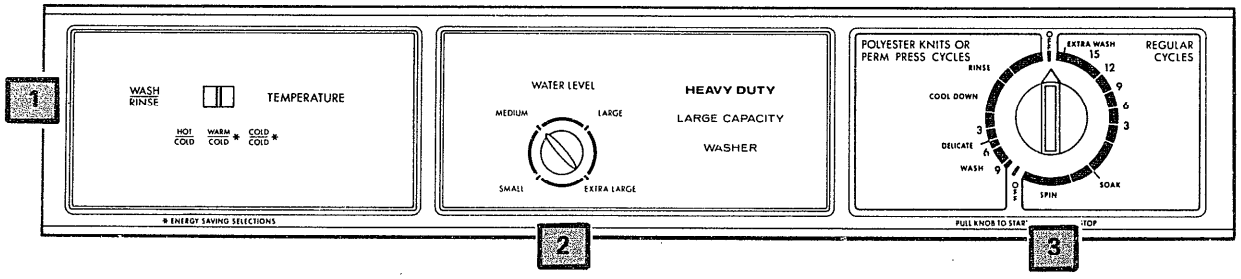

- **Close lid and set controls** as follows:

Lid must be closed for washer to operate. Washer will fill but will not agitate or spin with lid open.


1 **Select WASH/RINSE TEMPERATURE.**

2 **Select WATER LEVEL:**

Load Size Setting	Amount of Clothes In Washer
Small	Less than ⅓ full
Medium	Between ⅓ - ½ full
Large	Between ½ - ¾ full
Extra Large	Over ¾ full

3 **Push Cycle Selector Knob in** and turn clockwise to your selected wash cycle. See wash cycle settings on back page.

- **Pull Cycle Selector Knob out** to start washer.



The wash cycle setting can be changed at any time. Push in the Cycle Selector knob to stop the washer and reset to the new position.

CONTROLS SETTING GUIDE

	COTTONS & LINENS				PERMANENT PRESS		POLYESTER KNITS SYNTHETICS & BLENDS	
	Work clothes dungarees, etc. with heavy soil	Work clothes, dungarees, etc. with normal soil	White or Colorfast	Bright Colors	Heavy or Oily Soil	Normal or Light Soil	Heavy or Oily Soil	Normal or Light Soil
*WASH/RINSE TEMPERATURE	Hot/Cold	Hot/Cold or Warm/Cold	Hot/Cold or Warm/Cold	Warm/Cold	Hot/Cold	Warm/Cold	Warm/Cold	Warm/Cold
CYCLE	Regular	Regular	Regular	Regular	Polyester Knit or Perm Press			
**CYCLE SELECTOR SETTING	Extra Wash (19 Min.)	15 Min.	12 Min.	9 Min.	9 Min.	6 Min.	9 Min.	Delicates (5 Min.)

*The cooler wash settings (not below 80°F./27°C.) will save energy. See your Use and Care Book for more complete information.


**The wash times suggested here apply to laundering an average weight of clothes under typical home conditions. You may find that some adjustment in these times is desirable.

49-9367

HOW TO USE THE BLEACH DISPENSER

The Bleach Dispenser is designed for use with liquid bleach only! If you prefer to use powdered bleach, pour it into the filter pan, NOT into the bleach dispenser.

- Do NOT overflow – Avoid splashing. Undiluted bleach will cause fabric damage.
- Pour measured amount of liquid bleach directly into the BLEACH DISPENSER.

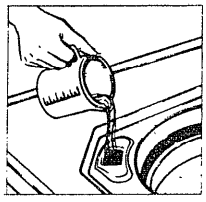

- Maximum recommended amount of liquid bleach . . .
  - Full wash: 1 1/4 cup (310 ml) liquid
  - Small wash: 2/3 cup (170 ml) liquid


NEVER POUR LIQUID BLEACH DIRECTLY ONTO CLOTHES


WHAT HAPPENS IN EACH CYCLE

All times are approximate.

REGULAR CYCLES

Provides longer washing time for most cottons, linens, work and play clothes.

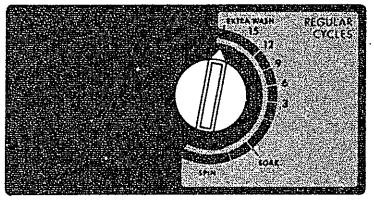


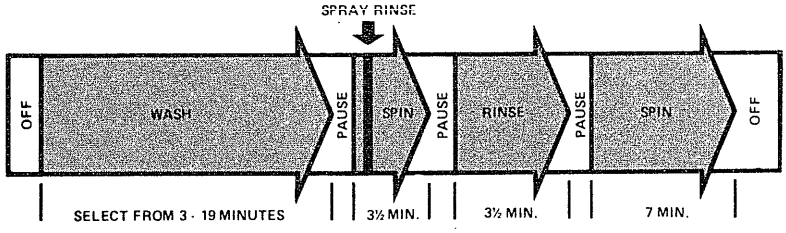


- TOTAL CYCLE TIME: Varies from 19 to 35 minutes plus fill time depending on selected wash time.

POLYESTER KNITS OR PERM PRESS CYCLES

For Polyester Knits, delicates and Permanent Press.
An extended cool-down spray rinse is provided to minimize the setting of wrinkles.

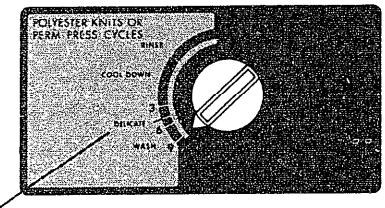


DELICATE setting (5 min. wash time)
For delicates, sheers and some knits where a shorter wash time is desired.

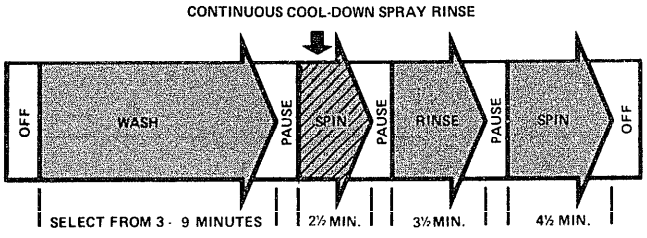


- TOTAL CYCLE TIME: Varies from 16 to 22 minutes plus fill time depending on selected wash time.

SOAK CYCLE

May be used with most soaking aids to loosen deeply embedded soils or stains.

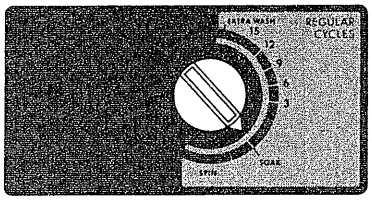

- TOTAL CYCLE TIME: 11 minutes plus fill time.

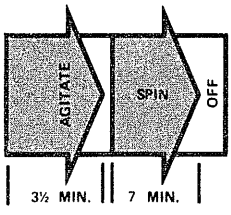

- Cold water will be provided automatically in the SOAK CYCLE.
- If a Hot or Warm soak is desired, set Wash Temp Switch and turn Cycle Selector to "EXTRA WASH".
- After washer fills and begins to agitate, push in Cycle Selector knob and turn to "SOAK".
- Pull out Cycle Selector knob to complete the cycle.

For and EXTENDED SOAK

- Allow washer to fill and agitate for a few minutes to dissolve soaking agent, then—
- Push in Cycle Selector knob to stop washer and allow to soak for as long as desired.
- After desired soak period, pull out Cycle Selector knob to complete the cycle.

BEFORE YOU CALL FOR SERVICE . . . Check the TROUBLE-SHOOTING GUIDE on the back cover of your USE AND CARE BOOK. It lists many minor causes of operating problems that you can correct yourself and may save you an unnecessary service call.

GENERAL ELECTRIC COMPANY
LOUISVILLE, KENTUCKY 40225

Part No. 141A7449P357 10-79

GENERAL ELECTRIC

WWA8300V
Pub. No. 49-9367