

DELIVERY & INSTALLATION POINTER

DP8178819
July 2010

This Delivery & Installation Pointer Applies To The Following Brands:

☒ Whirlpool® ☐ KitchenAid® ☐ Jenn-Air® ☒ Maytag®
☐ Amana® ☐ Roper® ☐ Admiral® ☐ Magic Chef®

Top Load Washers with Dispenser Drawer

Models:

WTW5500	WTW5700	MVWX500	MVWX700
---------	---------	---------	---------

Washer not agitating, spinning, or not pumping water out

ISSUE:

Washer not agitating, spinning, or not pumping water out when testing the washer after installation.

RESOLUTION:

Check electrical connections at the motor, capacitor and pump. Push connector all the way into the housing. This can be done at the point of installation when the washer is tilted back to install the bottom insulation pad to resolve this issue.

CORRECTIVE ACTION:

⚠ WARNING	
	Electrical Shock Hazard Disconnect power before servicing. Replace all parts and panels before operating. Failure to do so can result in death or electrical shock.

1. Follow all installation instructions step by step, heeding the Safety warnings throughout.
2. Note step1 on next page for sound shield insulation.
3. PRIOR to continuing with step 2, check electrical connections at the motor, capacitor and pump. Push connector all the way into the housing. (Figure 1, next page).
4. Continue with step 2 in sound shield insulation, as shown on next page.
5. If Electrical connections are not checked, as noted above in Corrective Action number 3, and washer is not agitating, spinning, or not pumping water out when testing the washer after installation, please uninstall and check connections as noted above.

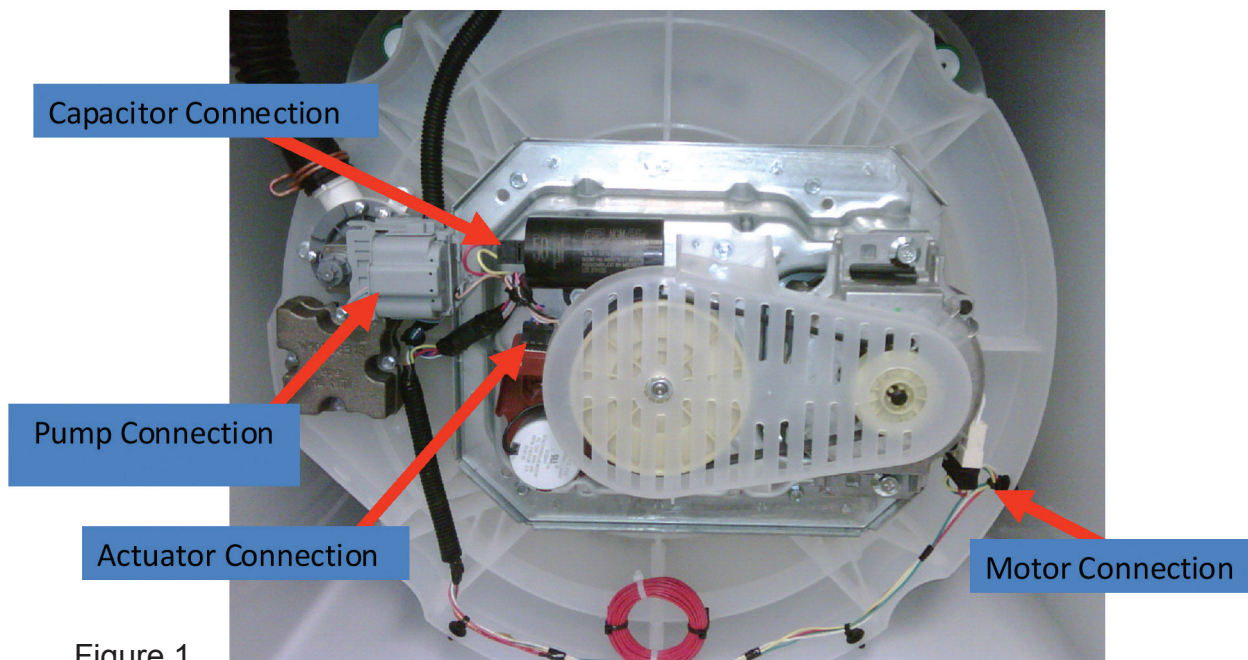


Figure 1


SOUND SHIELD Installation Instructions

⚠ WARNING


Excessive Weight Hazard
Use two or more people to move and install the washer.
Failure to do so can result in back or other injury.

These instructions replace Step 2 of the washer Installation Instructions.

1. Remove shipping base

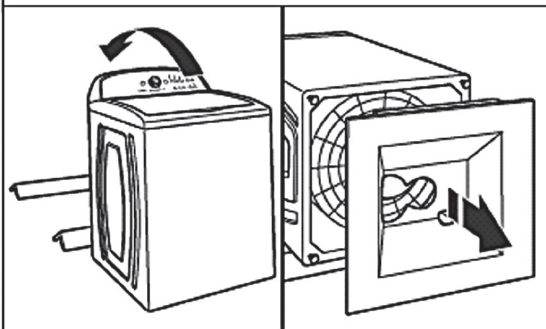

2. Align sound shield with washer front

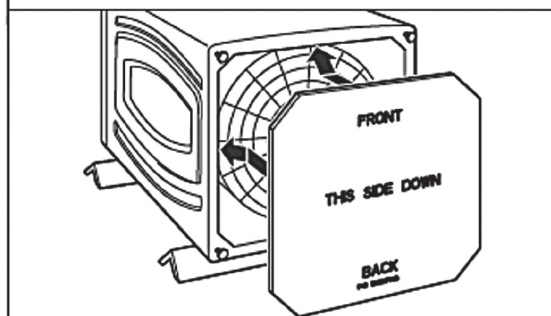

BOLETÍN SOBRE ENTREGA E INSTALACIÓN

DP8178819
Julio 2010

ESTE BOLETIN DE SERVICIO SE APLICA A LAS SIGUIENTES MARCAS

☒ Whirlpool® ☐ KitchenAid® ☐ Jenn-Air® ☒ Maytag®
☐ Amana® ☐ Roper® ☐ Admiral® ☐ Magic Chef®

Lavadoras de carga superior con cajón de depósito

Modelos:

WTW5500 | WTW5700 | MVWX500 | MVWX700

La lavadora no agita, no exprime o no bombea el agua hacia fuera

PROBLEMA:

La lavadora no agita, no exprime o no bombea el agua hacia fuera cuando se prueba después de la instalación.

RESOLUCIÓN:

Revise las conexiones eléctricas en el motor, el capacitador y la bomba. Empuje por completo el conector dentro del alojamiento. Esto puede hacerse en el momento de la instalación cuando se inclina hacia atrás la lavadora para instalar la almohadilla aisladora para resolver este problema.

CORRECTIVE ACTION:

 ADVERTENCIA	
	Peligro de Choque Eléctrico Desconecte el suministro de energía antes de darle mantenimiento. Vuelva a colocar todos los componentes y paneles antes de hacerlo funcionar. No seguir estas instrucciones puede ocasionar la muerte o choque eléctrico.

1. Siga todas las instrucciones de instalación paso a paso, haciendo caso de las advertencias de seguridad en todo momento.
2. Tome en cuenta el paso 1 en la página siguiente para la instalación del aislador de sonido.
3. ANTES de continuar con el paso 2, revise las conexiones eléctricas en el motor, el capacitador y la bomba. Empuje por completo el conector dentro del alojamiento. (Figura 1 en la próxima página).
4. Continúe con el paso 2 en el aislador de sonido, como se muestra en la página siguiente.
5. Si no se revisan las conexiones eléctricas, como se indica arriba en la acción correctiva número 3, y la lavadora no agita, no exprime o no bombea el agua hacia fuera cuando prueba la lavadora después de la instalación, desinstálela y revise las conexiones como se indica arriba.

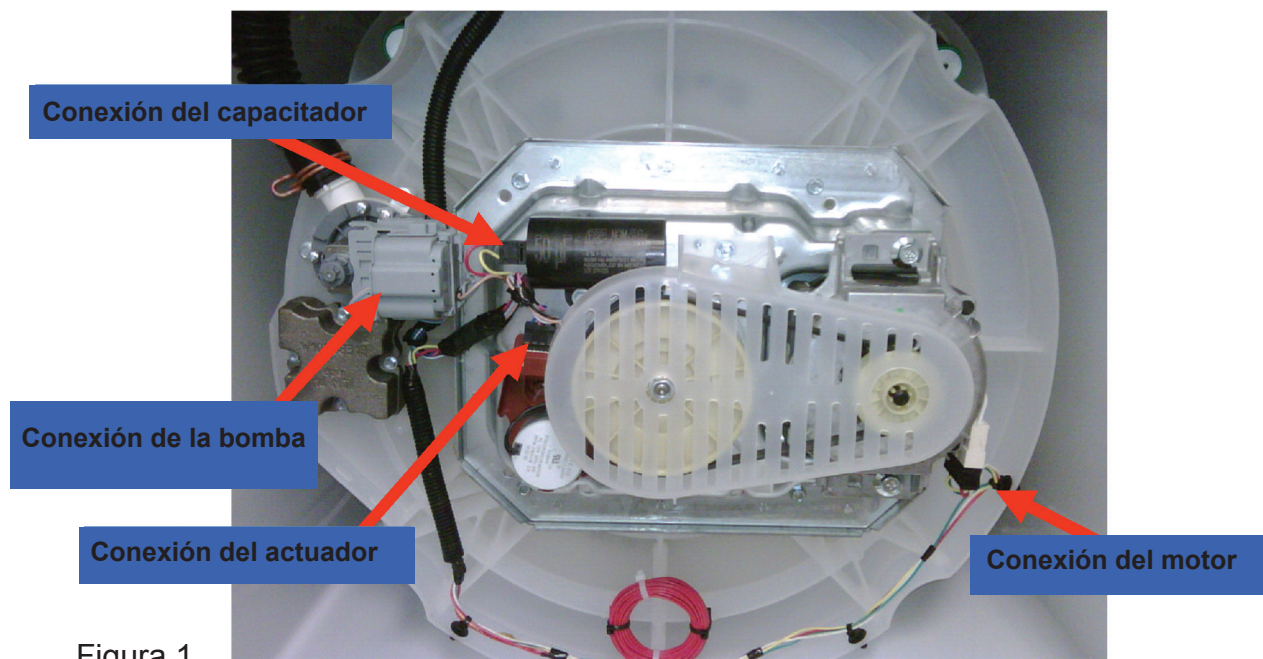


Figura 1

AISLADOR DE SONIDO


Instrucciones de instalación

! ADVERTENCIA

Peligro de peso excesivo
 Use dos o más personas para mover e instalar la lavadora.
 No seguir esta instrucción puede ocasionar una lesión en la espalda u otro tipo de lesiones.

Estas instrucciones reemplazan el Paso 2 de las Instrucciones de instalación de la lavadora.

1. Saque la base de transporte

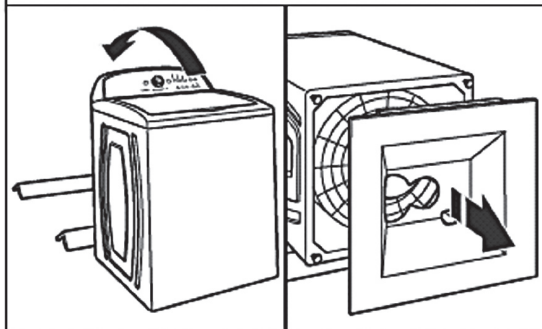

2. Alinee el aislador de sonido con el frente de la lavadora

