

Quirky + 




## SPOTTER

the multipurpose sensor

### OVERVIEW

Part of the Quirky + GE collection of smart products, Spotter is a multipurpose sensor that keeps you updated on what's going on at home—from anywhere. Monitor motion, sound, light, temperature, and humidity all with your mobile device. Use Spotter for everything from baby monitoring to washer/dryer notifications to perfecting the temperature in your wine cellar.

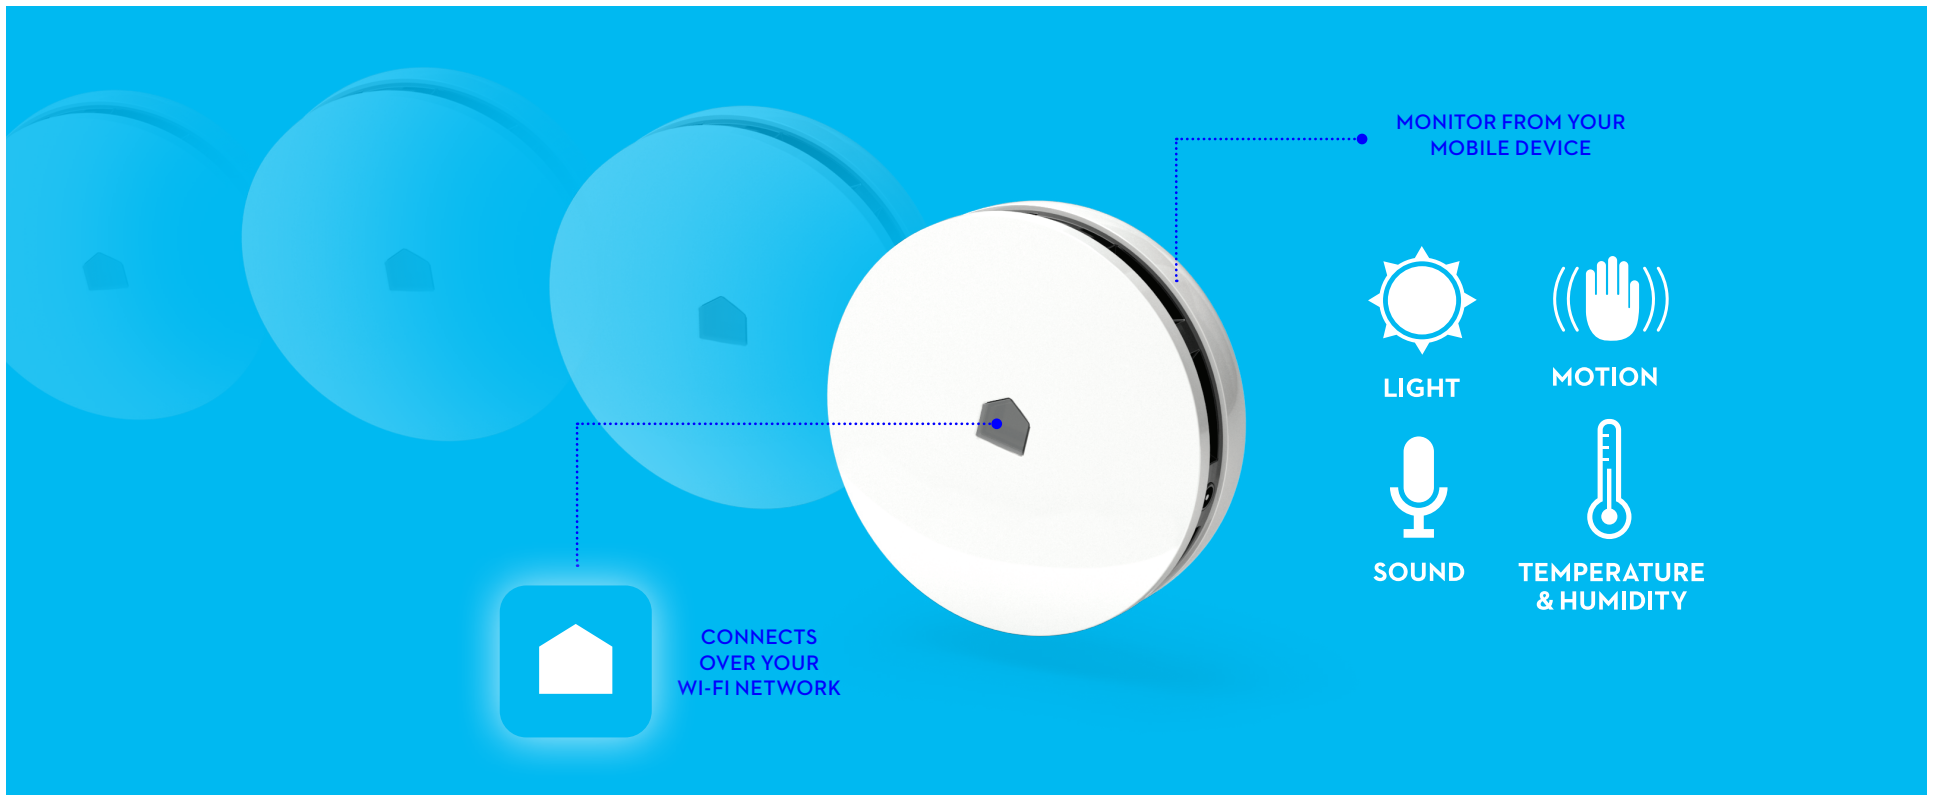

## FEATURES

- 1 Allows you to monitor motion, sound, light, temperature, and humidity from your mobile device
- 2 Instantly connects to your mobile device over your Wi-Fi® network

## REQUIRED FOR USE (not in the box)

- 1 Wi-Fi®
- 2 Mobile device with internet access
- 3 Wink app

## WHAT'S INCLUDED (in the box)

- 1 Spotter (with built-in magnetic back)
- 2 Two AA alkaline batteries
- 3 UL Listed AC adapter
- 4 (2) Screws
- 5 (2) Mounting tape
- 6 Quick Start Card



## GETTING STARTED

- 1 Download and install the Wink app on your mobile device as outlined in the Quick Start Card. The app will enable a Wi-Fi® connection between your mobile device and Spotter.
- 2 Turn Spotter ON, either with battery power or with the included AC adapter for a continuous power source.\*

To use the pre-installed batteries, pull and remove the ribbon.

*Note: Installing batteries improperly may result in damage to Spotter's hardware.*

- 3 Open the Wink app. Follow the app's instructions to connect to your Spotter.


Your mobile device connects by sending light pulses into a sensor on your Spotter. It is best to do this in a dimly lit environment.

*\* For optimal performance, battery mode should only be used with light or motion sensing functions. For all other functions, be sure to use the AC adapter.*

*Correct adapter jack is located on Spotter's right side when the house icon is oriented upwards.*




Front

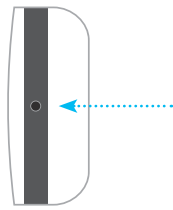


Right side



Spotter has built in magnets so you can use on any magnetic surface.

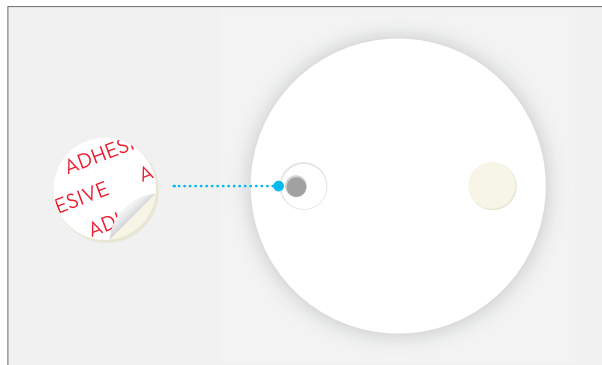

For semi-permanent to permanent mounting use included adhesive tape to secure Spotter.

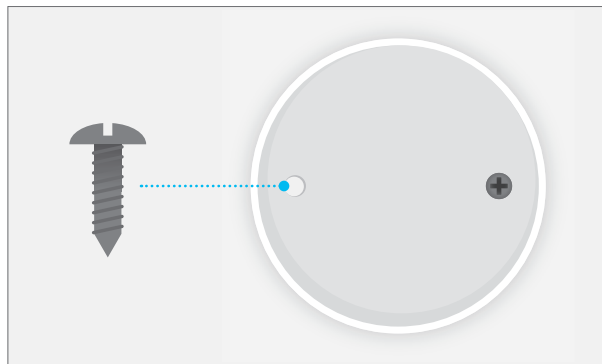

Use screws to attach Spotter more permanently.

## USING SPOTTER

- 1 Once connected and customized using the App, Spotter is ready to monitor motion, sound, light, temperature, and humidity.
- 2 There are many ways you can store Spotter for personalized monitoring:

**No attachment** - Place Spotter directly on any indoor counter, table, or flat surface where monitoring is needed.

**Magnets** - Use Spotter's built in magnets to stick it on any magnetic metal surface like your fridge, washer and dryer, or select cabinets

**Double-sided wall mount tape** - For semi-permanent to permanent mounting (depending on surface) use included adhesive mounting tape to secure Spotter. Adhesive mounting tape may damage certain surfaces during removal, so please test before using.

**Screws** - Use included screws to attach Spotter even more permanently. Remove Spotter's back cover. Align up arrow to point up, perpendicularly from the ground and screw the back battery door into the surface you wish to mount Spotter on.

- 3 Receive notifications via the Wink app when Spotter detects one of the options specified. Refer to the app for details on how to personalize your settings.

- 4 Battery life with standard use (light and motion sensing only).

Standby time\*: 2.7 years

Typical use, event detection\*\*: 143 days

Typical use, short polling\*\*\*: 80 days

Continuous polling time: 40 hours

- 5 Replacing batteries

You will get a notification on your app when it's time to change to new batteries.

Remove Spotter's back cover to access the batteries.

When inserting new AA batteries, verify that the + and - indicators located within the compartment are aligned with those on the batteries.

*Note: Installing batteries improperly may result in damage to Spotter's hardware.*

**\*Standby mode:** batteries lose charge over time, even when not in use. Expect shorter battery life when installed in unit under idle conditions.

**\*Event Detection:** calculated at 10 reports per day.

**\*Short Polling:** calculated at 30 minutes of live monitoring per day.

## TROUBLESHOOTING

If a Wi-Fi® connection is unavailable, Spotter will store the data and update the Wink app once the network is restored.

If you do not get push notifications on your mobile device from the Wink app as you have specified in the app, please check that notifications are turned on for Wink app in your mobile device's notification settings.

## QUESTIONS?

For service and support or tutorials, visit <http://www.quirky.com/wink/spotter/faq>, email us at [questions@quirky.com](mailto:questions@quirky.com) or call 1-866-5QUIRKY.

## PRECAUTIONS, CARE & MAINTENANCE

**DO NOT** submerge Spotter in water.

**DO NOT** wash Spotter in a dishwasher.

**DO NOT** expose Spotter to temperatures outside of 5–120 degrees fahrenheit.

**DO NOT** immerse batteries in water.

**DO NOT** dispose of batteries in fire as they may explode.

**DO NOT** attempt to disassemble, alter, or apply heat to the batteries.

- Batteries exposed to extremely high heat may leak harmful liquids or ignitable materials, or explode, causing injury and product damage.
- Use the manufacturer recommended AA batteries.

- Safely dispose of batteries with your normal household waste. We urge you to recycle whenever possible.
- Use care to avoid dropping Spotter or subjecting it to severe impact, which could damage the product.
- Clean product with a damp soft cloth.
- When replacing batteries, use a dry soft cloth to clean the battery compartment.

## IMPORTANT SAFETY INSTRUCTIONS/WARNINGS



### CAUTION

To reduce the risk of electric shock, do not disassemble. Only remove the cover to access the batteries. No user-serviceable parts inside. Refer servicing to qualified service personnel.

### WARNING

To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.

### CAUTION

To completely disconnect this product from power, disconnect the adapter plug from the wall outlet and remove the batteries. The adapter plug is used to completely disconnect the power supply to the unit and must be within easy access to the user.

### CAUTION

To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.

### CAUTION

Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.

### CAUTION

Wink devices connect by receiving flashing light patterns that come from your phone's screen. Please note that a very small percentage of individuals may experience epileptic seizures when exposed to such light patterns or flashing lights. If you have an epileptic condition, consult your physician prior to using this app to connect a device.

### CAUTION

Keep out of reach of children. When using Spotter as a baby monitor, please ensure that product is a safe distance from child.

## IMPORTANT SAFETY INSTRUCTIONS

- 1 Read Instructions**—All safety and operating instructions should be read before operating the device.
- 2 Heed Warnings**—All warnings on the device and in the operating instructions should be adhered to.
- 3 Follow Instructions**—All operating and safety instructions should be followed.
- 4 Water & Moisture**—The device should never be used in, on or near water for risk of electric shock.
- 5 Batteries** - Use the recommended batteries. Keep batteries away from children. Keep batteries away from water and heat.
- 6 Batteries** - Replace exhausted batteries immediately. When replacing batteries, be sure to replace all the batteries at the same time. Do NOT mix old and new, or other battery types.
- 7 Ventilation**—The device should always be located in such a way that it maintains proper ventilation.
- 8 Heat**—Never locate the device near heat sources such as radiators, floor registers, stoves or other heat-generating devices.  
*\*Safe operating temperature ranges from 5 degrees-120 degrees fahrenheit. Using Spotter outside this temperature range may cause product damage.*
- 9 Power Adapter** - Spotter should only be connected with the provided adapter.
- 10 Power Cord Protection**—Power cables should be routed so they are not likely to be stepped on or crushed by items placed on them or against them. Special attention should be paid to areas where the plug enters a socket or power strip and where the cord exits the device.
- 11 Cleaning**—The device should be cleaned in accordance with manufacturer's instructions stated in the Precautions, Care and Maintenance section.
- 12 Periods Of Non-Use**—Remove the batteries or unplug Spotter when it is not expected to be used for several months.
- 13 Dangerous Entry**—Care should be taken that no foreign objects or liquids fall or are spilled on or inside the device.
- 14 Damage Requiring Service**—The device should be serviced by licensed technicians when:
  - The internal electronic components have been damaged.
  - Objects have fallen or liquid spilled inside of the device.
  - The device has been exposed to moisture.
  - The device does not appear to be operating properly or exhibits a marked change in performance.
  - The device has been dropped or becomes damaged.
- 15 Service**—The device should always be serviced by licensed technicians. Only replacement parts specified by the manufacturer should be used. The use of unauthorized substitutions may result in fire, shock, or other hazards.

## A NOTE ABOUT RECYCLING:

This product and its packaging materials are recyclable. Please dispose of any materials in accordance with the local recycling regulations. When discarding the unit, comply with local rules or regulations. This product and the supplied accessories constitute the applicable product according to the WEEE directive.

## MODIFICATIONS DISCLAIMER

### WARNING!!!

Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

*Note: The manufacturer is not responsible for any Radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.*

## IC WARNING

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

This Class (\*) digital apparatus complies with Canadian ICES-003

## FCC COMPLIANCE

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by Quirky could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## RF EXPOSURE STATEMENT

To maintain compliance with FCC's RF Exposure guidelines, this equipment should be installed and operated with minimum

20cm distance between the device and your body. Use only the supplied antenna.

## QUIRKY ORIGINAL PURCHASE PRODUCT WARRANTY

Quirky, Inc. ("Quirky") warrants to the original purchaser ("Purchaser") of this Quirky product, for the period of one (1) year following the date on which Purchaser purchases the product, that the product shall be free of defects in design, assembly, material, or workmanship.

Quirky will repair or replace, at its option, any defective product free of charge.

In order to qualify for this warranty, the Purchaser must provide the defective product and a copy of the original receipt of purchase, to Quirky for inspection. The receipt of purchase must indicate the product purchased, price paid, date of purchase, and name of merchant.

Alternatively, at the Purchaser's election, but subject to Quirky's approval, the Purchaser may obtain replacement parts from Quirky, free of charge. To obtain replacements parts, the Purchaser must provide the product serial number to Quirky in connection with any request for replacement parts.

To request service under this warranty, contact Quirky at 866-5-QUIRKY or [questions@quirky.com](mailto:questions@quirky.com), and a Quirky representative will provide instruction on how to proceed.

This warranty shall be null and void if Quirky determines that the product has been improperly installed, altered or tampered with any way. This warranty does not protect against normal-use wear and tear or damage due to abuse.

THIS WARRANTY CONTAINS THE SOLE WARRANTY OF QUIRKY. THERE ARE NO OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING THE IMPLIED WARRANTY OR CONDITION OF QUALITY, MERCHANTABILITY OR FITNESS FOR

A PARTICULAR PURPOSE, AND SUCH IMPLIED WARRANTIES, IF ANY, ARE LIMITED IN DURATION TO THE TERM OF THIS WARRANTY. IN NO EVENT SHALL QUIRKY BE LIABLE FOR INCIDENTAL, SPECIAL, DIRECT, INDIRECT OR CONSEQUENTIAL DAMAGES SUCH AS, BUT NOT LIMITED TO, LOST BUSINESS OR PROFITS ARISING OUT OF THE SALE OR USE OF ANY QUIRKY PRODUCT, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some jurisdictions do not allow exclusions or limitations on implied warranties or incidental, consequential or other damages, so the above exclusions and limitations may not apply to you.

## COPYRIGHT NOTICE

Copyright 2013 Quirky Incorporated

No part of this manual may be reproduced or modified without written consent from Quirky Incorporated.

Quirky Incorporated is not liable or responsible for any operational or technical errors or omissions made in this manual.

Quirky and Spotter are registered trademarks of Quirky Incorporated.

Wi-Fi® is a registered trademark of the Wi-Fi Alliance

## HOW TO OBTAIN SERVICE

Need help? We are available

**Weekdays** 9AM - 9PM EST  
**Weekends** 12PM - 6PM EST

Email [questions@quirky.com](mailto:questions@quirky.com)

Call 1-866-5QUIRKY



Quirky + 




## SPOTTER

capteur multifonctions

### PRÉSENTATION

Spotter fait partie de la gamme de produits intelligents Quirky + GE. Grâce à ce capteur polyvalent, vous saurez toujours ce qu'il se passe chez vous... où que vous soyez. Surveillez les mouvements, les sons, l'éclairage, la température et l'humidité via votre appareil mobile. Utilisez Spotter pour surveiller tout ce que vous voulez: votre bébé, votre lave-linge ou la température idéale de votre cave à vin.

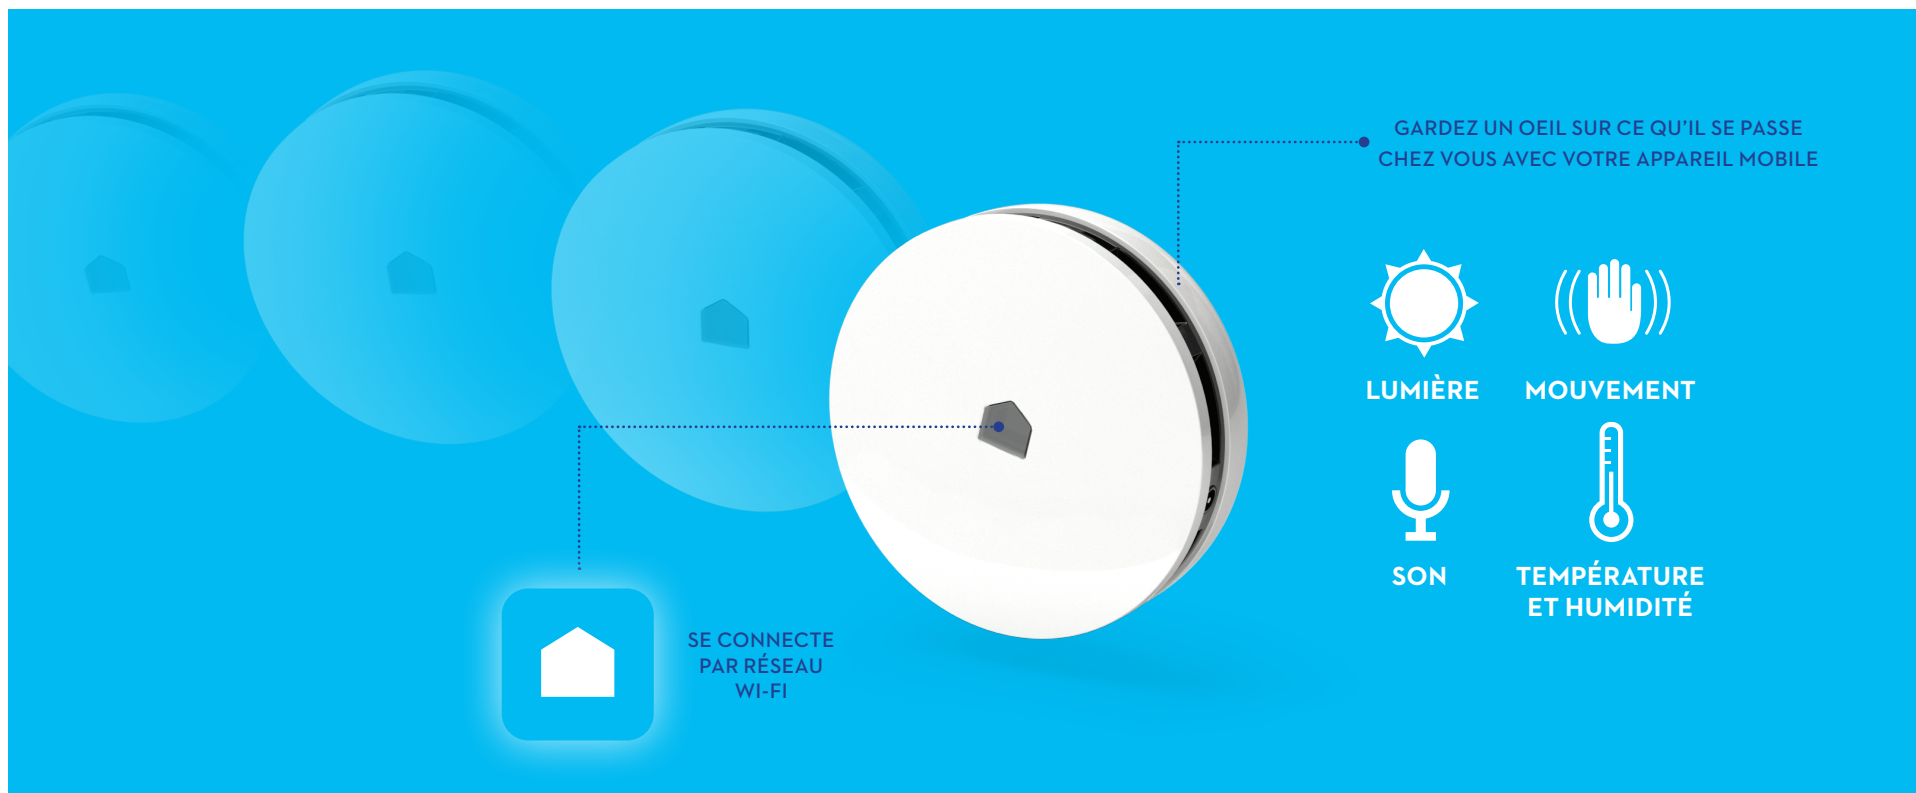

GARDEZ UN OEIL SUR CE QU'IL SE PASSE CHEZ VOUS AVEC VOTRE APPAREIL MOBILE



LUMIÈRE



MOUVEMENT



SON



TEMPÉRATURE  
ET HUMIDITÉ



SE CONNECTE  
PAR RÉSEAU  
WI-FI

## CARACTÉRISTIQUES

- 1 Vous permet de surveiller les mouvements, les sons, l'éclairage, la température et l'humidité via votre appareil mobile.
- 2 Se connecte instantanément à votre appareil mobile via votre réseau Wi-Fi®

## INCLUS (dans la boîte)

- 1 Spotter (avec dos magnétique)
- 2 Deux piles alcalines AA
- 3 Adaptateur secteur (3.3V, 0,6A)
- 4 (2) Vis
- 5 (2) Rubans de fixation
- 6 Carte de démarrage rapide (Quick Start Card)

## MATERIEL REQUIS (non fourni)

- 1 Wi-Fi®
- 2 Appareil mobile avec accès à Internet
- 3 Wink app



## DÉMARRAGE

- 1 Téléchargez et installez l'appli Wink sur votre appareil mobile comme indiqué sur la carte de démarrage rapide. L'appli permettra la liaison Wi-Fi® entre votre appareil mobile et Spotter.
- 2 Allumez Spotter après avoir installé les piles ou l'adaptateur secteur pour une alimentation continue.

Pour utiliser les piles pré-installées, retirez le ruban.

Remarque : une installation inadéquate des piles pourrait endommager Spotter.

- 3 Lancez l'appli Wink. Suivez les consignes de l'appli pour connecter votre Spotter.


Votre appareil mobile se connecte en envoyant des impulsions lumineuses au capteur de votre Spotter. Il est préférable de le faire dans un espace peu éclairé.

*\* Pour des performances optimales, le mode Batterie doit être utilisé uniquement avec les fonctions de détection de lumière ou de mouvement. Pour toutes les autres fonctions, privilégiez l'adaptateur secteur.*


*La prise jack se trouve sur la droite de Spotter lorsque l'icône Maison est orientée vers le haut.*




Devant

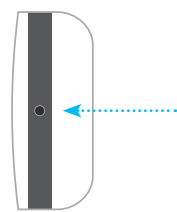


Côté droit

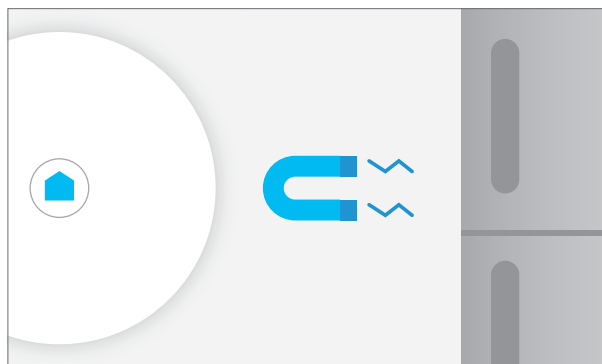

Spotter est doté d'aimants permettant une fixation sur une surface magnétique.

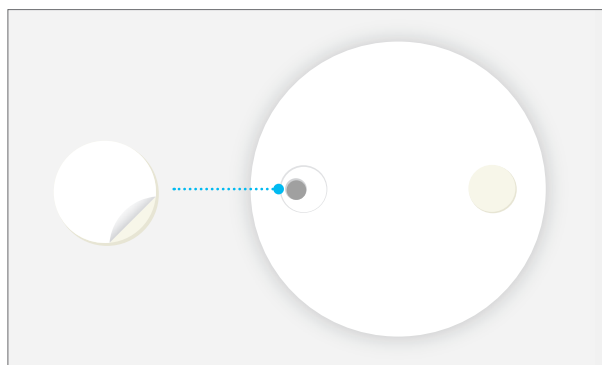

Pour un montage semi-permanent ou permanent, utilisez le ruban adhésif pour sécuriser Spotter.

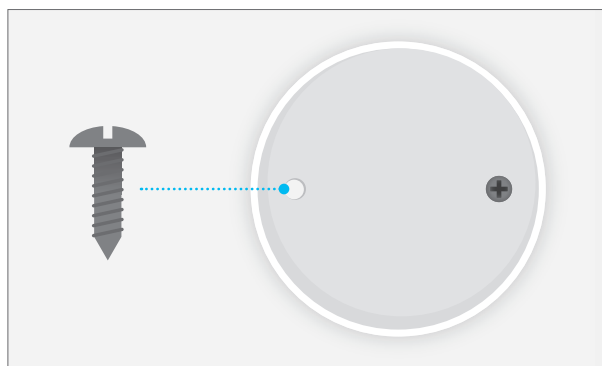

Utilisez les vis pour fixer Spotter de façon permanente.

## UTILISATION DE SPOTTER

- 1 Lorsque Spotter est connecté et personnalisé à l'aide de l'appli, il est prêt à détecter les mouvements, les sons, l'éclairage, la température et l'humidité.
- 2 Vous pouvez installer Spotter de différentes manières pour une surveillance personnalisée:

**Sans fixation** - Placez Spotter directement sur une table, un plan de travail ou une surface plane.

**Avec aimants** - Utilisez les aimants intégrés pour fixer Spotter sur n'importe quelle surface métallique (réfrigérateur, lave-linge, sèche-linge ou armoires).

**Ruban adhésif double face** - Pour un montage semi-permanent ou permanent (selon la surface), utilisez le ruban adhésif inclus pour sécuriser Spotter. Le ruban adhésif pourrait endommager certaines surfaces lors du décollage. Faites donc un essai avant toute utilisation.

**Vis** - Utilisez les vis incluses pour fixer Spotter de façon permanente. Retirez la surface sur le dos de Spotter. Orientez la flèche vers le haut, perpendiculairement au sol et vissez le clapet des piles sur la surface où vous voulez installer Spotter.

- 3 Recevez des notifications via l'appli Wink lorsque Spotter détecte l'un des éléments définis. Référez-vous à l'appli pour plus d'informations sur la personnalisation de vos réglages.

- 4 Autonomie des piles pour une utilisation standard (détection de lumière et de mouvement uniquement).

Temps de conservation\* : 2,7 ans

Utilisation standard, détection d'événement\*\* : 143 jours

Utilisation standard, détection à intervalles courts\*\*\* : 80 jours

Autonomie en cas de détection à intervalles courts : 40 heures

- 5 Remplacement des piles

Vous recevrez une notification sur votre application lorsqu'il est nécessaire de remplacer les piles.

Retirez le dos de Spotter pour accéder aux piles.

Lors de l'insertion de nouvelles piles AA, vérifiez que les indicateurs + et - figurant dans le compartiment correspondent aux polarités des piles.

Retirez le dos de Spotter pour accéder aux piles.

Lors de l'insertion de nouvelles piles AA, vérifiez que les indicateurs + et - figurant dans le compartiment correspondent aux polarités des piles.

*Remarque : Une installation inadéquate des piles pourrait endommager Spotter.*

**\*Mode veille :** les piles s'usent au fil du temps, même lorsqu'elles ne sont pas utilisées. Prévoyez une autonomie inférieure en cas d'installation dans un appareil en veille.

**\*\*Détection d'événements :** calculée sur une base de 10 rapports par jour.

**\*\*\*Détection à courts intervalles :** calculée sur une base de 30 minutes de surveillance en direct par

## DÉPANNAGE

Si aucune connexion Wi-Fi® n'est disponible, Spotter enregistrera les données et mettra à jour l'appli Wink une fois la liaison rétablie.

Si l'appli Wink ne vous envoie pas de notifications push malgré les paramètres définis dans l'application, vérifiez si les notifications sont bien actives pour Wink dans les réglages de notifications de votre appareil mobile.

## PRECAUTIONS, NETTOYAGE ET ENTRETIEN

Pour obtenir de l'aide et accéder aux tutoriels, consultez <http://www.quirky.com/wink/spotter/faq> ou envoyez un e-mail à [questions@france.quirky.com](mailto:questions@france.quirky.com). Vous pouvez aussi appeler le 1-866-5QUIRKY (Etats-Unis).

## QUESTIONS ?

**NE PAS** plonger Spotter dans l'eau.

**NE PAS** laver Spotter en machine.

**NE PAS** exposer Spotter à des températures inférieures à 15 °C et supérieures à 48 °C.

**NE PAS** plonger les piles dans l'eau.

**NE PAS** jeter les piles dans le feu car elles pourraient exploser.

**NE PAS** tenter de démonter, modifier ou faire chauffer les piles.

- Les piles exposées à de fortes chaleurs pourraient libérer des liquides dangereux ou inflammables, voire exploser, provoquant

ainsi des blessures et des dégâts.

- Utilisez les piles AA conseillées par le fabricant.
- Eliminez les piles en toute sécurité avec vos déchets ménagers. Nous vous encourageons vivement à recycler.
- Prenez soin de Spotter pour éviter de le faire tomber ou de lui faire subir des chocs violents, car cela pourrait endommager le produit.
- Nettoyez le produit avec un chiffon doux humide.
- Lorsque les piles doivent être remplacées, utilisez un chiffon doux et sec pour nettoyer le compartiment.

## CONSIGNES DE SÉCURITÉ IMPORTANTES/AVERTISSEMENTS



### ATTENTION

Ne pas démonter pour éviter tout risque d'électrocution. Retirez seulement le compartiment d'accès aux piles. Les pièces internes ne peuvent pas être remplacées par l'utilisateur. Confiez l'entretien à un technicien qualifié.

### ATTENTION

Pour limiter les risques d'incendie et d'électrocution, n'exposez pas le matériel à la pluie ou à l'humidité.

### ATTENTION

Pour débrancher complètement l'appareil, enlevez la fiche de la prise murale et enlevez les piles. La fiche permet de débrancher complètement l'appareil. Elle doit donc être accessible à l'utilisateur.

### ATTENTION

Pour réduire le risque d'électrocution, n'effectuez aucune opération d'entretien hormis celles

figurant dans le manuel à moins de disposer des compétences nécessaires.

#### ATTENTION

Un risque d'explosion est possible si la pile est remplacée par un modèle inadéquat. Éliminez les piles usagées conformément aux consignes.

#### ATTENTION

Les appareils Wink se connectent à l'aide des signaux lumineux provenant de l'écran de votre téléphone. Notez qu'un faible pourcentage de personnes peuvent faire l'objet de crises d'épilepsie en cas d'exposition à ces signaux ou clignotements lumineux. Si vous êtes épileptique, consultez votre médecin avant d'utiliser l'application pour établir la connexion.

#### ATTENTION

Tenir hors de portée des enfants. Si Spotter est utilisé pour surveiller un bébé, veillez à le placer à une distance de sécurité suffisante.

## CONSIGNES DE SÉCURITÉ IMPORTANTES

- 1 Lisez les consignes** – Toutes les consignes de sécurité et d'utilisation doivent être lues avant d'utiliser l'appareil.
- 2 Respectez les avertissements** – Tous les avertissements affichés sur l'appareil et dans le manuel doivent être pris en compte.
- 3 Respectez les consignes** – Toutes les consignes de sécurité et d'utilisation doivent être respectées.
- 4 Eau et humidité** – L'appareil ne doit jamais être utilisé dans l'eau, sur l'eau ou à proximité afin d'éviter les électrocutions.
- 5 Piles** – Utilisez les piles recommandées. Conservez les piles hors de portée des enfants.

Eloignez les piles de l'eau et de la chaleur.

- 6 Piles** – Remplacez immédiatement les piles plates. Lorsque vous remplacez les piles, veillez à toutes les remplacer en même temps. Ne mélangez pas les anciennes et les nouvelles, ni différents types de piles.
- 7 Ventilation** – L'appareil doit toujours se trouver dans un endroit bien ventilé.
- 8 Chaleur** – Ne placez jamais l'appareil à proximité de sources de chaleur, tels les radiateurs, les grilles de soufflage, les poêles et autres systèmes de chauffage.  
*\*La température idéale pour le fonctionnement de l'appareil est comprise entre 15 et 48 °C. L'utilisation de Spotter au-delà de cette plage de températures pourrait entraîner des dégâts.*
- 9 Adaptateur secteur** – Spotter ne doit être branché que sur l'adaptateur fourni.
- 10 Protection du Câble d'Alimentation** – Les câbles d'alimentation doivent être placés de telle sorte à éviter tout piétinement ou écrasement par des objets. Gardez à l'oeil les zones où la fiche est insérée dans une prise ou une rallonge, et la jonction de l'appareil et du câble.
- 11 Nettoyage** – L'appareil doit être nettoyé conformément aux consignes du fabricant énoncées dans la rubrique Précautions, Nettoyage et Entretien.
- 12 Périodes de non-utilisation** – Enlevez les piles ou débranchez Spotter si vous ne comptez pas l'utiliser pendant plusieurs mois.
- 13 Accès dangereux** – Veillez à éviter tout accès de corps étrangers ou liquides à l'intérieur ou sur l'appareil.
- 14 Dégâts nécessitant une réparation** – L'appareil

doit être réparé par des techniciens qualifiés uniquement lorsque :

- Les composants électroniques internes ont été endommagés.
- Le matériel est tombé ou du liquide est rentré dans l'appareil.
- L'appareil a été exposé à l'humidité.
- L'appareil semble ne pas fonctionner correctement ou s'il montre une baisse des performances.
- L'appareil est tombé ou a été endommagé.

- 15 Entretien** – L'appareil doit toujours être réparé par des techniciens qualifiés. Seules les pièces de rechange stipulées par le fabricant doivent être utilisées. L'utilisation d'autres pièces peut entraîner des incendies, électrocutions ou autres risques.

## REMARQUE SUR LE RECYCLAGE

Le produit et son emballage sont recyclables. Veillez à les éliminer conformément aux règlements en vigueur en matière de recyclage. Lors de la mise au rebut, respectez la législation ou les règlements locaux. Ce produit et les accessoires fournis sont couverts par la directive WEEE.

## CLAUSE DE NON-RESPONSABILITÉ EN CAS DE MODIFICATION

#### ATTENTION!!!

Les changements ou modifications qui n'ont pas été expressément approuvés par le fabricant risquent d'annuler la capacité de l'utilisateur à exploiter l'appareil.

*Remarque : Le fabricant décline toute responsabilité en cas d'interférence radio ou TV provoquée par*

une modification non autorisée du matériel. De telles modifications pourraient annuler la capacité de l'utilisateur à exploiter l'appareil.

## DÉCLARATION DE CONFORMITÉ UE

Quirky Inc. déclare que ce produit de communication radio est conforme aux normes en vigueur et autres clauses applicables en vertu de la Directive 1999/5/EC.

## GARANTIE SUR PRODUIT D'ORIGINE QUIRKY

Quirky, Inc. (« Quirky ») offre à l'acheteur originel (« Acheteur ») de ce produit Quirky, pendant une période de (1) an à compter de la date d'achat du produit par l'Acheteur, une garantie sur le produit contre tout défaut de conception, assemblage, matériel ou de fabrication.

Quirky assurera la réparation ou le remplacement du produit, à sa seule discrétion.

Pour profiter de cette garantie, l'Acheteur devra remettre le produit défectueux et une copie duticket de caisse à Quirky pour inspection. Le reçu doit indiquer le produit acheté, le prix payé, la date d'achat et le nom du commerçant.

Si l'Acheteur le souhaite, et sous réserve de l'accord de Quirky, l'Acheteur pourra obtenir des

pièces de rechange auprès de Quirky, sans frais. Pour obtenir les pièces de rechange, l'Acheteur devra fournir le numéro de série du produit à Quirky en rapport avec toute demande de pièces.

Pour une réparation dans le cadre de cette garantie, contactez Quirky au 866-5-QUIRKY ou [questions@france.quirky.com](mailto:questions@france.quirky.com). Un représentant de Quirky vous expliquera comment procéder.

Cette garantie sera nulle et non avenue si Quirky établit que le produit a été mal installé, modifié ou manipulé de quelque manière que ce soit. La garantie n'offre aucune protection contre l'usure normale du produit ou les dégâts résultant d'une utilisation abusive.

CETTE GARANTIE REPRÉSENTE LA SEULE GARANTIE FOURNIE PAR QUIRKY. IL N'EXISTE AUCUNE AUTRE GARANTIE EXPLICITE OU IMPLICITE, DONT LA

GARANTIE OU LA CONDITION IMPLICITE DE QUALITÉ, VALEUR MARCHANDE OU ADÉQUATION À UN USAGE PARTICULIER. CES GARANTIES IMPLICITES, LE CAS ÉCHÉANT, ONT UNE DURÉE LIMITÉE, À L'INSTAR DE LA PRÉSENTE GARANTIE. QUIRKY DÉCLINE TOUTE RESPONSABILITÉ EN CAS DE DOMMAGES ACCIDENTELS, SPÉCIAUX, DIRECTS, INDIRECTS OU CONSÉCUTIFS TELS QUE, SANS TOUTEFOIS QUE CETTE LISTE SOIT EXHAUSTIVE, LA PERTE D'ACTIVITÉ OU DE PROFITS DUS À LA VENTE OU À L'UTILISATION DE N'IMPORTE QUEL PRODUIT QUIRKY, ET CE, MÊME SI L'ÉVENTUALITÉ DE TELS DÉGÂTS AVAIT ÉTÉ SIGNALÉE.

Certaines juridictions n'autorisent pas l'exclusion ou la limitation des garanties implicites ni des dégâts accidentels, consécutifs ou autres. Les restrictions ci-dessus pourraient ne pas vous concerner.

## COPYRIGHT

Copyright 2013 Quirky Incorporated

Aucune partie de ce manuel ne peut être reproduite ou modifiée sans l'accord écrit préalable de Quirky Incorporated.

Quirky Incorporated décline toute responsabilité en cas d'erreurs opérationnelles ou techniques, voire d'omissions dans ce manuel.

Quirky et Spotter sont des marques commerciales de Quirky Incorporated.

Wi-Fi® est une marque déposée de Wi-Fi Alliance

## COMMENT OBTENIR UNE RÉPARATION

Besoin d'aide ? Nous sommes disponibles

Du lundi au vendredi de  
15 h à 3h

Le week-end de  
18 h à 00 h

E-mail : [questions@france.quirky.com](mailto:questions@france.quirky.com).

Téléphone : 1-866-5QUIRKY

