

## PICTURE CD

Insert a CD with picture files on it.

**Note:** The time taken for the contents of the disc to be displayed varies according to the memory size and number of pictures actually on the disc. If nothing is displayed after a few minutes, it is likely that certain files are too large. In this case, reduce the files resolution to less than 5 megapixels and try again.

### Picture CD Basic Operation

- Press the POWER button to turn on the unit; the On/Standby indicator will turn green.
- If using CD, press the OPEN/CLOSE button to open the disc tray; "OPEN" will appear on the screen. Insert a picture disc with the label side facing up on the disc tray. Press the OPEN/CLOSE button to close the disc tray. "LOADING" will appear on the TV screen.
- After loading a picture CD, the pictures will automatically show as a slideshow on the screen. (If playback does not start automatically, press the PLAY/PAUSE (▶II) button to start playback.) Press the Skip (▶) or (◀) button to select the next or previous picture. After the slideshow is done, it will go to thumbnail view. You can press the STOP (■) button to stop the slideshow before it is finished; then the thumbnail view will appear. In thumbnail view, you can press the Navigation (◀, ▶, ▲, ▼) button to select the desired picture or press the Skip (▶) or (◀) button to go to the next/previous page. Select the desired picture and then press the OK button to view it.

**To select a photo:** press the Number buttons corresponding to the picture that you would like to view (i.e. the 12th picture, press "+10", "2").

**To pause the photo slideshow:** press the PLAY/PAUSE (▶II) button.

**To resume playback:** press the PLAY/PAUSE (▶II) button.

**To stop playback of the picture CD:** press the STOP (■) button.

**To rotate a picture during playback:** you can rotate the picture on-screen using the Navigation (◀, ▶, ▲, ▼) buttons during slideshow playback. To rotate on the thumbnail view, select ROTATE, select a picture then press the OK button. Press the PLAY/PAUSE (▶II) button to rotate the picture clockwise 90 degree. Then select RESET to reset the picture or RETURN.

## SETTING THE MENUS

### TO ACCESS THE MAIN MENUS:

The setup menu lets you customize the DVD player by allowing you to select various language preferences, turn screen saver on and off and more.

Below, find the menu, and then find the corresponding page that describes the features of the selected menu option.

With no disc in the tray, enter the SETUP MENU by pressing the SETUP button. Use the Navigation (◀, ▶, ▲, ▼) buttons to navigate through the menus/screens and press the OK button to select the highlighted option. After changing an option, press the OK button.

To Exit the SETUP MENU, press the SETUP button.

### LANGUAGE SETUP

**OSD:** Select the desired language (English, French, or Spanish) for the On-Screen display to display text. Note that the DVD must have the language included in order to display it.

**MENU:** Select the language the MENU will be in (English, French, German, Italian, Spanish or others). The DVD's DISC MENU must be made in the selected language, otherwise the default language of the DVD will be shown.

**AUDIO:** Select the language the DVD will be played back in (English, French, German, Italian, Spanish or others). The DVD must be recorded in the selected language, otherwise the default language of the DVD will be played.

**SUBTITLE:** Select the language the Subtitle (OSD) will be in (English, French, German, Italian, Spanish, Others or Off). The DVD must be recorded in the selected language, otherwise the default language of the DVD will be shown.

### SCREEN SETUP

**TV TYPE:** Your can choose a display that affects how a disc's content appears on your TV screen.

**4:3 PS:** reproduces a 4:3 picture with some distortion.

**4:3 LB Letterbox:** gives best reproduction of pictures recorded in this format (i.e., with horizontal bands at the top and bottom of the screen)

**16:9 Widescreen:** reproduces 16:9 format films in full, on a 16:9 screen.

**SCREEN SAVER:** When this option is set to ON, the screen saver will come on when the unit stops or the image is paused for approximately ten minutes.

When this option is OFF, the screen saver will not come on

**TV SYSTEM (AV Out only):** Select PAL when outputting to a PAL TV. Select NTSC when using a NTSC TV. In the USA, the standard is NTSC. Select AUTO to auto select.

**P/N Button:** This option can also be changed by pressing the P/N button repeatedly.

**VIDEO OUTPUT:** Select the desired option (CVBS-Video, CVBS+YUV or YUV P-SCAN) when a TV is connected to the Component Video Out jacks.

**Video Button :** This function can be changed by pressing VIDEO button repeatedly.

**BRIGHTNESS:** Set the desired brightness output (Normal, Bright or Soft).

**CONTRAST:** Set the desired contrast from -4 to +4.

## SETTING THE MENUS (CONTINUED)

### AUDIO SETUP

#### DIGITAL OUT:

**OFF:** Select to disable the Digital output.

**SPDIF/Raw or PCM:** Switches the digital audio section of the decoder/output between bitstream (Raw) and uncompressed stereo digital out (PCM).

The bitstream (Raw) must be selected to enable surround sound (Dolby digital) to be sent to an external decoder via the audio digital output. If only a stereo speaker system is to be used then it is only necessary to set this option to PCM, then only two channels of information are decoded and sent to the stereo audio outputs (and the coaxial/optical digital audio output).




#### DOWNMIX:

This unit has the ability to send programming with any number of discrete audio channels up to 5.1 to any viewer- regardless of how many speakers they might have. Reproducing 5.1 channels of audio through a lesser number of speakers requires a process called downmixing. Simply put, downmixing combines the Left, Right, Center, Left surround, and Right surround channels in a somewhat logical manner to drive stereo or mono speakers.

**LO/RO:** Select to hear the sound in Stereo downmix mode.

**LT/RT:** Select to hear the sound in theatrical downmix mode.

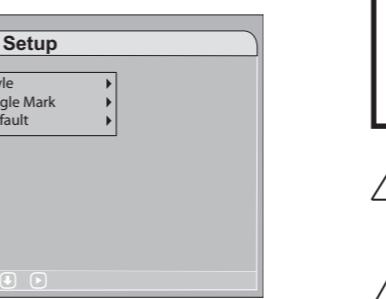

### CUSTOM SETUP

**STYLE:** Select the desired background of the OSD.

**ANGLE MARK:** Select ON to turn the angle marks ON and OFF to turn them off. Anglemarks are not available on all DVDs.

**DEFAULT:** Select this option to reset all the preferences to their original factory settings. This is useful to reset the NTSC System.

### EXIT SETUP MODE

Select this or press the SETUP button again to exit the menu setting.

## SPECIFICATIONS

**Power Requirements .....** AC120V, 60Hz

**Power Consumption .....** <15W (approx. 5W when set to Standby mode by remote)

**Weight.....** 2.5 Lbs

**Dimensions.....** 9.8 (L) x 6.7 (W) x 2.4 (H) inches

**Weight and dimensions are approximate.**

**Signal System .....** NTSC/PAL

**Operating Temperature .....** +5° to +35°C

**Operating Humidity Range.....** 5% to 90% (no condensation)

**Discs Played:**

**DVD-VIDEO Disc** ..... 12cm single-sided, single layer

..... 12cm single-sided, dual layer

..... 12cm double-sided, single layer

..... 8cm single-sided, single layer

..... 8cm single-sided, dual layer

..... 8cm double-sided, single layer

**COMPACT DISC** ..... 12cm disc

..... 8cm disc

**Video Output Level .....** 1Vp-p

**Audio Output Level.....** .2Vrms (1KHz, 0dB)

**Audio Signal Output Characteristics:**

**Frequency Responses:**

**DVD (Linear Audio).....** 20Hz-20KHz (48KHz/96KHz sampling)

..... 20Hz-20KHz

**CD Audio .....** 20Hz-20KHz

**S/N Ratio .....** 70dB

**Wow and Flutter .....** Below Measurable Level

**Pickup:**

**Wavelength.....** 655nm

**Laser Power .....** Class 1

Specifications are subject to change without notice.

**FOR ADDITIONAL SET-UP OR OPERATING ASSISTANCE, PLEASE VISIT OUR WEBSITE AT WWW.MEMOREXELECTRONICS.COM OR CONTACT CUSTOMER SERVICE AT 1-800-919-3647.**

**PLEASE KEEP ALL PACKAGING MATERIAL FOR AT LEAST 90 DAYS IN CASE YOU NEED TO RETURN THIS PRODUCT TO YOUR PLACE OF PURCHASE OR IMATION ELECTRONICS PRODUCTS.**

**FOR CONSUMER REPLACEABLE PART(S), SEE PART NUMBER(S) ON PAGE 2 AND THEN CONTACT FOX INTERNATIONAL AT 1-800-321-6993.**


Imation Electronics Products,  
A Division of Imation Enterprises Corp.  
Weston, FL  
Printed in Hong Kong  
Visit our website at [www.memorexelectronics.com](http://www.memorexelectronics.com)

21-DVD081zz3-76

# Memorex®

## DVD Player User's Guide MVD2015

### IMPORTANT SAFETY INSTRUCTIONS

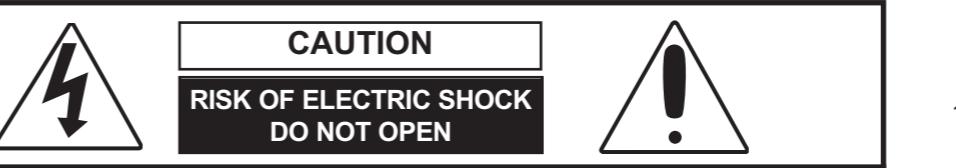

**CAUTION:** TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL. This Caution Marking and Rating Label are located at the rear enclosure of the unit.

The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

**CAUTION:** THIS DIGITAL VIDEO DISC PLAYER EMPLOYS A LASER SYSTEM.

TO ENSURE PROPER USE OF THIS PRODUCT, PLEASE READ THIS OWNER'S MANUAL CAREFULLY AND RETAIN FOR FUTURE REFERENCE. SHOULD THE UNIT REQUIRE MAINTENANCE, CONTACT AN AUTHORIZED SERVICE LOCATION-SEE SERVICE PROCEDURE. USE OF CONTROLS, ADJUSTMENTS OR OTHER PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE. TO PREVENT DIRECT EXPOSURE TO LASER BEAM, DO NOT TRY TO OPEN THE ENCLOSURE. VISIBLE LASER RADIATION MAY BE PRESENT WHEN THE ENCLOSURE IS OPENED. DO NOT STARE INTO BEAM.

The symbol for class II (Double Insulation)

**FCC NOTICE:**

This equipment complies with Class B digital device regulations. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**FCC CAUTION:**

To assure continued compliance, follow the attached installation instructions and use only shielded cables when connecting to other devices. Also, any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**SURGE PROTECTORS:**

It is recommended to use a surge protector for AC connection. Lightning and power surges ARE NOT covered under warranty for this product.

**LASER WARNING:**

This unit employs a laser. Only qualified service personnel should attempt to service this device due to possible eye injury.

Before using the unit, be sure to read all operating instructions carefully. Please note that these are general precautions and may not pertain to your unit. For example, this unit may not have the capability to be connected to an outdoor antenna.

**1. READ INSTRUCTIONS**

All the safety and operating instructions should be read before the product is operated.

**2. RETAIN INSTRUCTIONS**

The safety and operating instructions should be retained for future reference.

**3. HEED WARNINGS**

All warnings on the product and in the operating instructions should be adhered to.

**4. FOLLOW INSTRUCTIONS**

All operating and use instructions should be followed.

**5. CLEANING**

Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a dry cloth for cleaning.

**6. ATTACHMENTS**

Do not use attachments not recommended by the product's manufacturer as they may cause hazards.

**7. WATER AND MOISTURE**

Do not use this product near water—for example: near a bathtub, washbowl, kitchen sink or laundry tub; in a wet basement; or near a swimming pool.

**8. ACCESSORIES**

Do not place this product on an unstable cart, stand, tripod, bracket or table. The product may fall, causing serious injury and/or damage to the product. Use only with a cart, stand, tripod, bracket or table recommended by the manufacturer or sold with the product. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer.

**10. POWER SOURCES**

This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your appliance dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instructions.

**11. GROUNDING OR POLARIZATION**


This product is equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet.

Do not defeat the safety purpose of the polarized plug.

**12. POWER-CORD PROTECTION</b**

## INSTALLING THE REMOTE CONTROL'S BATTERY

- The battery compartment is located on the rear of the remote control.
- Remove the battery compartment door by pressing in on the tab and removing the door.
  - Insert two (2) AAA size batteries into the battery compartment as shown to the right. Be sure to observe the polarity markings which are engraved inside the battery compartment. If the batteries are inserted incorrectly, the remote control will not operate.
  - Replace the battery compartment door.

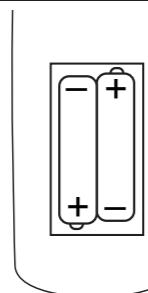


### BATTERY PRECAUTIONS

- Follow these precautions when using batteries in this device:
- Use only the size and type of batteries specified.
  - Be sure to follow the correct polarity when installing the batteries as indicated in the battery compartment. Reversed batteries may cause damage to the device.
  - Do not mix different types of batteries together (e.g. Alkaline and Carbon-zinc) or old batteries with fresh ones.
  - If the device is not to be used for a long period of time, remove the batteries to prevent damage or injury from possible battery leakage.
  - Do not try to recharge batteries not intended to be recharged; they can overheat and rupture. (Follow battery manufacturer's directions.)


## LOCATION OF CONTROLS

### FRONT

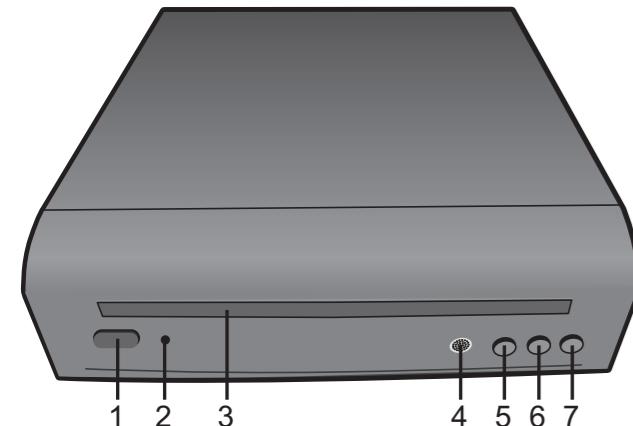


- Power Button
- Power/Standy Indicator
- Disc Compartment
- Remote Sensor
- PLAY/PAUSE ►|| Button
- STOP ■ Button
- OPEN/CLOSE Button

### REAR

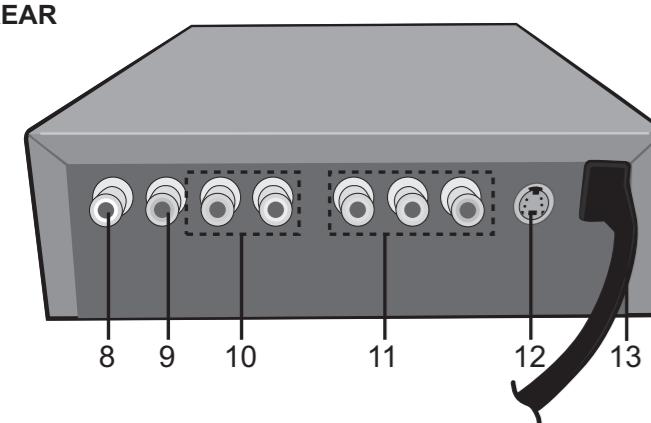

- Video Output Jack
- Coaxial Digital Audio Output Jack
- Audio Right/Left Output Jacks
- AV Cable Part No. OS-8Z12zzz3-zz\*
- Component Video (Y, PB, PR) Output Jacks
- S-Video Output Jack
- AC Power Cord

### REMOTE

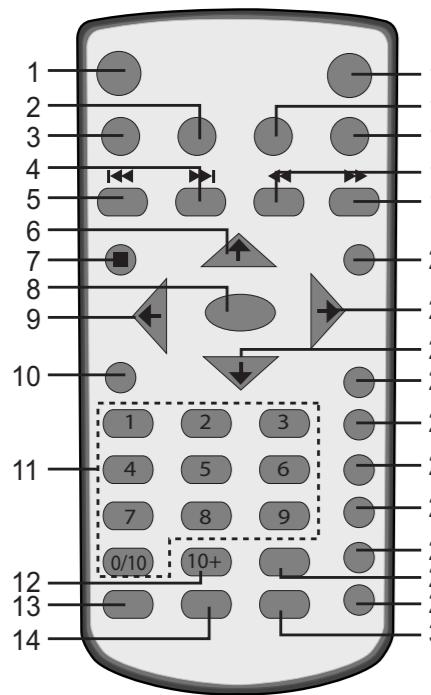

- POWER Button
- MENU Button
- TITLE Button
- Skip (►) Button
- Skip (◀) Button
- Navigation (▲) Button
- STOP (■) Button
- OK Button
- Navigation (◀) Button
- SETUP Button
- Number Buttons (0-10)
- 10+ Button
- PROGRAM Button
- ANGLE Button
- OPEN/CLOSE Button
- SUBTITLE Button
- SEARCH (◀) Button
- SEARCH (►) Button
- P/N Button
- Navigation (►) Button
- Navigation (▼) Button
- VIDEO Button
- PLAY/PAUSE Button
- AUDIO Button
- MUTE Button
- REPEAT Button
- GOTO Button
- SEARCH (►) Button
- OSD (On Screen Display) Button


REMOTE PART NO. 2B-2D081J01B-76\*

BATTERY COVER PART NO. 2B-2D081J01B-76RBD\*

\*Consumer Replaceable Part (See end of manual to order.)

## CONNECTIONS

### Connection DVD to TV

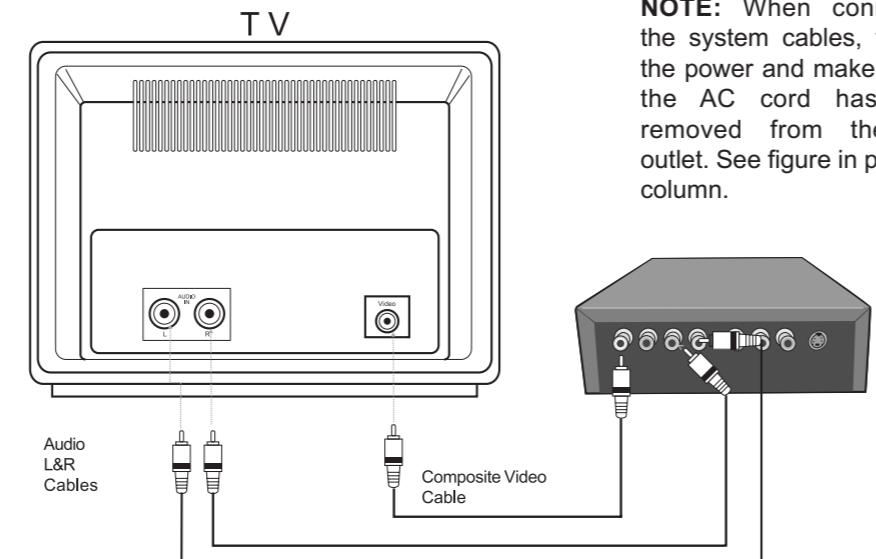

**NOTE:** When connecting the system cables, turn off the power and make certain the AC cord has been removed from the wall outlet. See figure in previous column.

## PLAYING DISCS

### Compatible Discs

This DVD player is capable of playing the following types of discs: DVDs, DVD+/- R, DVD+/- RW, Audio CDs, CD/CD-R/RW with MP3 files and Kodak Picture CDs. Before you insert a disc in the player, make sure it is compatible. You can't play the following types of discs: Laser Discs, CD-I, CD-ROM (computer discs), DVD-ROM or discs recorded using other broadcast standards (i.e. PAL or SECAM) or CD-G discs.



**NOTE:** Some discs may not be compatible due to laser pickup, recording formats and software used. Some technologies and methods used for MP3 file recording on CD-R/RWs can prevent optimal playback of these files by degrading the sound quality and/or the ability for the player to read the file.

### Regional Coding

The region code for this DVD player is listed on the back of the player.

## PLAYBACK MODES

### Repeat Playback

While the disc is playing, press REPEAT button repeatedly to select a play mode:  
DVD play modes: Chapter repeat, Title repeat, ALL, off  
CD play modes: Track repeat, All track repeat, off  
MP3 Mode: Track repeat, All repeat, off

### A-B Repeat

While in the Playback mode, press the Repeat A-B button to define where you want the section to start. Press the Repeat A-B button again to define where you would like the section to end, the unit will then play the selected area continuously. Press the Repeat A-B button again to cancel A-B Repeat mode.

## PROGRAM PLAYBACK

Select up to 20 Title/Chapters (or tracks for CD) to program play as follows:


- Press the PROGRAM button; the program screen will appear.
- Select the desired program number (best to start with 1), then press the Navigation (▲, ▼) buttons to select the Title column. Select the desired title number using the Navigation (▲, ▼) buttons, then press the ENTER button to select it.

- The cursor will jump to the Chapter column. Select the desired chapter number using the Navigation (▲, ▼) buttons, then press the ENTER button to select it.
- You have now programmed the first program. Repeat steps 2 and 3 to set more programs (up to 20). When finished, press the PLAY/PAUSE (►||) button to start playback.


## ADVANCED PLAYBACK OPTIONS

### DVD/CD BASIC OPERATION

- Plug the power cord into the outlet once the DVD player is connected to your TV.
- Turn on the TV and tune to its Video Input Channel, if necessary.
- Press the POWER button to turn on the unit; the On/Standby indicator will turn green.
- Press the OPEN/CLOSE button to open the disc tray. Insert a disc with the label side facing up on the disc tray. Press the OPEN/CLOSE button again to close the tray; playback will start automatically.
- If the Menu appears, use the Navigation (◀, ▶, ▲, ▼) buttons to select the desired option and press the OK button to select it.
- To stop playback, press the STOP (■) button. Because the unit will remember where you stopped (not applicable in CD mode), simply press the PLAY/PAUSE ►|| button to resume playback where you left off (resuming playback). If the STOP (■) button is pressed twice, the unit will stop completely. If the player is left in Stop/Pause mode for more than ten minutes without any user interaction, the screen saver will activate if the Screen Saver menu option is set to ON. There is no resume function when playing CDs.

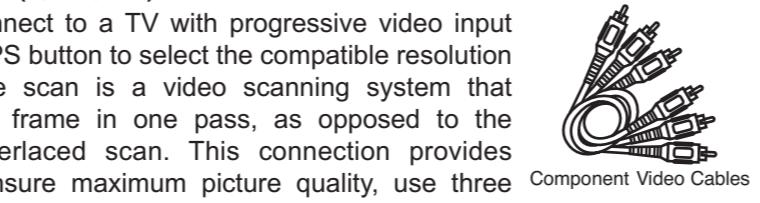

### Connecting the DVD to a Home Theater System

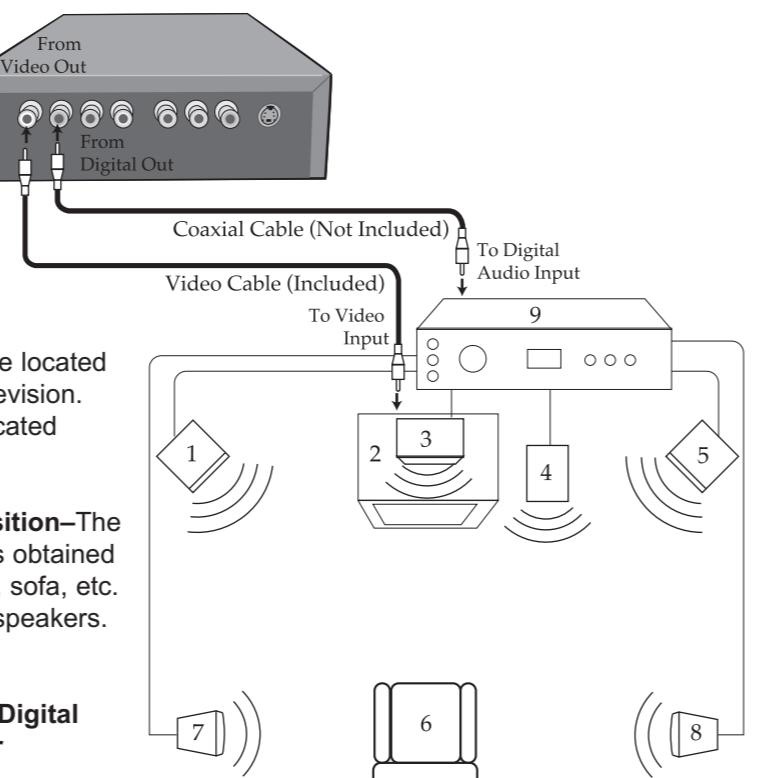

Place the subwoofer, front, rear and center speakers in locations as shown/described here. After correctly positioning the speakers, perform the Tone Test on the AV Amplifier and adjust the volume controls until the desired sound is achieved. For best results, sit in the viewing position and have someone adjust the volumes for you; this will enable you to set the optimal levels.

### NOTES FOR CONNECTING TO A TV:

- If your TV has a Component Video input, connect the DVD player with the component cable for best results, otherwise use the S-Video or Video OUT jack on the DVD player.
- Set the TV's TV/VIDEO button or switch to the VIDEO setting.
- When connecting the DVD, refer to the owner's manuals for the TV and the audio system, as well as this manual.
- When connecting, make sure the power is off and all units are unplugged before making any connections.
- Connect the DVD player to your TV directly. If you connect the DVD player through a VCR, the playback picture will be distorted because DVD video discs are copy protected.
- If using a TV with a blue screen option, turn the option off on the TV for best results.
- If you place the DVD player near a tuner, the radio broadcast sound might be distorted. In this case, move the DVD player away from the tuner.

**ANGLE MARK:** While in the Playback mode, press the ANGLE button; the total number of angles will appear on the screen. Repeatedly press the ANGLE button to select the desired angle; the angle will change in one to two seconds. This is not available on all discs.

**AUDIO (DVD):** Press the AUDIO button repeatedly to change the audio language. This feature is not available on all discs.

**Note:** This option is only available if the disc offers a number of languages or formats.  
**MUTE:** To temporarily mute the playback sound, press the MUTE button.

**SUBTITLE MENU:** Press the SUBTITLE menu button to select a subtitle language and to turn the subtitle menu on/off if your subtitle feature is available on the disc.

**TITLE MENU:** To display the title menu if available on the disc, press the TITLE menu button. Then use the Navigation (◀, ▶, ▲, ▼) buttons to select your desired option and press PLAY/PAUSE ►|| button.

**OSD BUTTON:** Each press of the OSD button will display the elapsed time and remaining time of a playing disc. Each press of the OSD button will cycle through, depending on the playback mode as follows:

	DVD	CD
1st press	Title Elapsed Time	Single Elapsed Time
2nd press	Title Remaining Time	Single Remaining Time
3rd press	Chapter Elapsed Time	Total Elapsed Time
4th press	Chapter Remaining Time	Total Remaining Time
5th press	Audio Mode	Off
6th press	Off	

**MP3:** The OSD button does not do anything when an MP3 disc is inserted.

## PLAYBACK OF AN MP3

### PLAYING AN MP3

MP3 is an audio file format which compresses recorded music. The main advantage of the mp3 format is the ability to store CD - quality music tracks on a personal computer in user-friendly, compressed files.

Before inserting a disc, check that it is compatible with the player:

- Press the POWER button to turn on the unit; the On/Standby indicator will turn green and open the disc tray by pressing the OPEN/CLOSE button.
- Place the disc in the tray with the printed side facing up and close the tray.; playback will start automatically.
- If you want to select a folder/track, then Press the STOP (■) button to stop playback. Select a folder using the Navigation (▲, ▼) buttons, then press the OK button to see the folder's contents. Select a track using the Navigation (▲, ▼) buttons, then press the OK button to start playback.
- To go back to the folder list, press the Navigation (◀) button.
- For Skip and Search functions, please refer to the basic playback options.
- Enter the track/file using the number buttons to directly select and playback a file. (i.e. For the 12th track, press "+10", "2" buttons.)

## IMAGEN DEL CD

Colocar un CD con archivos de imágenes.

**NOTA:** El tiempo que tardan los contenidos del disco para aparecer varía según el tamaño de la memoria y cantidad de imágenes contenidas en el disco. Si no aparece nada luego de unos minutos, es probable que ciertos archivos sean demasiado grandes. En ese caso, reduzca la resolución de los archivos a menos de 5 mega píxeles e intente nuevamente.

### Funcionamiento básico de CD de imágenes

- Oprima el botón de ENCENDIDO/APAGADO (POWER) para encender la unidad; el indicador de Encendido/Modo en espera (On/Standby) cambiará a color verde.
- Si utiliza un CD, oprima el botón ABRIR/CERRAR (OPEN/CLOSE) para abrir la bandeja del disco; "ABRIR" ("OPEN") aparecerá en la pantalla. Colocar un disco de imágenes con la etiqueta mirando hacia arriba sobre la bandeja del disco. Oprima el botón ABRIR/CERRAR (OPEN /CLOSE) para cerrar la bandeja del disco. En la pantalla de la TV aparecerá "CARGANDO" ("LOADING").
- Luego de cargar un CD de imágenes, éstas aparecerán automáticamente en la pantalla como presentación de diapositivas. (Si la reproducción no comienza automáticamente, oprima el botón REPRODUCIR/PAUSAR (PLAY/PAUSE) (►II) para iniciar la reproducción. Oprima el botón de Salto (Skip) (M) o (M) para seleccionar la próxima imagen o la anterior. Luego que se complete la presentación de diapositivas, comenzará la visualización de imágenes en miniatura. Puede oprimir el botón de DETENER (STOP) (■) para detener la presentación de diapositivas antes que ésta finalice; luego aparecerá la visualización de imágenes en miniatura. En la visualización de imágenes en miniatura, puede oprimir el botón de Navegación (◀, ▶, ▲, ▼) para pasar a la página siguiente/anterior. Seleccione la imagen deseada y luego oprima el botón OK para visualizarla. Para seleccionar una foto: oprima la tecla numérica correspondiente a la imagen que quiere visualizar (por ejemplo para la imagen número 12, oprima "10", "2").
- Para pausar una muestra de diapositivas: oprima el botón REPRODUCIR/PAUSAR (REPRODUCIR/ PAUSE) (►II).
- Para reanudar la reproducción: oprima el botón REPRODUCIR/ PAUSAR (PLAY/PAUSE) (►II).
- Para detener la reproducción del CD de imágenes: oprima el botón DETENER (STOP) (■).
- Para rotar la imagen durante la reproducción: puede rotar la imagen en pantalla utilizando los botones de Navegación (◀, ▶, ▲, ▼) durante la reproducción de presentación de diapositivas. Para rotar la imagen en la vista de imágenes en miniatura, seleccione ROTAR (ROTATE), seleccione la imagen y luego el botón OK. Oprima el botón REPRODUCIR/PAUSA (PLAY/PAUSE) (►II) para rotar la imagen 90 grados a la derecha. Luego seleccione el botón REINICIAR (RESET) para reiniciar la imagen o VOLVER (RETURN).


## CONFIGURACIÓN DE LOS MENÚS (CONTINUACIÓN)

### CONFIGURACIÓN DE AUDIO

#### SALIDA DIGITAL:

**APAGADO (OFF):** Seleccione para desactivar la Salida digital.

**SPDIF/Raw o PCM:** Interrumpe la sección de audio digital del decodificador/salida entre el flujo de bits (Raw) y salida digital estéreo no comprimida (PCM).

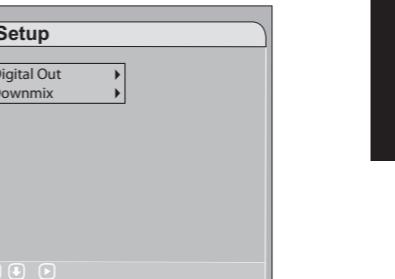

El flujo de bits (Raw) se deberá seleccionar para permitir que el sonido envolvente (surround) (Dolby Digital) se transmita a un decodificador externo por la salida de audio digital. Si sólo se utiliza un altavoz estéreo, entonces sólo es necesario configurar esta opción a PCM, luego sólo dos canales de información se decodifican y se envían a las salidas de audio estéreo (y la salida de audio digital coaxial/óptica).

#### MEZCLADOR:


Esta unidad permite enviar programación con cualquier número de canales de audio diferentes hasta 5.1 para cualquier telespectador sin importar la cantidad de altavoces que tenga. Para reproducir canales 5.1 de audio a través de un número menor de altavoces se necesita un proceso que se denomina modo mezclador. Simplemente colóquelo, el modo mezclador combina los canales de la izquierda, derecha, centro, envolvente hacia la izquierda, y envolvente hacia la derecha de una manera lógica para manejar los altavoces estéreos o mono.

**LO/RO:** Seleccione esta función para obtener un sonido en modo mezclador en Estéreo.

**IZQUIERDO/DERECHO:** Seleccione esta función para obtener un sonido en modo mezclador estilo cine.

### CONFIGURACIÓN DE USUARIO

**ESTILO:** Seleccione el fondo deseado de la Visualización en pantalla (OSD).

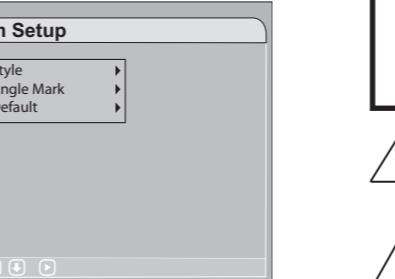

**MARCA DE ÁNGULO:** Seleccione ENCENDIDO (ON) para encender las marcas de ángulo y APAGADO (OFF) para apagarlas. Las marcas de ángulo no están disponibles en todos los DVDs.

**PREDETERMINADO:** Seleccione esta opción para reestablecer todas las preferencias a la configuración original de fábrica. Esto será útil para reestablecer el Sistema NTSC.

### SALIR DEL MODO CONFIGURACIÓN

Seleccione esto u oprima el botón CONFIGURACIÓN (SETUP) de nuevo para salir del modo configuración.

## CONFIGURACIÓN DE LOS MENÚS

### PARA ACCEDER AL MENÚ PRINCIPAL:


El menú de configuración le permite personalizar el reproductor de DVD para que usted pueda seleccionar varias preferencias de idioma, configurar el protector de pantalla y mucho más. A continuación encontrará el menú y luego la página correspondiente que describe la opción seleccionada del menú.

Con ningún disco en el compartimiento, ingrese al MENÚ DE CONFIGURACIÓN (SETUP MENU) con el botón de CONFIGURACIÓN (SETUP). Utilice los botones de Navegación (◀, ▶, ▲, ▼) para navegar en los menús/pantallas y oprima el botón OK para confirmar la opción resaltada. Luego de cambiar la opción, oprima el botón OK.

Para salir del MENÚ DE CONFIGURACIÓN (SETUP MENU), oprima el botón de CONFIGURACIÓN (SETUP).

### CONFIGURACIÓN DE IDIOMA

**VISUALIZACIÓN EN PANTALLA (OSD):** Seleccione el idioma deseado (inglés, francés, o español) para la visualización de los idiomas en pantalla. Tenga en cuenta que el DVD deberá contener el idioma para poder mostrarlo.

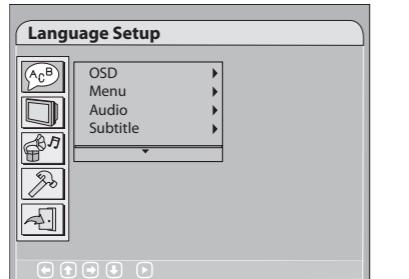

**MENÚ:** Seleccione el idioma del MENÚ (MENU) (inglés, francés, alemán, italiano, español, u otros). El MENÚ del DISCO DEL DVD deberá estar grabado en el idioma elegido, de lo contrario, se mostrará el idioma predeterminado del DVD.

**AUDIO:** Seleccione el idioma para la reproducción del DVD (inglés, francés, alemán, italiano, español, u otros).

El DVD deberá estar grabado en el idioma elegido, de lo contrario, se reproducirá el idioma predeterminado del DVD.

**SUBTÍTULOS:** Seleccione el idioma del Subtitulado (VISUALIZACIÓN EN PANTALLA) (OSD) (inglés, francés, alemán, italiano, español, otros, o ninguno). El DVD deberá estar grabado en el idioma elegido, de lo contrario, se mostrará el idioma predeterminado del DVD.

### CONFIGURACIÓN DE PANTALLA

**TIPO DE TV:** Usted puede elegir cómo desea ver la información en pantalla del contenido de un disco en la pantalla de su TV.

**4:3 PS:** Reproduce una imagen 4:3 con cierta distorsión.

**4:3 LB Letterbox:** Reproducirá las mejores imágenes grabadas en este formato (por ejemplo, con bandas horizontales en la parte superior e inferior de la pantalla)

**16:9 Pantalla ancha:** Reproduce películas en formato 16:9 en su totalidad, en una pantalla de 16:9.

**PROTECTOR DE PANTALLA:** Si activa esta opción, el protector de pantalla se activará cuando se detenga la unidad o pondrá la imagen en pausa durante un minuto aproximadamente.

Cuando esta opción está desactivada, el protector de pantalla no se activará.

**SISTEMA DE TV (AV sólo Salida):** Seleccione PAL cuando utilice la salida TV PAL. Seleccione NTSC cuando utilice una TV NTSC. En los EE.UU. se utiliza NTSC. Seleccione AUTOMÁTICO (AUTO) para autoselecciónar.


**Botón P/N:** Esta opción también se podrá cambiar oprimiendo el botón P/N repetidamente.

**SALIDA DE VIDEO:** Seleccione la opción deseada (CVBS-Video, CVBS+YUV o YUV P-SCAN) cuando la TV está conectada a los conectores de salida de video componente.

**Botón de Video:** Esta función se puede cambiar oprimiendo el botón de VIDEO repetidamente.

**BRILLO:** Configure el brillo deseado (Normal, Brillante o Suave).

**CONTRASTE:** Configure el contraste deseado desde -4 a +4.

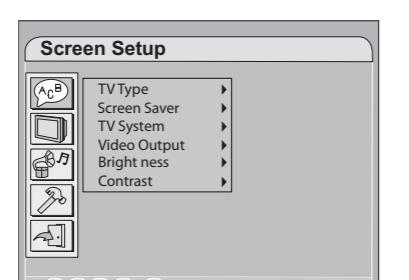

**PARA OBTENER AYUDA ADICIONAL PARA LA CONFIGURACIÓN Y LA OPERACIÓN, VISITE NUESTRO SITIO WEB EN WWW.MEMOREXELECTRONICS.COM O COMUNIQUESE CON SERVICIO AL CLIENTE AL 1-800-919-3647.**

**CONSERVE EL EMPAQUE AL MENOS DURANTE 90 DÍAS POR SI ACASO NECESITARA REGRESAR EL PRODUCTO A SU DISTRIBUIDOR O IMATION ELECTRONICS PRODUCTS.**

**PARA OBTENER PIEZAS REEMPLAZABLES POR EL CONSUMIDOR, CONSULTE EL NÚMERO DE PIEZA EN LA UBICACIÓN DE CONTROLES, PÁGINA 2, Y LUEGO COMUNIQUESE CON FOX INTERNATIONAL AL 1-800-321-6993.**

**Imation Electronics Products,  
A Division of Imation Enterprises Corp.  
Weston, FL  
Printed in / Impreso en Hong Kong  
Visit our website at / Visite nuestro sitio web en www.memorexelectronics.com**

21-DVD081zz3-76

## CONFIGURACIÓN DE LOS MENÚS (CONTINUACIÓN)

### CONFIGURACIÓN DE AUDIO

#### SALIDA DIGITAL:

**APAGADO (OFF):** Seleccione para desactivar la Salida digital.

**SPDIF/Raw o PCM:** Interrumpe la sección de audio digital del decodificador/salida entre el flujo de bits (Raw) y salida digital estéreo no comprimida (PCM).



El flujo de bits (Raw) se deberá seleccionar para permitir que el sonido envolvente (surround) (Dolby Digital) se transmita a un decodificador externo por la salida de audio digital. Si sólo se utiliza un altavoz estéreo, entonces sólo es necesario configurar esta opción a PCM, luego sólo dos canales de información se decodifican y se envían a las salidas de audio estéreo (y la salida de audio digital coaxial/óptica).

#### MEZCLADOR:


Esta unidad permite enviar programación con cualquier número de canales de audio diferentes hasta 5.1 para cualquier telespectador sin importar la cantidad de altavoces que tenga. Para reproducir canales 5.1 de audio a través de un número menor de altavoces se necesita un proceso que se denomina modo mezclador. Simplemente colóquelo, el modo mezclador combina los canales de la izquierda, derecha, centro, envolvente hacia la izquierda, y envolvente hacia la derecha de una manera lógica para manejar los altavoces estéreos o mono.

**LO/RO:** Seleccione esta función para obtener un sonido en modo mezclador en Estéreo.

**IZQUIERDO/DERECHO:** Seleccione esta función para obtener un sonido en modo mezclador estilo cine.

### CONFIGURACIÓN DE USUARIO

**ESTILO:** Seleccione el fondo deseado de la Visualización en pantalla (OSD).

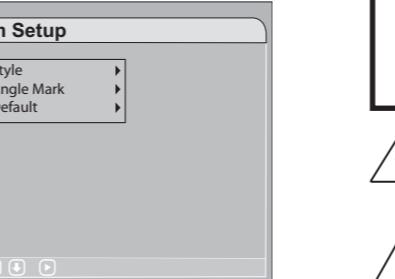

**MARCA DE ÁNGULO:** Seleccione ENCENDIDO (ON) para encender las marcas de ángulo y APAGADO (OFF) para apagarlas. Las marcas de ángulo no están disponibles en todos los DVDs.

**PREDETERMINADO:** Seleccione esta opción para reestablecer todas las preferencias a la configuración original de fábrica. Esto será útil para reestablecer el Sistema NTSC.

### SALIR DEL MODO CONFIGURACIÓN

Seleccione esto u oprima el botón CONFIGURACIÓN (SETUP) de nuevo para salir del modo configuración.

## ESPECIFICACIONES

Requisitos de energía ..... 120VCA, 60Hz

Consumo de energía...<15W (aprox. 5W cuando está en modo de Espera por control remoto)

Peso ..... 2.5 libras

Dimensiones.....9.8 (largo) x 6.7 (ancho) x 2.4 (alto) pulgadas

El peso y las dimensiones son aproximados.

## DISPENSADORES

Sistema de señal ..... NTSC/PAL

Temperatura de operación ..... De +5° a +35°C

Rango de humedad de operación ..... Entre 5% y 90% (sin condensación)

Discos que se reproducen:

Disco de video DVD ..... 12cm lado sencillo, capa sencilla

..... 12cm lado sencillo, capas dobles

..... 12cm lado doble, capa sencilla

..... 8cm lado sencillo, capa sencilla

..... 8cm lado sencillo, capas dobles

..... 8cm lado doble, capa sencilla

Disco de 12cm ..... Disco de 8cm

Nivel de salida de video ..... 1Vp-p

Nivel de salida de audio ..... 2Vrms (1kHz, 0dB)

Características de salida de señal de audio:

Repetidas de frecuencia:

DVD (audio lineal) ..... 20Hz-20KHz (muestro de 48KHz/96KHz)

Audio de CD ..... 20Hz-20KHz

Relación S/N.....70dB

Fluctuación y trémolo ..... Por debajo del nivel medible

Entrada:

Longitud de onda ..... 655nm

Potencia de láser ..... Clase 1

Las especificaciones están sujetas a cambios sin previo aviso.

## DISCO COMPACTO

Características de salida de señal de audio:

Repetidas de frecuencia:

DVD (audio lineal) ..... 20Hz-20KHz (muestro de 48KHz/96KHz)

Audio de CD ..... 20Hz-20KHz

Relación S/N.....70dB

Fluctuación y trémolo ..... Por debajo del nivel medible

Entrada:

Longitud de onda ..... 655nm

Potencia de láser ..... Clase 1


Las especificaciones están sujetas a cambios sin previo aviso.

**PARA OBTENER AYUDA ADICIONAL PARA LA CONFIGURACIÓN Y LA OPERACIÓN, VISITE NUESTRO SITIO WEB EN WWW.MEMOREXELECTRONICS.COM O COMUNIQUESE CON SERVICIO AL CLIENTE AL 1-800-919-3647.**

**CONSERVE EL EMPAQUE AL MENOS DURANTE 90 DÍAS POR SI ACASO NECESITARA REGRESAR EL PRODUCTO A SU DISTRIBUID**

## INSTALAR LA PILA DEL CONTROL REMOTO

- El compartimiento de las pilas se encuentra en la parte trasera del control remoto.
- Quite la puerta del compartimiento de las pilas oprimiendo en la solapa y quitando la puerta.
  - Inserte dos (2) pilas AAA en el compartimento como se muestra a la derecha. Asegúrese de ver las marcas de polaridad que se encuentran grabadas dentro del compartimiento de las pilas. Si las pilas son insertadas de manera incorrecta, el control remoto no funcionará.
  - Reemplace la tapa de dicho compartimento.

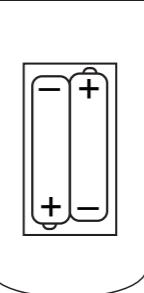


### PRECAUCIONES CON LA PILA


- Siga estas precauciones al usar pilas con este aparato:
- Use sólo pilas del tamaño y tipo especificado.
  - Asegúrese de seguir la polaridad correcta cuando instale las pilas, como se indica en el compartimiento. Si las pilas se colocan de manera inversa, el aparato puede sufrir daños.
  - No mezcle diferentes tipos de pilas (ej. alcalinas, recargables y carbono-zinc) o viejas con nuevas.
  - Si no usará el aparato por un período prolongado, retire las pilas para evitar daños o lesiones por un posible derrame de las mismas.
  - No intente recargar las pilas que no son recargables; pueden sobrecalentarse y reventar. (Siga las indicaciones del fabricante de las pilas).

## UBICACIÓN DE LOS CONTROLES


### PARTE FRONTAL

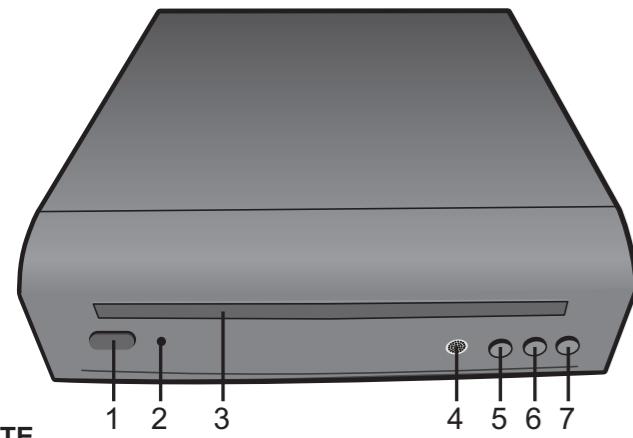

### PARTE POSTERIOR

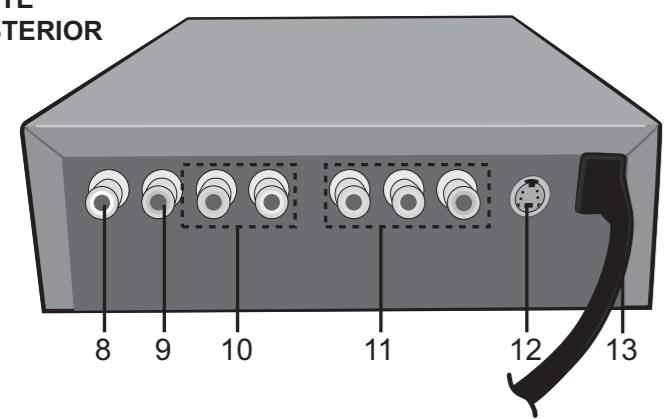

### REMOTO

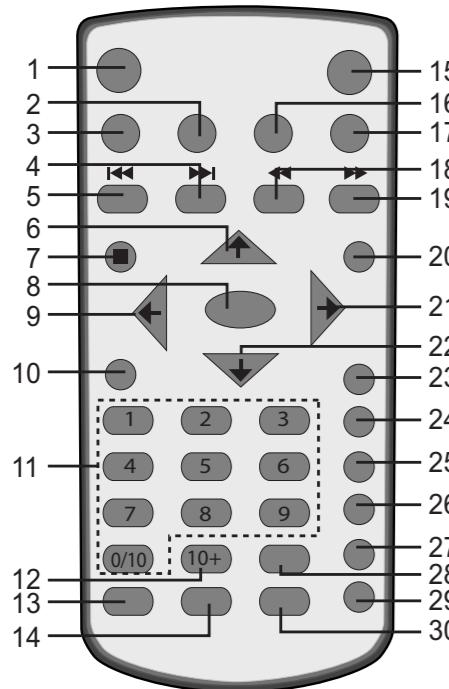

- Botón de ENCENDIDO/APAGADO (POWER)
- Botón de MENÚ (MENU)
- Botón de TÍTULO (TITLE)
- Botón de Salto (Skip) (W)
- Botón de Navegación (A)
- Botón de Navegación (B)
- Botón de CONFIGURACIÓN (SETUP)
- Teclado Numérico (0-10)
- 10+ Botón
- Botón de PROGRAMA (PROGRAM)
- Botón de ÁNGULO (ANGLE)
- Botón ABRIR/CERRAR (OPEN/CLOSE)
- Botón de SUBTÍTULOS (SUBTITLE)
- Botón IRA (GOTO)
- Botón BUSCAR/SEARCH (W)
- Botón BUSCAR/SEARCH (B)
- Botón P/N
- Botón de Navegación (W)
- Botón de Navegación (B)
- Botón de VIDEO
- Botón REPRODUCIR/PAUSA
- Botón de PROGRAMA (PROGRAM)
- Botón ÁNGULO (ANGLE)
- Botón ABRIR/CERRAR (OPEN/CLOSE)
- Botón de REPETICIÓN (REPEAT)
- Botón Repetir A-B (Repeat A-B)
- Botón LENTO/ZOOM (SLOW/ZOOM)
- Botón OSD (Visualización en pantalla)
- Botón de PROGRAMA (PROGRAM)
- Botón ÁNGULO (ANGLE)
- Botón ABRIR/CERRAR (OPEN/CLOSE)
- Botón de REPETICIÓN (REPEAT)
- Botón Repetir A-B (Repeat A-B)
- Botón LENTO/ZOOM (SLOW/ZOOM)
- Botón OSD (Visualización en pantalla)
- Botón de PROGRAMA (PROGRAM)
- Botón ÁNGULO (ANGLE)
- Botón ABRIR/CERRAR (OPEN/CLOSE)
- Botón de REPETICIÓN (REPEAT)
- Botón Repetir A-B (Repeat A-B)
- Botón LENTO/ZOOM (SLOW/ZOOM)
- Botón OSD (Visualización en pantalla)


CONTROL REMOTO, NO. 2B-2D081J01B-76\*

TAPEA DE LA PILA. PIEZA NO. 2B-2D081J01B-76RBD\*

\*Pieza remplazable por el consumidor (Vea al final del manual para ordenar.)

## CONEXIONES

### Conexión del DVD al televisor

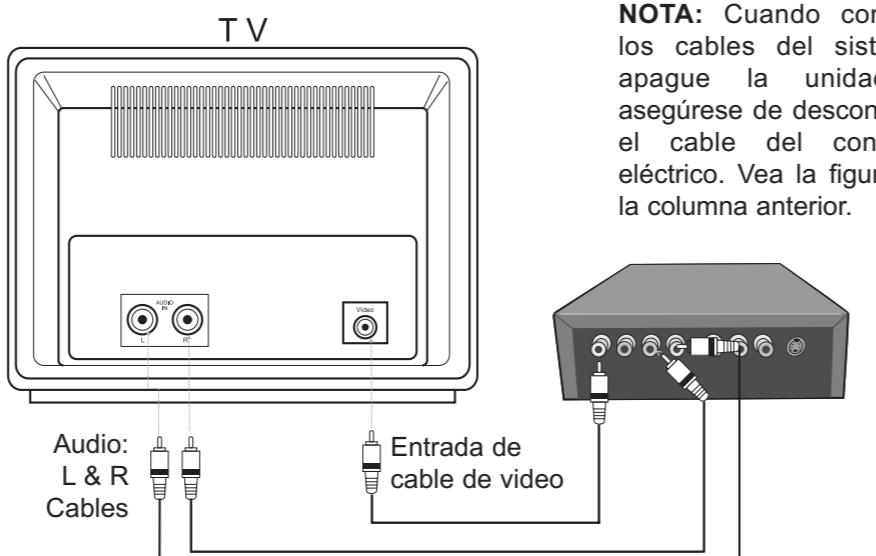

**NOTA:** Cuando conecte los cables del sistema, apague la unidad y asegúrese de desconectar el cable del contacto eléctrico. Vea la figura en la columna anterior.

## REPRODUCIR DISCOS

### Discos compatibles

Este reproductor de DVD puede reproducir los siguientes tipos de discos: DVD, DVD+/-R, DVD+/-RW, CD de audio, CD/CD-R/RW con archivos MP3 y CD con imágenes Kodak. Antes de introducir un disco en el reproductor, asegúrese de que sea compatible. No se pueden reproducir los siguientes tipos de discos: discos láser, CD-I, CD-ROM (discos de computadora), DVD-ROM o discos grabados usando otras normas de transmisión (por ej. PAL o SECAM) o discos CD-G.



**NOTA:** Es posible que algunos discos no sean compatibles debido al lector láser, a los formatos de grabación y al software usado. Algunas tecnologías y métodos usados para grabar archivos MP3 en discos CD-R/RW pueden impedir una reproducción óptima de dichos archivos al degradar la calidad del sonido y/o la habilidad del reproductor de leer los archivos.

### Codificación regional

El número de región para este reproductor es listado en la parte inferior del jugador.

## MODOS DE REPRODUCCIÓN

### Repetir la Reproducción

Mientras el disco se está reproduciendo, oprima el botón REPETIR (REPEAT) repetidamente para seleccionar el modo de reproducción:

- Modos de reproducción de DVD: Repetición de capítulos, de Títulos, TODO, apagado (off)
- Modos de reproducción de CD: Repetición de pista, repetición de TODAS las pistas, apagado (off)
- Modo MP3: Repetición de Pista, repetir TODO, apagado (off)

### Repetición A-B

Mientras se encuentra en el modo de Reproducción, oprima el botón A-B para definir en qué parte desea que inicie la sección. Oprima el botón de Repetición A-B nuevamente para definir dónde desea que finalice la sección, la unidad luego reproducirá el área seleccionada de manera continua. Oprima nuevamente el botón de Repetición A-B para cancelar el modo de Repetición A-B.

## REPRODUCCIÓN DEL PROGRAMA

Seleccione hasta 20 Títulos/Capítulos (o pistas del CD) para programar la reproducción como se muestra a continuación:

- Oprima el botón PROGRAMA (PROGRAM), aparecerá la pantalla de programa.
- Seleccione el número de programa deseado (se recomienda comenzar por el 1), luego oprima el botón de Navegación ► para seleccionar la columna de Título. Seleccione el número de título deseado utilizando los botones de Navegación (▲, ▼), luego oprima el botón ENTRAR (ENTER) para confirmar.
- El cursor saltará a la columna de Capítulo. Seleccione el número de capítulo deseado utilizando los botones de Navegación (▲, ▼), luego oprima el botón ENTRAR (ENTER) para confirmar.
- Usted ha programado la primera programación. Repita los pasos 2 y 3 para configurar más programas (hasta 20). Cuando haya finalizado, oprima el botón REPRODUCIR / PAUSAR (PLAY/PAUSE) (►II) para iniciar la reproducción.

## FUNCIONES DE REPRODUCCIÓN AVANZADA

**MARCA DE ÁNGULO:** Mientras se encuentra en el modo Reproducción, oprima el botón ÁNGULO (ANGLE); el número total de ángulos aparecerá en la pantalla. Oprima este botón repetidamente para seleccionar el ángulo deseado; el ángulo cambiará en uno o dos segundos. Esto no está disponible en todos los discos.

**AUDIO (DVD):** Oprima el botón de AUDIO repetidamente para cambiar el idioma del audio. Esta función no está disponible en todos los discos.

**NOTA:** Esta opción está disponible sólo si el disco contiene una cantidad de idiomas o formatos. **MUDO (MUTE):** Para silenciar temporalmente el sonido de reproducción, oprima el botón MUDO (MUTE).

**MENÚ DE SUBTÍTULOS:** Oprima el botón SUBTÍTULOS (SUBTITLE) para seleccionar un idioma de subtítulos y encender o apagar dicho menú siempre que la función de subtítulos esté disponible en el disco.

**MENÚ DE TÍTULOS:** Para mostrar el menú títulos, si estuviera disponible en el disco, oprima el botón del menú TÍTULO (TITLE). Luego utilice los botones de Navegación (◀, ▶, ▲, ▼) para seleccionar la opción deseada y oprima el botón OK para confirmar.

**BOTÓN VISUALIZACIÓN EN PANTALLA (OSD):** Cada vez que oprima el botón VISUALIZACIÓN EN PANTALLA (OSD) se visualizará el tiempo transcurrido y el tiempo restante de un disco en reproducción. Cada vez que oprima el botón VISUALIZACIÓN EN PANTALLA (OSD), el tiempo correrá dependiendo del modo de reproducción según se muestra a continuación:

	DVD	CD
Si oprime 1 vez	Tiempo transcurrido del Título	Tiempo único transcurrido
Si oprime 2 veces	Tiempo restante del Título	Tiempo único restante
Si oprime 3 veces	Tiempo transcurrido del Capítulo	Tiempo transcurrido total
Si oprime 4 veces	Tiempo restante del Capítulo	Tiempo restante total
Si oprime 5 veces	Modo de audio (Audio Mode)	Apagado (Off)
Si oprime 6 veces	Apagado (Off)	

**MP3:** El Botón VISUALIZACIÓN EN PANTALLA (OSD) no funciona cuando se inserta un disco MP3.

## REPRODUCCIÓN DE MP3

### REPRODUCCIÓN DE UN MP3

El MP3 es un archivo con formato de audio que comprime música grabada. La ventaja principal del formato mp3 es la capacidad de guardar pistas de música con calidad CD en archivos comprimidos y de fácil utilización para el usuario, en una computadora. Antes de insertar un disco, verifique que es compatible con el reproductor:

- Oprima el botón ENCENDIDO/APAGADO (POWER) para encender la unidad; el indicador Encendido/Modo en espera (On/Standy) cambiará a color verde y abra la bandeja del disco oprimiendo el botón ABRIR/CERRAR (OPEN/CLOSE).
- Coloque el disco en la bandeja con el lado impreso hacia arriba y ciérrela; la reproducción comenzará automáticamente.
- Si desea seleccionar una carpeta/pista, entonces oprima el botón DETENER (STOP) (■) para detener la reproducción. Seleccione una carpeta utilizando los botones de Navegación (▲, ▼), luego oprima el botón OK para visualizar el contenido de la carpeta. Seleccione una pista utilizando los botones de Navegación (▲, ▼) luego oprima el botón OK para comenzar la reproducción.
- Para regresar a la lista de carpetas, oprima los botones de Navegación (◀, ▶) para seleccionar la carpeta deseada.
- Para las funciones Salto (Skip) y Búsqueda (Search), consulte las opciones básicas de reproducción.
- Ingrese en la pista/archivo utilizando el teclado numérico para seleccionar directamente y reproducir un archivo (por ejemplo para la pista 12, oprima los botones "+10", "2").