

WF8704S6(W/V/S/C/R)
WF8702S6(W/V/S/C/R)
WF8700S6(W/V/S/C/R)
WF8708S6(W/V/S/C/R)

Washing Machine user manual

imagine the possibilities

Thank you for purchasing a Samsung product.
To receive a more complete service,
please register your product at
www.samsung.com/register

SAMSUNG

features

- **Child Lock**

The Child Lock function keeps curious little hands out of the washer. This safety feature ensures, that children do not toy with the operation of the washer. It also alerts you when it is activated.

- **Handwash**

Clothes susceptible to damage, such as those made of linen or silk, can be washed just as if they were being washed by hand.

- **Delay Start**

This function enables users to delay the washing machine's starting time for up to 24 hours.

- **Heavy Soil**

This Program is for stained or heavily soiled cottons, bed linen, table linen, underwear, towels, shirts, jeans, etc

safety information

Throughout this manual, you'll see Warning and Caution notes. These warnings, cautions, and the important safety instructions that follow do not cover all possible conditions and situations that may occur. It's your responsibility to use common sense, caution, and care when installing, maintaining, and operation your washer. Samsung is not liable for damages resulting from improper use.

IMPORTANT SAFETY SYMBOLS AND PRECAUTIONS

What the icons and signs in this user manual means:

 WARNING	Hazards or unsafe practices that may result in severe personal injury or death .
 CAUTION	Hazards or unsafe practices that may result in minor personal injury or property damage .
 CAUTION	To reduce the risk of fire, explosion, electric shock, or personal injury when using your washer, follow these basic safety precautions:

BEFORE USING THE APPLIANCE



Packing materials can be dangerous to children; keep all packing material (plastic bags, polystyrene, etc.) well out of the reach of children.

The appliance is designed for home use only.

Make sure that water and electrical connections are made by qualified technicians, observing the manufacturer's instructions (see "Installing the Washing Machine") and local safety regulations.

All packaging and shipping bolts must be removed before the appliance is used. Serious damage may occur if they are not removed. See "Removing the shipping bolts".

Before washing clothes for the first time, you must run a complete cycle without clothes. See "Washing for the first time".

SAFETY INSTRUCTIONS



Before cleaning or carrying out maintenance, unplug the appliance from the electrical outlet or set the ⏻ (On/Off) button to Off.

Make sure that the pockets of all clothing to be washed are empty. Hard, sharp objects, such as coins, safety pins, nails, screws, or stones can cause extensive damage to the appliance.

Always unplug the appliance and turn off the water after use.

Before you open the door of the appliance, check that the water has drained. Do not open the door if you can still see water.

safety information

Pets and small children may climb into the appliance. Check the appliance before each use.

The glass door becomes very hot during the washing cycle. Keep children away from the appliance while it is in use.

Do not attempt to repair the appliance yourself. Repairs made by inexperienced or unqualified persons may cause injury and/or make more serious repairs to the appliance necessary.

If the plug (power supply cord) is damaged, it must be replaced by the manufacturer or its service agent or a similar qualified person in order to avoid a hazard.

This appliance should only be serviced by an authorized service center, and only genuine spare parts should be used.



This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

This appliance has to be connected to the plug endurable to proper power consumption.

This appliance has to be positioned so that the plug is accessible after installation.

Do not use processed water containing oil, cream or lotion, which is usually found in skin-care shops or massage clinics.

- Otherwise this will cause the packing to be deformed, which causes a malfunction or water leak.

A stainless washing tube does not usually rust. However if some metal such as a hair pin is left in the tube for an extended time, the tube could rust.

- Do not leave water or bleach containing chlorine in the tube for an extended period of time.
- Do not regularly use or leave water containing iron in the tube for an extended period of time.
- If rust starts appearing on the surface of the tube, apply a cleansing agent (neutral) to the surface and use a sponge or soft cloth to clean it. (Under no circumstances use a metal brush)

For washing machines with ventilation openings in the base, that a carpet must not obstruct the openings.

Use the new hose-sets and old hose-sets should not be reused.

contents

INSTALLING THE WASHING MACHINE

6

- 6 Unpacking the Washing Machine
- 6 Overview of the washing machine
- 7 Selecting a location
- 7 Adjusting the leveling feet
- 7 Removing the shipping bolts
- 8 Connecting the water supply hose
- 8 Positioning the drain hose
- 9 Connecting the water supply hose (Option)
- 10 Plugging in the machine

WASHING A LOAD OF LAUNDRY

11

- 11 Washing for the first time
- 11 Putting detergent in the washing machine
- 12 Overview of the control panel
- 14 Washing clothes using Fuzzy Logic
- 14 Using delay start
- 15 Washing clothes manually
- 15 Washing tips and hints

MAINTAINING THE WASHING MACHINE

16

- 16 Draining the washing machine in an emergency
- 16 Repairing a frozen washing machine
- 16 Cleaning the exterior
- 17 Cleaning the detergent drawer and recess
- 17 Cleaning the debris filter
- 18 Cleaning the water hose mesh filter

TROUBLESHOOTING

19

- 19 Problems and solutions
- 19 Understanding error messages

PROGRAMME CHART

20

- 20 Programme chart

APPENDIX

21


- 21 Fabric care chart
- 21 Electrical warnings
- 21 Protecting the environment
- 22 Declaration of conformity
- 22 Specification

installing the washing machine


UNPACKING THE WASHING MACHINE

Unpack your washing machine and inspect it for shipping damage. Also make sure that you have received all of the items shown below. If the washing machine was damaged during shipping or you do not have all of the items, contact your Samsung dealer immediately.

OVERVIEW OF THE WASHING MACHINE

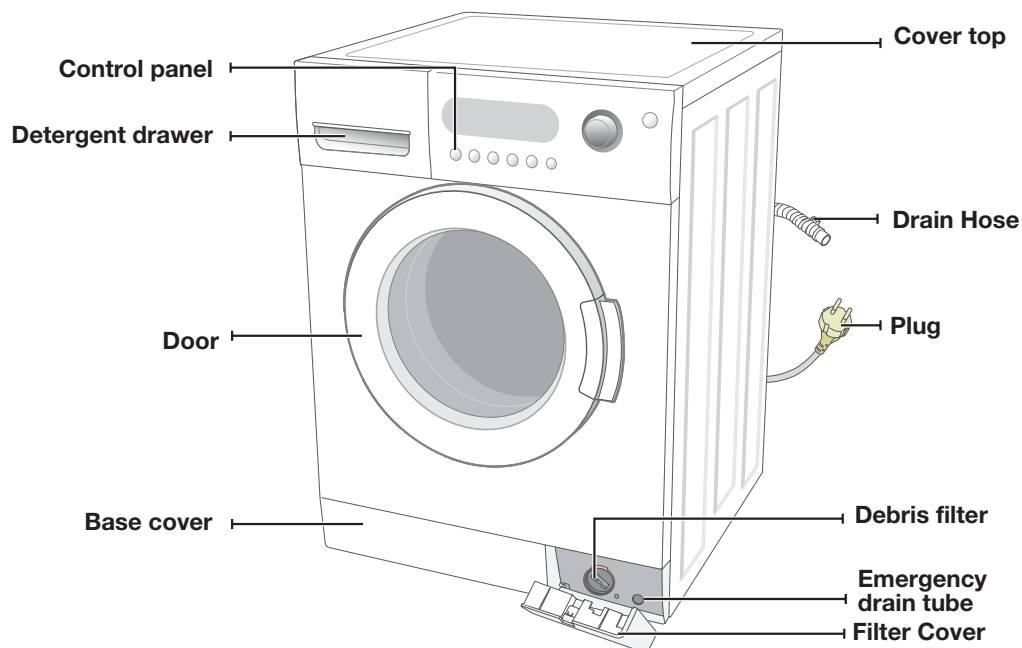


Wrench



Water supply hose



Hose guide



Bolt hole covers

SELECTING A LOCATION

Before you install the washing machine, select a location with the following characteristics:

- A hard, level surface (if the surface is uneven, see “Adjusting the leveling feet,” below)
- Away from direct sunlight.
- Adequate ventilation
- Room temperature that will not fall below 0 °C
- Away from sources of heat such as coal or gas

Make sure that the washing machine does not stand on its power cord.


Ventilation openings must not be obstructed by carpeting when the washing machine is installed on a carpeted floor.

ADJUSTING THE LEVELING FEET

If the floor is uneven, adjust the feet (do not insert pieces of wood or any other objects under the feet):

1. Loosen the leg bolt by turning it with your hand until it is at the desired height.
2. Tighten the locking nut by turning it with the wrench.
 - Place the washer on a sturdy, flat surface.


If the washer is placed on an uneven or weak surface, noise or vibration occurs. (Only a 1 degrees angle is allowed.)

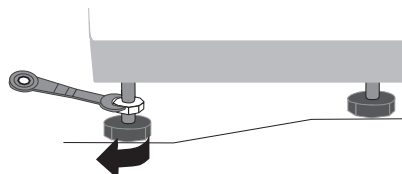


REMOVING THE SHIPPING BOLTS

Before installing the washing machine, you must remove the four shipping bolts from the back of the unit.


1. Loosen all the bolts with the supplied wrench.

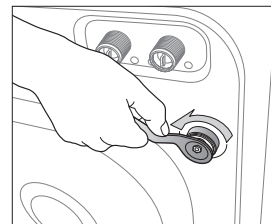

2. Hold the bolt with the spanner and pull it through the wide section of the hole. Repeat for each bolt.

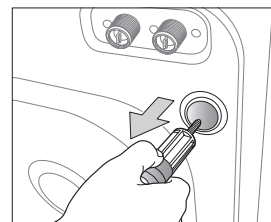

3. Fill the holes with the supplied plastic covers.

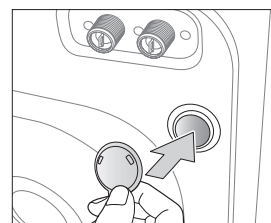

4. Store the shipping bolts away safely in case you have to move the washing machine in the future.



WARNING

Packaging materials can be dangerous to children; keep all packaging material (plastic bags, polystyrene, etc.) well out of the reach of children.


installing the washing machine

CONNECTING THE WATER SUPPLY HOSE

The water supply hose must be connected to the washing machine at one end and to the water faucet at the other. Do not stretch the water supply hose. If the hose is too short and you do not wish to move the water faucet, replace the hose with a longer, high pressure hose.

To connect the water supply hose:

1. Take the L-shaped arm fitting for the cold water supply hose and connect to the cold water supply intake on the back of the machine. Tighten by hand.

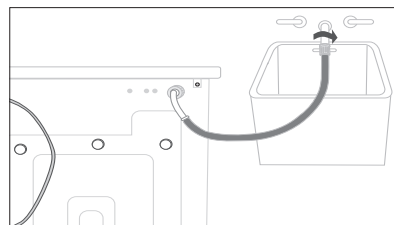

2. Connect the other end of the cold water supply hose to your sink's cold water faucet and tighten it by hand. If necessary, you can reposition the water supply hose at the washing machine end by loosening the fitting, rotating the hose, and retightening the fitting.

Option:

1. Take the red L-shaped arm fitting for the hot water supply hose and connect to the red hot water supply intake on the back of the machine. Tighten by hand.
2. Connect the other end of the hot water supply hose to your sink's hot water faucet and tighten it by hand.
3. Use a Y-piece if you only want to use cold water.




The appliance is to be connected to the water mains using new hose-sets and that old hose-sets should not be used.

POSITIONING THE DRAIN HOSE

The end of the drain hose may be positioned in three ways:

Over the edge of a sink

The drain hose must be placed at a height of between 60 and 90 cm. To keep the drain hose spout bent, use the supplied plastic hose guide. Secure the guide to the wall with a hook or to the faucet with a piece of string to prevent the drain hose from moving.

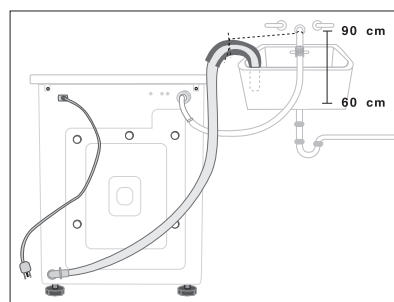

In a sink drain pipe branch

The drain pipe branch must be above the sink siphon so that the end of the hose is at least 60 cm above the ground.

In a drain pipe

Samsung recommends that you use a 65 cm high vertical pipe; it must be no shorter than 60 cm and no longer than 90 cm.

CONNECTING THE WATER SUPPLY HOSE (OPTION)


1. Remove the adaptor from the water supply hose.



2. First, using a '+' type screw driver, loosen the four screws on the adaptor. Next, take the adaptor and turn part(b) following the arrow until there is a 5mm gap.



3. Connect adaptor to the water tap by tightening the screws firmly. Then, turn part (b) following the arrow and put(a) and (b) together.




4. Connect the water supply hose to the adaptor. Pull down part (c) of the water supply hose. When you release part (c) the hose automatically connects to the adaptor making a 'click' sound.



5. Connect the other end of the water supply hose to the inlet water valve at the rear of the washer. Screw the hose clockwise all the way in.



- If the water tap has a screw type faucet, connect the water supply hose to the tap as shown.



-  After completing connection, if water leaks from the hose, then repeat the same steps. Use the most conventional type of faucet for water supply. In case the faucet is square or too big, remove the spacing ring before inserting the faucet into the adaptor.

installing the washing machine

PLUGGING IN THE MACHINE

Wiring Instructions

- WARNING THIS APPLIANCE MUST BE EARTHED.

This appliance must be earthed. In the event of an electrical short circuit, earthing reduces the risk of electric shock providing an escape wire for the electric current.

The appliance is equipped with a mains lead which includes an earth wire for connecting to the earth terminal of your mains plug.

The plug must be plugged into a socket that is properly installed and earthed.

- * Consult a qualified electrician or service technician if in doubt about any of these instructions. The manufacturer of this washing machine will not accept any liability for damage to persons or material for non observance of these requirements.

There are no user serviceable parts inside the washing machine and if the mains lead of this appliance is damaged, it must only be replaced by qualified service personnel approved by the manufacturer because special tools are required.


washing a load of laundry

WASHING FOR THE FIRST TIME

Before washing clothes for the first time, you must run a complete cycle without clothes.

To do this:

1. Press the  (On/Off) button.
2. Pour a little detergent into compartment (II) in the detergent drawer.
3. Turn on the water supply to the washing machine.
4. Press the Temperature button repeatedly until 40 °C is displayed.
5. Press the Start/Pause button.
 - This will remove any water from the manufacturer's test run remaining in the machine.

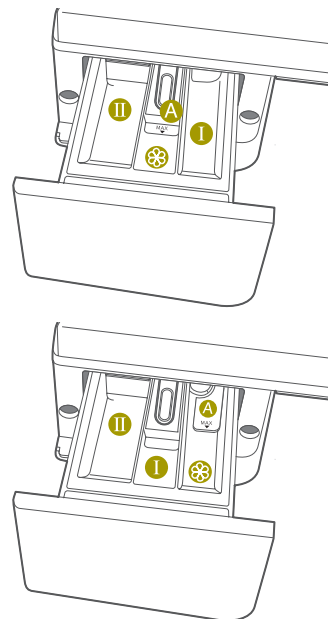

Dispenser ①: Detergent for prewash or starch.

Dispenser ②: Detergent for main wash, water softener, pre-soaking agent, bleach and stain removal product.


Dispenser ⌘: Additives, e.g. fabric softener or former (fill no higher than lower edge of insert "A")

PUTTING DETERGENT IN THE WASHING MACHINE

1. Pull out the detergent drawer.
2. Add laundry detergent into compartment (II).
3. Add softener into compartment (⌘) (if you desire).
4. Add prewash detergent into compartment (I) (if you desire).




Concentrated or thick fabric softener and conditioner must be diluted with a little water before being poured into the dispenser (prevents the overflow from becoming blocked).

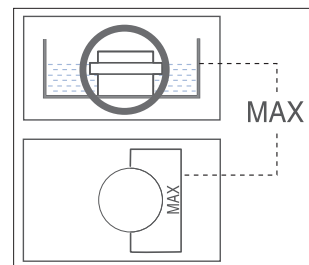

washing a load of laundry

OVERVIEW OF THE CONTROL PANEL

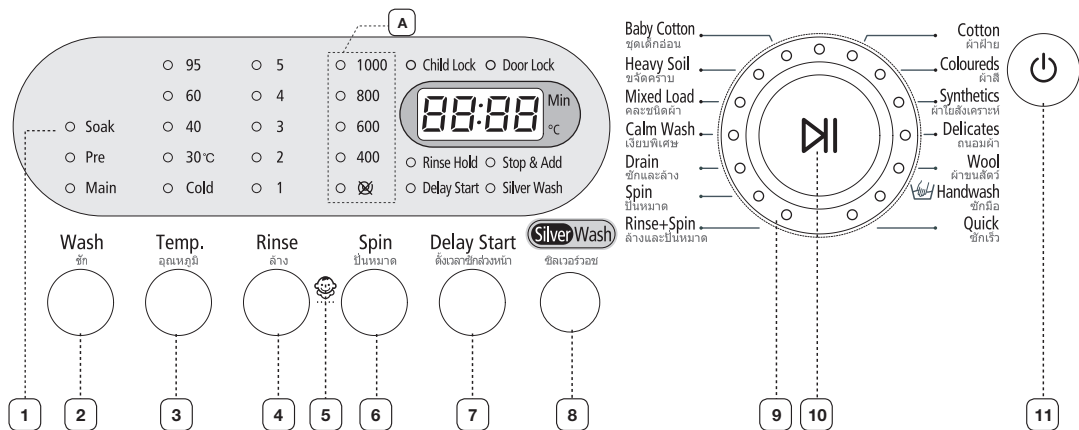

× This is a general manual. The INLAY system may be different from that of the product you purchased. For (A), see item 6 below to select the right specifications that match your product.

1	Digital graphic display	Displays the remaining wash cycle time, all of washing information and error messages.
2	Wash selection button	Press the button to select wash. Wash is available only with Calm Wash, Baby Cotton, Heavy Soil, Mixed Load, Cotton, Coloureds, Synthetics, Delicates.
3	Temperature selection button	Press the button repeatedly to cycle through the available water temperature options (cold water(冰), 30 °C, 40 °C, 60 °C and 95 °C).
4	Rinse selection button	Press the Rinse button to add rinse cycles. Maximum number of rinse cycles is five.
5	Child Lock selection button	This is a button for preventing children from manipulating the washing machine. On/Off - To set the program on: Press the Start/Pause button to turn on the washing machine. Press and hold down the [Rinse]+[Spin] button for 2-3 seconds. It can only be activated when the machine is turned on. Once you set the Child Lock on while in washing, no button is activated until you set it off. Only the POWER button can activate. The Child Lock lamp lights on. To set the program off: Press and hold down the [Rinse]+[Spin] button again for 2-3 seconds, then the lamp lights off and is set off.  Check out the Child Lock button first when no button is activated while the washing machine is working.

6 Spin selection button	Press the button repeatedly to cycle through the available spin speed options.	
	WF8704S6	Rinse Hold,  , 400, 800, 1200, 1400 rpm
	WF8702S6	Rinse Hold,  , 400, 800, 1000, 1200 rpm
	WF8700S6	Rinse Hold,  , 400, 600, 800, 1000 rpm
	WF8708S6	Rinse Hold,  , 400, 600, 800, 800+ rpm
No spin : The laundry remains in the drum without being spun after the final drain Rinse Hold: The laundry remains soaking in the final rinse water. Before the laundry can be unloaded, either “Drain” or the “Spin” program must be run.		
7 Delay Start selection button	Press the button repeatedly to cycle through the available delayed start options (from 4 hour to 24 hours in one hour increments). Displayed hours means the time of finished washing-cycle.	
8  Silver Wash selection button	Silver Wash water is supplied in washing as well as the last rinse, featuring sterilization and antibacterial coating.	
9 Fuzzy Control dial	Turn the dial to select one of the 14 available wash programs: Cotton, Coloureds, Synthetics, Delicates, Wool, Hand Wash, Quick, Rinse+Spin, Spin, Drain, Calm Wash, Baby Cotton, Heavy Soil, Mixed Load	
10  Start/Pause selection button	Press to pause and restart programs. Press the Start/Pause button before adding the laundry. This can only be selected within 5 minutes of the start.	
11  (On/Off) selection button	Press once to turn the washing machine on, press again to turn the washing machine off. If the washing machine power is left on for longer than 10 minutes without any buttons being touched, the power automatically turns off.	


washing a load of laundry

WASHING CLOTHES USING FUZZY LOGIC

Your new washing machine makes washing clothes easy, using Samsung's "Fuzzy Logic" automatic control system. When you select a wash programme, the machine will set the correct temperature, washing time, and washing speed.

To wash clothes using the Fuzzy Logic programs:

1. Turn on your sink's water faucet.
 2. Press the  (On/Off) button.
 3. Press the **Door Open** button and open the door.
 4. Load the articles one at a time loosely into the drum, without overfilling.
 5. Close the door.
 6. Add the detergent, softener, and prewash detergent (if necessary) into the appropriate compartment.
-  Wash is only available when washing Duvet, Bedding, Towel, Curtain, Cotton, Coloureds, Synthetics and Delicates programs. It is only necessary if your clothing is heavily soiled.
7. Turn the Fuzzy Control dial to select the appropriate program for the type of clothes Cotton, Coloureds, Synthetics, Delicates, Wool, Hand wash, Quick, Rinse+Spin, Spin, Drain, Baby Cotton, Heavy Soil, Mixed Load, Calm Wash.
- You will see the indicators light up on the control panel.

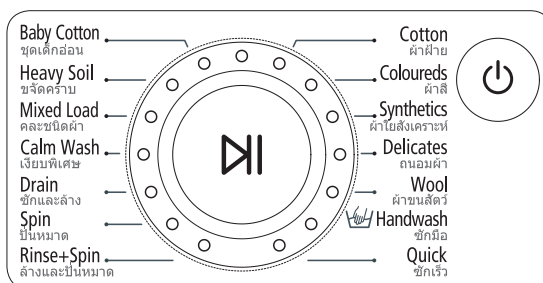

8. At this time, you can control the wash temperature, rinsing times, spin speed, delay time by pressing the appropriate option button.
9. Press the **Start/Pause** button on the Fuzzy Control dial and the wash cycle will begin. The process indicator will light up and the remaining time for the cycle will appear in the display.

When the cycle is finished:

After the total cycle has finished, the power will turn off automatically.

1. Press the **Door Open** button and open the door.

 You cannot open the door if the power turns off.

2. Remove laundry.

USING DELAY START

You can set the washing machine to finish your wash automatically at a later time, choosing from 4 to 24 hour delay (in 1 hour increments). Displayed hours means the time of finished washing-cycle.

To do this:

1. Manually or automatically set your washing machine for the type of clothes you are washing.
2. Press the **Delay Start** button repeatedly until the delay time is set.
3. Press the **Start/Pause** button. The Delay Start indicator will light, and the clock will begin counting down until it reaches your finish time.
4. To cancel "Delay Start", press the  (On/Off) button, then turn the washing machine on again.

WASHING CLOTHES MANUALLY

You can wash clothes manually without using the Fuzzy Logic feature.

To do so:

1. Turn the water supply on.
2. Press the  (On/Off) button on the washing machine.
3. Press the **Door Open** button and open the door.
4. Load the articles one at a time loosely into the drum, without overfilling.
5. Close the door.
6. Put the detergent and, if necessary, softener or prewash detergent, in the appropriate compartments.
7. Press the **Temperature** button to select the temperature. (cold water, 30°C, 40°C, 60°C, 95°C)
8. Press to **Rinse** button to select the required number of rinse cycles.
Maximum number of rinse cycles is five. The washing duration will be prolonged accordingly.
9. Press the **Spin** button to select the spin speed. ( : No Spin)
-  The rinse hold program allows you to take clothes that are dripping wet out of the washing machine.
10. Press the button repeatedly to cycle through the available delayed start options (from 4 hour to 24 hours in one hour increments). Displayed hours means the time of finished washing-cycle.
11. Press the **Start/Pause** button and the machine will begin the cycle.

WASHING TIPS AND HINTS

Sorting your laundry: Sort your laundry according to the following characteristics:

- **Type of fabric care label symbol:** Sort laundry into cottons, mixed fibres, synthetics, silks, wools and rayon.
- **Colour:** Divide whites and colours. Wash new, coloured items separately.
- **Size:** Placing items of different sizes in the same load will improve the washing action.
- **Sensitivity:** Wash delicate items separately, using the Delicate wash programme for pure new wool, curtains and silk articles. Check the labels on the items you are washing or refer to the fabric care chart in the appendix.

Emptying pockets: Coins, safety pins and similar items can damage linen, the washing machine drum, and the water tank.

Securing fasteners: Close zippers and fasten buttons or hooks; loose belts or ribbons should be tied together.

Prewashing cotton: Your new washing machine, combined with modern detergents, will give perfect washing results, thus saving energy, time, water and detergent. However, if your cotton is particularly dirty, use a prewash with a protein-based detergent.

Fabric Type	Load Capacity
	WF8704S6/WF8702S6/WF8700S6/WF8708S6
Coloured/cotton	
-average/lightly soiled	7.0 kg
-heavily soiled	7.0 kg
Synthetics	3.0 kg
Delicates	2.5 kg
Wools	2.0 kg

Detergent tips: The type of detergent you should use is based on the type of fabric (cotton, synthetic, delicate items, wool), colour, wash temperature, degree and type of soiling. Always use “low suds” laundry soap, which is designed for automatic washing machines.


Follow the detergent manufacturer's recommendations based upon the weight of the laundry, the degree of soiling, and the hardness of the water in your area. If you do not know how hard your water is, ask your water authority.

-  Keep detergents and additives in a safe, dry place out of the reach of children.


maintaining the washing machine

DRAINING THE WASHING MACHINE IN AN EMERGENCY

1. Unplug the washing machine from the power supply.
2. Open the filter-cover by using a coin or a key.

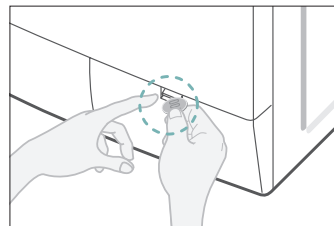

3. Unscrew the emergency drain cap by turning left. Grip the cap on the end of the emergency drain tube and slowly pull it out about 15 cm.
4. Allow all the water to flow into a bowl.
5. Reinsert the drain tube and screw the cap back on.
6. Replace the filter-cover.

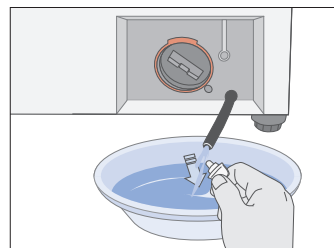

REPAIRING A FROZEN WASHING MACHINE

If the temperature drops below freezing and your washing machine is frozen:


1. Unplug the washing machine.
2. Pour warm water on the source faucet to loosen the water supply hose.
3. Remove the water supply hose and soak it in warm water.
4. Pour warm water into the washing machine drum and let it sit for 10 minutes.
5. Reconnect the water supply hose to the water faucet and check if the water supply and drain operations are normal.

CLEANING THE EXTERIOR

1. Wipe the washing machine surfaces, including the control panel, with a soft cloth and nonabrasive household detergents.
2. Use a soft cloth to dry the surfaces.
3. Do not pour water on the washing machine.

CLEANING THE DETERGENT DRAWER AND RECESS

1. Press the release lever on the inside of the detergent drawer and pull it out.
2. Remove the cap from compartment (⊗).
3. Wash all of the parts under running water.
4. Clean the drawer recess with an old toothbrush.
5. Reinsert the cap (Pushing it firmly into place) and replace the liquid detergent divider into the drawer.
6. Push the drawer back into place.
7. Run a rinse programme without any laundry in the drum.

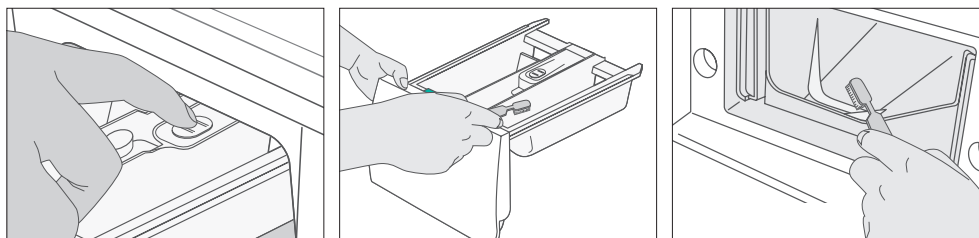

CLEANING THE DEBRIS FILTER


Clean the debris filter 5 or 6 times a year, or when you see the following error message on the display:

5E

1. Open the filter-cover, See "Draining the washing machine in an emergency" on page 16.
2. Unscrew emergency drain cap by turning left and drain off all the water.
See "Draining the washing machine in an emergency" on page 16.
3. Unscrew the filter cap and take it out.



4. Wash any dirt or other material from the filter. Make sure the drain pump propeller behind the filter is not blocked. Replace the filter cap.
5. Replace the filter-cover.

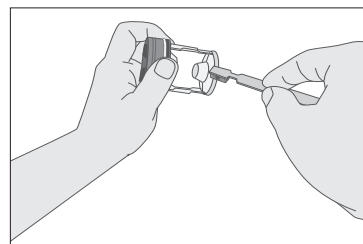

maintaining the washing machine



CLEANING THE WATER HOSE MESH FILTER

You should clean the water hose mesh filter at least one time per year, or when you see the following error message on the display:

4E

To do this:

1. Turn off the water source to the washing machine.
2. Unscrew the hose from the back of the washing machine.
3. With a pair of pliers, gently pull out the mesh filter from the end of the hose and rinse it under water until clean. Also clean the inside and outside of the threaded connector.
4. Push the filter back into place.
5. Screw the hose back onto the washing machine.
6. Turn on the faucet and make sure the connections are watertight.

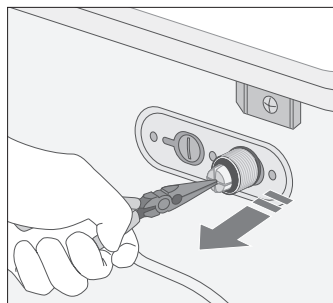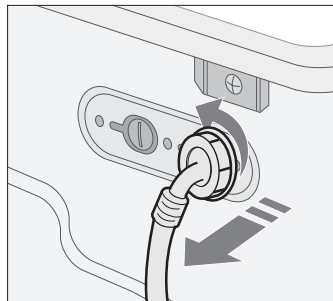

troubleshooting

PROBLEMS AND SOLUTIONS

PROBLEM	SOLUTION
The washing machine will not start	• Make sure the door is firmly closed. • Make sure the washing machine is plugged in. • Make sure the water source faucet is turned on. • Make sure to press the Start/Pause button.
No water or insufficient water supply	• Make sure the water source faucet is turned on. • Make sure the water source hose is not frozen. • Make sure the water intake hose is not bent. • Make sure the filter on the water intake hose is not clogged.
Detergent remains in the detergent drawer after the wash program is complete	• Make sure the washing machine is running with sufficient water pressure. • Put the detergents in the inner parts of the detergent drawer(away from the outside edges).
Washing machine vibrates or is too noisy	• Make sure the washing machine is set on a level surface. If the surface is not level, adjust the washing machine feet to level the appliance. • Make sure that the shipping bolts are removed. • Make sure the washing machine is not touching any other object. • Make sure the laundry load is balanced.
The washing machine does not drain and/or spin	• Make sure the drain hose is not squashed or bent. • Make sure the water hose mesh filter is not clogged.
The Door does not open	• The door will not open until 3 minutes after the machine stops or the power turns off.

UNDERSTANDING ERROR MESSAGES

ERROR CODE	SOLUTION
dE	• Close the door.
4E	• Make sure the source water faucet is turned on. • Check the water pressure.
5E	• Clean the debris filter. • Make sure the drainage hose is installed correctly.
UE	• Laundry load is unbalanced; loosen any tangled laundry. If only one item of clothing needs washing, such as a bathrobe or jeans, the final spin result might be unsatisfactory and an "UE" error message will be shown in the display window.
cE/3E	• Call after-sales service.

Before contacting After-Sales service:

1. Try to remedy the problem (See "Troubleshooting" on this page).
2. Restart the programme to see if the fault is repeated.
3. If the malfunction persists, call after-sales service and describe the problem.

programme chart

PROGRAMME CHART

(● user option)

Program	Max load(kg)	Detergent and additives			Temp (MAX) °C	Spin speed (MAX) rpm				Delay start	Cycle time (min)
	WF8704S6/ WF8702S6/ WF8700S6/ WF8708S6	Prewash	Wash	Softener		WF8704S6	WF8702S6	WF8700S6	WF8708S6		
Cotton	7.0	●	yes	●	95	1400	1200	1000	800+	●	126
Coloureds	7.0	●	yes	●	60	1400	1200	1000	800+	●	99
Synthetics	4.0	●	yes	●	60	800	800	800	800	●	72
Delicates	2.5	●	yes	●	40	800	800	600	600	●	55
Wool	2.0	-	yes	●	40	400	400	400	400	●	40
Handwash	2.0	-	yes	●	40	400	400	400	400	●	35
Quick	3.0	-	yes	●	60	1400	1200	1000	800+	●	47
Baby Cotton	7.0	●	yes	●	95	1400	1200	1000	800+	●	122
Heavy Soil	7.0	●	yes	●	60	1400	1200	1000	800+	●	109
Mixed Load	2.5	●	yes	●	60	800	800	800	800	●	77
Calm Wash	2.5	●	yes	●	40	No Spin				●	98

Program	Type of wash
Cotton	Averagely or lightly soiled cottons, bed linen, table linen, underwear, towels, shirts, etc.
Coloureds	Averagely or lightly soiled cottons, bed linen, table linen, underwear, towels, shirts, etc.
Synthetics	Averagely or lightly soiled blouses, shirts, etc., Made of polyester (diolen, trevira), polyamide (perlon, nylon) or other similar blends.
Delicates	Delicate curtains, dresses, skirts, shirts and blouses.
Wool	Only machine washable woolens with pure new wool label.
Handwash	Very light wash course like hand wash.
Quick	Lightly soiled cottons or linen blouses, shirts, dark coloured terry cloth, coloured linen articles, jeans, etc.
Baby Cotton	Averagely or lightly soiled baby cottons, bed linen, table linen, underwear, towels, shirts, etc.
Heavy Soil	Stained or heavy soiled cottons, bed linen, table linen, underwear, towels, shirts, jeans, etc.
Mixed Load	A mix of lightly soiled cottons and synthetic fabrics.
Calm Wash	Extremely low noise level during the entire cycle and finish rinse hold. Cottons, bed linen, table linen, underwear, towels, shirts.

1. Programme with prewash lasts approx.15 minutes longer.
2. The programme duration data has been measured under the conditions specified in Standard IEC 60456 / EN 60456.
3. Consumption in individual homes may differ from the values given in the table due to variations in the pressure and temperature of the water supply, the load and the type of laundry.

20_ Programme chart

appendix

FABRIC CARE CHART

	Resistant material		Can be ironed at 100°C max
	Delicate fabric		Do not iron
	Item may be washed at 95°C		Can be dry cleaned using any solvent
	Item may be washed at 60°C		Dry clean with perchloride, lighter fuel, pure alcohol or R113 only
	Item may be washed at 40°C		Dry clean with aviation fuel, pure alcohol or R113 only
	Item may be washed at 30°C		Do not dry clean
	Item may be hand washed		Dry flat
	Dry clean only		Can be hung to dry
	Can be bleached in cold water		Dry on clothes hanger
	Do not bleach		Tumble dry, normal heat
	Can be ironed at 200°C max		Tumble dry, reduced heat
	Can be ironed at 150°C max		Do not tumble dry

ELECTRICAL WARNINGS

To reduce the risk of fire, electrical shock, and other injuries, keep these safety precautions in mind:

- Operate the appliance only from the type of power source indicated on the marking label. If you are not sure of the type of power supplied to your home, consult your appliance dealer or local power company.
- Use only a grounded or polarized outlet. This plug will fit into the power outlet only one way. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug still doesn't fit, contact your electrician to replace your outlet.
- Protect the power cord. Power supply cords should be routed so that they are unlikely to be walked on or pinched by items placed on or against them. Pay particular attention to cords at plugs, convenience receptacles, and the point where they exit from the unit.
- Do not overload the wall outlet or extension cords. Overloading can result in fire or electric shock.

PROTECTING THE ENVIRONMENT

- This appliance is manufactured from recyclable materials. If you decide to dispose of this appliance, please observe local waste disposal regulations. Cut off the power cord so that the appliance cannot be connected to a power source. Remove the door so that animals and small children cannot get trapped inside the appliance.
- Do not exceed the detergent quantities recommended in the detergent manufacturers' instructions.
- Use stain removal products and bleaches before the wash cycle only when strictly necessary.
- Save water and electricity by only washing full loads (the exact amount depends upon the program used).

appendix

DECLARATION OF CONFORMITY

This appliance complies with European safety standards, EC directive 93/68 and EN Standard 60335.

SPECIFICATION

TYPE			FRONT LOADING WASHER					
DIMENSION			WF8704S6/WF8702S6/WF8700S6/WF8708S6					
			W598mm X D600mm X H844mm					
WATER PRESSURE			50 kPa ~ 800 kPa					
WATER VOLUME			60 ℓ					
NET WEIGHT	MODEL		WF8704S6/WF8702S6		WF8700S6/WF8708S6			
	PAPER		71 kg		70 kg			
WASH and SPIN CAPACITY			7.0 kg (DRY LAUNDRY)					
POWER CONSUMPTION			MODEL		WF8704S6/WF8702S6/WF8700S6/WF8708S6			
			WASHING AND HEATING		220 V		2000 W	
					240 V		2400 W	
			SPIN	MODEL	WF8704S6	WF8702S6	WF8700S6	WF8708S6
				230 V	700W	360W	320W	270W
PUMPING			34 W					
PACKAGE Wt			PAPER		2.1 kg			
			PLASTIC		1.0 kg			
SPIN REVOLUTION			MODEL		WF8704S6	WF8702S6	WF8700S6	WF8708S6
			rpm		1400	1200	1000	800

memo

06 memo



QUESTIONS OR COMMENTS?

Country	CALL	OR VISIT US ONLINE AT
THAILAND	1800-29-3232 02-689-3232	www.samsung.com/th

Code No. DC68-02376P_EN

WF8704S6(W/V/S/C/R)

WF8702S6(W/V/S/C/R)

WF8700S6(W/V/S/C/R)

WF8708S6(W/V/S/C/R)

เครื่องซักผ้า คู่มือผู้ใช้

imagine the possibilities

ขอขอบคุณที่เลือกซื้อผลิตภัณฑ์ Samsung

ในการรับบริการที่ครบครันยิ่งขึ้น

โปรดลงทะเบียนผลิตภัณฑ์ได้ที่

www.samsung.com/register

SAMSUNG

คุณสมบัติ

- **ลือค้บ้กัันเค็ก**
ฟังก์ชันลือค้บ้กัันเค็กช่วยบ้กัันมือไม่ให้มือน้อยๆ ที่ชุกชนสามารถเปิดเครื่องช้กผ้าได้โดยมือตั้งใจ คุณลักษณะเพื่อความปลอดภัยนี้ช่วยให้มั่นใจได้ว่าเค็กๆ ไม่เล่นกัับการท้งานของเครื่องช้กผ้า และยังเตือนให้ค้บ้กัันท้งานเมือมีการใช้งาน
- **ช้กมือ**
ผ้าที่อาจเสียหยัง่าย เช่นผ้าลินินหรือไหม สามารถช้กได้อย่างอ่อนโยนเหมือนกัับช้กด้วยมือ
- **ตั้งเวลาช้กล้งหน้า**
ฟังก์ชันนี้ช่วยให้ผู้ใช้สามารถตั้งเวลาล้งหน้าสำหรับการท้งานของเครื่องช้กผ้าได้ถึง 24 ชั่วโมง
- **ขจัดคราบ**
โปรแกรมนี้เหมาะสำหรับผ้าฝ้าย ผ้าปูที่นอน ผ้าปูโต๊ะ ชุดชั้นใน ผ้าขนหนู เชิ้ต ยีนส์ ฯลฯ ที่สกปรกมาก

ข้อมูลเกี่ยวกับความปลอดภัย

ในคู่มือเล่มนี้ คุณจะพบกับคำเตือน และข้อควรระวัง

ซึ่งข้อมูลเหล่านี้ตลอดจนข้อมูลสำคัญด้านความปลอดภัยต่อไปนี้ได้ครอบคลุมถึงเงื่อนไขและสถานการณ์ทั้งหมดที่อาจเกิดขึ้น
คุณมีหน้าที่จะต้องใช้สามัญสำนึก ความระมัดระวัง และใส่ใจกับการติดตั้ง บำรุงรักษา และใช้งานเครื่องซักผ้า Samsung ไม่มี
ส่วนรับผิดชอบต่อความเสียหายที่เกิดจากการใช้งานอย่างไม่เหมาะสม

สัญลักษณ์และคำเตือนเพื่อความปลอดภัยที่สำคัญ

ความหมายของสัญลักษณ์และเครื่องหมายในคู่มือผู้ใช้:

 คำเตือน	อันตรายหรือการกระทำที่ไม่ปลอดภัยที่อาจทำให้เกิด การบาดเจ็บสาหัสหรือเสียชีวิต
 ข้อควรระวัง	อันตรายหรือการกระทำที่ไม่ปลอดภัยที่อาจทำให้เกิด การบาดเจ็บหรือทรัพย์สินเสียหาย
 ข้อควรระวัง	ในการลดความเสี่ยงจากไฟ การระเบิด ไฟฟ้าช็อต หรือการบาดเจ็บขณะใช้เครื่องซักผ้า โปรดปฏิบัติตามข้อควรระวังเพื่อความปลอดภัยต่อไปนี้:

ก่อนที่จะใช้อุปกรณ์



ข้อควรระวัง

บรรจุภัณฑ์อาจเป็นอันตรายต่อเด็ก โปรดเก็บบรรจุภัณฑ์ทั้งหมด (ถุงพลาสติก โฟม ฯลฯ) ให้พ้นมือเด็ก

อุปกรณ์นี้ได้รับการออกแบบสำหรับใช้ในบ้านพักอาศัยเท่านั้น

โปรดให้ช่างผู้มีความชำนาญเป็นผู้ต่อหน้าและสายไฟ โปรดปฏิบัติตามคำแนะนำของผู้ผลิต (โปรดดูที่ "การติดตั้งเครื่องซักผ้า") และ
ระมัดระวังด้วยความปลอดภัยของเขตพื้นที่

โปรดนำหมุดของบรรจุภัณฑ์ที่ใช้ในการขนส่งออกก่อนที่จะใช้อุปกรณ์ มิฉะนั้นอาจเกิดความเสียหายแก่อุปกรณ์อย่างร้ายแรง ดูที่ "การถอดหมุด
สำหรับการขนส่ง"

ก่อนที่จะซักผ้าเป็นครั้งแรก คุณต้องเปิดเครื่องให้ทำงานครบทุกขั้นตอนโดยไม่ใส่ผ้า โปรดดูที่ "การซักครั้งแรก"

คำแนะนำเพื่อความปลอดภัย



คำเตือน

ก่อนที่จะทำความสะอาดหรือดูแลรักษาเครื่อง โปรดถอดปลั๊กของเครื่องออกจากแหล่งจ่ายไฟ หรือปิดเครื่องที่ปุ่ม เปิด/ปิด (ⓘ)

ตรวจสอบว่าไม่มีสิ่งใดอยู่ในกระเป๋าสีผ้าที่จะซัก ของแข็ง ของมีคม เช่น เหรียญ เข็มกลัด ตะปู ตะปูควง หรือก้อนหินอาจทำให้เกิดความ
เสียหายแก่อุปกรณ์ได้

ถอดปลั๊กของเครื่องและปิดน้ำทุกครั้งหลังจากใช้งาน

ก่อนที่จะเปิดฝาเครื่อง โปรดตรวจสอบว่าน้ำไหลออกหมดแล้ว โปรดอย่าเปิดประตูหากยังเห็นน้ำภายใน

ข้อมูลเกี่ยวกับความปลอดภัย

สัตว์เลี้ยงและเด็กเล็กอาจเป็นเข้าสู่เครื่องซักผ้า โปรดตรวจสอบเครื่องทุกครั้งก่อนใช้งาน

ประตูกระจกจะร่อนจัด ระหว่างกระบวนการซัก โปรดอย่าให้เด็กเข้าใกล้เครื่องขณะที่ใช้งาน

โปรดอย่าซ่อมแซมเครื่องด้วยตนเอง การซ่อมแซมโดยผู้ที่ไม่ชำนาญอาจทำให้เกิดการบาดเจ็บ และ/หรือทำให้อุปกรณ์เกิดความเสียหายอย่างรุนแรง

กรณีที่เกิดไฟไหม้ (สายไฟฟ้า) ของเครื่องใช้ไฟฟ้านี้เกิดเสียหาย ต้องให้ผู้ผลิต ตัวแทนให้บริการ หรือผู้ที่มีความชำนาญเป็นผู้เปลี่ยนสายไฟ เพื่อไม่ให้เกิดอันตราย

อุปกรณ์นี้ควรได้รับการซ่อมบำรุงโดยศูนย์บริการที่ได้รับอนุญาต และควรใช้เฉพาะอะไหล่ที่เป็นของแท้เท่านั้น



คำเตือน

อุปกรณ์นี้ไม่เหมาะสำหรับบุคคล (รวมถึงเด็ก) ที่มีสมรรถภาพร่างกาย ประสาทสัมผัส หรือสภาพจิตไม่เป็นปกติ หรือขาดประสบการณ์หรือความรู้ ยกเว้นจะได้รับการดูแลหรือได้รับคำแนะนำในการใช้งานโดยบุคคลที่รับหน้าที่ดูแล

โปรดดูแลมิให้เด็กเล่นกับอุปกรณ์นี้

อุปกรณ์นี้จะต้องต่อกับปลั๊กไฟที่ทนต่อปริมาณกระแสไฟฟ้าที่ใช้

อุปกรณ์นี้ต้องอยู่ในตำแหน่งที่สามารถเอื้อมถึงปลั๊กได้หลังจากติดตั้ง

ห้ามใช้น้ำผ่านกระบวนการ ซึ่งประกอบด้วยน้ำมัน ครีม หรือโลชั่น ซึ่งมักพบในร้านดูแลผิวพรรณหรือร้านนวด

- มิฉะนั้นจะทำให้วัสดุเกิดความเสียหาย และทำให้เกิดการทำงานผิดพลาดหรือน้ำรั่ว

ตามปกติ ถึงซักสแตนเลสจะไม่ขึ้นสนิม แต่ถ้ามีโลหะ เช่น กีบติดผมหงเหลืองอยู่ในถังซักเป็นเวลานาน ถึงอาจเป็นสนิมได้

- ห้ามทิ้งให้น้ำหรือสารฟอกขาวที่มีคลอรีนเหลืออยู่ในถังซักเป็นเวลานาน
- ห้ามใช้หรือทิ้งน้ำที่มีโลหะเหลืออยู่ในถังซักเป็นเวลานาน
- หากถังซักเริ่มมีลักษณะเป็นสนิมที่พื้นผิว ให้ใช้สารทำความสะอาด (ไม่เป็นกรดหรือด่าง) กับพื้นผิว และใช้ฟองน้ำหรือผ้านุ่มทำความสะอาด (ห้ามใช้แปรงขนลวดเด็ดขาด)

สำหรับเครื่องซักผ้าที่มีช่องระบายอากาศที่ฐาน โปรดอย่าให้พรมปิดกั้นช่องนี้

ใช้ชุดท่อใหม่ ไม่ควรนำชุดท่อเดิมกลับมาใช้ใหม่

สารบัญ

การติดตั้งเครื่องซักผ้า

6

- 6 การนำเครื่องซักผ้าออกจากบรรจุภัณฑ์
- 6 ภาพรวมของเครื่องซักผ้า
- 6 การเลือกที่ตั้ง
- 7 การปรับขาตั้ง
- 7 การถอดหมุดสำหรับการขนส่ง
- 8 การต่อท่อจ่ายน้ำ
- 8 การจัดวางท่อน้ำทิ้ง
- 9 การต่อท่อจ่ายน้ำ (อุปกรณ์เสริม)
- 10 การต่อสายไฟเครื่องซักผ้า

การซักผ้า

11

- 11 การซักครั้งแรก
- 11 การใส่ผงซักฟอกในเครื่องซักผ้า
- 12 ภาพรวมของแผงควบคุม
- 14 การซักโดยใช้ฟิชชีล่อจิก
- 14 การตั้งเวลาซักล่วงหน้า
- 15 การซักด้วยตนเอง
- 15 คำแนะนำและเคล็ดลับในการซักผ้า

การบำรุงรักษาเครื่องซักผ้า

16

- 16 การทิ้งน้ำเมื่อเกิดเหตุฉุกเฉิน
- 16 การซ่อมแซมเครื่องซักผ้าหากน้ำแข็งตัว
- 16 การทำความสะอาดภายนอก
- 17 การทำความสะอาดช่องใส่และที่พักผงซักฟอก
- 17 การทำความสะอาดตัวกรองเศษผ้า
- 18 การทำความสะอาดตัวกรองท่อจ่ายน้ำ

การแก้ไขปัญหา

19

- 19 ปัญหาและทางแก้ไข
- 19 การอ่านข้อความแสดงข้อผิดพลาด

ผังโปรแกรม

20

- 20 ผังโปรแกรม

ภาคผนวก

21


- 21 ผังการดูแลผ้า
- 21 คำเตือนเกี่ยวกับไฟฟ้า
- 21 การปกป้องสิ่งแวดล้อม
- 22 ประกาศเกี่ยวกับมาตรฐาน
- 22 ข้อมูลจำเพาะ

การติดตั้งเครื่องซักผ้า


การนำเครื่องซักผ้าออกจากบรรจุภัณฑ์

นำเครื่องซักผ้าออกจากบรรจุภัณฑ์ และตรวจสอบความเสียหายที่อาจเกิดจากการขนส่ง และตรวจสอบว่าคุณได้รับสินค้าครบถ้วนตามที่แสดงด้านล่างนี้ หากเครื่องซักผ้ามีความเสียหายระหว่างการขนส่ง หรือคุณได้รับสินค้าไม่ครบ โปรดติดต่อตัวแทนจำหน่ายของ Samsung ทันที

ภาพรวมของเครื่องซักผ้า

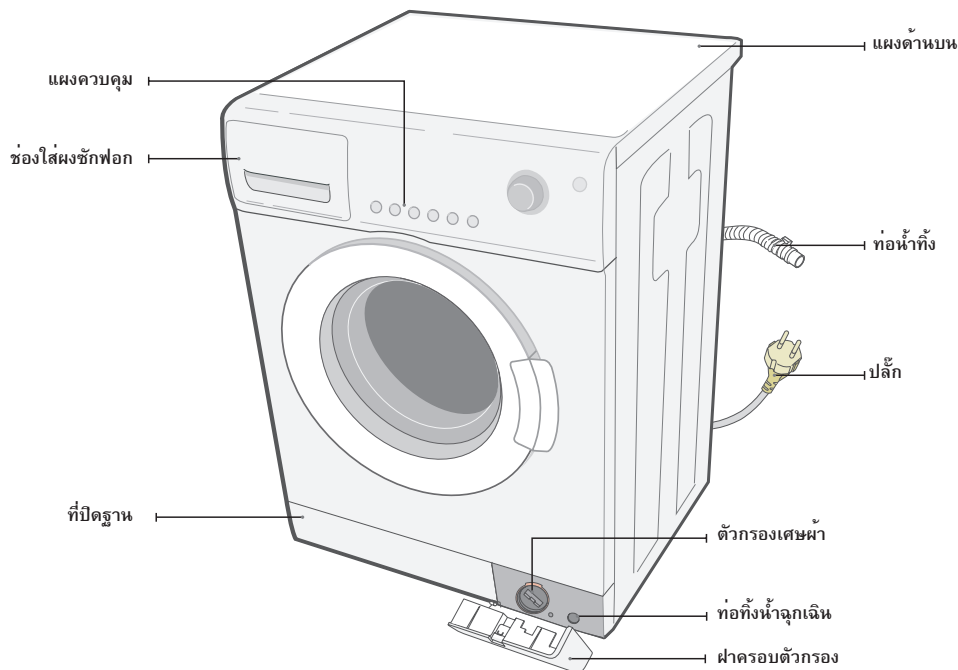


ประแจ



ท่อน้ำเข้า



ตัวน้ำท่



ที่ปิดช่องใส่หมุด

การเลือกที่ตั้ง

ก่อนที่จะติดตั้งเครื่องซักผ้า โปรดเลือกตำแหน่งที่ตั้งตามลักษณะดังนี้

- พื้นแข็ง ราบเสมอกัน (หากพื้นไม่เสมอกัน โปรดดูที่ "การปรับขาตั้ง" หน้านี้)
- พื้นจากแสงแดดโดยตรง
- มีการระบายอากาศดี
- อุณหภูมิห้องไม่ต่ำกว่า 0 องศาเซลเซียส
- พื้นจากแหล่งความร้อนเช่นเตาถ่านหรือแก๊ส

อย่าให้เครื่องซักผ้าตั้งทับสายไฟ


ช่องระบายความร้อนจะต้องไม่ถูกอุดตันหรือกีดขวางโดยพรม เมื่อติดตั้งเครื่องซักผ้าบนพื้นที่ปูพรม

การปรับขาตั้ง

หากพื้นไม่เรียบเสมอกัน ให้ปรับขาตั้ง (โปรดอย่าสอดชิ้นไม้หรือสิ่งอื่นใดใต้ขาตั้ง)

1. คลายเกลียวของขาตั้ง โดยใช้มือหมุนจนได้ความสูงตามต้องการ
2. ขันน็อตล็อกโดยหมุนด้วยประแจที่เหมาะสม
 - ตั้งเครื่องซักผ้าไว้บนพื้นผิวที่เรียบเสมอกัน


หากตั้งเครื่องซักผ้าบนพื้นผิวที่เรียบไม่เสมอกันหรือไม่แข็งแรง เครื่องจะมีเสียงหรือสั่นขณะทำงาน (เสียงได้ 1 องศาเท่านั้น)

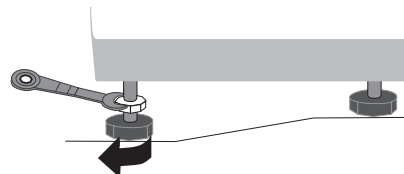


การถอดหมุดสำหรับการขนส่ง

ก่อนที่จะติดตั้งเครื่องซักผ้า คุณต้องนำหมุดสำหรับการขนส่งสี่ตัวออกจากด้านหลังของเครื่อง


1. คลายหมุดด้วยประแจที่เหมาะสม

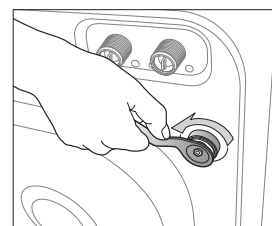

2. ดึงส่วนหัวของหมุดออกจากส่วนกว้างของช่อง ทำตามขั้นตอนนี้สำหรับหมุดแต่ละตัว

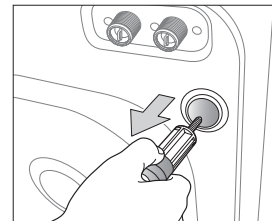

3. นำฝาปิดพลาสติกที่เหมาะสมใส่ในช่อง

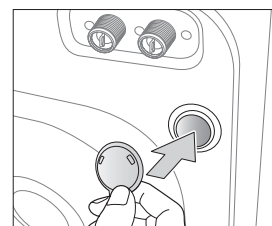

4. เก็บหมุดสำหรับขนส่งไว้ต่างหากในกรณีที่คุณต้องการย้ายเครื่องซักผ้าในอนาคต



บรรจุภัณฑ์อาจเป็นอันตรายต่อเด็ก โปรดเก็บบรรจุภัณฑ์ทั้งหมด (ถุงพลาสติก โฟม ฯลฯ) ให้พ้นมือเด็ก

คำเตือน


การติดตั้งเครื่องซักผ้า

การต่อท่อจ่ายน้ำ

ท่อจ่ายน้ำจะต้องต่อเข้ากับเครื่องซักผ้าและต่อปลายอีกด้านเข้ากับก๊อกน้ำ โปรดอย่าดึงท่อจ่ายน้ำจนตึง หากท่อน้ำเกินเกินไป และคุณไม่ต้องการย้ายก๊อกน้ำ โปรดเปลี่ยนไปใช้ท่อแรงดันสูงที่ยาวขึ้น

ในการการต่อท่อจ่ายน้ำ

1. นำข้อต่อรูปตัว L สำหรับท่อจ่ายน้ำเย็นมาต่อเข้ากับท่อน้ำเย็นที่ด้านหลังของเครื่องซักผ้า ใช้มือหมุนให้แน่น

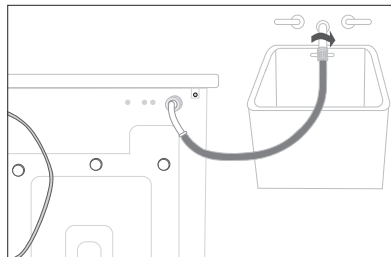

2. ต่อปลายอีกด้านเข้ากับก๊อกน้ำเย็นที่อ่างซักล้าง และขันให้แน่นด้วยมือ หากจำเป็น คุณสามารถจัดตำแหน่งของท่อจ่ายน้ำที่เครื่องซักผ้า โดยคลายข้อต่อ หมุนสาย และขันข้อต่อเข้าที่อีกครั้ง

อุปกรณ์เสริม:


1. นำข้อต่อรูปตัว L สำหรับท่อจ่ายน้ำเย็นมาต่อเข้ากับท่อน้ำเย็นที่ด้านหลังของเครื่องซักผ้า ใช้มือหมุนให้แน่น
2. ต่อปลายอีกด้านเข้ากับก๊อกน้ำเย็นที่อ่างซักล้าง และขันให้แน่นด้วยมือ
3. ใช้อุปกรณ์รูปตัว Y เฉพาะหากคุณต้องการใช้น้ำเย็น

การจัดวางท่อน้ำทิ้ง

ปลายของท่อน้ำทิ้งจะสามารถอยู่ในตำแหน่งต่อไปนี้

เหนือขอบอ่างซักล้าง

ท่อน้ำทิ้งจะต้องมีความสูงระหว่าง 60 ถึง 90 ซม. ในการติดตั้งให้ท่อน้ำทิ้งโค้งโดยไม่พับ ให้ใช้ตัวนำท่อที่ใหญ่กว่า ยึดท่อเข้ากับผนังด้วยขอยึด หรือยึดเข้ากับก๊อกน้ำโดยใช้เชือก เพื่อไม่ให้ท่อน้ำทิ้งเคลื่อนตัว

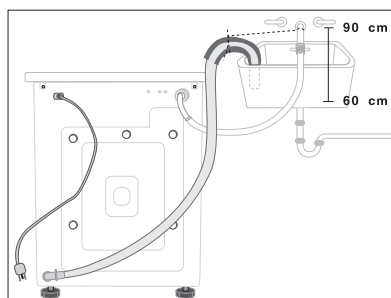

ท่อแยกน้ำทิ้งของอ่างซักล้าง

ท่อแยกน้ำทิ้งจะต้องอยู่เหนือท่อพักของอ่าง เพื่อให้ปลายท่ออยู่เหนือพื้นดินอย่างน้อย 60 ซม.

ในท่อน้ำทิ้ง

Samsung ขอแนะนำให้คุณใช้ท่อแนวตั้งความสูง 65 ซม. ซึ่งจะต้องไม่สั้นกว่า 60 ซม. และไม่ยาวเกิน 90 ซม.

การต่อท่อจ่ายน้ำ (อุปกรณ์เสริม)


1. ถอดข้อต่อออกจากท่อจ่ายน้ำ




2. ใช้ไขควงแบบ "+" คลายสกรูที่ตัวแปลง ถัดจากนั้น ให้นำตัวแปลงมาหมุนส่วน (b) ตามลูกศร จนมีช่องว่าง 5 มม.




3. ดึงตัวแปลงเข้ากับก๊อกน้ำโดยขันสกรูให้แน่น จากนั้น หมุนส่วน (b) ตามลูกศร และติดสกรู (a) และ (b) เข้าด้วยกัน




4. ให้ท่อจ่ายน้ำเข้ากับข้อต่อตัวแปลง ดึงส่วน (c) ของท่อจ่ายน้ำลง เมื่อปล่อยส่วน (c) แล้ว ท่อจะตอกเข้ากับตัวแปลงโดยอัตโนมัติ โดยมีเสียง "คลิก"



5. ต่อปลายอีกด้านของท่อจ่ายน้ำเข้ากับวาล์วน้ำเข้าที่ด้านหลังของเครื่อง ใช้ท่อตามเข็มนาฬิกาจนสุด



- หากก๊อกน้ำมีปากเป็นเกลียว ให้ต่อท่อจ่ายน้ำเข้ากับก๊อกตามภาพ



 หลังจากเชื่อมต่อแล้ว หากน้ำรั่วไหลจากท่อ ให้ทำตามขั้นตอนข้างต้นซ้ำ ใช้ก๊อกน้ำแบบทั่วไประบายน้ำ หากก๊อกน้ำเป็นแบบเหลี่ยมหรือใหญ่เกินไป ให้นำวงแหวนออกก่อนที่จะต่อกับตัวแปลง

การติดตั้งเครื่องซักผ้า

การต่อสายไฟเครื่องซักผ้า

คำแนะนำในการเดินสาย

- คำเตือน อุปกรณ์นี้จะต้องได้รับการลงกราวด์

อุปกรณ์นี้จะต้องได้รับการลงกราวด์ ในกรณีที่เกิดไฟฟ้าช็อต การลงกราวด์จะช่วยลดอันตรายจากกระแสไฟฟ้า ทำให้มีช่องทางไหลของกระแส

อุปกรณ์นี้มีสายไฟหลักซึ่งประกอบด้วยสายกราวด์สำหรับต่อกับขั้วกราวด์ของปลั๊กสายไฟหลัก

ปลั๊กไฟจะต้องเข้ากับเต้าเสียบที่มีการติดตั้งและลงกราวด์อย่างเหมาะสม

- * โปรดขอคำแนะนำจากช่างไฟฟ้าที่มีความชำนาญ หากมีข้อสงสัยเกี่ยวกับคำแนะนำเหล่านี้ ผู้ผลิตเครื่องซักผ้านี้จะไม่รับผิดชอบต่อความเสียหายหรือการบาดเจ็บของบุคคลและทรัพย์สินอันเกิดจากการไม่ปฏิบัติตามข้อกำหนดเหล่านี้ ภายในเครื่องซักผ้าไม่มีส่วนที่ผู้ใช้สามารถซ่อมบำรุงด้วยตนเอง และหากสายไฟของเครื่องเสียหาย จะต้องมีการเปลี่ยนแทนโดยช่างที่มีความชำนาญ และได้รับการอนุมัติจากผู้ผลิต เนื่องจากจะต้องอาศัยเครื่องมือเฉพาะ


การซักผ้า

การซักครั้งแรก

ก่อนที่จะซักผ้าเป็นครั้งแรก คุณต้องเปิดเครื่องให้ทำงานครบทุกขั้นตอนโดยไม่ใส่ผ้า

โดยดำเนินการดังนี้

1. กดปุ่ม ① (เปิด/ปิด)
2. เทผงซักฟอกเล็กน้อยในช่องใส่ ②
3. เปิดน้ำเข้าสู่เครื่องซักผ้า
4. กดปุ่มอุณหภูมิซักๆ จนเครื่องแสดงอุณหภูมิ 40 องศาเซลเซียส
5. กดปุ่ม เริ่ม/หยุด
 - ซึ่งจะเป็นการทิ้งน้ำที่หลงเหลืออยู่จากการทดสอบเครื่องของผู้ผลิต

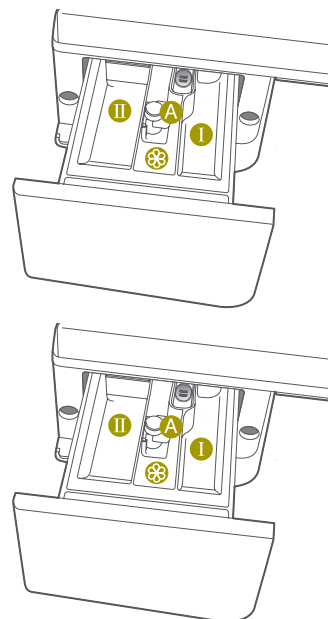

ช่องใส่ ①: ผงซักฟอกสำหรับการแช่ก่อนซัก

ช่องใส่ ②: ผงซักฟอกสำหรับการซัก น้ำยาปรับสภาพน้ำ สารแช่ผ้า สารฟอกขาว และสารจัดคราบ


ช่องใส่ ③: สารเพิ่มเติม เช่น น้ำยาปรับผ้านุ่มหรือรักษารูปทรงผ้า (ห้ามเติมเกินขีดด้านล่างของแผ่น "A")

การใส่ผงซักฟอกในเครื่องซักผ้า

1. ดึงช่องใส่ผงซักฟอกออก
2. เติมสารซักฟอกในช่อง ②
3. เติมน้ำยาปรับผ้านุ่มในช่อง ③ (หากต้องการ)
4. เติมน้ำยาแช่ผ้าในช่อง ① (หากต้องการ)




น้ำยาปรับผ้านุ่มชนิดเข้มข้นจะต้องมีการเจือจางด้วยน้ำสะอาด ก่อนที่จะเทลงในช่องใส่ (เพื่อให้ช่องว่างไหลสุดตัน)

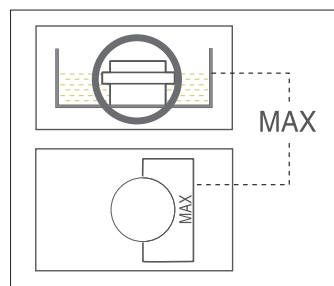

การซักผ้า

ภาพรวมของแผงควบคุม

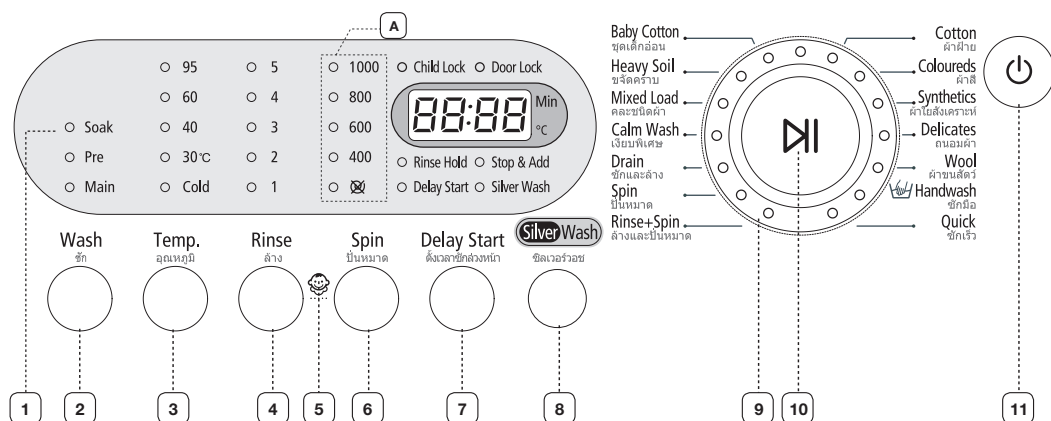

※ นี่คือนิ้วมือทั่วไป ระบบข้อความของเครื่องในคู่มือนี้อาจแตกต่างไปจากของผลิตภัณฑ์ที่คุณซื้อ สำหรับ (A) โปรดดูข้อ 6 ด้านล่าง เพื่อเลือกข้อมูลจำเพาะที่เหมาะสมกับผลิตภัณฑ์ของคุณ

1	จอแสดงผลดิจิทัล	แสดงเวลาของรอบการซักที่เหลือ ข้อมูลการซัก และข้อความแสดงข้อผิดพลาด
2	ปุ่มเลือกซัก	กดปุ่มนี้เพื่อเลือกการซัก ซึ่งมีให้เลือกเฉพาะ เจียมนพิเศษ ซูดเด็กอ่อน ขจัดคราบ คละชนิดผ้า ผ้าฝ้าย ผ้าสี ผ้าใยสังเคราะห์ ถนอมผ้า
3	ปุ่มเลือกอุณหภูมิ	กดปุ่มซ้ำๆ เพื่อสลับตัวเลือกอุณหภูมิที่มีให้ (น้ำเย็น (S), 30 °C, 40 °C, 60 °C และ 95 °C)
4	ปุ่มเลือกล้าง	กดปุ่ม ล้าง เพื่อเพิ่มรอบการล้างน้ำ จำนวนรอบการล้างสูงสุดคือห้ารอบ
5	ปุ่มล็อกป้องกันเด็ก	ปุ่มนี้ใช้สำหรับป้องกันไม่ให้เด็กเล่นเครื่องซักผ้า เปิด/ปิด - เพื่อตั้งค่าโปรแกรม: กดปุ่ม เริ่ม/หยุด เพื่อเปิดเครื่องซักผ้า กดปุ่ม "ล้าง" + "ปั่นหมาด" ค้างไว้เป็นเวลา 2-3 วินาที ซึ่งจะสามารถใช้งานได้เมื่อเครื่องเปิดอยู่ เมื่อคุณเปิดใช้การล็อกป้องกันเด็กขณะซักผ้า จะไม่สามารถใช้ปุ่มอื่นๆ ได้อีกจนกว่าจะปิดฟังก์ชันนี้ สามารถใช้งานได้เฉพาะปุ่ม เปิด/ปิด ไฟสัญญาณของการล็อกป้องกันเด็กจะสว่าง ในการปิดโปรแกรม: ให้กดปุ่ม "ล้าง" + "ปั่นหมาด" ค้างไว้อีกครั้งเป็นเวลา 2-3 วินาที จากนั้นไฟสัญญาณจะดับลง  ตรวจสอบปุ่ม ล็อกป้องกันเด็ก เป็นขั้นแรกเมื่อไม่สามารถใช้ปุ่มใดได้ขณะที่เครื่องซักผ้าทำงาน

6 ปุ่มเลือก ปั่นหมาด	กดปุ่มนี้ซ้ำเพื่อเลือกตัวเลือกความเร็วในการปั่น <table border="1"> <tr> <td>WF8704S6</td><td>Rinse Hold, ☒ 400, 800, 1200, 1400 รอบต่อนาที</td></tr> <tr> <td>WF8702S6</td><td>Rinse Hold, ☒ 400, 800, 1000, 1200 รอบต่อนาที</td></tr> <tr> <td>WF8700S6</td><td>Rinse Hold, ☒ 400, 600, 800, 1000 รอบต่อนาที</td></tr> <tr> <td>WF8708S6</td><td>Rinse Hold, ☒ 400, 600, 800, 800+ รอบต่อนาที</td></tr> </table> ไม่ปั่นหมาด ☒: ผ้าจะอยู่ในถังซักโดยไม่มีการปั่นหลังจากที่น้ำสุดท้ายแล้ว หยุดการล้างน้ำ: ผ้าจะแช่น้ำสุดท้าย ก่อนที่จะนำผ้าออกจากเครื่อง จะต้องมีการใช้โปรแกรม "ซักและล้าง" หรือ "ปั่นหมาด" ก่อน	WF8704S6	Rinse Hold, ☒ 400, 800, 1200, 1400 รอบต่อนาที	WF8702S6	Rinse Hold, ☒ 400, 800, 1000, 1200 รอบต่อนาที	WF8700S6	Rinse Hold, ☒ 400, 600, 800, 1000 รอบต่อนาที	WF8708S6	Rinse Hold, ☒ 400, 600, 800, 800+ รอบต่อนาที
WF8704S6	Rinse Hold, ☒ 400, 800, 1200, 1400 รอบต่อนาที								
WF8702S6	Rinse Hold, ☒ 400, 800, 1000, 1200 รอบต่อนาที								
WF8700S6	Rinse Hold, ☒ 400, 600, 800, 1000 รอบต่อนาที								
WF8708S6	Rinse Hold, ☒ 400, 600, 800, 800+ รอบต่อนาที								
7 ปุ่มตั้งเวลาซักล่วงหน้า	กดปุ่มนี้ซ้ำๆ เพื่อเลือกตัวเลือกเวลาเริ่มต้นที่ใช้ได้ (ตั้งแต่ 4 ชั่วโมงถึง 24 ชั่วโมง โดยเพิ่มได้ครั้งละหนึ่งชั่วโมง) จำนวนชั่วโมงที่แสดงหมายถึงเวลาของรอบการซักที่เสร็จแล้ว								
8 ปุ่มเลือกซิลเวอร์วอช	เครื่องจะเติมน้ำซิลเวอร์วอชในการซักและการล้างน้ำสุดท้าย เพื่อให้มีการฆ่าเชื้อและต่อต้านแบคทีเรีย								
9 ปุ่มพีชชีคอนโทรล	หมุนปุ่มเพื่อเลือกโปรแกรมซักที่ใช้ได้ 14 โปรแกรม: ผ้าฝ้าย ผ้าสี ผ้าใยสังเคราะห์ ถนอมผ้า ผ้าขนสัตว์ ซักมือ ซักเร็ว ล้างและปั่นหมาด ปั่นหมาด ซักและล้าง เจียบบพิเศษ ชุดเด็กอ่อน ขจัดคราบ คละชนิดผ้า								
10  ปุ่มเลือกเริ่ม/พัก	กดปุ่มนี้เพื่อเริ่มต้นและหยุดโปรแกรมต่างๆ กดปุ่ม เริ่ม/หยุด ก่อนที่จะเพิ่มผ้า สามารถเลือกได้ภายใน 5 นาทีนับจากการเริ่มต้นเท่านั้น								
11  ปุ่มเปิด/ปิด	กดปุ่มนี้หนึ่งครั้งเพื่อเปิดเครื่องซักผ้า และกดอีกครั้งเพื่อปิดเครื่อง หากเครื่องซักผ้าถูกเปิดทิ้งไว้นานกว่า 10 นาทีโดยไม่มีการกดปุ่มใดๆ เครื่องจะปิดเองโดยอัตโนมัติ								

การซักผ้า

การซักโดยใช้พัชชีลลิจ

เครื่องซักผ้าของคุณทำให้งานซักกลายเป็นเรื่องง่าย ด้วยระบบควบคุมอัตโนมัติ "พัชชีลลิจ" ของ Samsung เมื่อคุณเลือกโปรแกรมซัก เครื่องจะกำหนดอุณหภูมิ เวลา ซัก และความเร็วในการซักให้


ในการซักผ้าโดยใช้โปรแกรมพัชชีลลิจ

1. เปิดก๊อกน้ำที่อ่างซักล้าง
2. กดปุ่ม  (เปิด/ปิด)
3. กดปุ่ม **เปิดประตู** และเปิดประตู
4. ใส่ผ้าครั้งละชั้น โดยอย่าให้ผ้าพันกัน และอย่าใส่ผ้ามากเกินไป
5. ปิดประตู
6. เติมน้ำยาฟอก น้ำยาปรับผ้านุ่ม และน้ำยาซักผ้า (ถ้าจำเป็น) ในช่องที่เหมาะสม



การซักจะใช้ได้เฉพาะเมื่อซักผ้าขนวม ผ้าปูที่นอน ผ้าเช็ดตัว ผ้าผ่าน ผ้าฝ้าย ผ้าสี ผ้าใยสังเคราะห์ และถนอมผ้าเท่านั้น และจำเป็นต้องใช้ผงซักฟอกเท่านั้น

7. หมุนปุ่มควบคุมพัชชีลลิจเพื่อเลือกโปรแกรมซักที่เหมาะสมสำหรับประเภทของเนื้อผ้า ได้แก่ ผ้าฝ้าย ผ้าสี ผ้าใยสังเคราะห์ ถนอมผ้า ผ้าขนสัตว์ ซักมือ ซักเร็ว ล้างและปั่นหมาด ปั่นหมาด ซักและล้าง ซดเด็กอ่อน ขจัดคราบ คละชนิดผ้า เย็บพิเศษ คุณจะเห็นไฟสัญญาณสว่างขึ้นที่แผงควบคุม

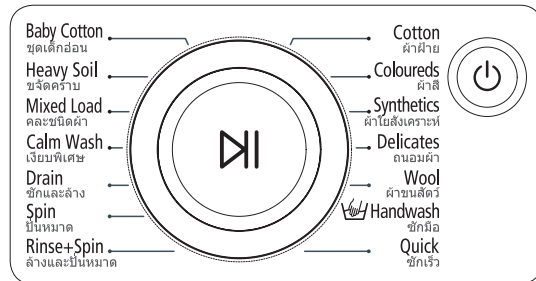

8. ในขั้นตอนนี้ คุณสามารถควบคุมอุณหภูมิ เวลาล้างน้ำ ความเร็วในการปั่น ตั้งเวลาซัก โดยกดปุ่มตัวเลือกที่ต้องการ
9. กดปุ่ม **เริ่ม/พัก** ในปุ่มควบคุมพัชชีลลิจ และรอบการซักจะเริ่มขึ้น สัญลักษณ์ของขั้นตอนการซักจะสว่างขึ้น และเวลาที่เหลือของรอบการซักจะปรากฏในจอแสดงผล

เมื่อสิ้นสุดรอบการซัก:

เมื่อสิ้นสุดรอบการซักทั้งหมด เครื่องจะปิดเองโดยอัตโนมัติ

1. กดปุ่ม **เปิดประตู** และเปิดประตู



คุณไม่สามารถเปิดประตูได้ ถ้าปิดเครื่องอยู่

2. นำผ้าออกจากเครื่อง

การตั้งเวลาล้างหน้า

คุณสามารถกำหนดให้เครื่องซักผ้าเสร็จในเวลาอื่นโดยอัตโนมัติ โดยเลือกได้ตั้งแต่ 4 ถึง 24 ชั่วโมง (เพิ่มได้ครั้งละ 1 ชั่วโมง) จำนวนชั่วโมงที่แสดงหมายถึงเวลาของรอบการซักที่เสร็จแล้ว

โดยดำเนินการดังนี้

1. กำหนดเครื่องซักผ้าด้วยตนเองหรือซักอัตโนมัติตามประเภทของผ้าที่ซัก
2. กดปุ่ม **ตั้งเวลาล้างหน้า** ซ้ำๆ เพื่อตั้งเวลา
3. กดปุ่ม **เริ่ม/พัก** เครื่องหมาย Delay Start จะสว่างขึ้น และเครื่องจะนับถอยหลังจนกว่าจะถึงเวลาที่กำหนดไว้
4. ในการยกเลิก "ตั้งเวลาล้างหน้า" ให้กดปุ่ม  (เปิด/ปิด) จากนั้นเปิดเครื่องอีกครั้ง

การซักด้วยตนเอง

คุณสามารถซักผ้าด้วยตนเองโดยไม่ใช้คุณสมบัติพิเศษที่ล็อกได้

โดยดำเนินการดังนี้

1. เปิดท่อน้ำ
2. กดปุ่ม  (เปิด/ปิด) ที่เครื่องซักผ้า
3. กดปุ่ม **เปิดประตู** และเปิดประตู
4. ใส่ผ้าครั้งละชั้น โดยอย่าให้ผ้าพันกัน และอย่าใส่ผ้ามากเกินไป
5. ปิดประตู
6. ใส่ผงซักฟอก และถ้าจำเป็น ใส่ยาปรับผ้านุ่ม น้ำยาแช่ผ้าก่อนซักในช่องที่เหมาะสม
7. กดปุ่ม **อุณหภูมิ** เพื่อเลือกอุณหภูมิ (น้ำเย็น, 30 °C, 40 °C, 60 °C, 95 °C)
8. กดปุ่ม **ล้าง** เพื่อเลือกจำนวนรอบการล้างที่ต้องการ
จำนวนรอบการล้างสูงสุดคือห้ารอบ ระยะเวลาการซักผ้าจะยาวนานขึ้นตามลำดับ
9. กดปุ่ม **ปั่นหมาด** เพื่อเลือกความเร็วในการปั่น (⊗: ไม่มีการปั่น)
-  โปรแกรมหยุดการล้างจะช่วยให้คุณนำผ้าที่ไม่แห้งหมาดออกจากเครื่องได้
10. กดปุ่ม **น้ำซาว** เพื่อเลือกตัวเลือกเวลาเริ่มต้นที่ใช้ได้ (ตั้งแต่ 4 ชั่วโมงถึง 24 ชั่วโมง โดยเพิ่มได้ครั้งละหนึ่งชั่วโมง) จำนวนชั่วโมงที่แสดงหมายถึงเวลาของรอบการซักที่เสร็จแล้ว
11. กดปุ่ม **เริ่ม/พัก** และเครื่องจะเริ่มดำเนินการซัก

คำแนะนำและเคล็ดลับในการซักผ้า

การคัดแยกผ้า แยกผ้าตามประเภทของเนื้อผ้า ดังนี้

- **สัญลักษณ์การดูแล:** แยกผ้าเป็น ผ้าฝ้าย ผ้าเนื้อผสม ผ้าใยสังเคราะห์ ผ้าไหม ผ้านัตถ์ และเรยอน
- **สี:** แยกผ้าเป็นผ้าสีและผ้าขาว โปรดซักผ้าใหม่ที่เป็นผ้าสีแยกต่างหาก
- **ขนาด:** การใส่ผ้าขนาดต่าง ๆ กันในการซักจะทำให้การซักมีประสิทธิภาพดีขึ้น
- **ความบอบบาง:** ซักผ้าบางแยกต่างหาก ใช้โปรแกรมถนอมผ้าสำหรับผ้านวลัตว์ใหม่ ผ้าไหม และผ้าไหม ตรวจสอบป้ายของผ้าที่ซัก หรือดูฟังก์ชันดูแลผ้าในภาคผนวก

น้ำลิ้นของออกจากกระเป๋: เหยียด เชือกมัด และสิ่งอื่นๆ อาจทำให้ผ้า ถึงซัก และถึงน้ำเสียหาย

ติดกระดุมและซิป: รูดซิป ติดกระดุมและขอเกี่ยว เชือกมัดและโบว์ที่ปล่อยชายควรวางไว้ด้วยกัน

การแช่ผ้าฝ้าย: เครื่องซักผ้าของคุณ เมื่อใช้ร่วมกับผงซักฟอกชนิดใหม่ๆ จะสามารถให้ผลการซักที่ดีเยี่ยม พร้อมทั้งประหยัดพลังงาน เวลา น้ำและผงซักฟอก แต่หากผ้าฝ้ายสกปรกมาก คุณสามารถใช้การแช่ผ้ากับผงซักฟอกชนิดโปรตีน

ประเภทของผ้า	ปริมาณผ้า
	WF8704S6/WF8702S6/WF8700S6/WF8708S6
ผ้าฝ้าย/ผ้าสี	
- เบื่อนปานกลาง/น้อย	7.0 nn.
- เบื่อนมาก	7.0 nn.
ผ้าใยสังเคราะห์	3.0 nn.
ถนอมผ้า	2.5 nn.
ขนสัตว์	2.0 nn.

คำแนะนำสำหรับผงซักฟอก: ประเภทของผงซักฟอกที่ใช้ขึ้นอยู่กับเนื้อผ้า (ผ้าฝ้าย ผ้าใยสังเคราะห์ ผ้าบาง ขนสัตว์) สี อุณหภูมิที่ซัก ระดับความสกปรก โปรดใช้ผงซักฟอกชนิด "ฟองน้อย" ซึ่งได้รับการออกแบบสำหรับเครื่องซักผ้าอัตโนมัติ


ปฏิบัติตามคำแนะนำของผู้ผลิตผงซักฟอก ตามน้ำหนักของผ้า ความสกปรก และความกระด้างของน้ำ หากคุณไม่ทราบว่าน้ำที่ใช้กระด้างมากเพียงใด โปรดติดต่อผู้ให้บริการนำประปาในพื้นที่

 โปรดเก็บผงซักฟอกและสารที่ใช้ร่วมกันในที่เก็บที่ปลอดภัย แห้งและพ้นมือเด็ก


การบำรุงรักษาเครื่องซักผ้า

การทิ้งน้ำเมื่อเกิดเหตุฉุกเฉิน

1. ถอดปลั๊กของเครื่องซักผ้า
2. เปิดฝาดักกรองโดยใช้เหรียญหรือกุญแจ

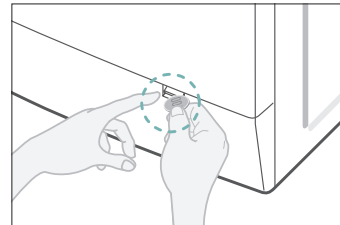

3. ไขสกรูของท่อน้ำทิ้งฉุกเฉิน โดยหมุนไปทางซ้าย ยึดฝาดักกรองของท่อน้ำทิ้งฉุกเฉิน และค่อยๆ ดึงออกมาประมาณ 15 ซม.
4. ปลดปล่อยน้ำไหลลงอ่าง
5. สอดท่อเข้าที่ และไขฝาดักกรองเข้าที่
6. ปิดฝาดักกรองของตัวกรอง

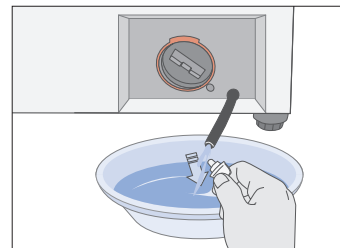

การซ่อมแซมเครื่องซักผ้าหากน้ำแข็งตัว

หากอุณหภูมิต่ำกว่าจุดเยือกแข็ง และน้ำในเครื่องซักผ้ากลายเป็นน้ำแข็ง ให้ทำดังนี้




1. ถอดปลั๊กของเครื่องซักผ้า
2. เทน้ำอุ่นที่กักจ่ายน้ำ เพื่อให้ท่อจ่ายน้ำหลวม
3. ถอดท่อจ่ายน้ำ และแช่ในน้ำอุ่น
4. เทน้ำอุ่นในถังซักของเครื่องซักผ้า และทิ้งไว้ประมาณ 10 นาที
5. ต่อท่อจ่ายน้ำเข้าที่ และตรวจสอบว่าการจ่ายน้ำและการทิ้งน้ำเป็นปกติ

การทำความสะอาดภายนอก

1. เช็ดผิวด้านนอกของเครื่องซักผ้า รวมถึงแผงควบคุม ด้วยผ้านุ่มและผึ่งซักฟอกที่ไม่มีสารขัดถู
2. ใช้ผ้านุ่มเช็ดให้แห้ง
3. ห้ามใช้น้ำบนเครื่องซักผ้า

การทำความสะอาดช่องใส่และที่พับผงซักฟอก

1. กดสลักกลายที่ด้านในของที่ใส่ผงซักฟอก และดึงออก
2. ถอดผ้าของช่องใส่ออก (⊗)
3. ล้างทุกส่วนด้วยน้ำสะอาดที่ไหลผ่าน
4. ล้างที่พับผงซักฟอกด้วยแปรงสีฟันเก่า
5. ใส่ผ้า (ดันเข้าที่ให้แน่น) และใส่ที่คั่นน้ำยาซักผ้าในช่องใส่
6. ดันช่องใส่เข้าที่
7. เลือกโปรแกรมล้างน้ำโดยไม่ต้องมีผ้าในถัง

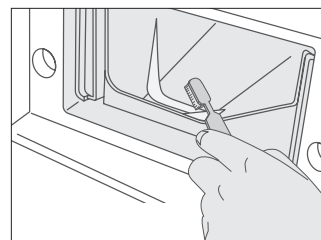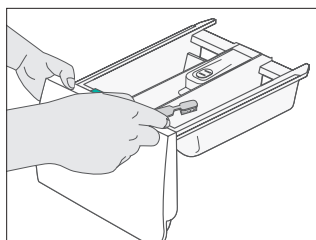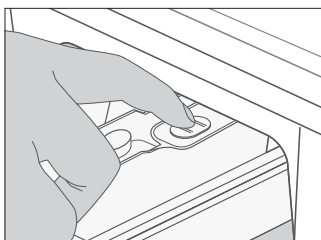

การทำความสะอาดตัวกรองเศษผ้า


ทำความสะอาดตัวกรองเศษผ้า ประมาณ 5 ถึง 6 ครั้งต่อปี หรือเมื่อพบข้อความแสดงข้อผิดพลาดในจอแสดงผล

5E

1. เปิดฝาของตัวกรอง ดูที่ "การทิ้งน้ำเมื่อเกิดเหตุฉุกเฉิน" ในหน้า 16
2. ใช้สกรูของท่อน้ำทิ้งฉุกเฉิน โดยหมุนไปทางซ้าย เพื่อทิ้งน้ำให้หมด ดูที่ "การทิ้งน้ำเมื่อเกิดเหตุฉุกเฉิน" ในหน้า 16
3. ใช้ฝาของตัวกรองและนำออกมา



4. ล้างเศษฝุ่นละอองหรือวัสดุอื่นออกจากตัวกรอง ตรวจสอบว่าใบพัดของปั้มน้ำทั้งที่ด้านหลังของตัวกรองไม่อุดตัน ปิดฝาของตัวกรอง
5. ปิดฝาครอบของตัวกรอง

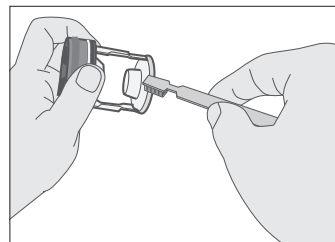

การบำรุงรักษาเครื่องซักผ้า



การทำความสะอาดตัวกรองท่อจ่ายน้ำ

คุณควรทำความสะอาดแรงงของท่อจ่ายน้ำอย่างน้อยปีละครั้ง หรือเมื่อพบข้อความแสดงข้อผิดพลาดในจอแสดงผล

4E

โดยดำเนินการดังนี้

1. ปิดน้ำที่จ่ายเข้าสู่เครื่องซักผ้า
2. ไขท่อออกจากด้านหลังของเครื่องซักผ้า
3. ใช้คีมจับตะแกรงตัวกรองออกจากปลายของท่อ และล้างด้วยน้ำสะอาด นอกจากนี้ ให้ทำความสะอาดด้านนอกและด้านในของข้อต่อที่เป็นเกลียวด้วย
4. ดันตัวกรองเข้าที่
5. ไขท่อเข้ากับเครื่องซักผ้าดังเดิม
6. เปิดก๊อกน้ำ และตรวจสอบว่าไม่มีการรั่วซึม

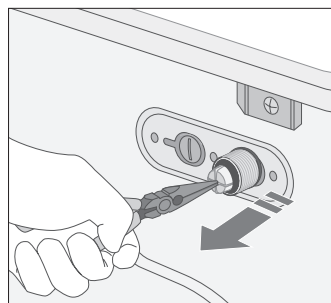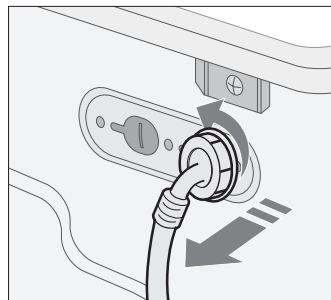

การแก้ไขปัญหา

ปัญหาและทางแก้ไข

ปัญหา	การแก้ไข
เครื่องซักผ้าไม่เริ่มทำงาน	- ตรวจสอบว่าประตูปิดสนิท - ตรวจสอบว่าเสียบปลั๊กเรียบร้อยแล้ว - ตรวจสอบว่าก๊อกจ่ายน้ำเปิดอยู่ - โปรดตรวจสอบว่าไดคัมบูม เริ่ม/พัก แล้ว
ไม่มีน้ำหรือน้ำไม่เพียงพอ	- ตรวจสอบว่าก๊อกจ่ายน้ำเปิดอยู่ - ตรวจสอบว่าท่อจ่ายน้ำไม่จับตัวเป็นน้ำแข็ง - ตรวจสอบว่าท่อจ่ายน้ำไม่พันงอ - ตรวจสอบว่าตัวกรองของท่อน้ำไม่อุดตัน
มีผงซักฟอกหลงเหลือในช่องใส่หลังจากการซัก	- ตรวจสอบว่าเครื่องซักผ้าต่อกับแหล่งจ่ายน้ำที่มีแรงดันเพียงพอ - ใส่ผงซักฟอกในส่วนในช่องช่องใส่ (ด้านตรงข้ามกับขอบด้านนอก)
เครื่องซักผ้าสั่น หรือมีเสียงดัง	- ตรวจสอบว่าเครื่องตั้งอยู่บนพื้นที่ซึ่งราบเสมอกัน หากพื้นที่ไม่ราบเสมอกัน ให้ปรับขาตั้งของเครื่องให้ได้ระดับ - ตรวจสอบว่าน้ำหนักสำหรับการขนส่งออกแล้ว - ตรวจสอบว่าเครื่องซักผ้าไม่ได้สัมผัสกับวัตถุอื่น - ตรวจสอบว่าปริมาณน้ำอยู่ในถังอย่างสมดุล
เครื่องซักผ้าไม่ทั้งน้ำ และ/หรือปั่นหมาด	- ตรวจสอบว่าท่อน้ำทิ้งไม่พับหรืองอ - ตรวจสอบว่าตัวกรองของท่อน้ำไม่อุดตัน
ประตูไม่ยอมเปิด	ผ้าเครื่องไม่สามารถเปิดได้จนกว่าจะครบ 3 นาทีหลังจากที่เครื่องหยุดการทำงานหรือมีการปิดเครื่อง

การอ่านข้อความแสดงข้อผิดพลาด

รหัสข้อผิดพลาด	การแก้ไข
dE	ปิดประตู
4E	- ตรวจสอบว่าก๊อกจ่ายน้ำเปิดอยู่ - ตรวจสอบแรงดันน้ำ
5E	- ทำความสะอาดตัวกรองเศษผ้า - ตรวจสอบว่าท่อระบายน้ำได้รับการติดตั้งอย่างเหมาะสม
UE	- ผ้าไม่สมดุล ให้คลายผ้าที่พันกันออก - หากมีการซักผ้าเพียงชิ้นเดียว เช่น เสื้อคลุมอาบน้ำหรือกางเกงยีนส์ การปั่นครั้งสุดท้ายอาจไม่ได้ผลดีเท่าที่ควร และข้อความแสดงข้อผิดพลาด "UE" จะปรากฏในจอแสดงผล
cE/3E	ติดต่อฝ่ายบริการหลังการขาย

ก่อนที่จะติดต่อฝ่ายบริการหลังการขาย:

- ลองแก้ไขปัญหาด้วยตนเอง (ดูที่ "การแก้ไขปัญหา" ในหน้านี้)
- เริ่มต้นโปรแกรมใหม่ เพื่อดูว่าจะเกิดข้อผิดพลาดซ้ำหรือไม่
- หากข้อผิดพลาดยังคงอยู่ โปรดติดต่อฝ่ายบริการหลังการขาย และอธิบายปัญหา

ผังโปรแกรม

ผังโปรแกรม

(● ตัวเลือกสำหรับผู้ใช้)

โปรแกรม	น้ำหนักสูงสุด (กก.)	ฟังก์ชันฟอกและสารเพิ่มเติมต่าง ๆ			อุณหภูมิ (สูงสุด) °C	ความเร็วในการปั่น (สูงสุด) รอบต่อนาที				ตั้งเวลาซักล่วงหน้า	เวลาของรอบการซัก (นาที)
	WF8704S6 WF8702S6 WF8700S6 WF8708S6	การแช่ผ้า	การซัก	น้ำยาปรับผ้านุ่ม		WF8704S6	WF8702S6	WF8700S6	WF8708S6		
ผ้าฝ้าย	7.0	●	ใช่	●	95	1400	1200	1000	800+	●	126
ผ้าสี	7.0	●	ใช่	●	60	1400	1200	1000	800+	●	99
ผ้าใยสังเคราะห์	3.0	●	ใช่	●	60	800	800	800	800	●	72
ขนอมผ้า	2.5	●	ใช่	●	40	800	800	600	600	●	55
ผ้าขนสัตว์	2.0	-	ใช่	●	40	400	400	400	400	●	40
ซักมือ	2.0	-	ใช่	●	40	400	400	400	400	●	35
ซักเร็ว	3.0	-	ใช่	●	60	1400	1200	1000	800+	●	47
ชุดเด็กอ่อน	7.0	●	ใช่	●	95	1400	1200	1000	800+	●	122
ขจัดคราบ	7.0	●	ใช่	●	60	1400	1200	1000	800+	●	109
คละชนิดผ้า	2.5	●	ใช่	●	60	800	800	800	800	●	77
เจียพิเศษ	3.0	●	ใช่	●	40	ไม่บังคับ				●	98

โปรแกรม	ประเภทการซัก
ผ้าฝ้าย	ผ้าฝ้ายทั่วไปหรือสปรกน้อย ผ้าปูที่นอน ผ้าปูโต๊ะ ชุดชั้นใน ผ้าเช็ดตัว เช็ด ฯลฯ
ผ้าสี	ผ้าฝ้ายทั่วไปหรือสปรกน้อย ผ้าปูที่นอน ผ้าปูโต๊ะ ชุดชั้นใน ผ้าเช็ดตัว เช็ด ฯลฯ
ผ้าใยสังเคราะห์	เสื้อ เสื้อเชิ้ต ฯลฯ ที่เปื้อนปานกลางถึงเล็กน้อย หากจากโพลีเอสเตอร์ (ไดโอเลน, เทอวีรา) โพลีอไมด์ (เพอร์ลอน ไนลอน) หรือส่วนผสมอื่นๆ
ขนอมผ้า	ผ้าปูที่นอน ชุด กระโปรง เช็ด และเสื้อที่บอบบาง
ผ้าขนสัตว์	ขนสัตว์ที่ซักด้วยเครื่องได้ และผ้าขนสัตว์ใหม่
ซักมือ	โปรแกรมซักอย่างทะนุถนอมคล้ายการซักด้วยมือ
ซักเร็ว	เสื้อ เช็ดผ้าฝ้ายหรือผ้าลินินที่สปรกน้อย ผ้าเทร็ซซิม ผ้าลินินสี ยีนส์ ฯลฯ
ชุดเด็กอ่อน	ผ้าฝ้ายทั่วไปหรือสปรกน้อย ผ้าปูที่นอน ผ้าปูโต๊ะ ชุดชั้นใน ผ้าเช็ดตัว เช็ด ฯลฯ
ขจัดคราบ	ผ้าฝ้ายที่มีคราบหรือสปรกมาก ผ้าปูที่นอน ผ้าปูโต๊ะ ชุดชั้นใน ผ้าเช็ดตัว เช็ด ยีนส์ ฯลฯ
คละชนิดผ้า	ผ้าฝ้ายและผ้าใยสังเคราะห์ที่สปรกเล็กน้อย
เจียพิเศษ	ระดับเสียงรบกวนต่ำมากระหว่างรอบการซักทั้งหมด และสิ้นสุดด้วยการล้างน้ำ ผ้าฝ้าย ผ้าปูที่นอน ผ้าปูโต๊ะ ชุดชั้นใน ผ้าขนหนู เช็ด

- โปรแกรมที่มีการแช่ผ้าก่อนซักจะใช้เวลาเพิ่มขึ้นประมาณ 15 นาที
- ข้อมูลระยะเวลาของโปรแกรมได้รับการวัดตามเงื่อนไขที่ระบุในมาตรฐาน IEC 60456 / EN 60456
- การใช้งานในแต่ละบ้านอาจต่างจากค่าที่ระบุในตาราง เนื่องจากแรงดันและอุณหภูมิของน้ำ ปริมาณผ้า และประเภทของผ้า

ภาคผนวก

ผังการดูแลผ้า

	ผ้าหนา		สามารถรีดที่ความร้อนสูงสุด 100 °C
	ผ้าบาง		ห้ามรีด
	ซักได้ที่ความร้อน 95 °C		ซักแห้งด้วยสารทำลายไลค์ได้
	ซักได้ที่ความร้อน 60 °C		ซักแห้งด้วยเปอร์คลอไรด์ น้ำมันไฟแช็ก แอลกอฮอล์ หรือ R113 เท่านั้น
	ซักได้ที่ 40 องศาเซลเซียส		ซักแห้งด้วยน้ำมันก๊าด แอลกอฮอล์ หรือ R113 เท่านั้น
	ซักได้ที่ 30 องศาเซลเซียส		ห้ามซักแห้ง
	ซักด้วยมือ		ห้ามแขวน
	ซักแห้งเท่านั้น		แขวนได้
	ใช้สารฟอกในน้ำเย็น		ตากด้วยไม้แขวนเสื้อ
	ห้ามใช้สารฟอก		ใช้เครื่องอบ ความร้อนปกติ
	สามารถรีดที่ความร้อนสูงสุด 200 °C		ใช้เครื่องอบ ความร้อนต่ำ
	สามารถรีดที่ความร้อนสูงสุด 150 °C		ห้ามใช้เครื่องอบ

คำเตือนเกี่ยวกับไฟฟ้า

เพื่อลดอันตรายจากไฟ ไฟฟ้าช็อต และการบาดเจ็บอื่นๆ โปรดปฏิบัติตามข้อควรระวังเพื่อความปลอดภัย

- ใช้อุปกรณ์กับแหล่งจ่ายไฟประเภทที่ระบุในฉลากเท่านั้น หากคุณไม่แน่ใจกับประเภทของไฟฟ้าที่ใช้ที่บ้าน โปรดปรึกษาผู้ขายหรือบริษัทผู้ให้บริการไฟฟ้าในพื้นที่
- ใช้เต้าเสียบไฟฟ้าที่มีการลงกราวด์ถูกต้อง ปลั๊กนี้จะเสียบได้ทางเดียวเท่านั้น หากคุณไม่สามารถเสียบปลั๊ก ให้ลองสลับด้าน หากปลั๊กยังไม่สามารถเสียบได้ โปรดติดต่อช่างไฟฟ้าเพื่อเปลี่ยนเต้าเสียบ
- ป้องกันความเสียหายกับสายไฟ โปรดเดินสายไฟไม่ให้เกิดการสะดุดหรือกดทับโดยวัตถุต่างๆ ที่อาจมีการวางทับได้ ใช้ความระมัดระวังเป็นพิเศษกับสายไฟที่ปลั๊กเต้าเสียบ และจุดที่สายไฟออกจากอุปกรณ์
- อย่าใช้ไฟเกินกำลังของเต้าเสียบหรือสายไฟสำหรับต่อ การใช้ไฟเกินกำลังอาจทำให้ไฟไหม้หรือไฟฟ้าช็อตได้

การปกป้องสิ่งแวดล้อม

- อุปกรณ์นี้ได้รับการผลิตจากวัสดุรีไซเคิล หากคุณต้องการทิ้งอุปกรณ์นี้ โปรดปฏิบัติตามระเบียบการทิ้งขยะของพื้นที่ ตัดสายไฟ เพื่อป้องกันไม่ให้เกิดการต่อสายไฟกับเครื่องใช้ไฟฟ้าอื่นๆ ถอดปลั๊กออก เพื่อป้องกันไม่ให้เกิดไฟหรือเด็กติดอยู่ภายใน
- อย่าใช้ผงซักฟอกเกินปริมาณที่แนะนำโดยผู้ผลิตผงซักฟอก
- ใช้สารซักฟอกและสารฟอกขาวก่อนการซักเฉพาะเมื่อจำเป็นเท่านั้น
- ประหยัดน้ำและไฟฟ้าโดยซักเต็มถัง (ปริมาณผ้าขึ้นอยู่กับโปรแกรมที่ใช้)

ภาคผนวก

ประกาศเกี่ยวกับมาตรฐาน

อุปกรณ์นี้เป็นไปตามมาตรฐานความปลอดภัยของยุโรป EC directive 93/68 และ EN Standard 60335

ข้อมูลจำเพาะ

ประเภท			เครื่องซักผ้าฝาหน้า					
ขนาด			WF8704S6/WF8702S6/WF8700S6/WF8708S6					
			ก 598 มม.× ล 600 มม.× ส 844 มม.					
แรงดันน้ำ			50 kPa ~ 800 kPa					
ปริมาณน้ำ			60 ลิ					
น้ำหนักสุทธิ			WF8704S6/WF8702S6		WF8700S6/WF8708S6			
			71 กก.		70 กก.			
ความจุในการซักและการปั่น			7.0 กก. (ผ้าแห้ง)					
การใช้พลังงานไฟฟ้า			รุ่น		WF8704S6/WF8702S6/WF8700S6/WF8708S6			
			ชดเชยและให้ความร้อน		220 V		2000 วัตต์	
					240 V		2400 วัตต์	
			ปั่นหมาด	รุ่น	WF8704S6	WF8702S6	WF8700S6	WF8708S6
				230 V	700 วัตต์	360 วัตต์	320 วัตต์	270 วัตต์
			ปั๊ม		34 วัตต์			
น้ำหนักบรรจุภัณฑ์			รุ่น		WF8704S6/WF8702S6/WF8700S6/WF8708S6			
			กระดาษ		2.5 กก.			
			พลาสติก		1.0 กก.			
การหมุนปั่น			รุ่น		WF8704S6	WF8702S6	WF8700S6	WF8708S6
			รอบต่อนาที		1400	1200	1000	800

บันทึก

06 บันทึก



ถ้าคุณมีคำถามหรือข้อคิดเห็น

ประเทศ	โทรศัพท์	หรือเยี่ยมชมเว็บไซต์ของเราที่
THAILAND	1800-29-3232 02-689-3232	www.samsung.com/th

รหัส DC68-02376P_TH