



Freezer user manual



100%
Recycled Paper

This manual is made with 100% recycled paper.

English

imagine the possibilities

Thank you for purchasing a Samsung product.
To receive a more complete service,
please register your product at
www.samsung.com/register

Free Standing Appliance



Code No. DA99-01951B REV(0.9)

safety information

SAFETY INFORMATION

- Before operating the appliance, please read this manual thoroughly and retain it for your reference.
- Use this appliance only for its intended purpose as described in this instruction manual. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Because these following operating instructions cover various models, the characteristics of your freezer may differ slightly from those described in this manual.

Important safety symbols and precautions:

	Hazards or unsafe practices that may result in severe personal injury or death .
	Hazards or unsafe practices that may result in minor personal injury or property damage .

OTHER SYMBOLS USED

	Do NOT attempt.
	Do NOT disassemble.
	Do NOT touch.
	Follow directions carefully.
	Unplug the power plug from the wall socket.
	Make sure the machine is grounded to prevent electric shock.
	Call the contact center for help.
	Note.

These warning signs are here to prevent injury to you and others.

Please follow them explicitly.

After reading this section, keep it in a safe place for future reference.

SEVERE WARNING SIGNS FOR INSTALLATION



- Do not install the freezer in a damp place or place where it may come in contact with water.
- Deteriorated insulation of electrical parts may cause an electric shock or fire.
- Do not place this freezer in direct sunlight or expose to the heat from stoves, room heaters or other appliance.
- Never use gas pipes, telephone lines or other potential lightening rods as ground.
- Improper use of the ground plug can result in electric shock.
- Do not plug several appliances into the same multiple power board. The freezer should always be plugged into its own individual electrical which has a voltage rating that matched the rating plate.
- This provides the best performance and also prevents overloading house wiring circuits, which could cause a fire hazard from overheated wires.
- Do not use a cord that shows cracks or abrasion damage along its length or at either end.
- Do not bend the power cord excessively or place heavy articles on it.



- This freezer must be properly installed and located in accordance with the manual before it is used.
- If the wall socket is loose, do not insert the power plug.
- There is a risk of electric shock or fire.
- Connect the power plug in proper position with the cord hanging down.
- If you connect the power plug upside down, wire can get cut off and cause fire or electric shock.
- When moving the freezer, be careful not to roll over or damage the power cord.
- This constitutes a fire hazard.
- Make sure that the power plug is not squashed or damaged by the back of the freezer.
- Keep the packing materials out of reach of children.
- There is a risk of death from suffocation if children put them on their head.
- The appliance must be positioned so that the plug is accessible after installation.



- The freezer must be grounded.
- You must ground the freezer to prevent any power leakages or electric shocks caused by current leakage from the freezer.



- If the power cord is damaged, have it replaced immediately by the manufacturer or its service agent.
- The fuse on refrigerator must be changed by a qualified technician or service company.
- Failing to do so may result in electric shock or personal injury.



CAUTION SIGNS FOR INSTALLATION



- Keep ventilation opening in the appliance enclosure or mounting structure clear of obstruction.
- Allow the appliance to stand for 2 hours after installation.



SEVERE WARNING SIGNS FOR USING



- Do not insert the power plug with wet hands.
- Do not store articles on the top of the appliance.
- When you open or close the door, the articles may fall and cause personal injury and/or material damage.
- Do not put a container filled with water on the freezer.
- If spilled, there is a risk of fire or electric shock.
- Do not let children hang on the door. If not, a serious injury may occur.
- Do not let children enter inside of the freezer. There is a risk of children entrapment.
- Do not touch the inside walls of the freezer or products stored in the freezer with wet hands.
- This may cause frostbite.
- Do not store volatile or flammable substances in the freezer.
- The storage of benzene, thinner, alcohol, ether, LP gas and other such products may cause explosions.
- Do not store pharmaceuticals products, scientific materials or temperature sensitive products in the freezer.
- Products that require strict temperature controls must not be stored in the freezer.
- Do not place or use electrical appliance inside the freezer, unless they are of a type recommended by the manufacturer.

- Do not use mechanical devices or any other means to accelerate the defrosting process, other than those recommended by the manufacturer.



- Do not disassemble or repair the freezer by yourself.
- You run risk of causing a fire, malfunction and/or personal injury.



- Children should be supervised to ensure that they do not play with the appliance.
- This product is intended only for the storage of food in a domestic environment.
- If a gas leak is detected, avoid any naked flames or potential sources of ignition and air the room in which the appliance is standing for several minutes.
- Use only the LED Lamps provided by manufacturer or service agents.



- If you smell pharmaceutical or smoke, pull out power plug immediately and contact your Samsung Electronics service center.
- If the products equipped with LED Lamp, do not disassemble Lamp Cover and LED Lamp by yourself.
- Please contact your service agents.



CAUTION SIGNS FOR USING



- Do not place carbonated or fizzy drinks in the freezer compartment. Do not put bottles or glass containers in the freezer.
- When the contents freeze, the glass may break and cause personal injury.



- To get Best performance of product,
 - Do not place foods too closely in front of the vents at the rear of the appliance as it can obstruct free air circulation in the freezer compartment.
 - Wrap the food up properly or place it in airtight containers before put it into the freezer.
 - Do not put any newly introduced food for freezing near to already food.
- Please observe maximum storage times and expiry dates of frozen goods.
- There is no need to disconnect the freezer from the power supply if you will be away for less than three weeks. But, Remove all the food if you are going away for the three weeks or more. Unplug the freezer and clean it, rinse and dry.
- Fill water tank, ice tray, water cubes only with potable water.



- If the freezer is damaged by water, pull out the power plug and contact your Samsung Electronics service center.



CAUTION SIGNS FOR CLEANING



- Do not directly spray water inside or outside the freezer.
- There is a risk of fire or electric shock.
- Do not spray inflammable gas near the freezer.
- There is a risk of explosion or fire.



- Remove any foreign matter or dust from the power plug pins. But do not use a wet or damp cloth when cleaning the plug, remove any foreign material or dust from the power plug pins.
- Otherwise there is a risk of fire or electric shock.
- Do not spray cleaning products directly on the display.
- Printed letters on the display may come off.



- Unplug the freezer before cleaning and making repairs.



SEVERE WARNING SIGNS FOR DISPOSAL



- When disposing of this or other freezers, remove the door/door seals, door latch so that small children or animals cannot become trapped inside. Children should be supervised to ensure that they do not play with the appliance.
- Please dispose of the packaging material for this product in an environmentally friendly manner.
- Leave the shelves in place so that children may not easily climb inside. Ensure that none of the pipes on the back of the appliance are damaged prior to disposal.
- R600a or R134a is used as a refrigerant. Check the compressor label on the rear of the appliance or the rating label inside the freezer to see which refrigerant is used for your freezer. When this product contains flammable gas (Refrigerant R600a), contact your local authority in regard to safe disposal of this product. Cyclopentane is used as a insulation blowing gas. The gases in insulation material require special disposal procedure. Please contact your local authorities in regard to the environmentally safe disposal of this product. Ensure that none of the pipes on the back of the appliances are damaged prior to disposal. The pipes shall be broke in the open space.

- If the appliance contains iso-butane refrigerant (R600a), a natural gas with high environmental compatibility that is, however, also combustible. When transporting and installing the appliance, care should be taken to ensure that no parts of the refrigerating circuit are damaged.
- Refrigerant squirting out of the pipes could ignite or cause an eye injury. If a leak is detected, avoid any naked flames or potential sources of ignition and air the room in which the appliance is standing for several minutes.
- In order to avoid the creation of a flammable gas-air mixture if a leak in the refrigerating circuit occurs, the size of the room in which the appliance may be sited depends on the amount of refrigerant used.
Never start up an appliance showing any signs of damage. If in doubt, consult your dealer.
The room must be 1m³ in size for every 8g of R600a refrigerant inside the appliance. The amount of refrigerant in your particular appliance is shown on the identification plate inside the appliance.



ADDITIONAL TIPS FOR PROPER USAGE

- In the event of a power failure, call the local office of your Electricity Company and ask how long it is going to last.
- Most power failures that are corrected in an hour or two will not affect your freezer temperatures. However, you should minimize the number of door openings while the power is off.
- But Should the power failure last more than 24 hours, remove all frozen food.
- If the key is provided with freezer, the keys should be kept out of the reach of children and not in vicinity of the appliance.
- The appliance might not operate consistently (possibility of defrosting of contents or temperature becoming too warm in the freezer) when sited for an extended period of time below the cold end of the range of temperatures for which the refrigerating appliance is designed.
- Your appliance is frost free, which means there is no need to manually defrost your appliance, as this will be carried out automatically.
- Temperature rising during the defrost can comply with ISO requirement. But If you want to prevent an undue rise in the temperature of the frozen food while defrosting the appliance, please wrap the frozen food in several layers of newspaper.
- Any increase in temperature of frozen food during defrosting can shorten its storage life.

contents

SETTING UP YOUR FREEZER	06
OPERATING YOUR FREEZER	09
MAINTAINING YOUR FREEZER	11
TROUBLESHOOTING	13

setting up your freezer

GETTING READY TO INSTALL THE FREEZER



Congratulations on your purchase of this Samsung Freezer. We hope you enjoy the state-of-art features and efficiencies that this new appliance offers.

- This freezer must be properly installed and located in accordance with the manual before it is used.
- Use this appliance only for its intended purpose as described in this instruction manual.
- We strongly recommend that any servicing be performed by a qualified individual.
- Please dispose of the packaging material for this product in an environmentally friendly manner.

WARNING Pull the power plug out of the socket before changing the interior light of the freezer.
- Otherwise, there is a risk of electric shock.

Selecting the best location for the Freezer

- A location without direct exposure to sunlight.
- A location with flat floor surface.
- A location with enough space for the freezer door to open easily.
- Allow sufficient space to the right, left, back and top for air circulation. If the freezer does not have enough space, the internal cooling system may perform more.
- Please ensure that appliance can be moved freely in the event of maintenance & service.

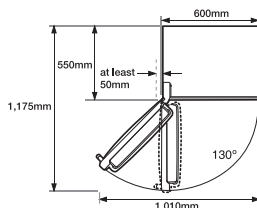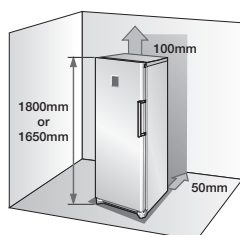

06_setting up

- Height of the product may be different depending on the models.
- Allow clearance to the right, left, back and top when installing. This will help reduce power consumption and keep your energy bills lower.
- Do not install the freezer in a place with the temperature lower than 10°C.

CAUTION Pull the unit straight out when installing, servicing or cleaning behind the freezer and push it straight back after work is complete. Make sure your floor can support fully loaded freezer.

REVERSING THE FREEZER DOOR


WARNING Samsung recommends that reversing of the door opening is only completed by Samsung approved Service providers. This will be on a chargeable basis and at the customers expense.

Any damage caused while attempting to reverse the door opening is not covered under the appliance manufactures warranty. Any repairs requested due to this circumstance will be completed on a chargeable basis at the customers expense.


Required Tools (Not provided)

Phillips Head Driver (+)	Flat Head Driver (-)	10mm Socket Wrench (for bolts)
8mm Socket Wrench (for bolts)	Spanner (for hinge shaft)	4mm Hex Wrench (for bottom hinge shaft)

1. Remove 2 screws on the top of the freezer.

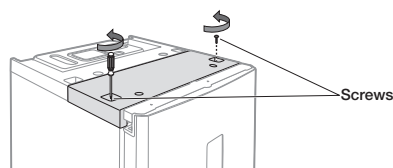


2. Remove the plastic cover and make sure to disconnect the wire connected to it. After removing the plastic cover, check the parts for reversing the door.

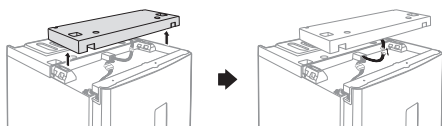


CAUTION Be careful not to damage the electrical wires when removing the plastic cover.

3. Disconnect the wires and then remove 3 bolts.




WARNING Make sure your freezer is unplugged before handling electrical wires.

4. Remove the door from the lower hinge by carefully lifting the door straight up.

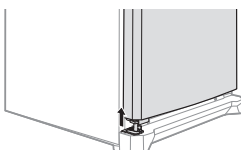


CAUTION Freezer door is heavy, be careful not to injure yourself when removing the freezer door.


5. Separate the front leg cover after removing 2 screws.

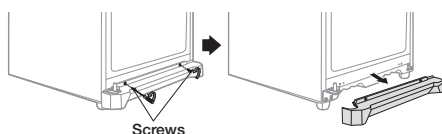


6. Unscrew 3 bolts tightening the hinge and also unscrew 3 bolts on the bottom right side by the front leg where removed hinge will be attached.

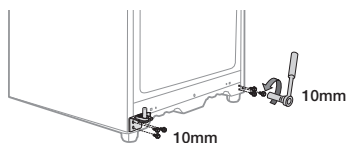


7. Separate the hinge shaft by using hex wrench first. Unscrew the bolt to remove the hinge riser and switch the side of the hinge shaft and the hinge riser.




8. Attach the hinge on the bottom right side of the freezer where bolts were previously removed in step 6. Screw the bolts that were removed on the bottom left side of the freezer for the future usage.

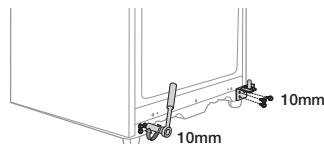


9. Remove the screws on the bottom right and left side of the freezer door. Switch the side of the door stopper from left to the right. Hinge riser should be switched as well.

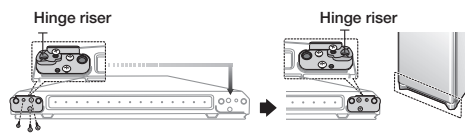

10. Remove the wire cover on top of the freezer door to switch the side of the wires.

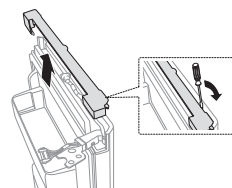


11. Remove the hinge and the grommet from the freezer door. Detach the left side hinge cover and pull the wires out of the hinge cover.

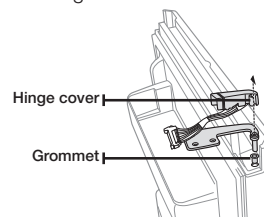


CAUTION Be careful not to damage the electrical wires when removing the hinge cover.

setting up _07

12. Use wrench to separate the hinge shaft and then flip the hinge and reattach the hinge shaft.




13. Reassemble the hinge on the freezer door by reversing the step 11. Make sure to use right side hinge cover (which can be found underneath the removed plastic cover from step 2) and remove the grommet. After reassembling the hinge, wire and the hinge cover, switch the side from left to the right.

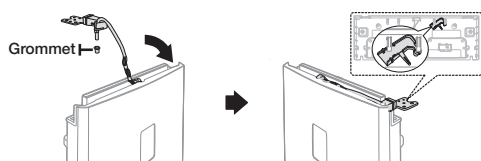


14. After switching the hinge, make sure to take out the right side wire cover, and close it with the wire cover on the top of freezer door.

"Cover Wire Door R" can be found in the packaging

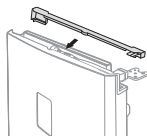


15. Take off the handle cover and remove the screws, make sure to detach the caps and the handle from the right to left side of the door. (Make sure to cover the right side with detached caps.)

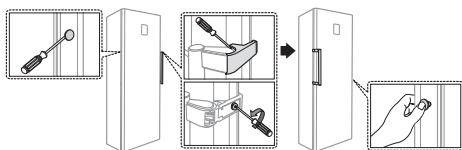


 Handles may not have cover depending on the models.

16. Switch the hinge cap and attach the front leg cover. Carefully put the freezer door back on.

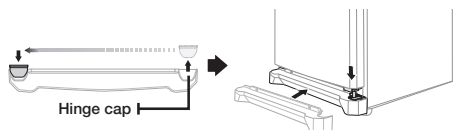


08_setting up

17. Tighten the 3 bolts and then connect the wires back together.




 **WARNING** Make sure your freezer is unplugged before handling electrical wires.


18. Connect the wire on the plastic cover and put the cover back to its original position.

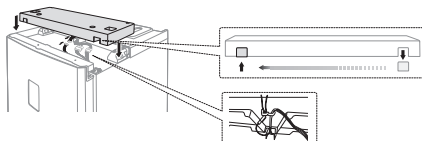

19. Tighten 2 screws back to its place.

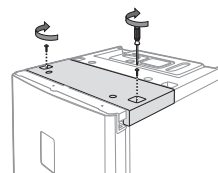

20. Detach the Fridge and the Freezer door gaskets and then attach them after rotating them 180°.

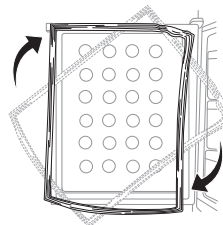

 **WARNING** After reversing the doors, make sure the Fridge and Freezer door gaskets are properly arranged. If not, there might be a noise or dew formed which affects performance of the refrigerator.

LEVELLING THE FREEZER


If the front of the appliance is slightly higher than the rear, the door can be opened and closed more easily.

Turn the adjusting legs clockwise to raise and counter-clockwise to lower the height.


Case 1) The appliance tilts down to the left.

- Turn the left adjusting leg in the direction of the arrow until the appliance is level.

Case 1)



Case 2)



Case 2) The appliance tilts down to the right.

- Turn the right adjusting leg in the direction of the arrow until the appliance is level.

operating your freezer

CHECKING THE CONTROL PANEL



Each time you press the button, a short beep will sound.

USING THE CONTROL PANEL

1 Child Lock

Press the Child Lock button for 3 seconds to activate the Child Lock function.

Child lock indicator will light up and all the buttons on the control panel will be locked.

To deactivate the Child Lock function, press the Child Lock button again for 3 seconds.




2 Freezer

Press the **Freezer** button to set the desired temperature from the range between -14°C and -24°C.



Default set temperature is set on -19°C and each time you press the Freezer button temperature will change in following order and temperature indicator will display the desired temperature.



When the temperature setting is done, temperature indicator will display the current temperature of the freezer.

3 Power Freeze

Press the Power Freeze button to activate the Power Freeze function. Power Freeze indicator will light up and the freezer will speed up the time to needed to freeze products in the freezer.



When you use this function, the energy consumption will increase. This function must be activated before putting large amount of food stuff in the freezer compartment at least 24 hours before.


To deactivate the Power Freeze function, press the Power Freeze button again.

- ✎ Power Freeze function cannot be used together with Eco function. Selecting Eco function will automatically deactivate the Power Freeze function.

4 Alarm

1. Alarm

Press the Alarm button to activate the Alarm function. Alarm indicator will light up and the refrigerator will alert you with alarm sound if the refrigerator door is kept open for longer than 2 minutes. To deactivate the Alarm function, press the Alarm button again.



2. Display Off

As standard, the temperature display is switched off, to switch between on and off mode, press alarm button for 3 seconds.


5 Eco

Press the Eco button to activate the Eco function. Eco indicator will light up and the freezer will set the limit for desired temperature range between -14°C and -18°C.



If you have set the desired temperature to to -19°C or lower, freezer will automatically set the temperature to -18°C.

- ✎ Eco function cannot be used together with Power Freeze function. Selecting Power Freeze button or Freezer button will automatically deactivate the Eco function.

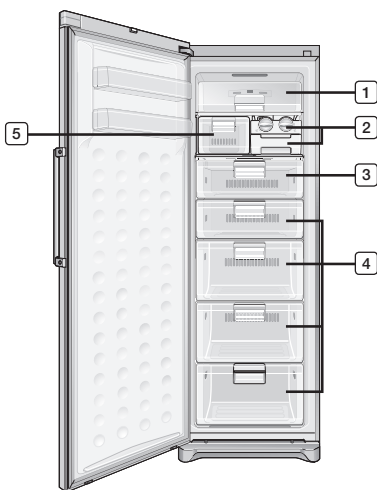

10_ operating

- ✎ Some of the features can be different and may not be available depending on the model.

- Position of the Twist ice maker [2] and the Small box [5] can be switched with each other.
- To get more space, you can remove cover of Top shelf [1], Twist ice maker [2], Fresh box [3], top three of the Big boxes [4] and the Small box [5]. It does not affect thermal and mechanical characteristics. A declared storage volume of freezer compartment is calculated with these parts removed.




Do not store glass bottles in the freezer.

USING THE FRESHER BOX (OPTION)

You can use the Fresher box to store foods or beverages that needs to be frozen or stored freshly.

- Use the lever on the top of the box to set the fresher box in Fresh or Fresher.

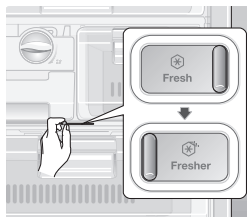

Fresh *

Set the lever in Normal to use the Fresher box the same way as other big boxes.

Fresher *


Set the lever in Fresher if you want to more long time stored freshly in the Fresher Box.

MAKING ICE

- ✎ Ice tray may look different depending on models.

Making ice cubes

1. Remove the ice cube tray by pulling it towards you.
2. Fill the tray with water up to the maximum water level marked on the tray.
3. Slide the tray back into the holder, taking care not to spill the water.
4. Wait until the ice cubes are formed.

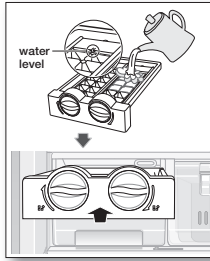


Freezing time

It is recommended that you wait for about one hour with the temperature set to Power Freeze for the ice cubes to form.

Removing the ice cubes

1. Make sure that the ice bin is in place under the ice tray. If not, slide it into place.
2. Twist one of the levers firmly in the clockwise direction until the tray twists slightly. The ice cubes fall into the storage bin.
3. Repeat Step 2 for the other half of the tray, if necessary.
4. To get ice, slightly lift up the ice tray and pull it towards you.

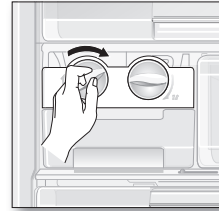

maintaining your freezer


REMOVING THE INTERIOR PARTS



Some of the features can be different and may not be available depending on the model.

Top shelf cover


1. Push the right side of cover inward until you can get the projection on the left side out.
2. When both sides of the projections are out of the grooves, pull it towards you to remove the cover.

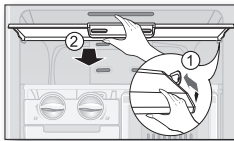

Make sure that you remove the top shelf cover when you assemble or disassemble the glass shelf.


Twist ice maker

Slightly lift up the twist ice maker and pull it towards you.

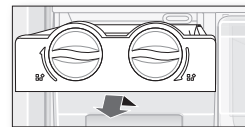


Boxes

Pull the boxes out fully then slightly lift it up to remove the boxes. (Small box/Fresher box/Big box)

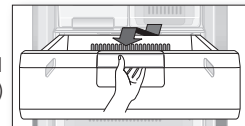


Tempered glass shelf

Gently lift up the shelves with both hands and pull it toward you.

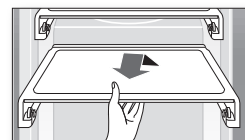

Soft frost door guard

Firmly grab the door guard with both hands and lift it up gently to remove the door guard.

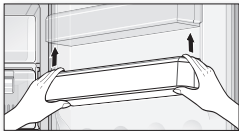

To get the best energy efficiency of this product, please leave all selves, drawers and baskets on their original position like as illustration in page (10)

CLEANING THE FREEZER



WARNING

Do not use Benzene, Thinner or Clorox™ for cleaning.

They may damage the surface of the appliance and can create a risk of fire.



CAUTION

Do not spray the freezer with water while it is plugged in, as it may cause an electric shock. Do not clean the freezer with benzene, thinner or car detergent for risk of fire.

REPLACING THE INTERIOR LIGHT



For LED lamp, please contact service engineer to replace it.

troubleshooting

PROBLEM	SOLUTION
The appliance is not operating at all or the temperature is too high.	• Check if the power plug is correctly connected. • Is the temperature control on the front panel correctly set? • Does sun shine on the appliance or are there any heat sources nearby? • Is the back of the appliance too close to the wall?
There are unusual noises.	• Check if the appliance is installed on a stable and even floor. • Is the back of the appliance too close to the wall? • Have any foreign objects fallen behind or under the appliance? • Is the noise coming from the compressor in the appliance? • A ticking sound may be heard inside the appliance; this is normal. This sound occurs when the various accessories contract or expand.
The front corners and sides of the appliance are warm and condensation starts to form.	• Heat-proof pipes are installed in the front corners of the appliance to prevent condensation from forming. When the surrounding temperature rises, this may not always be effective. However, this is not abnormal. • In very humid weather, condensation may form on the outer surface of the appliance when the moisture in the air comes into contact with the cool surface of the appliance.
You can hear a liquid bubbling in the appliance.	• This is the refrigerant, which cools the inside of the appliance.
There is a bad smell inside the appliance.	• Is there any spoiled food inside of the freezer? • Make sure that strong smelling food (for example, fish) is wrapped so that it is airtight. • Clean out your freezer periodically and throw away any spoiled or suspect food.
There is a layer of frost on the appliances walls.	• Are the air outlet vents blocked by food stored inside the freezer? • Space the food out as much as possible to improve ventilation. • Is the door fully closed?
Condensation forms on the inside wall of the appliance and around vegetables.	• Food with a high water content is stored uncovered with a high humidity level or the door has been left open for a long time. • Store the food with a cover or in sealed containers.

Ambient Room Temperature Limits

This refrigerator is designed to operate in ambient temperatures specified by its temperature class marked on the rating plate.

Class	Symbol	Ambient Temperature range (°C)
Extended Temperate	SN	+10 to +32
Temperate	N	+16 to +32
Subtropical	ST	+16 to +38
Tropical	T	+16 to +43



Internal temperatures may be affected by such factors as the location of the refrigerator, ambient temperature and the frequency with which you open the door. Adjust the temperature as required to compensate for these factors.



محدوده دمایی محل قرار گرفتن فریزر

این فریزر برای استفاده در یک محیط خانگی طراحی شده و محدوده دمایی عملکرد آن نیز بر روی صفحه درجه بندی آن مشخص گردیده است.


محدوده دمای محیط	نشانه	کلاس دمایی
+10 to +32	SN	نیمه معتدل
+16 to +32	N	معتدل
+16 to +38	ST	استوایی
+16 to +43	T	نیمه استوایی


 دمای داخل فریزر ممکن است تحت تأثیر برخی فاکتورها مثل محل فریزر، دمای محیط و تعداد دفعاتی که شما درب فریزر را باز و بسته می کنید، قرار گیرد. برای جبران تأثیر این فاکتورها، دما را بر حسب نیازتان تنظیم کنید.

عیب یابی

مشکل	راه حل
دستگاه اصلاً کار نمی کند یا دمای فریزر خیلی بالاست.	• بررسی کنید که سیم برق به درستی وصل شده باشد. • آیا کنترل دما بر روی پنل جلویی درست تنظیم شده است؟ • آیا دستگاه در معرض نور آفتاب قرار دارد یا منابع گرمایی در نزدیکی آن می باشند؟ • آیا پشت فریزر خیلی به دیوار نزدیک است؟
صداهای غیر معمول به گوش می رسد.	• بررسی کنید که دستگاه بر روی یک محل مسطح و تراز نصب شده باشد. • آیا پشت فریزر خیلی به دیوار نزدیک است؟ • آیا شل خارجی پشت یا زیر فریزر افتاده است؟ • آیا صدا از کمپرسور دستگاه ناشی می شود؟ • صدای تیک مانندی که ممکن است از داخل وسیله به گوش برسد یک امر طبیعی است که به دلیل انبساط یا انقباض وسایل داخل دستگاه می باشد.
گوشه ها کناره های دستگاه گرم بوده و چگالش تولید شده است.	• لوله های ضد گرما در گوشه های جلویی دستگاه به منظور جلوگیری از تشکیل چگالش تعبیه شده اند. • هنگامی که دمای محیط خارج افزایش می یابد، ممکن است این لوله ها موثر واقع نشوند. در هر صورت این اتفاق طبیعی است. • در آب و هوای مرطوب، ممکن است سطح خارجی دستگاه به هنگام تماس رطوبت هوا با سطح سرد دستگاه عرق کند.
صدای تشکیل حباب مایع از داخل فریزر به گوش می رسد.	• این صدا از خنک کننده ای که داخل فریزر را خنک می کند ناشی میشود.
بوی بدی داخل دستگاه استنشام می شود.	• آیا غذایی فاسد شده است؟ • مطمئن شوید که غذاهای بودار (برای مثال ماهی) را طوری بسته بندی کرده اید که هوا به داخل آن نفوذ نکند. • فریزر را هر چند وقت یکبار تمیز کرده و هر گونه مواد غذایی فاسد یا مشکوک را دور بریزید.
یک لایه برفک بر روی دیواره های فریزر تشکیل شده است.	• آیا دریاچه های فریزر با مواد داخل آن مسدود شده است؟ • به منظور تهویه فریزر غذا را تا حد امکان از دریاچه تهویه دور نگه دارید. • آیا درب کاملاً بسته است؟
چگالش بر روی دیواره دستگاه و در اطراف سبزیجات تشکیل می شود.	• غذایی با آب زیاد را بدون درپوش در فریزر گذاشته اید یا درب برای یک مدت طولانی باز مانده است. • غذا را با یک درپوش نگهداری کرده یا در ظروف در بسته بگذارید.

محفظه داخل درب

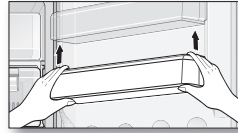

محفظه داخل درب را با دو دست گرفته و به آرامی آن را بالا ببرید تا در بیاید.

تمیز کردن فریزر


برای تمیز کردن فریزر از بنزن، تینی یا کلورکس استفاده نکنید. این مواد ممکن است به سطح دستگاه آسیب رسانده و سبب شوک الکتریکی شود. 

هنگامی که فریزر به برق متصل است، آب را به آن اسپری نکنید. چون خطر شوک الکتریکی وجود دارد. فریزر را با بنزن، تینر یا تمیز کننده های ماشین تمیز نکنید چون خطر شوک الکتریکی وجود دارد. 

تعویض لامپ داخل یخچال


برای لامپ LED، لطفاً با سرویس مهندسی برای تعویض لامپ تماس بگیرید. 

درآوردن مکعب های یخ

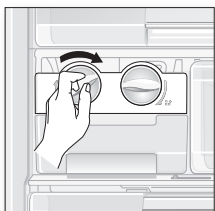

۱. اطمینان حاصل نمایید که محفظه قالب یخ دقیقاً زیر قالب قرار داشته باشد. در غیر اینصورت آن را سر جای خود قرار دهید...
۲. یکی از اهرم ها را به آرامی موافق عقربه های ساعت بچرخانید تا سینی نیز به طور جزئی بچرخد. یخ ها داخل محفظه می ریزند.
۳. مرحله ۲ را برای نیمه دیگر سینی تکرار کنید...
۴. برای خارج کردن قالبهای یخ، سینی را از دو طرف آن گرفته و به آرامی بپیچانید.

یخهای مکعبی

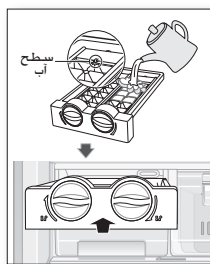


۱. قالب یخ را با کشیدن به طرف خودتان بیرون بکشید.
۲. آن را تا سطح ماکزیمم که بر روی پشت قالب مشخص شده است، با آب پر کنید.
۳. قالب را داخل نگهدارنده گذاشته و مراقب باشید که آب نریزد.
۴. منتظر بمانید که یخها تولید شوند.



زمان انجام
توصیه می شود برای درست کردن یخهای مکعبی یک ساعت دما را بر روی گزینه Power freeze تنظیم کنید.

تمیز کردن فریزر

درآوردن قطعات داخلی فریزر

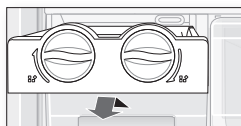


به آرامی یخساز را بالا برده و آن را به سمت خودتان بیرونکشید.



بعضی ویژگی ها ممکن است بسته به مدل متفاوت باشند و در فریزر شما موجود نباشند.

پوشش قفسه بالایی

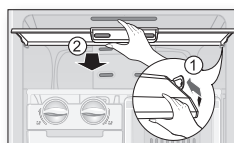


۱. سمت راست پوشش را به سمت داخل فشار داده تا زمانی که به بر روی سمت چپ برسید.
۲. هنگامی که هر دو طرف از داخل شکاف بیرون آمدند، آن را به سمت خودتان بکشید تا خارج شود.




در هنگام باز و بسته نمودن طبقه شیشه ای، از برداشتن درپوش بالای طبقه، اطمینان حاصل بفرمائید.

سبدها

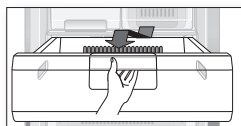

سبدها را به طور کامل بیرون کشیده و به طور جزئی بالا برده و درآورید.
(سبد کوچک، سبد انجماد سریع، سبد بزرگ)

قفسه شیشه ای نشکن

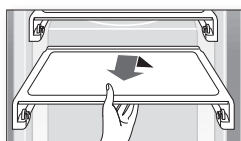

به آرامی قفسه ها را با دو دست بالا برده و آن را به سمت خودتان بکشید.

• بسته به مدل برخی از ویژگی ها متفاوت بوده و ممکن است در فریزر شما موجود نباشند.
• محل قرار گرفتن یخساز: دوقلو (۲) و جعبه کوچک (۵) می تواند عوض شود.

• به منظور دستیابی به فضای بیشتر، شما می توانید روکش را به طبقه بالائی (۱) انتقال داده، دستگاه یخساز (۲)، محفظه مخصوص تازه نگه داشتن اغذیه (۳)، سه عدد ظرف بزرگ بالا (۴) و ظرف کوچک (۵) را بچرخانید. این عمل بروی کارکرد حرارتی و مکانیکی دستگاه تأثیری نخواهد داشت. ظرفیت اعلام شده محفظه فریزر بر اساس برداشتن این لوازم، محاسبه شده است.


⚠ احتیاط
بطری های شیشه ای را در فریزر نگهداری نکنید.

روش استفاده از محفظه مخصوص

تازه نگه داشتن اغذیه (اختیاری)

شما می توانید از محفظه نگه داری غذا های تازه برای ذخیره سازی اغذیه و یا نوشیدنی هایی که نیاز به فریز شدن و یا نگه داری تازه دارند، استفاده فرمایید.

• اهرم بالای محفظه مخصوص تازه نگه داشتن اغذیه را جهت تنظیم حالت های تازه و تازه تر مورد استفاده قرار دهید.

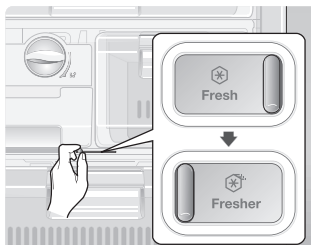

	تازه با تنظیم اهرم در حالت عادی، امکان استفاده از محفظه مخصوص تازه نگه داشتن اغذیه به مانند دیگر محفظه های بزرگ یخچال، برای شما مهیا می گردد.
	تازه تر در صورت نیاز به ذخیره سازی طولانی مدت تر در محفظه نگه داری غذا های تازه، اهرم داخل محفظه را تنظیم کنید.

یخساز

• بسته به مدل ممکن است قالب یخ متفاوت باشد.

• عملکرد فریز قوی را نمی توان به همراه عملکرد اکو مورد بهره برداری قرار داد. بنابراین با انتخاب عملکرد اکو، عملکرد فریز قوی بصورت خودکار غیر فعال خواهد شد.


۴ آلام


۱. آلام
برای فعال کردن عملکرد آلام این تکه را فشار دهید.
نشانیگر آلام روشن شده و در صورتیکه درب فریزر برای مدت بیش از ۲ دقیقه باز بماند، این بوق به شما هشدار می دهد.
برای لغو این عملکرد تکه Alarm را مجدداً فشار دهید.
۲. صفحه نمایشگر غیر فعال
بصورت استاندارد، صفحه نمایشگر به حالت غیر فعال می باشد. به جهت فعال و غیر فعال سازی آن، دکمه آلام را بمدت ۳ ثانیه فشار دهید.

۵ عملکرد ذخیره انرژی

تکه ECO تکه ECO را برای فعال کردن این عملکرد فشار دهید. نشانیگر روشن شده
ECO روشن شده
و فریزر محدودیتی برای انتخاب دما بین ۱۴- تا ۱۸- در نظر می گیرد.
در صورتیکه دمای مورد نظر را بر روی ۱۹- تنظیم کرده باشید، فریزر به طور خودکار دما را بر روی ۱۸- تنظیم می کند.

• انتخاب همزمان عملکرد ECO و Power Freeze امکانپذیر نمی باشد.
با انتخاب تکه Power Freeze، عملکرد ECO به طور خودکار لغو خواهد شد.

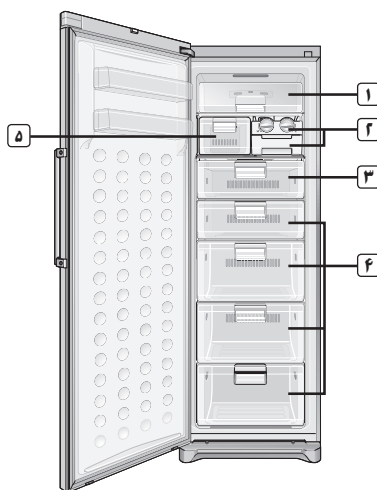

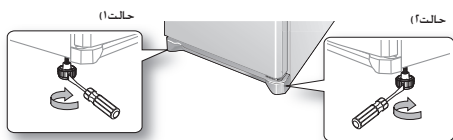

حالت ۲) دستگاه به سمت راست تمایل دارد.
 • پایه تنظیم کننده سمت راست را در جهت فلش بچرخانید تا دستگاه تراز شود.

تراز کردن فریزر

در صورتی که جلوی فریزر کمی بالاتر از پشت آن باشد، درب کمی آسانتر باز و بسته می شود. پایه تنظیم کننده را موافق عقربه های ساعت بچرخانید تا درب بالا رفته و برای کاهش ارتفاع فریزر آن را خلاف جهت عقربه های ساعت بچرخانید.

حالت ۱) دستگاه به سمت چپ تمایل دارد.
 • پایه تنظیم کننده سمت چپ را در جهت فلش بچرخانید تا دستگاه تراز شود.

عملکرد فریزر

۲) فریزر



تکمه Freezer را برای تنظیم دمای مورد نظر بین -۱۴ و -۲۴ فشار دهید.

دمای پیشی فرض بر روی -۱۹ تنظیم شده است و هر بار که شما تکمه Freezer را فشار می دهید دما به ترتیب زیر تغییر کرده و نشانگر دما، دمای مورد نظر را نشان خواهد داد.

-19°C — -20°C — -21°C — -22°C — -23°C — -24°C
 -18°C — -17°C — -16°C — -15°C — -14°C

هنگامی که تنظیم دما انجام شد، نشانگر دما دمای کنونی فریزر را نشان خواهد داد.

۳) انجماد سریع



تکمه Power Freeze را برای فعال کردن عملکرد انجماد سریع فشار دهید. نشانگر عملکرد انجماد سریع روشن شده و فریزر زمان مورد نیاز برای انجماد محصولات را تسریع می بخشد.

هنگامی که شما این عملکرد را انتخاب می کنید، مصرف برق بالا می رود. این عملکرد باید حداقل ۲۴ ساعت قبل از گذاشتن مقدار زیادی غذا در فریزر برای انجماد فعال گردد. برای غیر فعال کردن این عملکرد تکمه Power Freeze را فشار دهید.

عملکرد همزمان تکمه Power freeze و ECO امکانپذیر نمی باشد.

عملکرد-۹

بررسی پنل کنترل



هر بار که شما تکمه ای را فشار می دهید، صدای بوق کوتاهی به گوش می رسد.




استفاده از پنل کنترل

۱) قفل کودک




تکمه Child Lock را به مدت ۳ ثانیه فشار دهید تا عملکرد قفل کودک فعال شود.

نشانگر قفل کودک روشن شده و تمامی تکمه های روی پنل کنترل قفل می شوند. برای غیر فعال کردن قفل کودک، دوباره تکمه Child Lock را به مدت ۳ ثانیه فشار دهید.

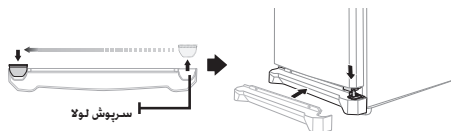


۱۷. پیچ را بسته و سیم ها را سر جای خود وصل نمایید.




⚠️ **اخطار** اطمینان حاصل نمایید که قبل از بستن سیم های الکتریکی فریزر را از برق کشیده باشید.


۱۸. سیم واقع بر روی دریوش پلاستیکی را وصل کرده و دریوش را سر جای خود بگذارید.

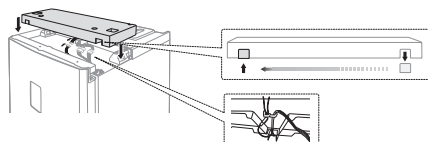

۱۹. پیچ را سر جای خود محکم کنید.

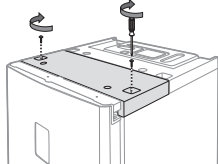


۲۰. درزگیرهای در یخچال و فریزر را باز کرده و سپس آنها را پس از گرداندن به میزان ۱۸۰ درجه متصل کنید.

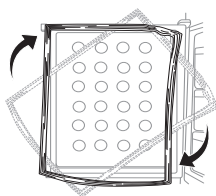


⚠️ **اخطار** پس از برعکس کردن درها، دقت نمایید که درزگیرهای در یخچال و فریزر درست مرتب شده باشند. در غیراینصورت، ممکن است سروصدا یا شبنم ایجاد شود که بر روی طرزکار یخچال تأثیر می گذارد.

۱۲. از آچار برای باز کردن میله لولا استفاده کرده و سپس لولا را کرده و میله لولا را مجدداً وصل کنید.




۱۳. با عملکرد معکوس مرحله ۱۱، نسبت به بستن مجدد لولا بروی درب فریزر اقدام بفرمائید.

حتماً روکش لولای سمت راست (که در قسمت زیر روکش پلاستیکی برداشته شده در مرحله ۲ قرار دارد) را مورد استفاده قرار داده و حلقه پلاستیکی محافظ را بردارید. پس از بستن مجدد لولا، سیم و روکش لولا، سمت آن را از چپ به راست تغییر دهید.

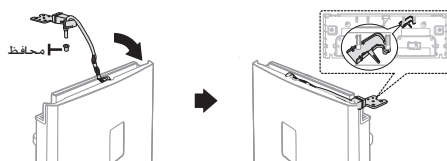


۱۴. پس از تعویض جهت لولا، آنرا بوسیله روکش سیمی که در بالای درب فریزر قرار دارد، ببندید.

«روکش عقب سیم درب» را می توان در در بسته بندی محصول یافت.

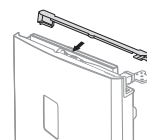

۱۵. روکش دستگیره درب را بسمت بیرون کشیده و پیچ های آن را باز نموده و سپس از در آوردن دریوش ها و دستگیره و جابجائی آن از سمت راست به چپ درب. اطمینان حاصل فرمائید. (سوراخ های سمت چپ را بوسیله دریوش ها جدا شده بپوشانید.)

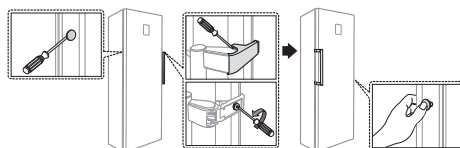


بسته به مدل های مختلف ممکن است دسته ها سرپوش نداشته باشند.


۱۶. سرپوش لولا را جدا نموده و دریوش پایه جلوئی را نصب نمائید. به دقت درب فریزر را به پشت قرار دهید.

۸- نصب


۷. ابتدا توسط آچار محور لولا را باز نمائید. جهت برداشتن نگه دارنده لولا، مهره را شل نموده و محور لولا و بالا آورنده آن را جابجا نمائید.




۸. لولا را در قسمت زیر و راست دستگاه فریزر در قسمتی که قبلا و در مرحله ۶ مهره های آن را باز نموده بودید، وصل نمائید. جهت استفاده های بعدی، مهره های باز شده را به قسمت زیر و چپ دستگاه فریزر ببندید.

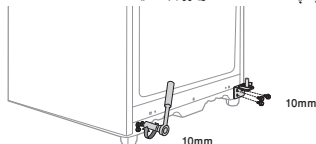


۹. پیچ های قسمت زیر چپ و راست در فریزر را باز نموده و بردارید. جهت ابزار متوقف کننده درب را از سمت چپ به سمت راست تغییر دهید. در همین حال می بایست جهت نگه دارنده لولا نیز تغییر یابد.

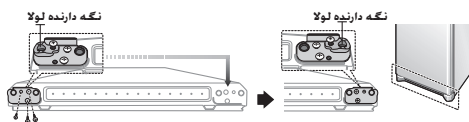

۱۰. درپوش سیم واقع بر روی قسمت بالایی فریزر را بردارید.

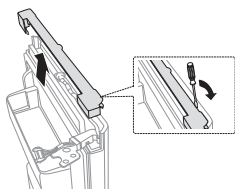


۱۱. لولا و همچنین حلقه پلاستیکی محافظ آن را از درب فریزر جدا سازید. سپس روکش لولای چپ را از جای خود آزاد نموده و آنگاه سیم ها را از داخل روکش لولا بیورید.

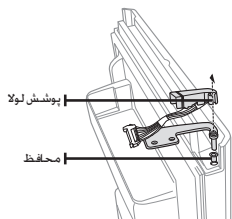

مراقب باشید که در هنگام برداشتن روکش لولا، به سیمهای برق آسیبی نرسانید.




۲. درپوش پلاستیکی را برداشته و اطمینان حاصل نمائید که سیم متصل به آن باز نشود. بعد از برداشتن درپوش پلاستیکی، قطعات را برای تعویض جهت باز شدن درب باز کنید.

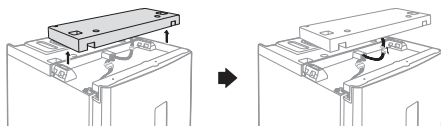

دقت نمائید که در هنگام برداشتن روکش پلاستیکی، سیم های برق آسیب نبینند.




۳. سیم ها را باز کرده و ۳ مهره را باز کنید.



قبل از باز کردن سیم های الکتریکی اطمینان حاصل نمائید که فریزر را از برق کشیده باشید.




۴. با بالا بردن درب به صورت صاف آن را از لولای پایینی در آورید.

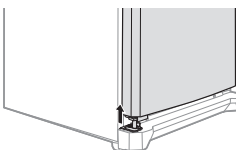

درب فریزر سنگین است، مراقب باشید به هنگام درآوردن بر روی شما نیفتد.




۵. درپوش پایه جلویی را با باز کردن دو پیچ جدا کنید.

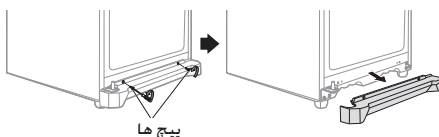

۳ عدد مهره ای که لولا را نگاه می دارند را باز کنید.

همچنین ۳ عدد مهره ای که در قسمت زیر و سمت راست و کنار پایه جلو در محلی که لولای جدا شده قرار می گیرند، را نیز باز نمائید.

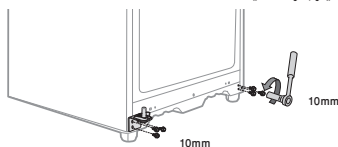

نصب فریزر

آماده سازی برای نصب فریزر

به شما به خاطر انتخاب و خرید فریزر سامسونگ تبریک می گوئیم. امیدواریم از ویژگی های منحصر به فرد و بازدهی که این دستگاه ارائه می دهد، نهایت استفاده را ببرید.

این فریزر باید به درستی نصب شده و قبل از استفاده مطابق با دستورالعمل های این دفترچه در محل خود قرار داده شود.

از این دستگاه فقط برای اهدافی که در این دفترچه راهنما آمده است، استفاده کنید.

اکیدا توصیه می شود که هرگونه سرویس یا تعمیرات توسط تکنیسین واجد شرایط انجام گیرد.

لطفا مواد بسته بندی این محصول را مطابق با قوانین محیط زیست از بین ببرید.

لطفا قبل از تعویض لامپ داخلی فریزر، دوشاخه را از خطر برق بکشید.

- در غیر این صورت خطر شوک الکتریکی وجود دارد.

انتخاب یک محل مناسب برای نصب

محلی که در معرض نور مستقیم آفتاب نباشد.



محلی با سطح صاف و مسطح.

محلی که فضای کافی برای باز شدن آسان درب فریزر داشته باشد.

جهت انجام تهویه مناسب هوا، فضای کافی را در قسمت های راست، چپ، عقب و بالای دستگاه در نظر بگیرید.

در صورتیکه فریزر به قدر کافی جا نداشته باشد، عملکرد سیستم خنک ساز داخلی بیشتر خواهد شد.

لطفا از حرکت آزادانه دستگاه در مواقع تعمیرات و سرویس، اطمینان حاصل بفرمایید.

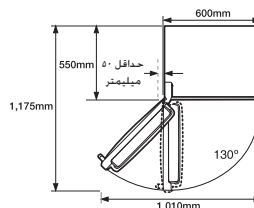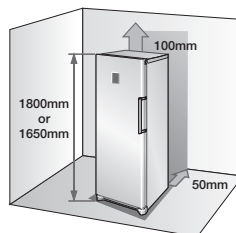

• ارتفاع محصول ممکن است بسته به مدل متفاوت باشد.

• به هنگام نصب فضای کافی از راست، چپ، پشت و بالا در نظر بگیرید. این کار به کاهش مصرف برق کمک کرده و هزینه برق را کاهش می دهد.

• فریزر را در محلی که دمای آن از ۱۰ تجاوز می کند، نصب نکنید.

• به هنگام نصب، سرویس یا تمیز کردن پشت فریزر، آن را به طور مستقیم جلو کشیده و بعد از اتمام کار آن را به همان صورت عقب بکشید.



اطمینان حاصل نمایید که کف تحمل وزن فریزر را داشته باشد.

عوض کردن جهت باز شدن درب فریزر


Samsung توصیه می کند که برعکس کردن در یخچال تنها توسط ارائه کنندگان خدماتی مجاز Samsung انجام شود. اینکار در مقابل دریافت دستمزد انجام شده و به خرج مشتری خواهد بود.

هرگونه آسیبی که در هنگام برعکس کردن در یخچال ایجاد شود تحت پوشش گارانتی سازندگان دستگاه نمی باشد. هرگونه تعمیرات درخواست شده به واسطه چنین شرایطی در مقابل دریافت دستمزد و به خرج مشتری انجام خواهد شد.

ابزار لازم (تامین نشده)

		
آچار سوکت ۱۰ میلی متری (برای مهره ها)	پیچ گوشه دوسو	پیچ گوشه چهارسو
		
آچار Hex چهار میلی متری (برای انتهای میله لولا)	آچار (برای شفت لولا)	آچار سوکت ۸ میلی متری (برای مهره ها)

۱. دو پیچ بالای فریزر را باز کنید.

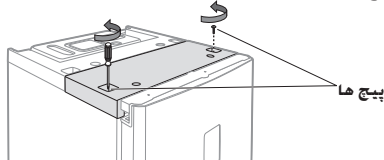

نکات اضافی برای استفاده



صحیح از دستگاه

- در مواقع قطعی برق، با مقامات محلی سازمان برق تماس گرفته و از مدت زمان قطع بودن برق آگاهی حاصل نمایید.
- بیشتر قطعی های برق که دو یا سه ساعت طول می کشند، بر دمای فریزر تأثیر نمی گذارند. اما شما باید تعداد دفعات باز و بسته کردن درب را در این ساعات به حداقل برسانید.
- اما در صورتیکه قطعی برق بیش از ۲۴ ساعت طول می کشد، تمام غذاهای منجمد را خارج کنید.
- در صورتیکه فریزر شما مجهز به کلید می باشد، کلید را از دسترس کودکان دور کرده و آن را در نزدیکی فریزر قرار ندهید.
- در صورتیکه دستگاه برای یک مدت طولانی زیر محدوده دمایی که عملکرد فریزر در آن طراحی شده است، قرار بگیرد ممکن است به درستی کار نکند. (احتمال یخ زدایی مواد منجمد و یا گرم شدن بیش از حد غذاهای موجود در فریزر)
- دستگاه شما بدون پرفک می باشد. این بدین معنی است که نیازی نیست که شما به طور دستی این کار را انجام دهید. چون این کار به طور خودکار انجام می شود
- افزایش دما در حین فرآیند یخ زدایی با ملزومات ISO مطابق می باشد. اما در صورتیکه می خواهید از این افزایش دمای ناخواسته جلوگیری کنید، لطفاً تمام غذاهای منجمد را درون چندین لایه روزنامه بپیچید.
- هرگونه افزایش دمای مواد منجمد در حین یخ زدایی، می تواند زمان نگهداری مواد را کوتاه کند.

فهرست

نصب فریزر	۰۶
عملکرد فریزر	۰۹
تمیز کردن فریزر	۱۱
عیب یابی	۱۳

• اگرچه خنک کننده دستگاه یعنی ایزو بوتان (R۶۰۰a)، گازی با سازگاری بالا با محیط زیست می باشد، اما قابل انفجار نیز

می باشد. به هنگام حمل و نصب دستگاه، مراقب باشید که هیچ یک از قطعات مدار خنک کننده آسیب ندیده باشد.

• نشئت مایع خنک کننده از لوله ها می تواند سبب جرقه یا آسیب رسیدن چشم شود. در صورتیکه نشئت گاز را احساس کردید، از نزدیک کردن هر گونه شعله مستقیم یا منابع گرمایی به دستگاه خودداری کرده و اتاقي را که دستگاه در آن قرار دارد، به مدت چند دقیقه تهویه کنید. • به منظور جلوگیری از ایجاد مخلوط گاز قابل اشتعال با هوا به هنگام نشئت در مدار خنک کننده، اندازه اتاقي که دستگاه در آن قرار داده می شود، باید بر اساس میزان خنک کننده استفاده شده باشد.

هرگز از دستگاهی که هرگونه نشانه صدمه دارد، استفاده نکنید. در صورتیکه شک دارید، با فروشنده تماس بگیرید. اتاق باید برای هر ۸ گرم خنک کننده R۶۰۰a به اندازه ۱m³ فضا داشته باشد. میزان خنک کننده استفاده شده در دستگاه شما، بر روی صفحه مشخصات داخل فریزر نشان داده شده است.

• در صورتیکه بر روی فریزر آب ریخت، دوشاخه را از پریز کشیده و با مرکز خدمات مجاز سامسونگ تماس بگیرید.



نشانه های احتیاط برای تمیز کردن دستگاه



• آب را به طور مستقیم به بیرون یا داخل دستگاه نپاشید.

- خطر آتش سوزی یا شوک الکتریکی وجود دارد.

• هرگز گاز قابل اشتعال را نزدیک فریزر اسپری نکنید.

- خطر انفجار یا آتش سوزی وجود دارد.

• هرگونه مواد خارجی یا گرد و خاک را از پریز تمیز کنید. اما از پارچه خیس یا مرطوب برای تمیز کردن یا خارج کردن مواد خارجی از پریز استفاده نکنید.



- در غیر اینصورت خطر شوک الکتریکی یا آتش سوزی وجود دارد.

• مواد تمیز کننده را مستقیماً بر روی صفحه نمایشگر نپاشید.

- ممکن است حروف حک شده بر روی صفحه نمایشگر پاک شوند.

• قبل از تمیز کردن و یا انجام تعمیرات فریزر را از برق بکشید.



نشانه های هشدار جدی برای دور انداختن دستگاه



• به هنگام دور انداختن این دستگاه، درب ها و لاستیک های درب را درآورده تا کودکان داخل آن گیر نکنند. کودکان باید نظارت شوند تا اطمینان حاصل شود که با دستگاه بازی نمی کنند.



• لطفاً مواد بسته بندی این محصول را به روش سازگار با محیط زیست از بین ببرید.

• قفسه های داخل فریزر را درآورید تا کودکان و حیوانات از آن بالا نروند. قبل از دور انداختن دستگاه اطمینان حاصل نمایید هیچ یک از لوله های پشت دستگاه آسیب ندیده باشد.

• R۶۰۰a و R۱۳۴a به عنوان خنک کننده در فریزر استفاده می شوند. برجسب کمپرسور پشت دستگاه یا درجه داخل فریزر را بررسی کنید تا بدانید از کدام نوع خنک کننده در این دستگاه استفاده شده است. در صورتیکه از نوع R۶۰۰a می باشد برای دور انداختن صحیح و ایمن دستگاه با مقامات محلی تماس بگیرید. سیکلوپنتان به عنوان گاز دمنده عایق استفاده شده است. لطفاً به منظور از بین بردن صحیح و سازگار با محیط زیست با مقامات محلی تماس بگیرید. قبل از دور انداختن دستگاه اطمینان حاصل نمایید هیچ یک از لوله های پشت دستگاه آسیب ندیده باشد. لوله ها باید در محیط باز شکسته شوند.

۴- اطلاعات ایمنی

- در صورتیکه کودکان آنها را بر روی سرشان بگذارند. خطر خفگی وجود دارد.
- دستگاه باید در محلی قرار داده شود که بعد از نصب دسترسی به پریز آسان باشد.



- فریزر باید به زمین متصل شود.
- شما باید به منظور جلوگیری از نشت جریان یا شوک الکتریکی ناشی از نشت جریان از فریزر، آن را به زمین متصل کنید.



- در صورتیکه سیم برق آسیب دید، آن را فوراً توسط سازنده یا نمایندگی خدمات تعویض کنید.
- فیوز برق موجود بروی یخچال می بایست توسط یک تکنسین مجرب و یا شرکت خدمات تعویض گردد.
- عدم رعایت این موضوع احتمال برق گرفتگی و یا بروز جراحات شخصی را به همراه خواهد داشت.



نشانه های احتیاط برای نصب



- درجه تهویه دستگاه را با چیزی مسدود نکنید.
- اجازه دهید دستگاه ۲ ساعت پس از نصب بدون استفاده باقی بماند.



نشانه های هشدار جدی برای استفاده از دستگاه



- دو شاخه را با دست خیس به پریز نزنید.
- چیزی را بر روی فریزر نگهداری نکنید.
- هنگامی که درب را باز و بسته می کنید، ممکن است شئی افتاده و سبب صدمه شخص یا آسیب رسیدن به دستگاه شود.
- ظرف پر از آب را بر روی فریزر نگذارید.
- در صورت ریختن خطر شوک الکتریکی وجود دارد.
- کودکان باید نظارت شوند تا اطمینان حاصل شود که با دستگاه بازی نمی کنند. اجازه ندهید کودکان از درب آویزان شوند. در این صورت خطر صدمه جدی وجود دارد.
- خطر گیر کردن کودکان در فریزر وجود دارد. اجازه ندهید که کودکان به داخل فریزر بروند.
- دیواره های فریزر یا محصولات داخل آن را با دست خیس لمس نکنید.
- سبب چسبیدگی دست ها می شود.
- حشره کش یا مواد اشتعال زا را در فریزر نگهداری نکنید.
- نگهداری بنزین، تینر، الکل، اتر، گاز LP و دیگر محصولات اینچنین می تواند منجر به انفجار گردد.
- محصولات آزمایشگاهی، مواد دارویی و یا مواد حساس به دما را در فریزر نگهداری نکنید.
- موادی که نیاز به کنترل دقیق دما دارند، نباید در فریزر نگهداری شوند.

- از هیچ گونه وسیله الکتریکی داخل فریزر استفاده نکنید. مگر وسایلی که در این دفترچه راهنما توصیه شده باشد.
- از وسایل مکانیکی یا دیگر وسایل به منظور تسریع برآورد زدایی استفاده نکنید مگر وسایلی که سازنده آنها را توصیه کرده است.



- به مدار خنک کننده آسیب نزنید.
- هرگز خودتان اقدام به تعمیر یا باز کردن فریزر نکنید.
- خطر آتش سوزی، خرابی دستگاه یا صدمه جدی وجود دارد.



- کودکان باید نظارت شوند تا اطمینان حاصل شود که با دستگاه بازی نمی کنند.
- این محصول تنها برای نگهداری غذا در یک محیط خانگی طراحی شده است.
- در صورتیکه نشت گاز احساس می کنید، از نزدیک کردن هرگونه شعله مستقیم، جرقه یا منابع گرمایی به یخچال خودداری کرده و اتاقی که دستگاه در آن قرار دارد را به مدت چند دقیقه تهویه کنید.
- تنها از لامپ های LED تامین شده توسط سازنده یا نماینده خدمات استفاده کنید.



- در صورتیکه بوی دود یا دارو مانند احساس می کنید، فوراً فریزر را از برق کشیده و با مرکز خدمات الکترونیک سامسونگ تماس بگیرید.
- در صورتیکه فریزر شما به لامپ LED می باشد، درپوش لامپ و خود لامپ LED را خودتان باز نکنید.
- برای این کار با نماینده خدمات تماس بگیرید.



نشانه های احتیاط برای استفاده



- نوشیدنی های کربن دار یا اسیدی را در فریزر نگذارید.
- بطری یا ظروف شیشه ای را در فریزر نگذارید.
- هنگامیکه بطری ها منجمد می شوند، ممکن است شکسته و سبب جراحات شوند.



- به منظور گرفتن بهترین عملکرد از دستگاه - غذاها را نزدیک درجه تهویه واقع در قسمت پشتی قرار ندهید چون این کار جریان هوای آزاد در محفظه فریزر را مسدود می کند.
- غذاها را قبل از گذاشتن در فریزر کاملاً پوشانده و یا در ظروف فریزر بگذارید تا هوا به آن نفوذ نکند.
- هر گونه غذای تازه پخته شده را نزدیک غذاهای از قبل قرار داده شده در فریزر نگذارید.
- نوشیدنی های کربن دار یا اسیدی را در فریزر نگذارید. بطری یا ظروف شیشه ای را در فریزر نگذارید.
- در صورتیکه می خواهید برای مدت کمتر از سه هفته از خانه دور باشید، نیازی به کشیدن فریزر از پریز نیست، اما در صورتیکه سفر شما بیش از سه هفته طول می کشد، فریزر را از برق کشیده، آن را تمیز کرده و خشک نمایید.
- تانک آب، سینی یخ و قالب های یخ را فقط با آب آشامیدنی پر کنید.

اطلاعات ایمنی - ۳

اطلاعات ایمنی

اطلاعات ایمنی

• قبل از کار کردن با دستگاه، لطفاً این دفترچه راهنما را به طور کامل مطالعه کرده و برای رجوع در آینده نگه دارید.

• از این دستگاه فقط برای اهداف تعیین شده که در این دفترچه راهنما توصیه شده است، استفاده کنید. این دستگاه برای استفاده افراد با ناتوانی های جسمی و ذهنی (شامل کودکان) یا افرادی که تجربه و دانش کمی برای کارکردن با دستگاه دارند، طراحی نشده است. مگر اینکه توسط یک فرد مسئول و با تجربه نظارت شوند.

• از آنجاییکه این دستورالعمل ها چندین مدل را در بر می گیرد، (نوع کنترل الکترونیکی، نوع کنترل مکانیکی) ممکن است ویژگی های فریزر شما کمی با آنچه در این دفترچه آمده است، متفاوت باشد

نشانه های احتیاط/خطر استفاده شده در این

دفترچه:

عمل خطرناک یا ناامن که ممکن است به خطر مرگ یا صدمه جدی منجر گردد.	
عمل خطرناک یا نا امن که ممکن است به خطر صدمه فردی یا آسیب رسیدن به دستگاه منجر گردد.	

نشانه گر کاری است که نباید انجام دهید.	
نشانه گر آن است که نباید باز شود.	
نشانه گر آن است که نباید لمس شود.	
نشانه گر کاری است که باید رعایت کنید.	
نشانه گر آن است که باید دوشاخه را از پریز بکشید.	
نشانه گر آن است که اتصال به زمین باید انجام گردد.	
توصیه می شود با تعمیر کار تماس بگیرید.	
نکته	

این نشانه های هشدار به منظور جلوگیری از آسیب رسیدن به شما و دیگران آورده شده اند. لطفاً آنها را کاملاً رعایت کنید.

بعد از خواندن این دفترچه راهنما آن را در یک محل امن به منظور رجوع در آینده نگهداری کنید.

نشانه های هشدار جدی برای

نصب دستگاه



• فریزر را در یک محل مرطوب یا محلی که ممکن است در معرض آب باشد، نصب نکنید.

- عایق بندی خراب قطعات الکتریکی می تواند سبب شوک الکتریکی یا آتش سوزی شود.

• این فریزر را در معرض مستقیم نور آفتاب یا در محلی که در معرض گرمای حاصل از اجاق گاز، هیتر های برقی و دیگر وسایل قرار دارد، نصب نکنید.

• هرگز از لوله های گاز، خطوط تلفن، یا دیگر سیم های برق برای سیم اتصال به زمین استفاده نکنید.

- استفاده نادرست از دوشاخه اتصال به زمین می تواند به شوک الکتریکی منجر گردد.

• هرگز چندین وسیله را با هم به یک برد وصل نکنید. فریزر باید همواره به یک پریز جداگانه که دارای درجه بندی جریان مطابق با جریان نشان داده شده بر روی صفحه فریزر، وصل گردد.

- این کار بهترین عملکرد را ارائه داده و از اضافه جریان مدار سیم کشی های خانگی که می تواند سبب آتش سوزی ناشی از گرم شدن بیش از حد سیم ها جلوگیری می کند. • از سیمی که نشانه ای از پارگی یا ساییدگی در طول و یا انتهای آن دیده می شود، استفاده نکنید.

• سیم برق را بیش از حد خم نکرده یا اجسام خیلی سنگین بر روی آن نگذارید.

• این فریزر باید به درستی نصب شده و بر طبق

دستورالعمل های این دفترچه راهنما در محل مناسب قرار داده شود.

• در صورتیکه سوکت شل است، دوشاخه را به آن نزنید.

- خطر شوک الکتریکی وجود دارد.

• دو شاخه برق را با سیم مخصوص خود وصل کنید.

- در غیر اینصورت سیم خم شده و می تواند سبب شوک الکتریکی و یا آتش سوزی شود.

• به هنگام حرکت دادن فریزر، مراقب باشید که سیم برق ساییده نشده و یا آسیب نبیند.

- خطر آتش سوزی وجود دارد.

• اطمینان حاصل نمایید که سیم برق توسط پشت

فریزر خراشیده و یا آسیب ندیده باشد.

• مواد بسته بندی محصول را دور از دسترس کودکان قرار دهید.



سامسونگ
فقط با خدمات سام سرویس
www.samservice.com



صفحه جلد

دفترچه راهنمای یخچال

Planet
First

100%
Recycled Paper

فارسی

این کتابچه راهنما از کاغذ ۱۰۰ درصد بازیابی شده تهیه شده است.

امکانات را تصور کنید

از شما به خاطر انتخاب و خرید محصول سامسونگ
متشکریم.

به منظور دریافت خدمات کاملتر، لطفا محصول خود را در

سایت زیر ثبت نمایید: www.samsung.com/register

SAMSUNG

دستگاه بدون پایه

Code No. DA99-01951B REV(0.9)