

Washing Machine

user manual

imagine the possibilities

Thank you for purchasing a Samsung product.
To receive a more complete service,
please register your product at
www.samsung.com/global/register



features

- **Air Turbo Drying System**

- Air Turbo technology spins hard and fast so you can spend less time drying.
- Time Saving AIR TURBO saves your time, ensuring your clothes are dried 30%-40% faster than line drying alone. Especially during the rainy season and in high-humid weather, laundry that once took days to drip-dry, such as heavy jeans, bulky sweaters, and thick blankets are dried more rapidly.
- Easy-to-iron AIR TURBO is perfect for delicates and clothes made of synthetic fabrics. No more hanging and waiting. Simply iron straight-out-of-the washer, since AIR TURBO eliminates just enough moisture to keep clothes adequately damp for ironing.

- **Fuzzy Control**

- Fuzzy control operates with best washing course by sensing the washload like artificial intelligence.

- **Transparent Window**

- This Transparent Window is the new concept to solve the curiosity of users to see inside of washing machine while operation.
While operation, the laundry progress inside of washing machine can be checked by looking through the transparent window.

- **Double Storm Pulsator- Less Tangle, Better Washing Performance**

- Tangle Free - Multi-dimensional water currents help clothes stay tangle free.
- Water current technology designed specifically to enhance washing performance. The power of tornado-like multi-dimensional water currents guarantee excellent washing performance.

- **Magic Filter**

- This unique magic Filter ensures that all the lint inside the tub is captured for top quality filtering results to deliver consistently effective cleaning results.

- **Auto Restart**

- The power is turned on automatically after power failure.

- **Softener Dispenser**

- The Softener Dispenser releases the fabric softener at the appropriate time when the last rinsing proceeds.

- **CHILD-LOCK Function**

This is a device to protect children from being accidentally hurt while playing with the washer.

- How to start the Child-Lock function:
Press the "Power" button to go to an initial washing mode.
By pressing "Start/Hold" button, you start washing and in case Child Lock function is needed during the laundry
Press both the "Water level" and "Function" buttons at the same times.(for 3 seconds)
(Note: You cannot perform the function without the "Power" button on.)
- To release the function of Child-Lock: In case the "Child-Lock" is programmed, press both the "Water level" and "Function" buttons at the same time.

safety instructions

Please note that the following precautions for safety intend to prevent unpredictable danger and damage by helping the proper use in safety. When using hot water in washing, please make sure that the water should not exceed 50°C.

- Plastic parts may be deformed or damaged, and an electric shock or a fire may take place.

WARNING

There might be serious injury or fatal accident when you violate this instruction.

- If the plug (power supply cord) is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- Do not pull the cord off or touch it with moist hands.
 - An electric shock or a fire may take place.
- Do not bend the power supply cord by force or press it with heavy things.
 - An electric shock or a fire may take place.
- Do not install the washer nearby electric implement or don't put a candle light or cigarette light on the washer.
 - A fire may take place.
- During operation, do not put your hands or metal materials under the washer.
 - You may be hurt by spinning board beneath the washer.
- Stay away from the washer when the bottom of the washer sinks into the water.
 - There might be an electric shock. Please wait until the water drains out completely.
- Do not put laundry stained with gasoline, benzene, or alcohol in the washer, and keep the materials away from the washer.
 - An explosion or a fire may take place.
- During spinning, don't put your hand in the spinning tub.
 - It may hurt your hands. If it does not stop within 15 seconds after you open the lid, call service agent immediately.
- This appliance is not intended for use by young children or infirm persons unless they have been adequately supervised by a responsible person to ensure that they can use the appliance safely. Young children should be supervised to ensure that they do not play with the appliance.
- This appliance has to be connected to the plug endurable to proper power consumption.
- This appliance has to be positioned so that the plug is accessible after installation.
- No user-serviceable parts inside. Refer any servicing to qualified service personnel.
 - Otherwise this may cause a mechanical error, electric shock, fire or physical damage.
 - The product warranty does not cover problems resulting from disassembling the product.
- Do not use this product for business purposes.
- For washing machines with ventilation openings in the base, that a carpet must not obstruct the openings.

CAUTIONS

There might be a slight injury or damage when you violate this instruction.

- Don't install it in the area with moisture or outdoor where it has rain or snow.
 - An electric shock or a fire may take place.
- Please unplug the power supply cord when you do not use it.
 - An electric shock or a fire may take place.
- If there is dust or water on the power supply plug and its connected part, please remove it completely.
 - An electric shock or a fire may take place.
- Do not make your kids look into the inside of the washer.
 - If your kid falls into the washer, his life could be in danger.
- Ventilate immediately without touching the power plug if gas is leaking.
 - An electric shock or a fire may take place if it catches flame.
- If the washer makes strange noise, smell or smoke, unplug it promptly and call service agent.
 - An electric shock or a fire may take place.
- When cleaning, don't spray water to the parts of the washer directly.
 - It may make its life span shorten. Also an electric shock or fire may take place.
- Don't use several appliances together with an outlet.
 - A fire may take place due to unusual heat.
- Don't press the button with an awl or pin.
 - An electric shock or a fire may take place.
- Use the new hose-sets and old hose-sets should not be reused.
- If the damage is found on the current cord in use, it should be replaced by manufacturer, service center or authorized person in order to avoid the risk.
- Connect the grounding wire to the shell plate, and bury it under at least 25cm of earth; alternatively, connect the ground wire to the appropriate pin on a properly grounded power receptacle. Never connect the wire to a telephone line, lightning rod, or gas pipe. 

contents

SETTING UP YOUR WASHER	5	Description of part
	6	Control Panel

5

MANUAL FUNCTIONS	8	Manual functions
-------------------------	---	------------------

8

INSTALLATION & MAINTENANCE	9	Environment
	9	Levelling
	9	Connecting the water supply hose
	9	Assembling the rat protection panel
	10	How to connect the drain hose
	10	How to put the detergent in
	10	How to add the fabric softener
	10	Water supply connector filter
	10	Cleaning the filter
	10	How to clean the pump filter

9

TROUBLESHOOTING	11	Troubleshooting
------------------------	----	-----------------

11

WASHING MACHINE WON'T WORK?	11	Washing machine won't work?
------------------------------------	----	-----------------------------

11

SPECIFICATION	12	Specification
----------------------	----	---------------


12

setting up your washer

DESCRIPTION OF PART

The User's Manual is for common use.


Make use of the User's Manual depending upon your washing machine model.

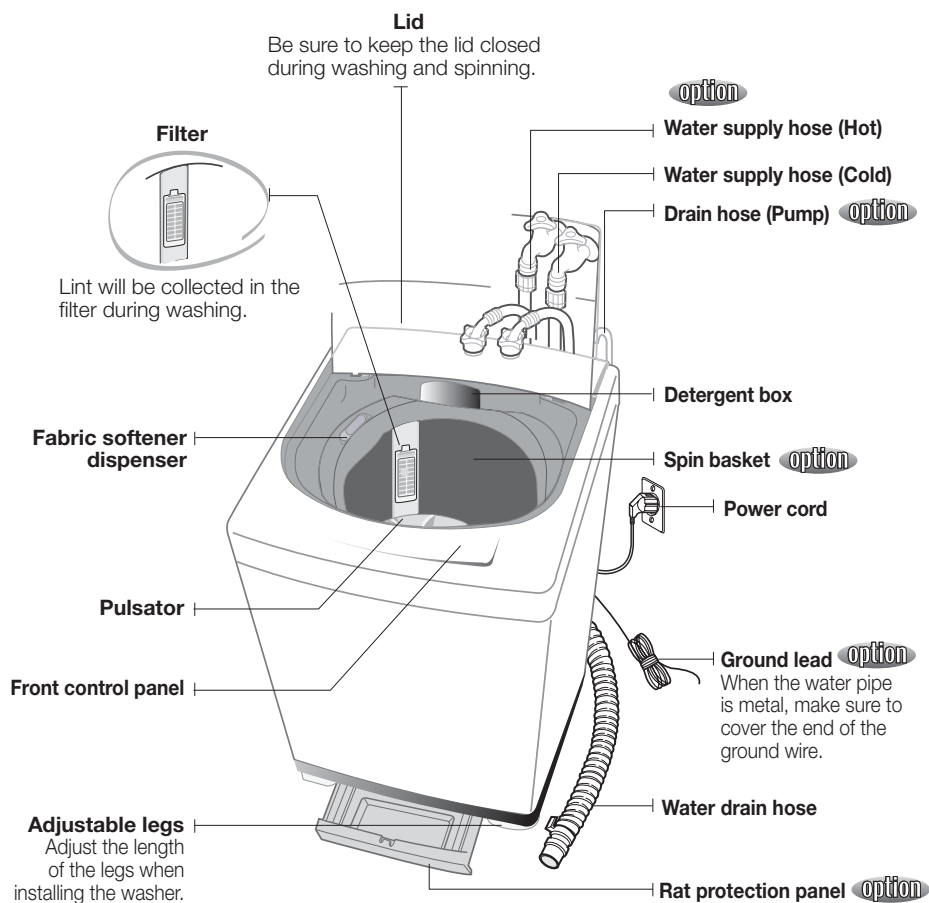

setting up your washer

CONTROL PANEL

For more details, see control panel of your washing machine.

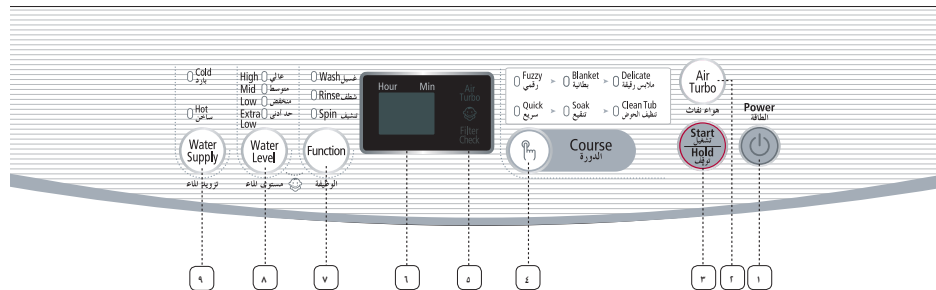

1 POWER BUTTON	Press this button once to operate. Press it again to turn the power off.
2 AIR TURBO BUTTON	Press this button to speed dry your laundry. This function can only be selected if a spin cycle is set. You can add this function to all courses except for the Delicate course.
3 START/HOLD BUTTON	Use to pause and restart the operation. To change the washing procedure during an operation, press this button to stop, and again to restart after changing the procedure.
4 COURSE SELECT BUTTON	Each time the button is pressed, the washing course changes; Fuzzy → blanket → delicate → quick → soak → clean tub
5 FILTER CHECK	When the wash is finished, the warning lamp lights up on the filter check . When the door is opened, it turns off. (This is not a fault.) When the Magic filter is clogged, foreign materials may start sticking to the laundry. To ensure a clean wash, please remove foreign materials from the filter after every wash.
6 REMAINING TIME, DELAY START TIME, ERROR DISPLAY	Displays the remaining wash time. Displays the reserved delay start time. Displays the error state if a problem occurs in the washing machine so that you can take action.
7 FUNCTION BUTTON	With every press of this button, the function changes; Wash,Rinse,Spin → Wash → Rinse → Spin → Wash&Rinse → Rinse&Spin → Wash,Rinse,Spin
8 WATER LEVEL BUTTON	The water level is automatically adjusted. However, you can select the water level manually by pressing this button. Mid → High → Mid → Low → Extra low → Low → Mid
9 WATER SUPPLY BUTTON option	Each time this button is pressed, the type of water is selected as follows, Cold → Cold + Hot → Hot → Cold

FUZZY COURSE

Selects the best washing course automatically.

1. Press the **Power** Button to “On”.
2. Press the **Start/Hold** button.

Water level is selected automatically. Washing rinsing, and spinning follow. If you want to pause, press the **Start/Hold** button again. You can change the course when paused.

3. Close the lid.



BLANKET COURSE

(Big volume laundry like blanket and bed cover sheets)

1. Press the **Power** button to “On”.
2. Press the **Course** select button once.
3. Press the **Start/Hold** button.

Water level is selected automatically. Washing, rinsing, and spinning follow. If you want to pause, press the **Start/Hold** button again. You can change the course when paused.

4. Close the lid.

- Fold those big volume laundry (blanket and bed cover sheets) in the following way before adding into the spin basket.
- Do not wash the electric blanket and carpets.
- Get a laundry net for those light and big volume laundry (eg. Cashmeres) because they might rise in the water and get damaged.



DELICATE COURSE

Washable sweater, cardigan, delicate clothes etc.

1. Press the **Power** button to “On”.
2. Press the **Course** select button two times
3. Press the **Start/Hold** button.

Washing, rinsing, and spinning follow. If you want to pause, press the **Start/Hold** button again. You can change the course when paused.

4. Close the lid.

- You can only select cold water.
- The last spin operates lightly to prevent wrinkles.
- Use the detergent indicated in the laundry.
- Air turbo cannot be selected in the Delicate course.



QUICK COURSE

If you want to wash those frequently used towels or less dirty laundry time. Because washing is speedy, it is good for light or less stained laundry.

1. Press the **Power** button to “On”.
2. Press the **Course** select button three times.
3. Press the **Start/Hold** button.

Water level is selected automatically. Washing, rinsing, and spinning follow. If you want to pause, press the **Start/Hold** button again. You can change the course when paused.

4. Close the lid.



SOAK COURSE

Select this function when you wish to wash your laundry by soaking it.

1. Press the **Power** button to “On”.
2. Press the **Course** select button four times
3. Press the **Start/Hold** button and put the proper amount of detergent into tub.
4. Close the lid.



KEEPING THE TUB CLEAN

When using the machine under humid conditions for an extended time, various bacteria from the air may stick to the tub and form black dirt (fungi), causing damage to the human body. To keep the tub clean and hygienic at all times, it is recommended reading “CLEAN TUB COURSE” above and using only dedicated or recommended detergents to clean the tub regularly at least once every one to three months.

setting up your washer

CLEAN TUB COURSE

Use this course to clean the tub. It will keep the tub clean and sanitary.

1. Press the **Power** button to "On".
2. Press the **Course** select button five times.
3. Press the **Start/Hold** button.
4. Add a delicated detergent and close the lid
 - Never place laundry in the tub when cleaning inside the tub, as this can cause discoloration or damage to the laundry.
 - When doing the laundry after cleaning the tub, you may find some impurities. These are just detergent residues and impurities after the tub cleaning. Perform the rinse cycle two to three times.
 - The Soak function (20 minutes) is set automatically.
 - The water level is set to Mid early on and then changed to High during the rinse.

manual functions

Possible to select the function for each course.

Ex) If you want to wash in the quick course : Power - Select quick course - press function button once - Start/Hold button



WASH ONLY

Press the **Power** button.
Press the **Function Select** button once.
Press the **Start/Hold** button once.
Washing goes on for 15 minutes.
When the **Function** button is pressed during washing, the wash time can be changed to between 4 and 30 minutes in duration.



RINSE ONLY

Press the **Function** button twice.
Press the **Start/Hold** button once.
Rinsing goes on for 2 times.
When the **Function** button is pressed during rinsing, the rinse times can be changed to between 2 to 5 times in duration.



SPIN ONLY

Press the **Function** button three times.
Press the **Start/Hold** button once.
Spin drying goes on for 5 minutes.
When the **Function** button is pressed during spinning, the spin time can be changed to from 1 to 9 minutes.



WASH AND RINSE

Press the **Function** button four times.
Press the **Start/Hold** button once.
Detects the amount of laundry, and determines wash and rinse time period automatically.
When the **Function** button is pressed during working, the rinse times can be changed to between 2 to 5 times in duration.



RINSE AND SPIN

Press the **Function** button five times.
Press the **Start/Hold** button once.
Rinsing and spin drying follow.
When the **Function** button is pressed during working, the rinse times can be changed to between 2 and 5 times in duration.

installation & maintenance

The User's Manual is for common use. Make use of the User's Manual depending upon your washing machine model.

ENVIRONMENT

Leave some space - Maintain at least 10cm between the washer and the wall.

Place the washer on a sturdy flat surface. - If the washer is placed on an uneven or weak surface, noise or vibration occurs. (Allowable is 1°) Adjust the legs for even placement.

Never install the washer near water. - Do not place the washer in steamy rooms or where the washer is directly exposed to rain. Moisture may destroy the electrical insulation causing an electrical shock hazard.


Avoid direct sunlight or heaters. - As plastic and electrical components are affected by direct heat, never place the washer near furnaces, boilers, etc. Do not place under direct sunlight.

LEVELLING

If the washer is not leveled with the ground, it makes the machine tremble more or be out of order. So, make sure that the washer is leveled properly.


SEE IF THE MACHINE IS PLACED LEVEL BY CHECKING THE POSITION OF THE WASHING TUB.

- Open the lid of the machine, pour water into the tub up to the level just below the pulsator, and adjust the legs so that the pulsator is positioned at the center of the water as shown in the figure.
- Place the machine more than 10cm away from the wall.
- Adjust the legs on feet for levelling.

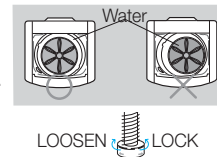


CONNECTING THE WATER SUPPLY HOSE


1. Remove the adaptor from the water supply hose.




2. First, using a "+" type screw driver, loosen the four screws on the adaptor. Next, take the adaptor and turn part(b) following the arrow for gap about 5 mm between them.



3. Connect adaptor to the water tap by tightening the screws firmly. Then, turn part(b) following the arrow and put (a) and (b) together.



4. Connect the water supply hose to the adaptor. Pull down the part (c) of the water supply hose. When the part (c) is released, the hose is automatically connected to the adaptor making a 'click' sound.



5. Connect the other end of the water supply hose to the inlet water valve at the back of the washer. Screw the hose clockwise all the way in.



- 5-1. Connect the other end of the water supply hose to the inlet water valve at the top of the washer. Screw the hose clockwise all the way in.



- ※ If the water tap is a screw type, assemble a water supply hose that fits to the tap as shown. After completing connection, if water leaks from the hose, then repeat the same steps.




After completing connection, if water leaks from the hose, then repeat the same steps.

Use the most conventional type of faucet for water supply.


In case the faucet is square or too big, remove the spacing ring before inserting the faucet into the adaptor.

ASSEMBLING THE RAT PROTECTION PANEL option


Tilt the washer a little and lift up the panel until it clicks, finally fix the panel with screw to the base as shown in the figure.

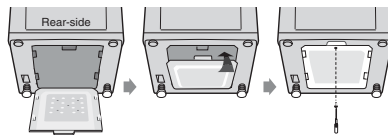

1. Insert the rat protection panel to the assembling hole on back side to the end.







2. If you have difficulty inserting the panel lift up the washer a little and insert it.



installation & maintenance


HOW TO CONNECT THE DRAIN HOSE option

IN CASE OF PUMP-DRAINED WASHER

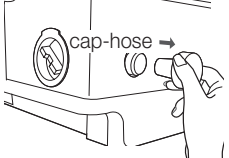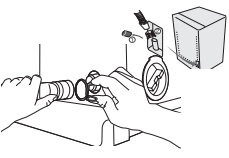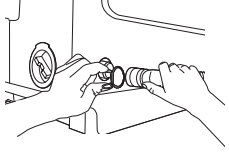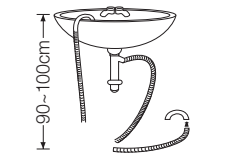			
Take out the cap-hose and connect the outlet-hose.	Be sure to join tightly the drain hose into the drainoutlet on the back of the machine.	Be sure to join tightly the drain hose into the drain-outlet on the side of the machine.	Install the drain hose in the position of about 90~100cm above the ground.

CONNECTING THE DRAIN HOSE

After pressing the joint ring(a), insert the drain hose(b) to drain direction.



HOW TO PUT THE DETERGENT IN

1. Open the detergent box by pulling in the direction of the arrow as shown in the figure and then put the powder detergent in the detergent box.
2. Put in one-time amount of detergent evenly so the detergent may not brim over the box.



HOW TO ADD THE FABRIC SOFTENER

Slide and open the cover in the direction of the arrow, insert the rinse detergent, and slide and close it in the reverse direction.


- When a proper amount (one time does) of fabric softener is stored in the softener inlet, it is automatically put in at the last rinsing cycle.
- Do not use detergent, bleach or starch into the Softener Inlet.
- Using too much softener may produce unsatisfactory results.
- Do not open the lid during the Spin Dry cycle. If added too early, its effectiveness will decrease.
- Do not leave the softener into the Softener Dispenser for a long time. Because softner became stiff.



WATER SUPPLY CONNECTOR FILTER

		
1. Pull out the filter and wash well.	2. Pull in the filter and connect the hose to the inlet water valve tightly.	3. Check if there is a leakage. Note to tighten up the connector.

CLEANING THE FILTER

1. Push the upper part of the Magic filter and pull in.		3. Clean the Magic filter.	
2. Open the cover as shown in the figure.		4. Close the cover and insert the lower part of the filter in the basket first and then push the filter with "click" sound.	

HOW TO CLEAN THE PUMP FILTER option

1. Place a rag under the washer filter not to wet the floor.
2. Rotate the filter counterclockwise and pull out the filter.
3. Remove dirts and rotate the filter clockwise until it locks in position.



troubleshooting

PROBLEM	CHECK
Washing machine won't work	- Is the water tap opened? - Is the washer plugged in? - Is the power cut off? - Is there enough water?
Water dose not drain 5E	- Is the drain hose down?(No pump) - Is the drain hose clogged? - Is the drain hose frozen? - If the water dose not drain in 15 minutes, a buzzer will sound, and the remaining time indicator will show "5E".
Water is not supplied 4E	- Is the water tap opened? - Is the water supply hose or hose connection clogged? - Is the water cut off? - Is the water tap frozen? - If the water supply is not finished in 1 hour or there is no change in the water level 4 minutes after the water supply has started, the buzzer rings and "4E" is displayed on the remaining time indicator.
Spinning does not work UE DE	- Is the laundry spread out evenly in the washer? - In the washer set on a sturdy flat surface?
Water is overflowed UE DE	- Restart after spinning. - If the error sign still indicates, call agency.

washing machine won't work?

Problem	CHECK & SOLUTION
The power is cut off.	- Is the electric voltage normal? - Is the washer plugged in? Plug in the electric cord. ➡ Water does not drain. - Is the drain hose down? Put the drain hose down. - Is the drain hose folded? Unfold the drain hose. - Is the drain hose outlet clogged? Remove the waste cleanly.
Washing machine won't work.	- Is the washer lid open? ➡ Close the lid. - Is the Hold button on? ➡ Press the Start/Hold button one more time and check if the washer starts. - Is enough water filled to the water level? ➡ If the water pressure is low, it takes a long time to start washing. - Is the faucet closed? ➡ Open the faucet to supply water.
If the drain hose and spin basket are frozen, do as follows.	• Add hot water to the frozen water tap and remove the drain hose. Soak into hot water. • Pour hot water into the spin basket for about 10 minutes. • Put a hot water towel on the drain hose connector. • If the drain hose defrosts, connect again and check for proper water draining.
The water drains out immediately.	• The drain is clogged with coins or pins. The drain hose is hung over the drain hose hook. Half fill the spin basket with water and try for spinning again.
The water leaks at the water supply hose connector.	- If the faucet connecting part is loose, water may leak. ➡ Repeat the assembling steps again. (Refer to "Connecting the water supply hose") - Check if the rubber packing of water supply hose is in the right position. ➡ Screw tightly again. - Is the water supply hose folded? ➡ Unfold the hose. - If the water supply is too strong, water may leak. ➡ Close the faucet a little. - Is water leaking from the faucet itself? ➡ Fix the faucet. Water is not supplied. - Did you press the Start/Hold button after selecting the water supply? ➡ If the Start/Hold button is not pressed, water is not supplied. Press the Start/Hold button. - Is the faucet closed? ➡ Turn on the faucet. - Is the filter net at the water supply hose connector clogged with dirty matters? ➡ Clean the filter net by brushing with a toothbrush. - Is the water supply cut off? ➡ If the water supply is suspended, turn off the faucet and power off.
Spinning makes loud noises and vibrations.	- Check if the laundry is spread evenly in the washer. ➡ Spread out the laundry evenly and start again. - Check if the washing machine levels on a sturdy flat floor. ➡ Set the machine at level. - Is the handle for leveling legs loose? ➡ Adjust the legs on the feet for leveling. - Is around the washing machine filled with unnecessary stuffs? ➡ Remove those unnecessary things away from the wash machine.

specification

WA90U3, WA95U3

MAX. MASS OF DRY CLOTH IN kg	WA90U3	7.0Kg	STANDARD WATER LEVEL	HIGH	60 l
	WA95U3	7.5Kg			
POWER CONSUMPTION	WASH	330W		MID	54 l
	SPIN	240W			
DIMENSIONS(mm)		W540xD560xH904		LOW	45 l
WEIGHT		31 kg			
WATER PRESSURE		0.05~0.78 MPa (0.5 ~ 8.0 kg · f/cm²)	WATER USAGE		160 l
WASHING TYPE		Stirring Type	SPIN SPEED		720 rpm

WA80U3, WA85U3

MAX. MASS OF DRY CLOTH IN kg	WA80U3	6.0Kg	STANDARD WATER LEVEL	HIGH	57 l
	WA85U3	6.5Kg			
POWER CONSUMPTION	WASH	330W		MID	52 l
	SPIN	240W			
DIMENSIONS(mm)		W540xD560xH852		LOW	44 l
WEIGHT		31 kg			
WATER PRESSURE		0.05~0.78 MPa (0.5 ~ 8.0 kg · f/cm ²)	WATER USAGE		150 l
WASHING TYPE		Stirring Type	SPIN SPEED		720 rpm



QUESTIONS OR COMMENTS?

Country	CALL	OR VISIT US ONLINE AT
U.A.E	800SAMSUNG(7267864) 8000-4726	www.samsung.com/mea

Code No. DC68-02446E_EN

الغسالة

دليل المستخدم

تخيل كم المميزات

شكراً لشراء غسالة Samsung.
للحصول على خدمة أكثر تكاملاً،
الرجاء تسجيل المنتج على موقع

www.samsung.com/global/register

SAMSUNG

الميزات

- نظام جفيف "هواء نفث" (Air Turbo)
 - تعمل تقني الهواء النفث على الدوران بقوة وسرع لذلك يمكنك من قضاء وقت أقل في عملي التجفيف.
 - تعمل تقني "الهواء النفث" على توفير الوقت وضمان جفيف الملابس بنسب ٣٠٪ إلى ٤٠٪ أسرع من التجفيف على حبل الغسيل. وحتى في المواسم الممطرة وفي الأجواء الرطب . فإن الملابس التي تحتاج إلى وقت طويل كي جف مثل الجينز السميك والمعاطف الكبيرة والبطانيات السميكة يتم جفيفها بسرعه أكثر.
 - تعد تقني "الهواء النفث" التي تعمل على تسهيل كي الملابس مثالي لغسيل الملابس المصنوع من الألياف الرقيق والألياف الصناعي .. لا مزيد من تعليق الملابس وانتظارها حتى جف. يمكنك كي الملابس بعد خروجها من الغسالة مباشرة حيث أن تقني الهواء النفث تقوم بتجفيف الملابس بدرجة كافية لجعلها مناسبة للكي.
- "حكم رقمي" (Fuzzy Control)
 - تعمل ميزة "التحكم الرقمي" مع دورة الغسيل الكامل عن طريق خمس حمل الغسيل فيما يشبه الذكاء الاصطناعي.
- "النافذة الشفاف" (Transparent Window)
 - تعتبر هذه "النافذة الشفاف" فكرة جديدة لإشباع فضول المستخدمين لمشاهدة ما بداخل الغسالة أثناء تشغيلها. لذلك يمكن التحقق من تقدم عملي الغسيل التي تجري داخل الغسالة أثناء تشغيلها بالنظر من خلال النافذة الشفاف .
- المضخ القوي المزدوج - تشابك أقل وأداء أفضل للغسيل
 - التشابك حيث تساعد تيارات الماء متعددة الاتجاهات على عدم تشابك الملابس.
 - تم تصميم تقني تيار الماء خصيصاً لتحسين أداء عملي الغسيل. تضمن قوة تيارات الماء متعددة الاتجاهات القوي الحصول على أداء فائق للغسيل.
- "المصفاة الفعال" (Magic Filter)
 - تضمن لك هذه "المصفاة" الفعال الفريدة جميع كافة النسالات الموجودة داخل حوض الغسيل بما يرفع كفاءة عملي التصفي للحصول على نتائج فعال لعملي الغسيل.
- "إعادة التشغيل التلقائي" (Auto Restart)
 - يتم تشغيل الجهاز تلقائياً بعد حدوث انقطاع للتيار الكهربائي.
- "موزع ملين الأقمشة" (Softner Dispenser)
 - يخرج "موزع ملين الأقمشة" الملين في الوقت الملائم عند إجراء آخر عملي للشطف.
- وظيفة "التأمين ضد عبث الأطفال" (CHILD-LOCK)
 - يساعد هذا الجهاز على حماة الأطفال من التعرض للأذى دون قصد أثناء اللعب بالغسالة .
 - كيفة تشغيل وظيفة "التأمين ضد عبث الأطفال" (Child-Lock function):
 - اضغط على الزر "الطاقة" (Power) للانتقال إلى وضع الغسيل الأولي.
 - بواسط الضغط على الزر "تشغيل/توقف" (Start/Hold)، تبدأ عملي الغسيل وفي حال الاحتياج إلى وظيفة "التأمين ضد عبث الأطفال" أثناء الغسيل
 - اضغط على كل من الزرين "مستوى الماء" (Water level) و"الوظيفة" (Function) في نفس الوقت.(لمدة ٣ ثوان)
 - (ملاحظة : لا يمكنك تشغيل الوظيفة دون الضغط على الزر "الطاقة" (Power)).
 - لإلغاء تشغيل وظيفة "التأمين ضد عبث الأطفال" (Child-Lock): في حال برمجة وظيفة "التأمين ضد عبث الأطفال" اضغط كل من الزرين "مستوى الماء" (Water level) و"الوظيفة" (Function) في نفس الوقت.

إرشادات من أجل السلامة

الرجاء ملاحظ أن احتياطات السلامة التالية تهدف إلى تجنب التعرض للأخطار أو الأضرار غير المتوقع. وذلك عن طريق المساعدة في الاستخدام الملائم من أجل السلام. عند استخدام الماء الساخن في الغسيل الرجاء التأكد من أن درج حرارة الماء لا تتعدى ٥٠ درج مئوية.

- قد تتعرض الأجزاء البلاستيكية للتشوه أو للتلف. وقد حدث صدم كهربائي أو حريق.

تحذير

- قد حدث إصابات بالغ أو حوادث مهلك في حال خرق هذه التعليمات.
- في حال تلف قابس الجهاز (سلك التيار الكهربائي). يجب تغييره من قبل الشركة المصنعة أو وكيل الصيانة الخاص بها أو أي فني مؤهل لتجنب التعرض لأي خطر.
- لا تقم بشد سلك الكهرباء أو لمسه بأيدي مبللة.
- فقد حدث صدم كهربائي أو حريق.
- لا تفني سلك التيار الكهربائي بقوة أو الضغط عليه بواسطة أشياء ثقيلة.
- فقد حدث صدم كهربائي أو حريق.
- لا تضع الغسالة بالقرب من أدوات كهربائية أو شمعة أو سيجارة فوقها.
- قد يحدث حريق.
- لا تضع يدك أو أي أدوات معدنية أسفل الغسالة أثناء التشغيل.
- قد تتعرض للأذى عن طريق لوح الدوران الموجود أسفل الغسالة.
- ابتعد عن الغسالة عندما يكون القاع مغمور بالماء.
- قد حدث صدم كهربائي. الرجاء الانتظار حتى يتم تصريف الماء بشكل كامل.
- لا تضع ملابس ملطخة بالجازولين أو البنزين أو الكحول في الغسالة. واحتفظ بتلك الملابس بعيداً عن الغسالة.
- قد يحدث انفجار أو حريق.
- لا تضع يدك داخل حوض الدوران أثناء دوران الغسالة.
- فقد نتسبب في إيذاء يدك. في حال عدم توقف الغسالة عن العمل في غضون ١٥ ثانية بعد قيامك بفتح الغطاء اتصل بوكيل الصيانة على الفور.
- يعتبر هذا الجهاز غير مخصص لاستخدام الأطفال الصغار أو الأشخاص ذوي الاحتياجات الخاصة. ما لم يخضعوا لإشراف شخص مسؤول للتأكد من إمكانية استخدامهم للجهاز بشكل آمن. يجب مراقب الأطفال الصغار لضمان عدم عبثهم في الغسالة.
- يجب أن يتم توصيل هذا الجهاز بأخذ قوتي الاحتمال لضمان الاستهلاك الصحيح للطاقة.
- يجب وضع الجهاز بعد تركيبه بالقرب من مأخذ التوصيل بحيث يسهل الوصول إليه.
- لا يوجد بداخل الغسالة أجزاء يمكن للمستخدم إصلاحها بنفسه. استعن بفني صيانة مؤهل للقيام بأعمال الصيانة.
- وإلا قد يحدث خطأ ميكانيكي. أو صدم كهربائي. أو حريق أو تلف للجهاز.
- إن الضمان الخاص بالمنتج لا يتضمن المشاكل الناتجة عن فك المنتج.
- لا تستخدم هذا المنتج للأغراض التجارية.
- جنب سد السجادة لفتحات التهوية إذا كانت الغسالة تحتوي على فتحات تهوية بقاعدتها.

تنبيهات

- قد تتعرض لإصابات خفيفة أو أضرار طفيفة في حال خرق هذه الإرشادات.
- لا تقم ب تثبيت الغسالة في منطقة رطبة أو خارج المنزل حيث يتساقط المطر أو الجليد.
- قد حدث صدم كهربائي أو حريق.
- الرجاء فصل سلك التيار الكهربائي في حال عدم استخدامه.
- قد حدث صدم كهربائي أو حريق.
- في حال وجود أثر أو ماء على قابس التيار الكهربائي والجزء المتصل به. الرجاء إزالته بالكامل.
- قد حدث صدم كهربائي أو حريق.
- قم بمنع أطفالك من النظر داخل الغسالة.
- إذا سقط طفلك في الغسالة. قد تكون حياته عرض للخطر.
- قم بتهوية القابس على الفور دون لمسه في حال تسرب الغاز.
- قد حدث صدم كهربائي أو حريق في حال اشتعاله.
- إذا أحدثت الغسالة صوتاً غريباً. أو أخرجت رائحة غير عادية. أو دخان قم بفصلها بسرعة والاتصال بوكيل الصيانة.
- قد حدث صدم كهربائي أو حريق.
- لا تقم برش ماء على أجزاء الغسالة بشكل مباشر عند تنظيفها.
- فقد يؤثر ذلك على عمر الغسالة. قد حدث صدم كهربائي أو حريق.
- لا تقم بتوصيل عدة أجهزة في مخرج واحد للتيار الكهربائي.
- قد يحدث حريقاً بسبب الحرارة الزائدة.
- لا تضغط على الزر بمنقاب أو دبوس.
- قد حدث صدم كهربائي أو حريق.
- استخدم أطقم خراطيم جديدة. حيث يجب عدم إعادة استخدام الخراطيم القديمة مرة أخرى.
- في حال تلف السلك المستخدم حالياً. يجب استبداله بمعرّف الشركة المصنعة أو مركز الصيانة أو أي شخص مخول وذلك لتجنب التعرض لأي مخاطر.
- قم بتوصيل السلك الأرضي باللوحة الأساسية وإخفائه تحت الأرض على عمق ٢٥ سم تقريباً. أو توصيله بقضيب أو مقبس طاقة لتصرف الأرضي بحظر توصيل السلك بسلك هاتف أو قضيب البرق أو أنبوب توصيل غاز.

المحتويات

إعداد الغسالة	٥
وصف الأجزاء	٦
لوحة التحكم	

٥

وظائف يدوية	٨
-------------	---

٨

التركيب والصيانة	٩
البيت	٩
الاستواء	٩
توصيل خرطوم توريد الماء	٩
تركيب لوحة الحماية من الفئران	٩
كيفي توصيل خرطوم التصريف	١٠
كيفي إضافة المسحوق في	١٠
كيفي إضافة ملين الأقمشة	١٠
مصفاة وصل توريد الماء	١٠
تنظيف المصفاة	١٠
كيفي تنظيف مصفاة المضخ	١٠

٩

استكشاف الأعطال وحلها	١١
-----------------------	----

١١

هل تعمل الغسالة؟	١١
هل تعمل الغسالة؟	

١١


المواصفات	١٢
-----------	----

١٢

إعدادات الغسالة

وصف الأجزاء


"دليل المستخدم" مخصص للاستخدام العام.
يعتمد استخدام "دليل المستخدم" على طراز الغسالة .

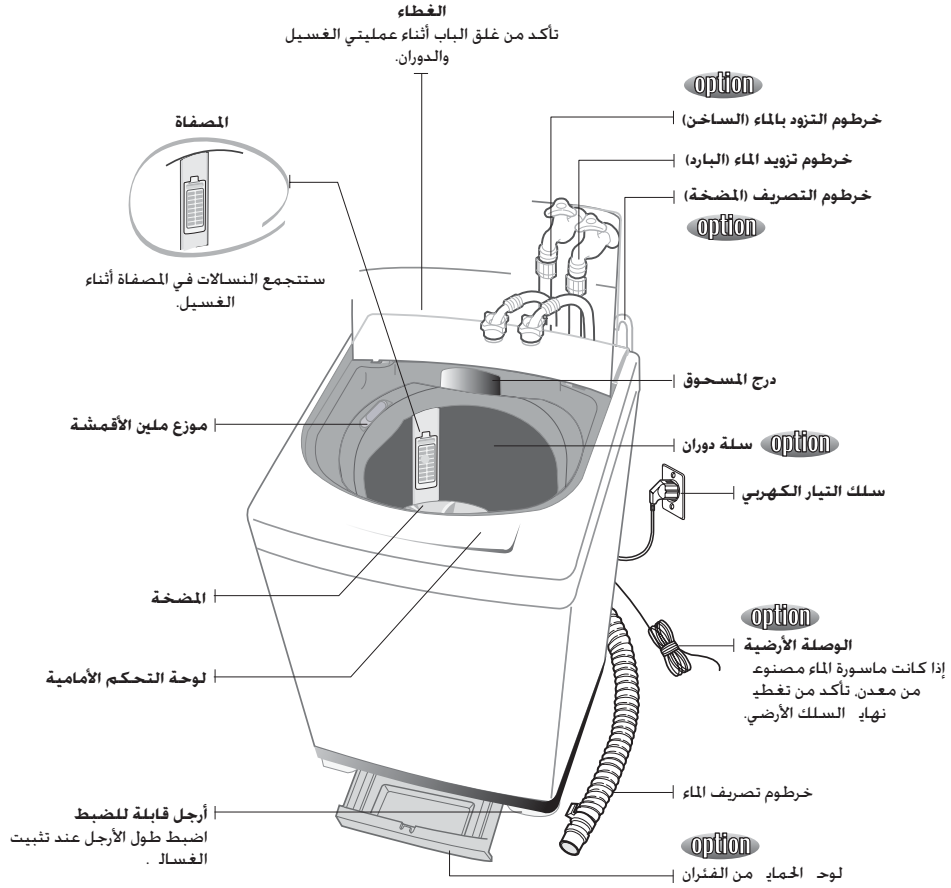

إعدادات الغسالة

لوحة التحكم

للحصول على مزيد من التفاصيل، راجع لوح التحكم الخاص بالغسالة .

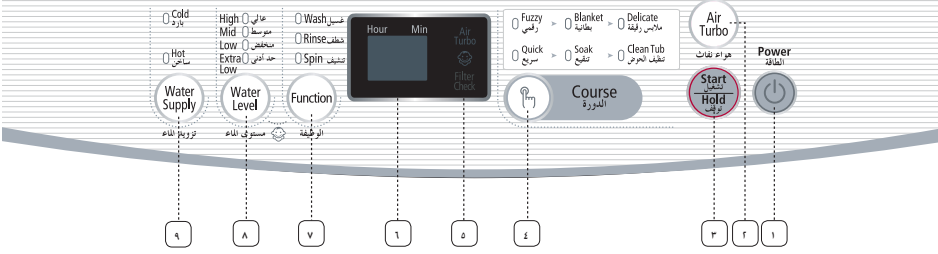	
1 الزر "الطاقة" (POWER) اضغط هذا الزر مرة واحدة للتشغيل. اضغط هذا الزر مرة أخرى لإيقاف التشغيل.	
2 الزر "هواء نفثات" (AIR-TURBO) اضغط على هذا الزر للحصول على جفاف سريع للغسيل. يمكن تحديد هذه الوظيفة فقط في حال ضبط دورة الدوران. يمكنك إضافة هذه الوظيفة لجميع الدورات ماعدا دورة "ملابس رقيقة" (Delicate).	
3 الزر "تشغيل/توقف" (Start/Hold) استخدم هذا الزر للإيقاف المؤقت لعملية التشغيل وإعادة التشغيل. لتغيير أحد إجراءات الغسيل أثناء عملية التشغيل، اضغط على هذا الزر للإيقاف. ومرة أخرى لإعادة التشغيل بعد تغيير الإجراء.	
4 الزر "الدوران" (COURSE) تتغير دورة الغسيل في كل مرة تضغط فيها على الزر: "رقمي" (Fuzzy) ← "بطاني" (blanket) ← "ملابس رقيقة" (delicate) ← "سريع" (quick) ← "تنقيع" (soak) ← "تنظيف الحوض" (clean tub)	
5 خانة التحقق من المصفاة عند انتهاء الغسيل، يضيء مصباح التحذير في خانة التحقق من المصفاة. عند فتح الباب، ينطفئ المصباح. (لا يعد ذلك خللاً). عند انسداد المصفاة الفعالة، قد تلتصق المواد الغريبة بالغسيل. لضمان الحصول على غسيل نظيف، الرجاء إزالة أي مواد غريبة من على المصفاة بعد كل غسلة.	
6 الوقت المتبقي، وقت تأجيل التشغيل وشاشة الأخطاء عرض الوقت المتبقي للغسيل. عرض وقت تأجيل التشغيل الجفوظ عرض حال الخطأ إذا حدثت مشكل في الغسالة. لتتمكن من اتخاذ الإجراء اللازم.	
7 الزر "الوظيفة" (FUNCTION) تتغير الوظيفة في كل مرة يتم فيها الضغط على هذا الزر: "غسيل" (Wash) و"شطف" (Rinse) و"دوران" (Spin) ← "غسيل" (Wash) ← "شطف" (Rinse) ← "دوران" (Spin) ← "غسيل" (Wash) و"شطف" (Rinse) و"دوران" (Spin) ← "غسيل" (Wash) و"شطف" (Rinse) و"دوران" (Spin) ← "غسيل" (Wash) و"شطف" (Rinse) و"دوران" (Spin)	
8 الزر "مستوى الماء" (WATER LEVEL) يتم تحديد مستوى الماء تلقائيًا. مع ذلك، يمكنك تحديد مستوى الماء يدويًا بالضغط على هذا الزر. "متوسط" (Mid) ← "عالي" (High) ← "متوسط" (Mid) ← "منخفض" (Low) ← "حد أدنى" (Extra low) ← "منخفض" (Low) ← "متوسط" (Mid)	
9 الزر "تزويد الماء" (WATER SUPPLY) في كل مرة تقوم فيها بالضغط على هذا الزر، يتم تحديد نوع الماء كما يلي: "بارد" (Cold) ← "ساخن + بارد" (Cold + Hot) ← "ساخن" (Hot) ← "بارد" (Cold)	

الدوران "رقمي"

- خديد دورة الغسيل المثلى تلقائياً
- 1 اضغط على الزر "الطاقة" (Power) إلى "تشغيل" (On).
 - 2 اضغط زر "تشغيل/توقف" (Start/Hold) يتم خديد مستوى الماء تلقائياً ثم يتم متابعة عمليات الغسيل والشطف والدوران إذا كنت ترغب في التوقف المؤقت. اضغط على الزر "تشغيل/توقف" (Start/Hold) مرة أخرى يمكنك تغيير الدورة أثناء التوقف المؤقت
 - 3 أغلق الباب



الدوران "بطانية" (BLANKET COURSE)

- (الغسيل ذو الحجم الكبير مثل البطاطين وملابس الأسرة)
- 1 اضغط على الزر "الطاقة" (Power) إلى "تشغيل" (On).
 - 2 اضغط على الزر "الدوران" (Course) مرة واحدة
 - 3 اضغط على الزر "تشغيل/توقف" (Start/Hold).
- يتم خديد مستوى الماء تلقائياً يتم متابعة عمليات الغسيل والشطف والدوران إذا كنت ترغب في التوقف المؤقت. اضغط على الزر "تشغيل/توقف" (Start/Hold) مرة أخرى يمكنك تغيير الدورة أثناء التوقف المؤقت
- 4 أغلق الباب
- الرجاء طوي الغسيل ذا الحجم الكبير (البطاطين وملابس السرير) بالطريقة التالية قبل وضعه بداخل سل الدوران
 - لا تغسل البطانيه الكهربائي والسجاد
 - قم بوضع الغسيل الخفيف وكبير الحجم في شبكة الغسيل (على سبيل المثال الملابس الصوفية) حيث أن حجمها يزيد في الماء ما قد يتسبب في الضرر لها



الدوران "ملابس رقيقة" (DELICATE COURSE)

- تستخدم هذا الدوران للسترات القابل للغسيل والسترات الصوفية والملابس الخفيفة . وهكذا
- 1 اضغط على زر "الطاقة" (Power) إلى "تشغيل" (On).
 - 2 اضغط على زر "الدوران" (Course) مرتين
 - 3 اضغط على الزر "تشغيل/توقف" (Start/Hold)
- ثم يتم متابعة عمليات الغسيل والشطف والتجفيف إذا كنت ترغب في التوقف المؤقت. اضغط على الزر "تشغيل/توقف" (Start/Hold) مرة أخرى يمكنك تغيير الدورة أثناء التوقف المؤقت
- 4 اغلق الباب
- يمكنك خديد ماء بارد فقط
 - تعمل وظيفة الدوران الأخير بخف لمنع تشابك الملابس
 - استخدم مسحوق الغسيل الذي يتناسب مع نوعي الغسيل
 - لا يمكن خديد وظيفة "الهواء النفاث" (Air turbo) في دورة "ملابس رقيقة" (Delicate).



الدوران "سريع" (QUICK COURSE)

- يمكنك استخدام هذه الدورة عندما تريد غسل المناشف التي تستخدم بشكل متكرر أو الغسيل قليل الانساخ بما أن الغسيل يكون سريعاً. يفضل استخدام هذه الدورة للغسيل المنسوخ انساخاً خفيفاً
- 1 اضغط على الزر "الطاقة" (Power) إلى "تشغيل" (On).
 - 2 اضغط على الزر "الدوران" (Course) ثلاث مرات
 - 3 اضغط على الزر "تشغيل/توقف" (Start/Hold).
- يتم خديد مستوى الماء تلقائياً يتم متابعة عمليات الغسيل والشطف والدوران إذا كنت ترغب في التوقف المؤقت. اضغط على الزر "تشغيل/توقف" (Start/Hold) مرة أخرى يمكنك تغيير الدورة أثناء التوقف المؤقت
- 4 أغلق الباب



الدوران "تنقيع" (SOAK COURSE)

- حدد هذه الوظيفة عند الحاج إلى غسيل الملابس عن طريق نقعها
- 1 اضغط على الزر "الطاقة" (Power) إلى "تشغيل" (On).
 - 2 اضغط على الزر "الدوران" (Course) أربع مرات
 - 3 اضغط على الزر "تشغيل/توقف" (Start/Hold). وضع الكمية المناسبة من المسحوق في الدرج
 - 4 أغلق الباب



الاحتفاظ بالخوض نظيفاً

عند استخدام الغسالة في الأجواء الرطبة لفترة طويلة ، قد تلنصق البكتريا العالق في الهواء بأنواعها المختلفة بالخوض وتكون أجزاء متسخة (فطريات) مما قد يلحق الضرر بالإنسان للاحتفاظ بالخوض نظيفاً وصحياً دوماً. ينصح بقراءة الجزء الخاص "بتنظيف الخوض" الموجود أعلاه واستخدام المواد المطهرة أو المنظف الموصى بها فقط لتنظيف الخوض بانتظام مرة واحدة على الأقل كل شهر وبما لا يزيد عن ثلاث أشهر

إعدادات الغسالة

الدورة "تنظيف الحوض" (CLEAN TUB COURSE)

- استخدم هذه الدورة لتنظيف الحوض فهي تؤدي إلى إبقاء الحوض نظيفاً ومعتماً
- 1 اضغط على الزر "الطاقة" (Power) إلى "تشغيل" (On).
 - 2 اضغط على الزر "الدوران" (Course) خمس مرات
 - 3 اضغط على الزر "تشغيل/توقف" (Start/Hold).
 - 4 أضف المسحوق ثم أغلق الباب
- يحظر وضع الغسيل في الحوض عند القيام بتنظيفه، فقد يؤدي ذلك إلى تلطيخ ألوان الغسيل أو تلفه
 - عند القيام بالغسيل بعد تنظيف الحوض، قد تجد بعض الرواسب التي ترجع إلى بقايا المادة المنظفة الناتجة عن عملية التنظيف الرجاء القيام بإجراء دورة الشطف من مرتين إلى ثلاث مرات
 - سيتم ضبط وظيفة "تنقية" (٢٠ دقيقة) تلقائياً
 - سيتم ضبط مستوى الماء إلى "متوسط" في بداية الأمر ثم يتغير إلى "عالي" أثناء عملية الشطف

وظائف يدوية

يمكن تحديد الوظيفة لكل دورة على سبيل المثال إذا كنت ترغب في الغسيل باستخدام الدورة "سريع": زر "الطاقة" (Power) - حدد الدورة "سريع" (Quick) - اضغط على الزر "الوظيفة" (function) مرة واحدة - الزر "تشغيل/توقف" (Start/Hold)

الغسيل فقط اضغط على الزر "الطاقة" (Power). اضغط على الزر "تحديد الوظيفة" مرة واحدة. اضغط على الزر "تشغيل/توقف" (Start/Hold) مرة واحدة. تستمر عملية الغسيل لمدة ١٥ دقيقة. عند الضغط على الزر "وظيفة" أثناء الغسيل، يمكن تغيير مدة الغسيل لمدة تتراوح بين ٤ دقائق و ٣٠ دقيقة.	 مرة واحدة
الشطف فقط اضغط على الزر "وظيفة" (Function) مرتين. اضغط على الزر "تشغيل/توقف" (Start/Hold) مرة واحدة. تتم عملية الشطف على مرتين. عند الضغط على الزر "وظيفة" (Function) أثناء الشطف، يمكن تغيير عدد مرات الشطف لتتراوح من مرتين إلى خمس مرات.	 مرتين
الدوران فقط اضغط على الزر "وظيفة" (Function) ثلاث مرات. اضغط على الزر "تشغيل/توقف" (Start/Hold) مرة واحدة. تستمر عملية الدوران لمدة ٥ دقائق. عند الضغط على الزر "الوظيفة" (FUNCTION) أثناء الدوران، يمكن تغيير مدة الدوران من دقيقة إلى ٩ دقائق.	 ثلاث مرات
الغسيل والشطف اضغط على الزر "الوظيفة" (Function) أربع مرات. اضغط على الزر "تشغيل/توقف" (Start/Hold) مرة واحدة. يقوم ذلك بالتحقق من كمية الغسيل، ويحدد زمن فترة الغسيل والشطف تلقائياً. عندما يتم الضغط على الزر يتم الضغط على الزر "الوظيفة" أثناء العمل. يمكن تغيير عدد مرات الشطف لتتراوح من مرتين إلى خمس مرات.	 أربع مرات
الشطف والدوران اضغط على الزر "الوظيفة" (Function) خمس مرات. اضغط على الزر "تشغيل/توقف" (Start/Hold) مرة واحدة. يتم متابعة عمليتي الشطف والدوران. عندما يتم الضغط على الزر "وظيفة" (Function) أثناء العمل، يمكن تغيير عدد مرات الشطف لتتراوح من مرتين إلى خمس مرات.	 خمس مرات


التركيب والصيانة

دليل المستخدم مخصص للاستخدام العام استخدم دليل المستخدم الخاص بطراز الغسالة

البيئة

اترك مسافة تقدر بـ ١٠ سم - بين الغسالة والخائط
ضع الغسالة على أرض ثابتة ومستوية - في حال وضع الغسالة على سطح غير مستوي أو ضعيف، يؤدي ذلك إلى ارتفاع صوت الغسالة أو اهتزازها أثناء التشغيل (المسموح به درج ارتفاع واحدة أ) الرجاء ضبط الأرجل للوضع المناسب
لا تقم أبداً بتركيب الغسالة بالقرب من الماء - لا تضع الغسالة في غرف ينبعث منها البخار أو حيث تكون معرض بشكل مباشر إلى المطر قد تتسبب الرطوبة في تلف المادة العازلة التي تحيط بالأسلاك الكهربائية مما ينتج عنه صدمات كهربائية
جنب الضوء المباشر لأشعة الشمس أو الأجهزة الحرارية - تتأثر مكونات الأسلاك الكهربائية المصنوعة من البلاستيك بالحرارة المباشرة، لا تقم أبداً بوضع الغسالة بالقرب من الفرن، أو غلايات الماء، إلى آخره، لا تضعها تحت أشعة الشمس المباشرة

الاستواء

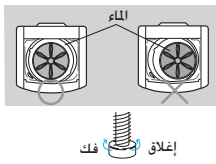

إذا لم تكن الغسالة مستوية على الأرض، فستتهتز بشكل كبير أو ستكون غير صالحة للتشغيل
ولذلك، تأكد من أن الغسالة مستوية بشكل صحيح
تأكد من وضع الغسالة بشكل مستوي من خلال فحص وضع حوض الغسيل.
• افتح باب الغسالة، اسكب الماء داخل حاوية الغسيل حتى المستوى الذي يقع أثنى اللصق. وقم بتعديل الأرجل بحيث تكون اللصق في وسط الماء كما هو مبين في الشكل
• قم بإبعاد الغسالة أكثر من ١٠ سم عن الخائط
• اضبط استواء الأرجل

توصيل خرطوم توريد الماء

١ قم بإزالة الحؤول من خرطوم توريد الماء		٤ وصل خرطوم توريد الماء بالحؤول اسحب الجزء (ج) من خرطوم تزويد الماء لأسفل عند إرخاء الجزء (ج). يتصل الخرطوم إلى الحؤول تلقائياً محدثاً صوت "إغلاق"	
٢ أولاً باستخدام ملف برغي من نوع *٠* أرخ البرغي الأربعة الموجودة بالحؤول ثم أرخ الحؤول وبنور الجزء (ب) بإجاء السهم لإحداث فجوة تقدر بنحو ٥ سم بينهما		٥ قم بتوصيل الطرف الآخر من خرطوم توريد الماء بصمام دخول الماء الموجود في أعلى الغسالة لف خرطوم توريد الماء في اتجاه عقارب الساعة	
٣ قم بتوصيل الحؤول بصنبور الماء بربط البرغي بإحكام ثم لف الجزء (ب) بإجاء السهم وضع الجزأين (أ) و (ب) معاً		١٠-٥ قم بتوصيل الطرف الآخر من خرطوم توريد الماء بصمام دخول الماء الموجود في أعلى الغسالة لف خرطوم توريد الماء في اتجاه عقارب الساعة	

❖ إذا كان صنبور الماء من نوع برغي، ركب خرطوم توريد للماء يلائم الصنبور كما هو موضح بعد اكتمال التوصيل. إذا تسرب الماء من الخرطوم، كرر نفس الخطوات
بعد اكتمال التوصيل، إذا تسرب الماء من الخرطوم، كرر نفس الخطوات
استخدم صنبور من النوع العادي لتوريد الماء
إذا كان الصنبور مربعاً أو كبيراً جداً، أزل الحلق الفاصلة قبل إدخال الصنبور إلى الحؤول




تركيب لوحة الحماية من الفئران

١ قم بإدخال لوحة الحماية من الفئران في فتحة التجميع الموجودة في الجانب الخلفي بشكل تام		أمل الغسالة قليلاً وارفع اللوحة حتى يتم إغلاقها. وفي النهاية قم بتركيب اللوحة ببرغي في القاعدة كما هو موضح بالشكل	
٢ إذا واجهت صعوبات في إدخال اللوحة أرفع الغسالة قليلاً وقم بإدخالها			

التركيب والصيانة

كيفية توصيل خرطوم التصريف

في حالة استخدام غسالة ذات مضخة تصريف

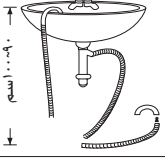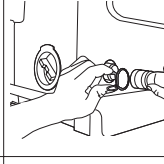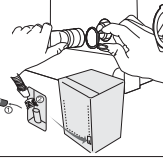			
ثبت خرطوم تصريف الماء على بعد يقدر بنحو ١٠٠-٩٠ سم من الأرض	تأكد من توصيل خرطوم تصريف الماء بإحكام في مخرج التصريف الموجود في جانب الغسالة	تأكد من توصيل خرطوم تصريف الماء بإحكام في مخرج التصريف الموجود في ظهر الغسالة	انزع غطاء الخرطوم وصل خرطوم الصرف

توصيل خرطوم التصريف

بعد الضغط على حلق الوصل (أ)، الرجاء إدخال خرطوم تصريف الماء (ب) باتجاه التصريف



كيفية إضافة المسحوق في

- افتح درج المسحوق بدفعه باتجاه السهم كما هو موضح في الشكل ثم ضع المسحوق في الدرج المخصص له
- ضع في كل مرة كمية ملائمة من المسحوق بحيث لا يفيض المسحوق من الدرج



كيفية إضافة ملين الأقمشة

- قم بإزاح الغطاء وفتح في اتجاه السهم، ثم ضع مسحوق الغسيل وقم بدفع الغطاء في الاتجاه العاكس لإغلاقه
- عند تخزين كمية مناسبة (مقدار مرة واحدة) من ملين الأقمشة في مكان توريد اللينيات، يتم وضعها تلقائياً في الدورة الأخيرة من الشطف
 - لا تستخدم المسحوق أو المبيض أو النشأ في درج اللين
 - يؤدي الإفراط في استخدام اللين إلى نتائج غير مرضية
 - لا تفتح الباب أثناء دورة "التجفيف" إذا تم إضافة ملين الأقمشة في وقت سابق، فإن هذا سينقص من فعاليتها
 - لا تترك ملين الأقمشة في موزع ملين الأقمشة لمدة طويلة حيث أن اللين يصبح يابساً



مصفاة وصلة توريد الماء

		
١ قم بنزع المصفاة وغسلها جيداً	٢ قم بدفع المصفاة وتوصيل الخرطوم بصمام تزويد الماء بإحكام	٣ تحقق من عدم وجود ارتشاحات الرجاء الانتباه إلى إحكام الوصل

تنظيف المصفاة

		
١ قم بدفع الجزء العلوي من المصفاة الفعالة وجذبه للداخل	٢ افتح الغطاء كما هو مبين بالشكل	٣ نظف المصفاة الفعالة
		
٤ قم بإغلاق الغطاء وإدخال أولاً الجزء السفلي في الحاويز ثم دفع المصفاة، لتسمع صوت "تنبيهها"		

كيفية تنظيف مصفاة المضخة

- ضع قطع من القماش أسفل مصفاة الغسالة حتى لا تنبت الأرض
- لف المصفاة عكس عقارب الساعة وانزعها
- أزل الأوساخ ولف المصفاة مرة أخرى في اتجاه عقارب الساعة لإعادتها إلى مكانها



استكشاف الأعطال وحلها

المشكلة	فحص
الغسالة لا تعمل	- هل صنبور الماء مفتوح؟ - هل جهاز الغسالة متصل بمصدر التيار الكهربائي؟ - هل التيار الكهربائي مقطوع؟ - هل ضغط الماء كافٍ؟
لا يتم تصريف الماء 5E	- هل خرطوم التصريف موضوع لأسفل؟ (بدون مضخة) - هل خرطوم التصريف مسدود؟ - هل خرطوم التصريف متجمد؟ - إذا لم يتم تصريف الماء خلال ١٥ دقيقة، سيسمّع طنين، وسيعرض مؤشر الوقت المتبقي "5E"
لا يتم توريد الماء 4E	- هل صنبور الماء مفتوح؟ - هل خرطوم تزويد الماء أو وصلة الخرطوم مسدودة؟ - هل صنبور الماء مقطوع؟ - إذا لم يتم انتهاء تزويد الماء في خلال ساعة واحدة أو لم يحدث تغيير في مستوى الماء بعد أربع دقائق من بدء تزويد الماء، سيسمّع طنين وسيتم عرض "4E" على مؤشر الوقت المتبقي
الدوران لا يتم 4E 8E	- هل تم توزيع الغسيل بالتساوي في الغسالة؟ - هل تم وضع الغسالة على أرض ثابت ومستوي؟
زيادة الماء 1E 8E	- إعادة التشغيل بعد الدوران - في حال استمرار ظهور مؤشر العطل، اتصل بالشركة

هل تعمل الغسالة؟

المشكلة	الفحص والحل
تم فصل التيار الكهربائي	هل فولتية التيار الكهربائي كالمعتاد؟ هل جهاز الغسالة متصل بمصدر التيار الكهربائي؟ هل يتوصّل سلك التيار الكهربائي ٢ لا يتم تصريف الماء هل ينتجه خرطوم التصريف إلى أسفل؟ هل خرطوم التصريف متجمد؟ هل خرطوم التصريف مسدود؟ هل فتح خرطوم التصريف مسدود؟ هل تم إغلاق الباب
الغسالة لا تعمل	هل الزر "توقيف" (Hold) في وضع التشغيل؟ هل الزر "تشغيل/إيقاف" (Start/Hold) مرة أخرى وتأكد من أنه تم بدء تشغيل الغسالة هل تم ملء الماء حتى المستوى المطلوب؟ إذا كان ضغط الماء منخفضاً، فستستغرق عملية بدء تشغيل الغسالة وقتاً طويلاً هل الصنبور مغلق؟ هل الصنبور لتوريد الماء
إذا كان خرطوم التصريف والدوران متجمدين، قم بما يلي	• قم بإضافة الماء الساخن إلى حاوية الغسيل المتجمدة وإزالة خرطوم التصريف انزع الخرطوم في الماء الساخن • اسكب الماء الساخن في سلة الدوران لمدة ١٠ دقائق • ضع منشفة مبللة بالماء الساخن على وصلة خرطوم التصريف • بعد فكّ جميد خرطوم التصريف، قم بتوصيله مرة أخرى وحقّق بما إذا كان تصريف الماء يتم بالشكل اللائق
يتم تصريف الماء في الحال	• في حال انسداد خرطوم التصريف بعمليات معدنية أو دبائيس قم بتعليق خرطوم التصريف على الخطاف املأ نصف سلة الدوران بالماء وحاول إجراء الدوران مرة أخرى
يرتشح الماء في وصلة خرطوم تزويد الماء	إذا كان الجزء الخاص بوصلة الصنبور غير محكم الربط، قد يرتشح الماء كرر خطوات التركيب مرة أخرى (راجع "توصيل خرطوم تزويد الماء") حقّق بما إذا كان المطاط الخاص بخرطوم تزويد الماء في وضعه الصحيح اربط البراغبي مرة أخرى بإحكام هل خرطوم تزويد الماء مثني؟ فكّ الثنايا الموجودة في خرطوم التصريف إذا كانت عملية تزويد الماء قوية جداً، قد يحدث تسرب أغلق الصنبور قليلاً هل حدث تسرب للماء من الصنبور؟ أصلح الصنبور لا يتم تزويد الماء هل قمت بالضغط على الزر "تشغيل/توقف" (Start/Hold) بعد تحديد "تزويد الماء" (water supply)؟ في حال عدم الضغط على الزر "تشغيل/توقف" (Start/Hold)، لن يتم تزويد الماء اضغط على الزر "تشغيل/توقف" (Start/Hold). هل الصنبور مغلق؟ افتح الصنبور هل شبكة المصفاة الموجودة في خرطوم تزويد الماء مسدودة بأوساخ؟ نظف شبكة المصفاة بفريشة أسنان هل تم إيقاف تزويد الماء؟ في حال توقف توريد الماء، أغلق الصنبور وافصل التيار
حدثت عملية الدوران ضجيجاً واهتزازات	حقّق بما إذا كان قد تم توزيع الغسيل بالتساوي في الغسالة وزع الغسيل بالتساوي وابدأ تشغيل الغسالة مرة أخرى حقّق بما إذا كانت الغسالة مستوية على أرض ثابتة ومسطحة اجعل الغسالة مستوية هل المقابض الخاصة باستواء الأرجل غير مربوطة بإحكام؟ اضبط استواء الأرجل هل يوجد حول الغسالة مواد غير ضرورية؟ ابعد تلك الأشياء غير الضرورية عن الغسالة

المواصفات

WA90U3, WA95U3						
٦٠ لتر	عالي	مستوى الماء القياسي	٧,٠ كجم	WA90U3	أقصى حمول لتجفيف الملابس بالكيلوجرام	
			٧,٥ كجم	WA95U3		
٥٤ لتر	متوسط		٣٣٠ وات	الغسيل	استهلاك الطاقة	
			٢٤٠ وات	الدوران		
٤٥ لتر	منخفض		العرض ٥٤٠ × العمق ٥٦٠ × الارتفاع ٩٠٤			الأبعاد (م)
٢٨ لتر	حد أدنى		٣١ كجم			
١٦٠ لتر		استخدام الماء	٠,٧٨~٠,٠٥ ميغا بكسل (٨,٠ ~ ٠,٥ كجم قوة/سم ^٢)		ضغط الماء	
٧٢٠ دورة في الدقيقة		سرعة الدوران	نوع المحرك		نوع الغسيل	
WA80U3, WA85U3						
٥٧ لتر	عالي	مستوى الماء القياسي	٦,٠ كجم	WA80U3	أقصى حمول لتجفيف الملابس بالكيلوجرام	
			٦,٥ كجم	WA85U3		
٥٢ لتر	متوسط		٣٣٠ وات	الغسيل	استهلاك الطاقة	
			٢٤٠ وات	الدوران		
٤٤ لتر	منخفض		العرض ٥٤٠ × العمق ٥٦٠ × الارتفاع ٨٥٦			الأبعاد (م)
٢٧ لتر	حد أدنى		٣١ كجم			
١٥٠ لتر		استخدام الماء	٠,٧٨~٠,٠٥ ميغا بكسل (٨,٠ ~ ٠,٥ كجم قوة/سم ^٢)		ضغط الماء	
٧٢٠ دورة في الدقيقة		سرعة الدوران	نوع المحرك		نوع الغسيل	



أسئلا أو تعليقات؟

أوقم بزيارتنا على الإنترنت على موقع	اتصل	البلد
www.samsung.com/mea	800SAMSUNG (7267864) 8000-4726	U.A.E

رقم الكود DC68-02446E_AR