

WA80V3
WA85V3
WA90V3
WA95V3

Washing Machine

user manual

imagine the possibilities

Thank you for purchasing a Samsung product.
To receive a more complete service,
please register your product at
www.samsung.com/register



features

1. Air Turbo Drying System

Air Turbo technology spins hard and fast so you can spend less time drying. Time Saving AIR TURBO saves your time, ensuring your clothes are dried 30%-40% faster than line drying alone. Especially during the rainy season and in high-humid weather, laundry that once took days to drip-dry, such as heavy jeans, bulky sweaters, and thick blankets are dried more rapidly. Easy-to-iron AIR TURBO is perfect for delicates and clothes made of synthetic fabrics. No more hanging and waiting. Simply iron straight-out-of-the washer, since AIR TURBO eliminates just enough moisture to keep clothes adequately damp for ironing.

2. Diamond Drum

The diamond shaped drum creates a high water pressure, removing dirt from the laundry effectively. The diamond drum minimizes fabric damage extending the lifetime of the fabric. The glittering inner tube is both beautiful and powerful in the wash effect it creates.

3. Fuzzy Control

Fuzzy control operates with best washing program by sensing the washload like artificial intelligence.

4. Transparent Window

This Transparent Window is the new concept to solve the curiosity of users to see inside of washing machine while operation. While operation, the laundry progress inside of washing machine can be checked by looking through the transparent window.

5. Double Storm Pulsator- Less Tangle, Better Washing Performance

Tangle Free - Multi-dimensional water currents help clothes stay tangle free.

Water current technology designed specifically to enhance washing performance. The power of tornado-like multi-dimensional water currents guarantee excellent washing performance.

6. Magic Filter

This unique magic Filter ensures that all the lint inside the tub is captured for top quality filtering results to deliver consistently effective cleaning results.

7. Auto Restart

The power is turned on automatically after power failure.

- CHILD-LOCK Function

This is a device to protect children from being accidentally hurt while playing with the washer.

- How to start the Child-Lock function:

Press the "Power" button to go to an initial washing mode.

By pressing "Start/Pause" button, you start washing and in case Child Lock function is needed during the laundry.

Press both the "Water level" and "Function" buttons at the same times.(for 3 seconds)
(Note: You cannot perform the function without the "Power" button on.)

- To release the function of Child-Lock: In case the "Child-Lock" is programmed, press both the "Water level" and "Function" buttons at the same time.

safety instructions

Please note that the following precautions for safety intend to prevent unpredictable danger and damage by helping the proper use in safety. When using hot water in washing, please make sure that the water should not exceed 50°C.

- Plastic parts may be deformed or damaged, and an electric shock or a fire may take place.

WARNING



There might be serious injury or fatal accident when you violate this instruction.

- If the plug (power supply cord) is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- Do not pull the cord off or touch it with moist hands.
 - An electric shock or a fire may take place.
- Do not bend the power supply cord by force or press it with heavy things.
 - An electric shock or a fire may take place.
- Do not install the washer nearby electric implement or don't put a candle light or cigarette light on the washer.
 - A fire may take place.
- During operation, do not put your hands or metal materials under the washer.
 - You may be hurt by spinning board beneath the washer.
- Stay away from the washer when the bottom of the washer sinks into the water.
 - There might be an electric shock. Please wait until the water drains out completely.
- Do not put laundry stained with gasoline, benzene, or alcohol in the washer, and keep the materials away from the washer.
 - An explosion or a fire may take place.
- During spinning, don't put your hand in the spinning tub.
 - It may hurt your hands. If it does not stop within 15 seconds after you open the lid, call service agent immediately.
- This appliance is not intended for use by young children or infirm persons unless they have been adequately supervised by a responsible person to ensure that they can use the appliance safely. Young children should be supervised to ensure that they do not play with the appliance.
- This appliance has to be connected to the plug endurable to proper power consumption.
- This appliance has to be positioned so that the plug is accessible after installation.
- No user-serviceable parts inside. Refer any servicing to qualified service personnel.
 - Otherwise this may cause a mechanical error, electric shock, fire or physical damage.
 - The product warranty does not cover problems resulting from disassembling the product.
- Do not use this product for business purposes.
- For washing machines with ventilation openings in the base, that a carpet must not obstruct the openings.

safety instructions

CAUTIONS



There might be a slight injury or damage when you violate this instruction.

- Don't install it in the area with moisture or outdoor where it has rain or snow.
 - An electric shock or a fire may take place.
- Please unplug the power supply cord when you do not use it.
 - An electric shock or a fire may take place.
- If there is dust or water on the power supply plug and its connected part, please remove it completely.
 - An electric shock or a fire may take place.
- Do not make your kids look into the inside of the washer.
 - If your kid falls into the washer, his life could be in danger.
- Ventilate immediately without touching the power plug if gas is leaking.
 - An electric shock or a fire may take place if it catches flame.
- If the washer makes strange noise, smell or smoke, unplug it promptly and call service agent.
 - An electric shock or a fire may take place.
- When cleaning, don't spray water to the parts of the washer directly.
 - It may make its life span shorten. Also an electric shock or fire may take place.
- Don't use several appliances together with an outlet.
 - A fire may take place due to unusual heat.
- Don't press the button with an awl or pin.
 - An electric shock or a fire may take place.
- Use the new hose-sets and old hose-sets should not be reused.
- If the damage is found on the current cord in use, it should be replaced by manufacturer, service center or authorized person in order to avoid the risk.
- Connect the grounding wire to the shell plate, and bury it under at least 25cm of earth: alternatively, connect the ground wire to the appropriate pin on a properly grounded power receptacle. Never connect the wire to a telephone line, lightning rod, or gas pipe.

contents

SETTING UP YOUR WASHER	6	Description of part
	7	Control Panel

6

MANUAL FUNCTIONS	11	Environment
	11	Levelling
	11	Connecting the water supply hose

10

INSTALLATION & MAINTENANCE	12	Assembling the rat protection panel
	12	How to connect the drain hose
	12	How to put the detergent in
	12	How to add the fabric softener
	13	Water supply connector filter
	13	Cleaning the filter
	13	How to clean the pump filter

11

TROUBLESHOOTING	13	Troubleshooting
------------------------	----	-----------------

13

WASHING MACHINE WON'T WORK?	14	Washing machine won't work?
------------------------------------	----	-----------------------------

14

SPECIFICATION	15	Specification
----------------------	----	---------------


15

setting up your washer

DESCRIPTION OF PART


The User's Manual is for common use.


Make use of the User's Manual depending upon your washing machine model.

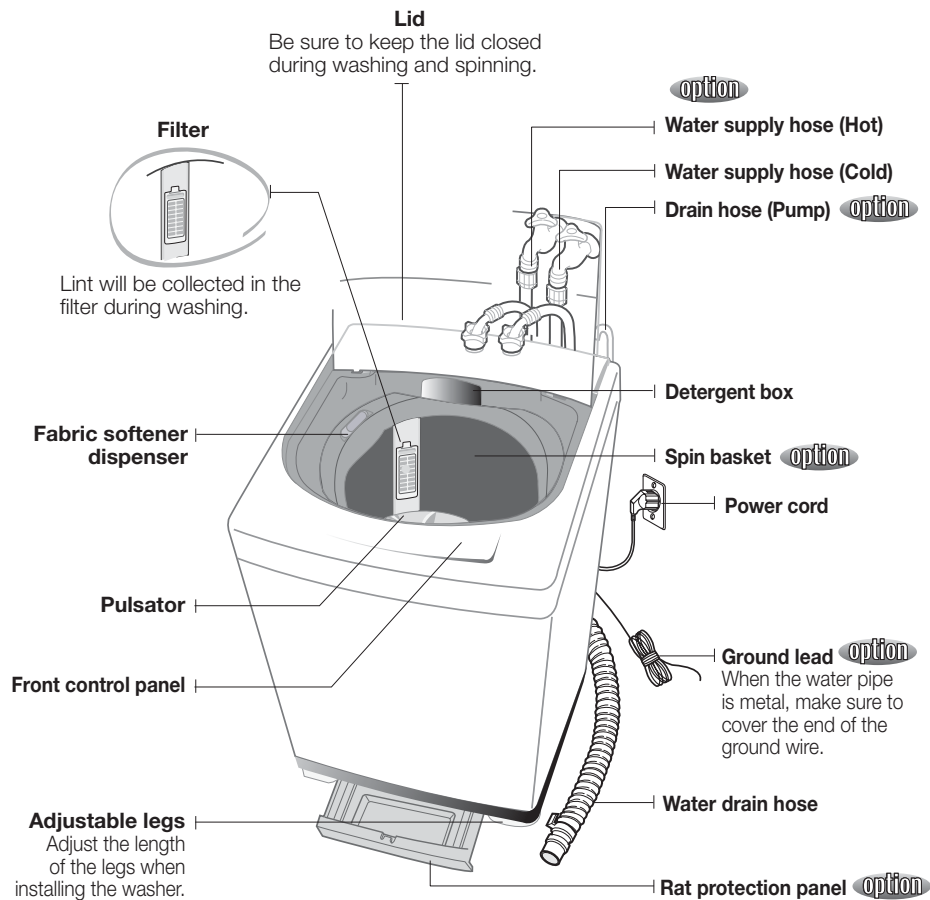

CONTROL PANEL

For more details, see control panel of your washing machine.

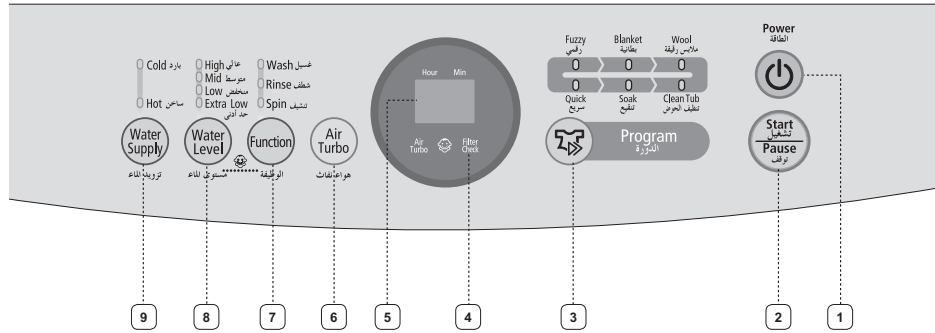



1 POWER BUTTON	Press this button once to operate. Press it again to turn the power off.
2 START/PAUSE BUTTON	Use to pause and restart the operation. To change the washing procedure during an operation, press this button to stop, and again to restart after changing the procedure.
3 PROGRAM SELECT BUTTON	Each time the button is pressed, the washing program changes; Fuzzy → blanket → wool → quick → soak → clean tub
4 FILTER CHECK	When the wash is finished, the warning lamp lights up on the filter check . When the door is opened, it turns off. (This is not a fault.) When the Magic filter is clogged, foreign materials may start sticking to the laundry. To ensure a clean wash, please remove foreign materials from the filter after every wash.
5 REMAINING TIME, DELAY START TIME, ERROR DISPLAY	Displays the remaining wash time. Displays the reserved delay start time. Displays the error state if a problem occurs in the washing machine so that you can take action.
6 AIR TURBO BUTTON	Press this button to speed dry your laundry. This function can only be selected if a spin cycle is set. You can add this function to all program except for the Wool program.
7 FUNCTION BUTTON	With every press of this button, the function changes; Wash,Rinse,Spin → Wash → Rinse → Spin → Wash&Rinse → Rinse&Spin → Wash,Rinse,Spin
8 WATER LEVEL BUTTON	The water level is automatically adjusted. However, you can select the water level manually by pressing this button. Mid → High → Mid → Low → Extra low → Low → Mid
9 WATER SUPPLY BUTTON 	Each time this button is pressed, the type of water is selected as follows, Cold → Cold + Hot → Hot → Cold

Setting up your washer _7

setting up your washer




FUZZY Program


Selects the best washing program automatically.

1. Press the **Power** Button to “On”. 
2. Press the **Start/Pause** button. 
Water level is selected automatically. Washing, rinsing, and spinning follow. If you want to pause, press the **Start/Pause** button again. You can change the program when paused.
3. Close the lid.

BLANKET PROGRAM




(Big volume laundry like blanket and bed cover sheets)

1. Press the **Power** button to “On”. 
2. Press the **Program** select button once. 
3. Press the **Start/Pause** button. 
Water level is selected automatically. Washing, rinsing, and spinning follow. If you want to pause, press the **Start/Pause** button again. You can change the program when paused.
4. Close the lid.

- Fold those big volume laundry (blanket and bed cover sheets) in the following way before adding into the spin basket. 
- Do not wash the electric blanket and carpets.
- Get a laundry net for those light and big volume laundry (eg. Cashmeres) because they might rise in the water and get damaged.

WOOL PROGRAM

Washable sweater, cardigan, delicate clothes etc.




1. Press the **Power** button to “On”. 
2. Press the **Program** select button two times. 
3. Press the **Start/Pause** button. 
Washing, rinsing, and spinning follow. If you want to pause, press the **Start/Pause** button again. You can change the program when paused.
4. Close the lid.



- You can only select cold water.
- The last spin operates lightly to prevent wrinkles.
- Use the detergent indicated in the laundry.
- Air turbo cannot be selected in the Wool program.

QUICK Program

If you want to wash those frequently used towels or less dirty laundry time. Because washing is speedy, it is good for light or less stained laundry.

1. Press the **Power** button to “On”. 
2. Press the **Program** select button three times. 
3. Press the **Start/Pause** button. 
Water level is selected automatically. Washing, rinsing, and spinning follow. If you want to pause, press the **Start/Pause** button again. You can change the program when paused.
4. Close the lid.

SOAK Program

Select this function when you wish to wash your laundry by soaking it.

1. Press the **Power** button to "**On**".
2. Press the **Program** select button four times
3. Press the **START/PAUSE** button and put the proper amount of detergent into tub.
4. Close the lid.



KEEPING THE TUB CLEAN

When using the machine under humid conditions for an extended time, various bacteria from the air may stick to the tub and form black dirt (fungi), causing damage to the human body. To keep the tub clean and hygienic at all times, it is recommended reading "CLEAN TUB PROGRAM" above and using only dedicated or recommended detergents to clean the tub regularly at least once every one to three months.

CLEAN TUB PROGRAM

Use this program to clean the tub. It will keep the tub clean and sanitary.




1. Press the **Power** button to "**On**".
 2. Press the **Program** select button five times.
 3. Press the **Start/Pause** button.
 4. Add a delicated detergent and close the lid
- Never place laundry in the tub when cleaning inside the tub, as this can cause discoloration or damage to the laundry.
 - When doing the laundry after cleaning the tub, you may find some impurities. These are just detergent residues and impurities after the tub cleaning. Perform the rinse cycle two to three times.
 - The water level is set to Mid early on and then changed to High during the rinse.



manual functions




Possible to select the function for each program.

Ex) If you want to wash in the quick program : Power - Select quick program - press function button once - Start/Pause button

 >  > 
once




WASH ONLY

Press the **Power** button.
Press the **Function Select** button once.
Press the **Start/Pause** button once.
Washing goes on for 15 minutes.
When the **Function** button is pressed during washing, the wash time can be changed to between 4 and 30 minutes in duration.

 >  > 
twice




RINSE ONLY

Press the **Function** button twice.
Press the **Start/Pause** button once.
Rinsing goes on for 2 times.
When the **Function** button is pressed during rinsing, the rinse times can be changed to between 2 to 5 times in duration.

 >  > 
three times




SPIN ONLY

Press the **Function** button three times.
Press the **Start/Pause** button once.
Spin drying goes on for 5 minutes.
When the **Function** button is pressed during spinning, the spin time can be changed to from 1 to 9 minutes.

 >  > 
four times

WASH AND RINSE

Press the **Function** button four times.
Press the **Start/Pause** button once.
Detects the amount of laundry, and determines wash and rinse time period automatically.
When the **Function** button is pressed during working, the rinse times can be changed to between 2 to 5 times in duration.

 >  > 
five times

RINSE AND SPIN

Press the **Function** button five times.
Press the **Start/Pause** button once.
Rinsing and spin drying follow.
When the **Function** button is pressed during working, the rinse times can be changed to between 2 and 5 times in duration.

installation & maintenance

The User's Manual is for common use. Make use of the User's Manual depending upon your washing machine model.

ENVIRONMENT

Leave some space - Maintain at least 10cm between the washer and the wall.

Place the washer on a sturdy flat surface. - If the washer is placed on an uneven or weak surface, noise or vibration occurs. (Allowable is 1°) Adjust the legs for even placement.

Never install the washer near water. - Do not place the washer in steamy rooms or where the washer is directly exposed to rain. Moisture may destroy the electrical insulation causing an electrical shock hazard.


Avoid direct sunlight or heaters. - As plastic and electrical components are affected by direct heat, never place the washer near furnaces, boilers, etc. Do not place under direct sunlight.

LEVELLING

If the washer is not leveled with the ground, it makes the machine tremble more or be out of order. So, make sure that the washer is leveled properly.

SEE IF THE MACHINE IS PLACED LEVEL BY CHECKING THE POSITION OF THE WASHING TUB.

- Open the lid of the machine, pour water into the tub up to the level just below the pulsator, and adjust the legs so that the pulsator is positioned at the center of the water as shown in the figure.
- Place the machine more than 10cm away from the wall.
- Adjust the legs on feet for levelling.

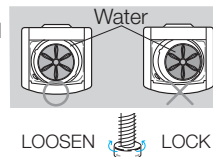

CONNECTING THE WATER SUPPLY HOSE

- | | | | |
|---|--|--|--|
| <p>1. Remove the adaptor from the water supply hose.</p> | | <p>4. Connect the water supply hose to the adaptor. Pull down the part (c) of the water supply hose. When the part (c) is released, the hose is automatically connected to the adaptor making a 'click' sound.</p> | |
| <p>2. First, using a "+" type screw driver, loosen the four screws on the adaptor. Next, take the adaptor and turn part(b) following the arrow for gap about 5 mm between them.</p> | | <p>5. Connect the other end of the water supply hose to the inlet water valve at the back of the washer. Screw the hose clockwise all the way in.</p> | |
| <p>3. Connect adaptor to the water tap by tightening the screws firmly. Then, turn part(b) following the arrow and put (a) and (b) together.</p> | | <p>5-1. Connect the other end of the water supply hose to the inlet water valve at the top of the washer. Screw the hose clockwise all the way in.</p> | |
- If the water tap is a screw type, assemble a water supply hose that fits to the tap as shown. After completing connection, if water leaks from the hose, then repeat the same steps.

- After completing connection, if water leaks from the hose, then repeat the same steps. Use the most conventional type of faucet for water supply. In case the faucet is square or too big, remove the spacing ring before inserting the faucet into the adaptor.

Troubleshooting _11


installation & maintenance

ASSEMBLING THE RAT PROTECTION PANEL option


Tilt the washer a little and lift up the panel until it clicks, finally fix the panel with screw to the base as shown in the figure.



1. Insert the rat protection panel to the assembling hole on back side to the end.




2. If you have difficulty inserting the panel lift up the washer a little and insert it.




HOW TO CONNECT THE DRAIN HOSE option


IN CASE OF PUMP-DRAINED WASHER

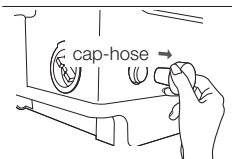


Take out the cap-hose and connect the outlet-hose.

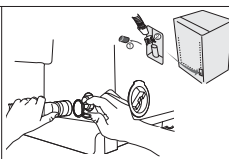

Be sure to join tightly the drain hose into the drainoutlet on the back of the machine.

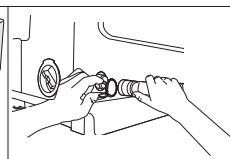


Be sure to join tightly the drain hose into the drain-outlet on the side of the machine.

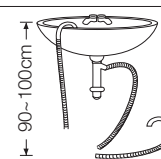

Install the drain hose in the position of about 90~100cm above the ground.

CONNECTING THE DRAIN HOSE

After pressing the joint ring(a), insert the drain hose(b) to drain direction.



HOW TO PUT THE DETERGENT IN

1. Open the detergent box by pulling in the direction of the arrow as shown in the figure and then put the powder detergent in the detergent box.
2. Put in one-time amount of detergent evenly so the detergent may not brim over the box.



HOW TO ADD THE FABRIC SOFTENER




Slide and open the cover in the direction of the arrow, insert the rinse detergent, and slide and close it in the reverse direction.

- When a proper amount (one time does) of fabric softener is stored in the softener inlet, it is automatically put in at the last rinsing cycle.
- Do not use detergent, bleach or starch into the Softener Inlet.
- Using too much softener may produce unsatisfactory results.
- Do not open the lid during the Spin Dry cycle. If added too early, its effectiveness will decrease.
- Do not leave the softener into the Softener Dispenser for a long time. Because softener became stiff.







12_Troubleshooting

WATER SUPPLY CONNECTOR FILTER


		
1. Pull out the filter and wash well.	2. Pull in the filter and connect the hose to the inlet water valve tightly.	3. Check if there is a leakage. Note to tighten up the connector.

CLEANING THE FILTER





1. Push the upper part of the Magic filter and pull in.		3. Clean the Magic filter.	
2. Open the cover as shown in the figure.		4. Close the cover and insert the lower part of the filter in the basket first and then push the filter with "click" sound.	

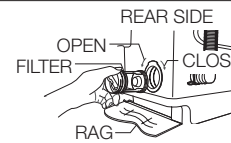HOW TO CLEAN THE PUMP FILTER option

- Place a rag under the washer filter not to wet the floor.
- Rotate the filter counterclockwise and pull out the filter.
- Remove dirt and rotate the filter clockwise until it locks in position.



troubleshooting

Problem	CHECK
Washing machine won't work	<ul style="list-style-type: none"> Is the water tap opened? Is the washer plugged in? Is the power cut off? Is there enough water?
Water dose not drain 	<ul style="list-style-type: none"> Is the drain hose down?(No pump) Is the drain hose frozen? Is the drain hose clogged? If the water dose not drain in 15 minutes, a buzzer will sound, and the remaining time indicator will show "5E".
Water is not supplied 	<ul style="list-style-type: none"> Is the water tap opened? Is the water cut off? Is the water supply hose or hose connection clogged? Is the water tap frozen? If the water supply is not finished in 1 hour or there is no change in the water level 4 minutes after the water supply has started, the buzzer rings and "4E" is displayed on the remaining time indicator.
Spinning does not work 	<ul style="list-style-type: none"> Is the laundry spread out evenly in the washer? In the washer set on a sturdy flat surface?
Water is overflowed 	<ul style="list-style-type: none"> Restart after spinning. If the error sign still indicates, call agency.

Troubleshooting _13

washing machine won't work?

Problem	CHECK & SOLUTION
The power is cut off.	<p>Is the electric voltage normal?</p> <p>Is the washer plugged in? Plug in the electric cord. ➔ Water does not drain.</p> <p>Is the drain hose down? Put the drain hose down.</p> <p>Is the drain hose folded? Unfold the drain hose.</p> <p>Is the drain hose outlet clogged? Remove the waste cleanly.</p>
Washing machine won't work.	<p>Is the washer lid open? ➔ Close the lid.</p> <p>Is the Pause button on? ➔ Press the Start/Pause button one more time and check if the washer starts.</p> <p>Is enough water filled to the water level?</p> <p>➔ If the water pressure is low, it takes a long time to start washing.</p> <p>Is the faucet closed? ➔ Open the faucet to supply water.</p>
If the drain hose and spin basket are frozen, do as follows.	<ul style="list-style-type: none"> • Add hot water to the frozen water tap and remove the drain hose. Soak into hot water. • Pour hot water into the spin basket for about 10 minutes. • Put a hot water towel on the drain hose connector. • If the drain hose defrosts, connect again and check for proper water draining.
The water drains out immediately.	<ul style="list-style-type: none"> • The drain is clogged with coins or pins. The drain hose is hung over the drain hose hook. Half fill the spin basket with water and try for spinning again.
The water leaks at the water supply hose connector.	<p>If the faucet connecting part is loose, water may leak.</p> <p>➔ Repeat the assembling steps again. (Refer to "Connecting the water supply hose")</p> <p>Check if the rubber packing of water supply hose is in the right position. ➔ Screw tightly again.</p> <p>Is the water supply hose folded? ➔ Unfold the hose.</p> <p>If the water supply is too strong, water may leak. ➔ Close the faucet a little.</p> <p>Is water leaking from the faucet itself? ➔ Fix the faucet. Water is not supplied.</p> <p>Did you press the Start/Pause button after selecting the water supply?</p> <p>➔ If the Start/Pause button is not pressed, water is not supplied. Press the Start/Pause button.</p> <p>Is the faucet closed? ➔ Turn on the faucet.</p> <p>Is the filter net at the water supply hose connector clogged with dirty matters?</p> <p>➔ Clean the filter net by brushing with a toothbrush.</p> <p>Is the water supply cut off? ➔ If the water supply is suspended, turn off the faucet and power off.</p>
Spinning makes loud noises and vibrations.	<p>Check if the laundry is spread evenly in the washer. ➔ Spread out the laundry evenly and start again.</p> <p>Check if the washing machine levels on a sturdy flat floor. ➔ Set the machine at level.</p> <p>Is the handle for leveling legs loose? ➔ Adjust the legs on the feet for leveling.</p> <p>Is around the washing machine filled with unnecessary stuffs?</p> <p>➔ Remove those unnecessary things away from the wash machine.</p>

14_Troubleshooting

specification

WA90V3, WA95V3

POWER CONSUMPTION	WASH	330 W	STANDARD WATER LEVEL	HIGH	60 l
	SPIN	240 W		MID	54 l
DIMENSIONS(mm)	W540xD560xH852 (LOW BASE)			LOW	45 l
	W540xD560xH904 (HIGH BASE)				
WEIGHT	31 kg		EXTRA LOW	28 l	
WATER PRESSURE	0.05~0.78 MPa (0.5 ~ 8.0 kg · f/cm ²)		WATER USAGE		160 l
WASHING TYPE	Stirring Type		SPIN SPEED		720 rpm

WA80V3, WA85V3

POWER CONSUMPTION	WASH	330 W	STANDARD WATER LEVEL	HIGH	57 l
	SPIN	240 W		MID	52 l
DIMENSIONS(mm)	W540xD560xH852 (LOW BASE)			LOW	44 l
	W540xD560xH904 (HIGH BASE)				
WEIGHT	31 kg		EXTRA LOW	27 l	
WATER PRESSURE	0.05~0.78 MPa (0.5 ~ 8.0 kg · f/cm ²)		WATER USAGE		150 l
WASHING TYPE	Stirring Type		SPIN SPEED		720 rpm



QUESTIONS OR COMMENTS?

Country	CALL	OR VISIT US ONLINE AT
U.A.E	800-SAMSUNG (726-7864) 8000-4726	www.samsung.com/ae

Code No. DC68-02594J_EN

WA80V3
WA85V3
WA90V3
WA95V3

غسالة دليل المستخدم

إمكانيات هائلة

نشكرك على شراء هذا المنتج من Samsung.
للحصول على خدمة أكثر تكاملاً،
الرجاء تسجيل المنتج على موقع

www.samsung.com/register



الميزات

١. **نظام التجفيف بالهواء النفاث**
تعمل تقنية الهواء النفاث على الدوران بقوة وسرعة بحيث تستغرق وقتاً أقل للتجفيف. تؤدي تقنية الهواء النفاث الوفرة للوقت إلى توفير الوقت حيث تضمن تجفيف الملابس بسرعة تفوق التجفيف العادي بنسبة ٣٠٪-٤٠٪. وحتى في المواسم الممطرة وفي الأجواء عالية الرطوبة، فإن الملابس التي تحتاج إلى وقت طويل كي تجف مثل الجينز السميك والمعاطف الثقيلة والبطانيات السمكية يتم جفيفها بسرعة أكبر. تعتبر تقنية الهواء النفاث مثالية للملابس الرقيقة والملابس المصنوعة من الألياف الصناعية حيث أنها تعمل على سهولة كي هذه الملابس. لا مزيد من تعليق الملابس وانتظارها حتى تجف. يمكنك كي الملابس بمجرد خروجها من الغسالة حيث أن الهواء النفاث يقضي على قدرٍ كافٍ من الرطوبة بحيث يجعل الملابس رطبة بقدرٍ يتلاءم مع الكي.
٢. **حاجوية على شكل معين**
خُذت الحاجوية المصممة على شكل المعين ضغطاً عالياً من الماء مما يعمل على إزالة الأوساخ من الملابس بشكل فعال. تقلل الحاجوية المصممة على شكل المعين من إلحاق الضرر بالأقمشة مما يعمل على زيادة عمر الأقمشة. تتميز الأنوية الداخلية البراقة بأنها رائعة وقوية في تأثيرها على الغسيل.
٣. **التحكم الرقمي**
تعمل ميزة التحكم الرقمي على تشغيل أفضل دورات الغسيل من خلال تقدير وزن الملابس فيما يشبه الذكاء الاصطناعي.
٤. **نافذة شفافة**
"النافذة الشفافة" هي الفكرة الجديدة التي تمكّن المستخدمين من إشباع فضولهم بمشاهدة ما بداخل الغسالة أثناء تشغيلها. يمكن التحقق من تقدم عملية الغسيل التي تجري داخل الغسالة أثناء التشغيل بالنظر من خلال النافذة الشفافة.
٥. **المضخة القوية المزوجة - تشابك أقل وأداء أفضل للغسيل**
عدم التشابك - حيث تساعد تيارات الماء متعددة الاتجاهات على عدم تشابك الملابس. تم تصميم تقنية تيار الماء خصيصاً لتحسين أداء عملية الغسيل. تضمن قوة تيارات الماء القوية متعددة الاتجاهات الحصول على أداء فائق للغسيل.
٦. **المصفاة الفعالة**
تضمن لك هذه "المصفاة" الفعالة الفريدة جميع كافة النسالات الموجودة داخل حوض الغسيل مما يرفع كفاءة عملية التصفية للحصول على نتائج فعالة لعملية الغسيل.
٧. **إعادة التشغيل التلقائي**
يتم تشغيل الجهاز تلقائياً بعد حدوث انقطاع للتيار الكهربائي.
 - وظيفة التأمين ضد عبث الأطفال
 - يساعد هذا الجهاز على حماية الأطفال من التعرض للأذى دون قصد أثناء اللعب بالغسالة.
 - كيفية تشغيل وظيفة التأمين ضد عبث الأطفال:
اضغط على الزر الطاقة للانتقال إلى وضع الغسيل الأولي.
بواسطة الضغط على الزر تشغيل/توقف، تبدأ عملية الغسيل وفي حالة الاحتياج إلى وظيفة التأمين ضد عبث الأطفال أثناء الغسيل.
 - اضغط على كل من الزرين مستوى الماء و الوظيفة في نفس الوقت. (لدة ٣ ثوان)
(ملاحظة: لا يمكنك تشغيل الوظيفة دون الضغط على الزر الطاقة)
 - لإلغاء تشغيل وظيفة التأمين ضد عبث الأطفال: في حالة برمجة وظيفة التأمين ضد عبث الأطفال، اضغط على كل من الزرين مستوى الماء و الوظيفة في نفس الوقت.



إرشادات من أجل السلامة

الرجاء ملاحظة أن احتياطات السلامة التالية تهدف إلى تجنب التعرض للأخطار أو الأضرار غير المتوقعة وذلك عن طريق المساعدة في الاستخدام الملائم من أجل السلامة. عند استخدام الماء الساخن في الغسيل، الرجاء التأكد أن درجة حرارة الماء لا تتعدى 50 درجة مئوية.

- قد تتعرض الأجزاء البلاستيكية للتنشوه أو للتلف. وقد تحدث صدمة كهربائية أو حريق.

تحذير



قد تحدث إصابات بالغة أو حوادث مهلكة في حالة خرق هذه التعليمات.

- في حالة تلف قابس الجهاز (سلك التيار الكهربائي)، يجب تغييره من قبل الشركة المصنعة أو وكيل الصيانة الخاص بها أو أي فني مؤهل لتجنب التعرض لأي خطر.
- لا تنزع سلك التيار أو تلمسه بأيدي رطبة.
- - قد تحدث صدمة كهربائية أو حريق.
- لا تحاول ثني سلك التيار بالقوة أو الضغط عليه بأشياء ثقيلة.
- - قد تحدث صدمة كهربائية أو حريق.
- لا تضع الغسالة بالقرب من أدوات كهربائية ولا تضع شمعة أو سجائر فوق الغسالة.
- - قد يحدث حريق.
- لا تضع يديك أو أي أدوات معدنية أسفل الغسالة أثناء التشغيل.
- - قد تتعرض للأذى عن طريق لوح الدوران الموجود أسفل الغسالة.
- ابتعد عن الغسالة عندما يكون قاع الغسالة مغموراً بالماء.
- - قد تحدث صدمة كهربائية. الرجاء الانتظار حتى يتم تصريف الماء بشكل كامل.
- لا تضع ملابس ملطخة بالجازولين أو البنزين أو الكحول في الغسالة. واحتفظ بتلك الملابس بعيداً عن الغسالة.
- - قد يحدث انفجار أو حريق.
- أثناء التنشيف، لا تضع يديك في حوض التنشيف.
- - قد تتعرض يداك للأذى. في حالة عدم توقف الغسالة عن العمل في غضون 15 ثانية بعد قيامك بفتح الغطاء، اتصل بوكيل الصيانة على الفور.
- هذا الجهاز غير مخصص للاستخدام بواسطة الأطفال الصغار أو الأشخاص ذوي الاحتياجات الخاصة ما لم يخضعوا لإشراف شخص مسئول للتأكد من استخدامهم للجهاز بشكل آمن. يجب مراقبة الأطفال الصغار لضمان عدم عبثهم بالغسالة.
- يجب أن يتم توصيل هذا الجهاز من خلال مأخذ قوي الاحتمال لضمان الاستهلاك الصحيح للطاقة.
- يجب وضع الجهاز في مكان يتيح الوصول إلى مأخذ التوصيل بعد تركيبه.
- لا توجد قطع غيار قابلة للصيانة بواسطة المستخدم داخل الغسالة. لذا، استعن بفني صيانة مؤهل للقيام بأعمال الصيانة.
- - وإلا فقد يحدث خطأ ميكانيكي. أو صاعقة كهربائية، أو حرائق، أو تلف.
- - لا يسري الضمان الخاص بالمنتج على المشاكل الناتجة عن فك المنتج.
- لا تستخدم هذا المنتج للأغراض التجارية.
- تجنب سد السجاد لفتحات التهوية إذا كانت الغسالة تحتوي على فتحات تهوية بقاعدتها.



إرشادات من أجل السلامة

تنبيهات



- قد تتعرض لإصابات خفيفة أو أضرار طفيفة في حالة خرق هذه الإرشادات.
- لا تقم بتنبيت الغسالة في منطقة رطبة أو خارج المنزل حيث يتساقط المطر أو الجليد.
 - قد تحدث صدمة كهربائية أو حريق.
 - الرجاء فصل سلك التيار الكهربائي عند عدم استخدامه.
 - قد تحدث صدمة كهربائية أو حريق.
 - في حالة وجود أتربة أو ماء على قابس التيار الكهربائي والجزء المتصل به، الرجاء إزالته بالكامل.
 - قد تحدث صدمة كهربائية أو حريق.
 - لا تجعل أطفالك ينظرون داخل الغسالة.
 - إذا سقط الأطفال داخل الغسالة، قد تكون حياته عرضة للخطر.
 - قم بتهوية القابس على الفور دون لمسه في حالة تسرب الغاز.
 - قد تحدث صدمة كهربائية أو حريق في حالة اشتعاله.
 - إذا أحدثت الغسالة صوتاً غريباً، أو أخرجت رائحة غير عادية، أو دخان قم بفصلها بسرعة واتصل بوكيل الصيانة.
 - قد تحدث صدمة كهربائية أو حريق.
 - عند تنظيف الغسالة، لا ترش الماء على أجزاء الغسالة بشكل مباشر.
 - قد يؤثر ذلك على عمر الغسالة. قد تحدث صدمة كهربائية أو حريق.
 - لا تقم بتوصيل عدة أجهزة في آن واحد بمصدر تيار كهربائي واحد.
 - قد يحدث حريقاً بسبب الحرارة الزائدة.
 - لا تضغط الزر بمثقاب أو بديوس.
 - قد تحدث صدمة كهربائية أو حريق.
 - استخدم أطقم خراطيم جديدة، حيث يجب عدم إعادة استخدام الخراطيم القديمة.
 - في حالة تلف السلك المستخدم حالياً، يجب استبداله بمعرفة الشركة المصنعة أو مركز الصيانة أو أي شخص مخول وذلك لتجنب التعرض لأي مخاطر.
 - قم بتوصيل السلك الأرضي باللوحة الأساسية وإخفائه تحت الأرض على عمق ٢٥ سم تقريباً، أو توصيله بقضيب أو مقبس طاقة لتصريف الأرضي. يحظر توصيل السلك بسلك هاتف أو قضيب البرق أو أنبوب توصيل غاز. 


المحتويات

وصف الأجزاء	٦	إعداد الغسالة	٦
لوحة التحكم	٧		
البيئة	١١	وظائف يدوية	١٠
الاستواء	١١		
توصيل خرطوم تزويد الماء	١١		
تركيب لوحة الحماية من الفئران	١٢	التركيب والصيانة	١١
كيفية توصيل خرطوم التصريف	١٢		
كيفية إضافة المسحوق	١٢		
كيفية إضافة منعم الأقمشة	١٢		
مصفاة وصلة تزويد الماء	١٣		
تنظيف المصفاة	١٣		
كيفية تنظيف مصفاة المصخة	١٣	استكشاف الأعطال وحلها	١٣
استكشاف الأعطال وحلها	١٣		
هل الغسالة لا تعمل؟	١٤	هل الغسالة لا تعمل؟	١٤
المواصفات	١٥	المواصفات	١٥

إعداد الغسالة


وصف الأجزاء

دليل المستخدم مخصص للاستخدام العام.
يعتمد استخدام دليل المستخدم على طراز الغسالة.

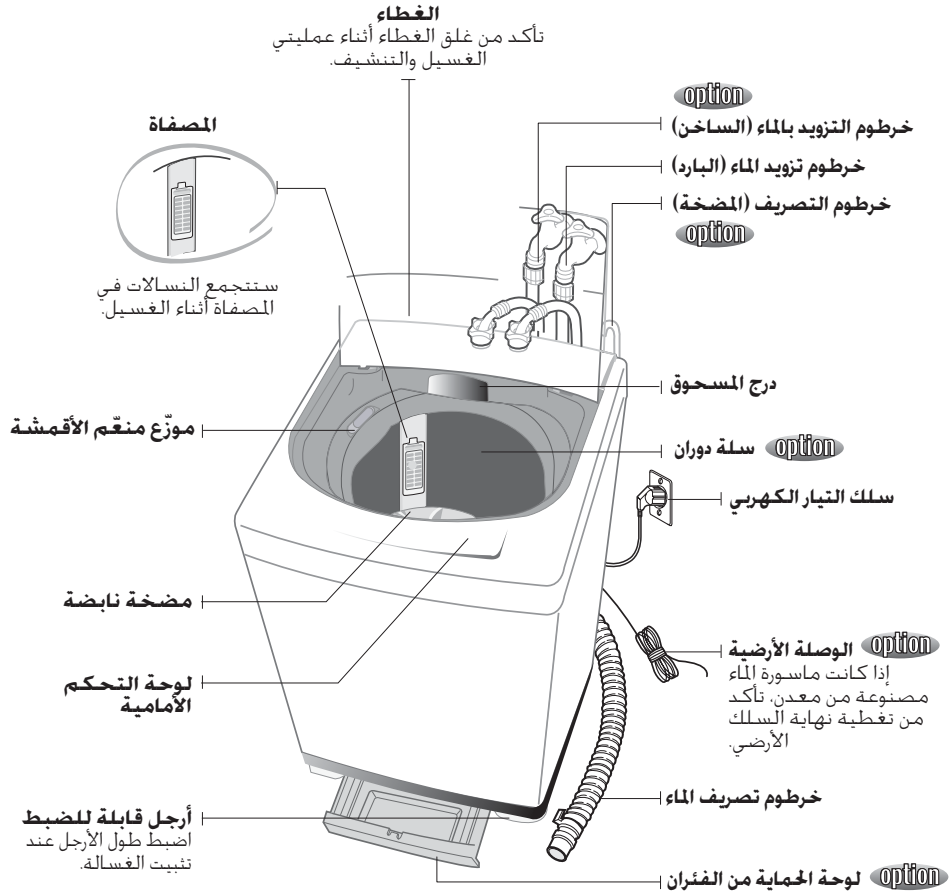

لوحة التحكم

للحصول على مزيد من التفاصيل، راجع لوحة التحكم الخاصة بالغسالة.

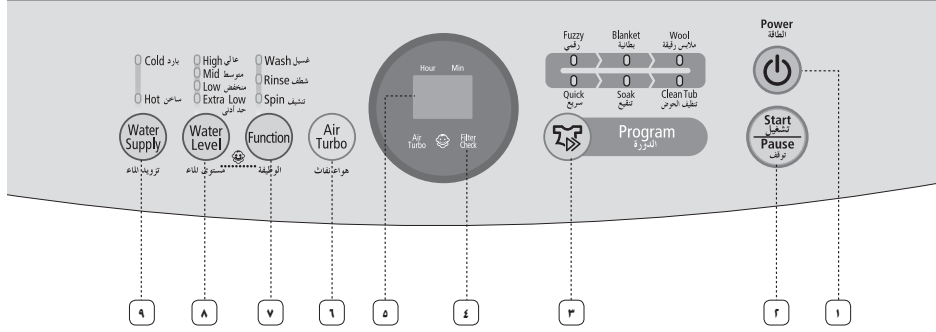

1	زر الطاقة	اضغط هذا الزر مرة واحدة للتشغيل. اضغط هذا الزر مرة أخرى لإيقاف التشغيل.
2	الزر تشغيل/توقف	استخدم هذا الزر للإيقاف المؤقت لعملية التشغيل وإعادة التشغيل. لتغيير أحد إجراءات الغسيل أثناء عملية التشغيل. اضغط على هذا الزر للإيقاف، ومرة أخرى لإعادة التشغيل بعد تغيير الإجراء.
3	زر تحديد الدورة	تغيير دورة الغسيل في كل مرة تضغط فيها على هذا الزر: رقمي ← بطانية ← ملابس رقيقة ← سريع ← تنقع ← تنظيف الحوض
4	FILTER CHECK (التحقق من المصفاة)	عند انتهاء الغسيل، يضيء مصباح التحذير في خانة filter check (التحقق من المصفاة) . عند فتح الباب، ينطفئ المصباح. (لا بعد ذلك خلافاً). عند انسداد المصفاة الفعالة، قد تلتصق المواد الغريبة بالغسيل. لضمان الحصول على غسيل نظيف، الرجاء إزالة أي مواد غريبة من على المصفاة بعد كل غسلة.
5	الوقت المتبقي، وقت تأجيل التشغيل، شاشة الأخطاء	عرض الوقت المتبقي للغسيل. عرض وقت تأجيل التشغيل المحفوظ. عرض حالة الخطأ إذا حدثت مشكلة في الغسالة لتتمكن من اتخاذ الإجراء اللازم.
6	الزر هواء نفث	اضغط على هذا الزر للحصول على جفاف سريع للغسيل. يمكن تحديد هذه الوظيفة فقط في حالة ضبط دورة الدوران. يمكنك إضافة هذه الوظيفة لجميع الدورات ماعدا دورة ملابس رقيقة.
7	الزر الوظيفة	تغيير الوظيفة في كل مرة يتم فيها الضغط على هذا الزر: غسيل و شطف و تنشيف ← غسيل ← شطف ← تنشيف ← غسيل و شطف و شطف ← شطف و تنشيف ← غسيل و شطف و تنشيف
8	الزر مستوى الماء	يتم ضبط مستوى الماء تلقائياً. مع ذلك، يمكنك تحديد مستوى الماء يدوياً بالضغط على هذا الزر. متوسط ← عالي ← متوسط ← منخفض ← حد أدنى ← منخفض ← متوسط
9	الزر تزويد الماء	في كل مرة تقوم فيها بالضغط على هذا الزر، يتم تحديد نوع الماء كما يلي: بارد ← بارد و ساخن ← ساخن ← بارد

إعداد الغسالة ٧

إعدادات الغسالة

الدورة رقمي

خديد دورة الغسيل المثلى تلقائياً.



١. اضغط على الزر **الطاقة** لـ **تشغيل** الغسالة.

٢. اضغط الزر **تشغيل/توقف**.

يتم خديد مستوى الماء تلقائياً، ثم يتم متابعة عمليات الغسيل والشطف والتنشيف. إذا كنت ترغب في التوقف المؤقت، اضغط على الزر **تشغيل/توقف** مرة أخرى. يمكنك تغيير الدورة أثناء التوقف المؤقت.

٣. أغلق الغطاء.

الدورة بطانية

(الغسيل ذو الحجم الكبير مثل البطاطين وملءات الأُسرة)



١. اضغط على الزر **الطاقة** لـ **تشغيل** الغسالة.

٢. اضغط على زر خديد **الدورة** مرة واحدة.

٣. اضغط على الزر **تشغيل/توقف**.

يتم خديد مستوى الماء تلقائياً، يتم متابعة عمليات الغسيل والشطف والتنشيف. إذا كنت ترغب في التوقف المؤقت، اضغط على الزر **تشغيل/توقف** مرة أخرى. يمكنك تغيير الدورة أثناء التوقف المؤقت.

٤. أغلق الغطاء.



• قم بطي الغسيل ذي الحجم الكبير (البطاطين وملءات السرير) بالطريقة التالية قبل وضعه بداخل سلة التنشيف.

• لا تغسل البطانية الكهربائية والسجاد.

• ضع الغسيل الخفيف وكبير الحجم في شبكة الغسيل (على سبيل المثال، الملابس الصوفية) حيث أن حجمها يزيد في الماء مما قد يتسبب في الضرر.

الدورة ملابس رقيقة

تستخدم هذه الدورة للسترات القابلة للغسيل والسترات الصوفية والملابس الخفيفة، الخ.



١. اضغط على الزر **الطاقة** لـ **تشغيل** الغسالة.


٢. اضغط على زر خديد **الدورة** مرتين.

٣. اضغط على الزر **تشغيل/توقف**.

ثم يتم متابعة عمليات الغسيل والشطف والتجفيف. إذا كنت ترغب في التوقف المؤقت، اضغط على الزر **تشغيل/توقف** مرة أخرى. يمكنك تغيير الدورة أثناء التوقف المؤقت.

٤. أغلق الغطاء.

• يمكنك خديد ماء بارد فقط.

•  تنبيه: تعمل وظيفة التنشيف الأخير بخفة لمنع تشابك الملابس.

• استخدم مسحوق الغسيل الموضح في الغسيل.

• لا يمكن خديد وظيفة الهواء النفاث في دورة الملابس الرقيقة.



الدورة سريع

تستخدم هذه الدورة عندما تريد غسل المناشف التي تستخدم بشكل متكرر أو الغسيل قليل الاتساخ. بما أن الغسيل يكون سريعاً، يفضل استخدام هذه الدورة للغسيل المتسخ اتساخاً خفيفاً أو أقل.



1. اضغط على الزر **الطاقة لـ تشغيل** الغسالة.
2. اضغط على زر **خديد الدورة** ثلاث مرات.
3. اضغط الزر **تشغيل/توقف**. يتم خديد مستوى الماء تلقائياً. يتم متابعة عمليات الغسيل والشطف والتنشيف. إذا كنت ترغب في التوقف المؤقت، اضغط على الزر **تشغيل/توقف** مرة أخرى. يمكنك تغيير الدورة أثناء التوقف المؤقت.
4. أغلق الباب.

الدورة تنقيع

حدد هذه الوظيفة عند الحاجة إلى غسيل الملابس عن طريق نقعها.



1. اضغط على الزر **الطاقة لـ تشغيل** الغسالة.
2. اضغط على زر **خديد الدورة** أربع مرات.
3. اضغط على الزر **تشغيل/توقف** وضع الكمية المناسبة من المسحوق في الحوض.
4. أغلق الغطاء.

الاحتفاظ بالحوض نظيفاً

عند استخدام الغسالة في الأجواء الرطبة لفترة طويلة، قد تلتصق البكتيريا العالقة في الهواء بأنواعها المختلفة بالحوض وتكون أجزاء متسخة سوداء (فطريات) مما قد يلحق الضرر بالإنسان. للاحتفاظ بالحوض نظيفاً وصحياً دوماً، ينصح بقراءة الجزء الخاص "بدورة تنظيف الحوض" الموجود أعلاه واستخدام المواد المطهرة أو المنظفة الموصى بها فقط لتنظيف الحوض بانتظام مرة واحدة على الأقل كل شهر وبما لا يزيد عن ثلاثة أشهر.

دورة تنظيف الحوض

استخدم هذه الدورة لتنظيف الحوض. فهي تؤدي إلى إبقاء الحوض نظيفاً ومعقماً.



1. اضغط على الزر **الطاقة لـ تشغيل** الغسالة.
 2. اضغط على زر **خديد الدورة** خمس مرات.
 3. اضغط على الزر **تشغيل/توقف**.
 4. أضف المسحوق ثم أغلق الباب.
- لا تقم أبداً بوضع الغسيل في الحوض عند القيام بتنظيفه، فقد يؤدي ذلك إلى تلطيخ ألوان الغسيل أو تلفه.
 - عند القيام بالغسيل بعد تنظيف الحوض، قد تجد بعض الرواسب، التي ترجع إلى بقايا المادة المنظفة الناتجة عن عملية التنظيف. الرجاء القيام بإجراء دورة الشطف من مرتين إلى ثلاث مرات.
 - يتم ضبط مستوى الماء إلى متوسط في بداية الأمر ثم يتغير إلى عالي أثناء عملية الشطف.



وظائف يدوية

يمكن تحديد الوظيفة لكل دورة.
على سبيل المثال) إذا كنت ترغب في الغسيل باستخدام الدورة سريع:
الطاقة - حدد الدورة سريع - اضغط على الزر الوظيفة مرة واحدة - الزر تشغيل/توقف

الغسيل فقط

اضغط على زر **الطاقة**.

اضغط على الزر **تحديد الوظيفة** مرة واحدة.

اضغط على الزر **تشغيل/توقف** مرة واحدة.

تستمر عملية الغسيل لمدة ١٥ دقيقة.

عند الضغط على الزر **الوظيفة** أثناء الغسيل، يمكن تغيير مدة الغسيل لمدة تتراوح بين ٤ دقائق و ٣٠ دقيقة.



مرة واحدة

الشطف فقط

اضغط على الزر **الوظيفة** مرتين.

اضغط على الزر **تشغيل/توقف** مرة واحدة.

تتم عملية الشطف على مرتين.

عند الضغط على الزر **الوظيفة** أثناء الشطف، يمكن تغيير عدد مرات الشطف لتتراوح من مرتين إلى خمس مرات.



مرتين

التنشيف فقط

اضغط على الزر **الوظيفة** ثلاث مرات.

اضغط على الزر **تشغيل/توقف** مرة واحدة.

تستمر عملية الدوران لمدة ٥ دقائق.

عند الضغط على الزر **الوظيفة** أثناء الدوران، يمكن تغيير مدة الدوران من دقيقة إلى ٩ دقائق.



ثلاث مرات

الغسيل والشطف

اضغط على الزر **الوظيفة** أربع مرات.

اضغط على الزر **تشغيل/توقف** مرة واحدة.

يقوم ذلك بالتحقق من كمية الغسيل، ويحدد زمن فترة الغسل والشطف تلقائياً.

عندما يتم الضغط على الزر **الوظيفة** أثناء التشغيل،

يمكن تغيير عدد مرات الشطف لتتراوح من مرتين إلى خمس مرات.



أربع مرات

الشطف والتنشيف

اضغط على الزر **الوظيفة** خمس مرات.

اضغط على الزر **تشغيل/توقف** مرة واحدة.

يتم متابعة عمليتي الشطف والتنشيف.

عندما يتم الضغط على الزر **الوظيفة** أثناء التشغيل،

يمكن تغيير عدد مرات الشطف لتتراوح من مرتين إلى خمس مرات.



خمس مرات

التركيب والصيانة

دليل المستخدم مخصص للاستخدام العام. استعن بدليل المستخدم الخاص ببطراز الغسالة.

البيئة


اترك مسافة - اترك مسافة تقدر بـ ١٠ سم بين الغسالة والخائط.
ضع الغسالة على أرض ثابتة ومستوية. - في حالة وضع الغسالة على سطح غير مستو أو ضعيف، يؤدي ذلك إلى ارتفاع صوت الغسالة أو اهتزازها أثناء التشغيل. (الارتفاع المسموح به درجة واحدة (°) اضبط الأرجل للوضع المناسب.
لا تقم أبداً بتثبيت الغسالة بالقرب من الماء. - لا تضع الغسالة في غرف ينبعث منها البخار أو حيث تكون معرضة بشكل مباشر إلى المطر. قد تتسبب الرطوبة في تلف المادة العازلة التي تحيط بالأسلاك الكهربائية ما ينتج عنه صدمات كهربائية.

جنب الضوء المباشر لأشعة الشمس أو الأجهزة الحرارية. - تتأثر مكونات الأسلاك الكهربائية المصنوعة من البلاستيك بالحرارة المباشرة. لا تقم أبداً بوضع الغسالة بالقرب من الفرن، أو غلايات الماء، إلى آخره، لا تضعها تحت أشعة الشمس المباشرة.

الاستواء

إذا لم تكن الغسالة مستوية على الأرض، ستتهز بشكل كبير أو ستكون غير صالحة للتشغيل. ولذلك، تأكد من أن الغسالة مستوية بشكل صحيح.

تأكد من وضع الغسالة بشكل مستو من خلال فحص وضع حوض الغسيل.




قفل فك

- افتح باب الغسالة، ثم اسكب الماء داخل حاوية الغسيل حتى المستوى الذي يقع أدنى المضخة، وقم بتعديل الأرجل بحيث تكون المضخة في وسط الماء كما هو مبين في الشكل.
- ابعد الغسالة أكثر من ١٠ سم عن الخائط.
- اضبط استواء الأرجل.

توصيل خرطوم تزويد الماء

١. إزالة الحول من خرطوم تزويد الماء.		٤. صل خرطوم تزويد الماء بالحول. اسحب الجزء (ج) من خرطوم تزويد الماء لأسفل. عند إرخاء الجزء (ج) يتصل الخرطوم إلى الحول تلقائياً محدثاً صوت "إغلاق".	
٢. أولاً، باستخدام مفك برغي من نوع "٢" أخرج البراغي الأربعة الموجودة بالحول. ثم أخرج الحول ودور الجزء (ب) باتجاه السهم لإحداث فجوة تقدر بنحو ٥ مم بينهما.		٥. صل الطرف الآخر من خرطوم تزويد الماء بصمام دخول الماء الموجود في خلفية الغسالة. لف خرطوم تزويد الماء في اتجاه عقارب الساعة.	
٣. صل الحول بصنوبر الماء بربط البراغي بإحكام. ثم لف الجزء (ب) باتجاه السهم وضع الجزأين (أ) و (ب) معاً.		٥-١. صل الطرف الآخر من خرطوم تزويد الماء بصمام دخول الماء الموجود في أعلى الغسالة. لف خرطوم تزويد الماء في اتجاه عقارب الساعة.	



- إذا كان صنوبر الماء من نوع برغي، فقم بتركيب خرطوم تزويد للماء بلائم الصنوبر كما هو موضح. بعد اكتمال التوصيل، إذا تسرب الماء من الخرطوم، كرر نفس الخطوات.

بعد اكتمال التوصيل، إذا تسرب الماء من الخرطوم، كرر نفس الخطوات. استخدم صنوبر من النوع العادي لتوريد الماء.

إذا كان الصنوبر مربعاً أو كبيراً جداً، أزل الحلقة الفاصلة قبل إدخال الصنوبر إلى الحول

التركيب والصيانة

تركيب لوحة الحماية من الفرن option

	<p>١. أدخل لوحة الحماية من الفرن في فتحة التجميع الموجودة في الجانب الخلفي بشكل تام.</p>	<p>أمل الغسالة قليلاً وارفع اللوحة حتى يتم إغلاقها. وفي النهاية قم بتثبيت اللوحة ببرغي في القاعدة كما هو موضح بالشكل.</p>
	<p>٢. إذا واجهت صعوبات في إدخال اللوحة ارفع الغسالة قليلاً وقم بإدخالها.</p>	<p>الجانب الخلفي</p>


كيفية توصيل خرطوم التصريف option

في حالة استخدام غسالة ذات مضخة تصريف

<p>ثبت خرطوم تصريف الماء على بعد يقدر بنحو ٩٠-١٠٠ سم عن الأرض.</p>	<p>تأكد من توصيل خرطوم تصريف الماء بإحكام في مخرج التصريف الموجود في جانب الغسالة.</p>	<p>تأكد من توصيل خرطوم تصريف الماء بإحكام في مخرج التصريف الموجود في ظهر الغسالة.</p>	<p>انزع غطاء الخرطوم وصل خرطوم الصرف.</p>

توصيل خرطوم التصريف

بعد الضغط على حلقة الوصل (أ)، الرجاء إدخال خرطوم تصريف الماء (ب) باتجاه التصريف.



كيفية إضافة المسحوق

- افتح درج المسحوق بدفعه باتجاه السهم كما هو موضح في الشكل ثم ضع المسحوق في الدرج المخصص له.
- ضع في كل مرة كمية ملائمة من المسحوق بحيث لا يفيض المسحوق من الدرج.



كيفية إضافة منعم الأقمشة

قم بإزاحة الغطاء وفتحه في اتجاه السهم، ثم ضع مسحوق الغسيل و قم بدفع الغطاء في الاتجاه المعاكس لإغلاقه.



- عند تخزين كمية مناسبة (مقدار مرة واحدة) من ملين الأقمشة في مكان توريد الملينات، يتم وضعها في الدورة الأخيرة من الشطف.
- لا تستخدم المسحوق، أو المبيض، أو النشأ في درج الملين.
- يؤدي الإفراط في استخدام الملين إلى نتائج غير مرضية.
- لا تفتح الباب أثناء دورة التجفيف، إذا تم إضافة منعم الأقمشة في وقت سابق، فإن هذا سينقص من فعاليته.
- لا تترك ملين الأقمشة في موزع ملين الأقمشة لمدة طويلة، حيث أن الملين يصبح يابساً.


مصفاة وصلة تزويد الماء

		
٣. تحقق من عدم وجود ارتشاحات. انتبه إلى إحكام الوصلة.	٤. ادفع المصفاة وصل الخرطوم بصمام تزويد الماء بإحكام.	١. انزع المصفاة واغسلها جيداً.

تنظيف المصفاة

	٣. نظف المصفاة الفعالة.		١. ادفع الجزء العلوي من المصفاة الفعالة واجذبه للداخل.
	٤. أغلق الغطاء وأدخل الجزء السفلي في الحاوية أولاً ثم ادفع المصفاة، تسمع صوت "تنبيتها".		٢. افتح الغطاء كما هو مبين بالشكل.

كيفية تنظيف مصفاة المضخة option

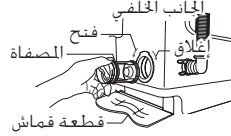	١. ضع قطعة من القماش أسفل مصفاة الغسالة حتى لا تبتل الأرض.
	٢. لف المصفاة عكس عقارب الساعة وانزعها.
	٣. أزل الأوساخ ولف المصفاة مرة أخرى في اتجاه عقارب الساعة لإعادتها إلى مكانها.

استكشاف الأعطال وحلها

المشكلة	الفحص
الغسالة لا تعمل	<ul style="list-style-type: none"> هل صنبور الماء مفتوح؟ هل جهاز الغسالة متصل بمصدر التيار الكهربائي؟ هل التيار الكهربائي مقطوع؟ هل ضغط الماء كافي؟
لا يتم تصريف الماء 	<ul style="list-style-type: none"> هل خرطوم التصريف موضوع لأسفل؟ (بدون مضخة) هل خرطوم التصريف متجمد؟ هل خرطوم التصريف مسدود؟ إذا لم يتم تصريف الماء خلال ١٥ دقيقة، سيُسمع طنين، وسيُعرض مؤشر الوقت المتبقي "5E".
لا يتم تزويد الماء 	<ul style="list-style-type: none"> هل صنبور الماء مفتوح؟ هل الماء مقطوع؟ هل خرطوم تزويد الماء أو وصلة الخرطوم مسدودة؟ هل صنبور الماء متجمد؟ إذا لم يتم الانتهاء من التزود بالماء في خلال ساعة واحدة أو لم يحدث تغير في مستوى الماء بعد أربع دقائق من بدء التزود بالماء، سيُسمع طنين وسيتم عرض "4E" على مؤشر الوقت المتبقي.
الدوران لا يتم 	<ul style="list-style-type: none"> هل تم توزيع الغسيل بالتساوي في الغسالة؟ هل تم وضع الغسالة على أرض ثابتة ومستوية؟
زيادة الماء 	<ul style="list-style-type: none"> إعادة التشغيل بعد التنشيف. في حالة استمرار ظهور مؤشر العطل، اتصل بالشركة.

استكشاف الأعطال وحلها_١٣

هل الغسالة لا تعمل؟

المشكلة	الفحص والحل
انقطاع التيار الكهربائي.	هل فولتية التيار الكهربائي طبيعية؟ هل جهاز الغسالة متصل بمصدر التيار الكهربائي؟ قم بتوصيل سلك التيار الكهربائي. لا يتم تصريف الماء. هل يتجه خرطوم التصريف إلى أسفل؟ ضع خرطوم التصريف لأسفل. هل خرطوم التصريف منثنى؟ فك الثنيات الموجودة في خرطوم التصريف. هل فتحة خرطوم التصريف مسدودة؟ أزل النفايات.
الغسالة لا تعمل.	هل غطاء الغسالة مفتوح؟ أغلق الغطاء. هل الزر توقف في وضع تشغيل؟ اضغط الزر تشغيل/توقف مرة أخرى وتأكد من أنه تم بدء تشغيل الغسالة. هل تم ملء الماء حتى المستوى المطلوب؟ إذا كان ضغط الماء منخفضاً، فستستغرق عملية بدء تشغيل الغسالة وقتاً طويلاً. هل الصنبور مغلق؟ افتح الصنبور لتزويد الماء.
إذا كان خرطوم التصريف والدوران متجمدين، قم بما يلي.	<ul style="list-style-type: none"> أضف الماء الساخن إلى حاوية الغسيل المتجمدة وأزل خرطوم التصريف. انقع الخرطوم في الماء الساخن. اسكب الماء الساخن في المجفف لمدة ١٠ دقائق. ضع منشفة مبللة بالماء الساخن على وصلة خرطوم التصريف. بعد فك تجميد خرطوم التصريف، قم بتوصيله مرة أخرى وحقن ما إذا كان تصريف الماء يتم بالشكل الملائم.
يتم تصريف الماء في الحال.	<ul style="list-style-type: none"> في حالة انسداد خرطوم التصريف بعملات معدنية أو دبائيس، قم بتعليق خرطوم التصريف على الخفاف. املاً نصف سلة الدوران بالماء وحاول إجراء الدوران مرة أخرى.
يترسب الماء في وصلة خرطوم تزويد الماء.	<ul style="list-style-type: none"> إذا كان الجزء الخاص بوصلة الصنبور غير محكم الربط، قد يتسرب الماء. كرر خطوات التجميع مرة أخرى. (راجع "توصيل خرطوم تزويد الماء") تحقق مما إذا كان المطاط الخاص بخرطوم تزويد الماء في وضعه الصحيح. اربط البراغى مرة أخرى بإحكام. هل خرطوم تزويد الماء منثنى؟ فك الثنايا الموجودة في خرطوم التصريف. إذا كانت عملية تزويد الماء قوية جداً، قد يحدث تسرب. أغلق الصنبور قليلاً. هل يحدث تسرب للماء من الصنبور؟ أصلح الصنبور. لا يتم تزويد الماء. هل قمت بالضغط على الزر تشغيل/توقف بعد تحديد تزويد الماء؟ في حالة عدم الضغط على الزر تشغيل/توقف، لن يتم تزويد الماء. اضغط على الزر تشغيل/توقف. هل الصنبور مغلق؟ افتح الصنبور. هل شبكة المصفاة الموجودة في خرطوم تزويد الماء مسدودة بأوساخ؟ نظف شبكة المصفاة بفرشاة أسنان. هل تم إيقاف تزويد الماء؟ في حالة توقف تزويد الماء، أغلق الصنبور وافصل التيار.
حدث عملية الدوران ضجيجاً واهتزازات.	<ul style="list-style-type: none"> تحقق مما إذا كان قد تم توزيع الغسيل بالتساوي في الغسالة. وزع الغسيل بالتساوي وابدأ تشغيل الغسالة مرة أخرى. تحقق مما إذا كانت الغسالة مستوية على أرض ثابتة ومسطحة. اجعل الغسالة مستوية. هل المقابض الخاصة باستواء الأرجل غير مربوطة بإحكام؟ اضبط استواء الأرجل. هل يوجد حول الغسالة مواد غير ضرورية؟ أبعد تلك الأشياء غير الضرورية عن الغسالة.

4_هل الغسالة لا تعمل؟

المواصفات

WA95V3 و WA90V3

٦٠ لتر	عالي	مستوى الماء القياسي	٣٣٠ وات	غسيل	استهلاك الطاقة
٥٤ لتر	متوسط		٢٤٠ وات	تنشيف	
٤٥ لتر	منخفض		العرض ٥٤٠ × العمق ٥٦٠ × الارتفاع ٨٥٢ (قاعدة منخفضة) العرض ٥٤٠ × العمق ٥٦٠ × الارتفاع ٩٠٤ (قاعدة مرتفعة)	الأبعاد (م)	
٢٨ لتر	حد أدنى		٣١ كجم	الوزن	
١٦٠ لتر	استخدام الماء		٠.٧٨~٠.٠٥ مللي باسكال (٠.٥ ~ ٨.٠ كجم / قدم ^٢)	ضغط الماء	
٧٢٠ لفة في الدقيقة	سرعة التنشيف		نوع الحركة	نوع الغسيل	

WA85V3 و WA80V3

٥٧ لتر	عالي	مستوى الماء القياسي	٣٣٠ وات	غسيل	استهلاك الطاقة
٥٢ لتر	متوسط		٢٤٠ وات	تنشيف	
٤٤ لتر	منخفض		العرض ٥٤٠ × العمق ٥٦٠ × الارتفاع ٨٥٢ (قاعدة منخفضة) العرض ٥٤٠ × العمق ٥٦٠ × الارتفاع ٩٠٤ (قاعدة مرتفعة)	الأبعاد (م)	
٢٧ لتر	حد أدنى		٣١ كجم	الوزن	
١٥٠ لتر	استخدام الماء		٠.٧٨~٠.٠٥ مللي باسكال (٠.٥ ~ ٨.٠ كجم / قدم ^٢)	ضغط الماء	
٧٢٠ لفة في الدقيقة	سرعة التنشيف		نوع الحركة	نوع الغسيل	



هل لديك أسئلة أو تعليقات؟

أوقم بزيارة موقعنا على الإنترنت على	اتصل بـ	البلد
www.samsung.com/ae	800-SAMSUNG (726-7864) 8000-4726	U.A.E

كود رقم DC68-02594J__AR