
ZEBEX INDUSTRIES INC.

Handheld Computer

Z-2065 series

(Version 3.00)

User's Manual

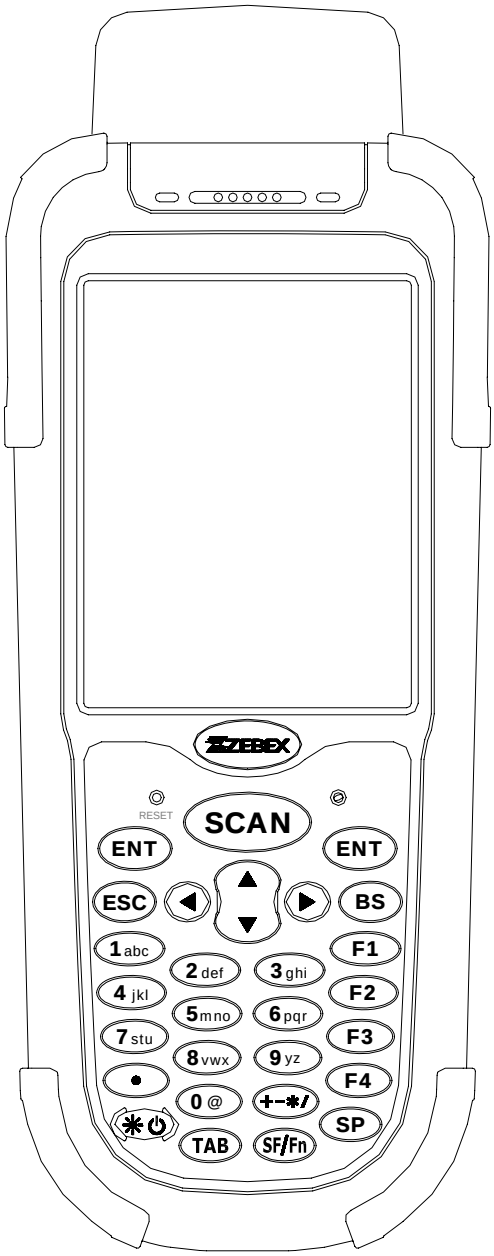

ZEBEX INDUSTRIES INC.

WWW.ZEBEX.COM

Editorial Record

Version	Date of edited	Page	Content
Ver 2.00	2009/3/2	9	Revise the picture of Package contents
Ver 2.00	2009/3/2	10	Revise the picture of Cradle Package
Ver 2.00	2009/3/2	11,12	Revise the picture Purchaseable accessories
Ver 2.00	2009/3/2	26~52	Adding the instruction of Using PowerPack
Ver 2.00	2009/3/2	53~56	Adding the picture of How to order
Ver 3.00	2010/1/25	26~49	Updated PowerPack Functions and pictures
Ver 3.00	2010/3/16	30~39	Adding GPRS User Manual
Ver 3.00	2010/3/19	1~26	Adding New Photo for Z-2065

Table of Contents

Preface
- About This Manual 5
  - Symbols used in this manual 5
- Copyright 6
- Safety Information 6
  - Laser Safety 6
  - Safety Operation 7
  - Federal Communication Commission (FCC) Statement 8

Unpacking
- Package Contents 9
- Optional Parts 10
  - Cradle package 10
  - Purchaseable Accessories 11
- General Guide 13

Getting Start
- Inserting the Battery 15
- Remove the Battery 15
- Charging the Battery 16
  - Charging by cable 16
  - Charging by cradle 16
  - Charging the battery separately in the cradle 17
- System Reset 19
  - Using the Warm reset function 19
  - Using the Cold reset function 19
- PC System Requirements 20
- Connecting To a PC 20
  - Connecting via the RS232 20
  - Connecting via USB Cradle 21
  - Connecting the Z-2065 directly via USB ..... 錯誤! 尚未定義書籤。
- Inserting SD Card 22
- Remove the SD Card 22
- About The Product 23
  - Prerequisites 23
  - Specifications 24

Using Barcode Scanner
- Scanning Barcodes 25

Using RFID Scanner
- Scanning RFID 26

UZEBEX Hand-Held Terminal GPRS User's Guide
- Making New Connection 30
- Set Connection Properties 32
- Phone Number 34
- Set Dial Properties 35

Connect to GPRS Service 37
Disconnect GPRS Service 39

Using Zebex Power Pack
Backlight 40
Calculator 42
File Transfer 43
File Transfer Operation 44
Preload Manager 46
Preload Operation 47
Switch 50
Scan Manager 52
Backup/Restore 56
Firmware Information 58
Function Key Manager 59

How to order 64

Preface

About This Manual

Thank you for your purchase of the ZEBEX Z-2065 series handheld computer. ZEBEX Z-2065 series product is at the forefront of handheld computer technology, and this manual will provide the necessary information on the many and varied options available to you.

The Z-2065 series product is a compact, ergonomic and durable handheld computer. It is designed with an integrated 802.11b/g wireless communication, 1D/2D barcode scanner, touch screen and 29-keys keypad. The design is complies with IP64 regulations and ideal for the mobile worker as it simple and easy to use anywhere along a supply chain.

Symbols used in this manual

	A triangular shape indicates you should exercise caution.
	A circle shape indicates something you should not to do.
	A black circle indicates something you must to do.
	A note symbol indicates you the information that is important and you should be observed.

Copyright

ZEBEX Industries Inc. makes no warranty of any kind with regard to this material. Including but not limited to the imply warranties of merchantability and fitness for a particular purpose. ZEBEX Industries Inc. shall not be liable for errors contained herein or for incidental consequential damages in connection with the furnishing, Performance or use of this product.

ZEBEX Industries Inc. will be under no liability in respect of any defect arising from fair wear and tear, willful damage, negligence, abnormal working conditions, failure to follow the instructions and warnings, or misuse or alteration or repair of the products without written approval.

No part of this document may be reproduced, transmitted, stored in a retrieval system, transcribed or translated into any language or computer language in any form or by any means electronic, mechanical, magnetic, optical, chemical, manual or otherwise, with express writ- ten consent and authorization.

We reserve the right to make changes in product design without reservation and without notification. The material in this guide is for information only and is subject to change without notice.

ZEBEX is a registered trademark of ZEBEX INDUSTRIES INC.

© Copyright 2008 ZEBEX.

Safety Information

Your safety is of the utmost importance so please observe and follow the following guidelines that allow you to use the scanner in a safe and responsible way.

Laser Safety

The Z-2065 series handheld computer complies with safety standard IEC825-1(1993) for a Class 2 laser product. It also complies with U.S.21CFR1040 as applicable to a Class II laser product. Avoid staring at direct laser light as the laser beam may hurt your eyes.



LASER BEAM

Never look directly into the laser beam. Doing so can cause serious eye damage.

Safety Operation

WARNING



Disassembly and Modification

Never try to disassemble or modify the device in any way. All servicing should be carried out by qualified Zebex personnel or Zebex- approved engineers.



Interior Parts and Components

Never touch interior high voltage parts or components. Doing so creates the danger of electrical shock.



Drop and Knock the Device

Be careful when using the device; do not drop or knock the device as irreversible damage to the unit may occur.



Extreme temperature

Do not operate the device under extreme temperature.



Battery and Charger

The use of third-party battery or charger may either damage the device or shorten the life of the device.

CAUTION



Dropping and Damage

Should the drop the device and damage it, immediately turn off the power and contact your original dealer or an authorized ZEBEX service provider. Continued use creates the danger of fire and electrical shock.



Abnormal Conditions

Should the device become hot or start to emit smoke or an original dealer or an authorized ZEBEX service provider. Continued use creates the danger of fire and electrical shock.



Foreign Objects

Should any foreign matter ever get into the device, immediately turn off the power and contact your original dealer or an authorized ZEBEX service provider. Continued use creates the danger of fire and electrical shock.



Moisture

Keep the device away from vases, planters, cups, glasses and other containers of liquid. Also keep it away from metal. Water and metal getting into the device creates the danger of fire and electrical shock.

Federal Communication Commission (FCC) Statement

You are cautioned that changes or modifications not expressly approved by the part responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in the accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC RF Radiation Exposure Statement


This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End users must follow the specific operating instructions for satisfying RF exposure compliance. This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

Unpacking


Package Contents

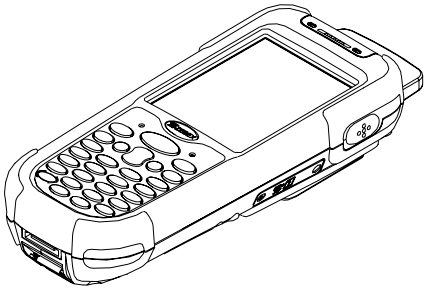


Z-2065 series
Mobile Data Terminal

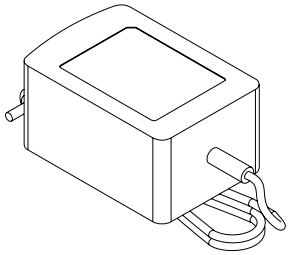


AC Adapter

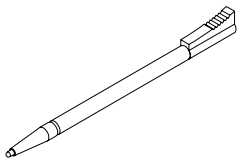


Stylus Pen

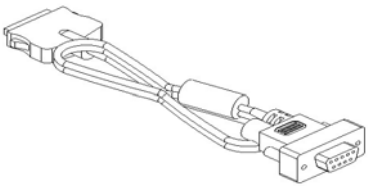


RS-232 DB9 (F) Cable

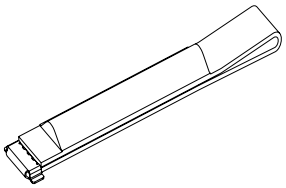

Hand Strip

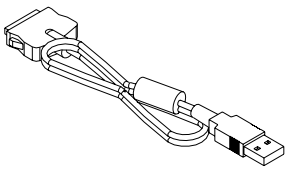

USB cable
(Terminal connect to PC USB port)

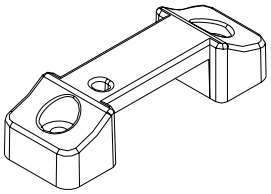

Hand strip Holder




Battery Pack




Sling for stylus Pen

Optional Parts


Cradle package

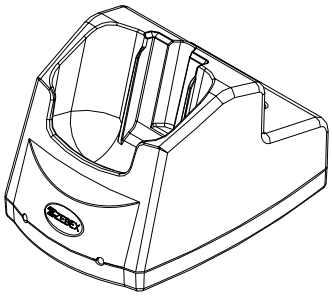


Docking Cradle

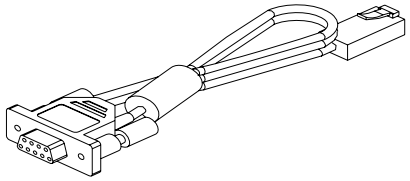

RS232 cable

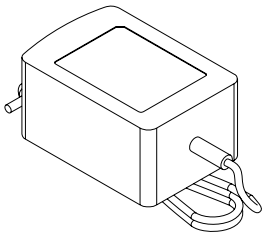


AC Adapter

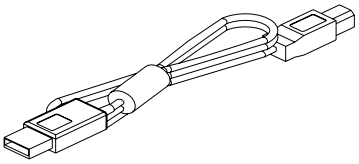


USB cable
(Cradle to USB)


Purchaseable Accessories

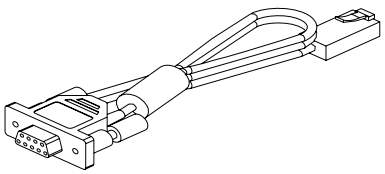


RS232 Cable

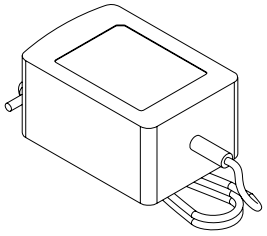


AC Adapter

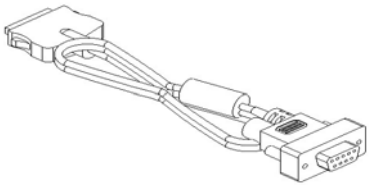


RS-232 DB9 (F) Cable

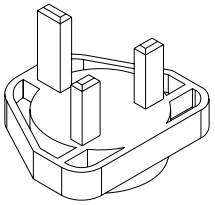


Britain Plug head

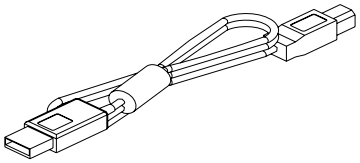


USB cable (Cradle to USB)

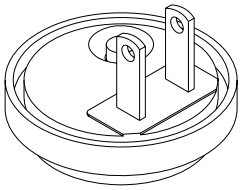


U.S. Plug head

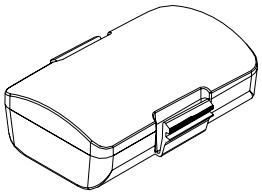


Battery Pack

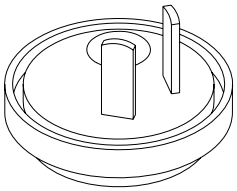


Australia Plug head

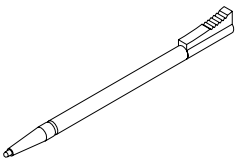


Stylus Pen

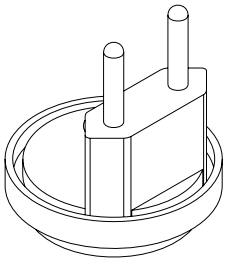


Europe Plug head

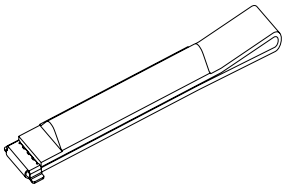

Hand Strip for stylus Pen




Sling for stylus Pen

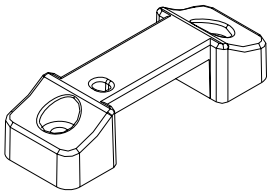


Hand strip Holder

General Guide

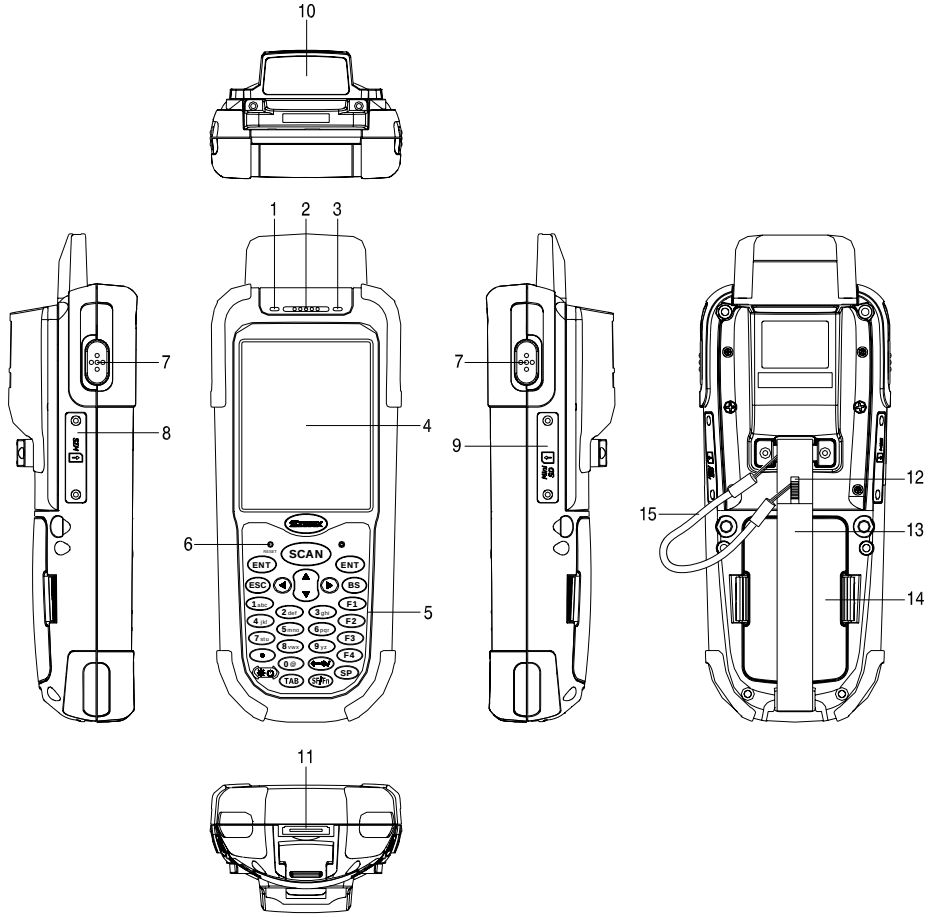

1	LED indicator	Indicates the status of read bar code or battery charge : Green for successful read barcode or full charge of battery. Red for battery just on charging.
2	Buzzer	Outputs operation confirmation tones.
3	LED indicator for WI-FI	Flashes in red when operating via WLAN communication
4	LCD screen	Display various data when a program is being run.
5	Stroke keys	A total of 29 keys are provided to turn power ON or OFF and other operations.
6	Reset switch (inside the hole)	Use reset needle (take off the other side of stylus pen cover) to press the RESET switch located inside the hole.
7	Scan button	For Barcode reading.
8	Mini USB port	This port is for USB communication with PC.
9	Ear Jack	Listens to the voice.
10	Mini SD I/O card slot	Install the Mini SD I/O card
11	Scan windows	Emits a laser for bar code reading.
12	RS-232 port	This port is for RS-232 communication with PC
13	Stylus pen	For touch screen operation and press RESET switch.
14	Hand strip	Protects the Handheld Terminal to drop.
15	Battery	Main battery
16	Sling	Sling for stylus pen

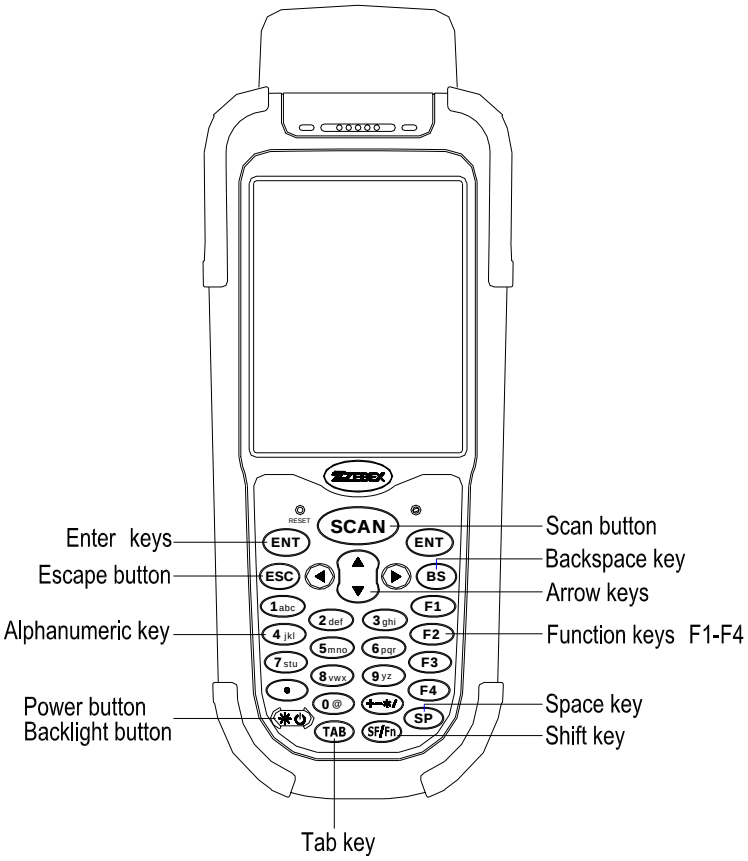


Arrow	Arrow keys	Press these to move around the screen.
ENT	Enter key	Press to confirm entries or commands.
0-9	Alphanumeric keypad	Press to enter numerical or alphabetical data.
F1-F4	Function keys	Press to access function keys 1-4.
BS	Backspace key	Press to move cursor and deletes the previous character each time.
	Power/Backlight on key	1. Press to turn the power on. 2. Press more then 3 seconds for turn the terminal power off and go into the suspend mode. 3. Press to turn the LCD backlight on when it is off.
ESC	Escape key	Press to perform a cancel action.
SCAN	Scan key	Press and hold to scan a barcode.
SF/Fn	Shift key	The key is used in combination with other keys to type special characters or perform other function keys. 1. Press after SF/Fn key and press Up key to turn the input method into upper alphabetical. 2. Press after SF/Fn key and press Down key to turn the input method into lower alphabetical. 3. Press after SF/Fn key and press Left or Right key to turn the input method into numerical. 4. Press after SF/Fn key and press F1-F4 key to perform F5 - F8 key.
TAB	Tab key	Press to add a tab indention.
SP	Space key	Press to add a space character.

Getting Started


Inserting the Battery

Insert the battery pack as shown and watch the battery direction..

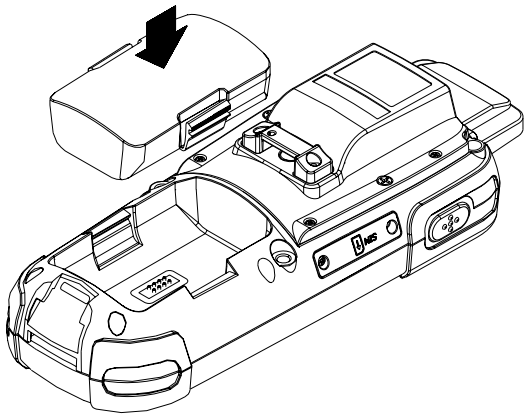

Remove the Battery

Push the side lock to pick up the battery pack.

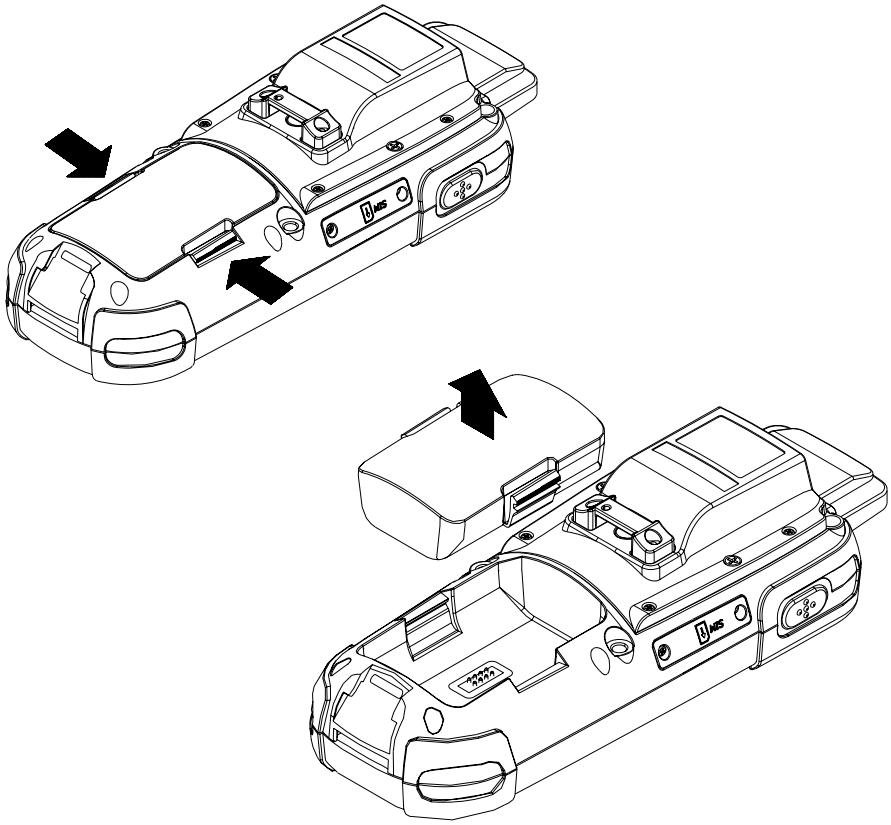


Charging the Battery


The Li-ion rechargeable battery can be charged while inserted in the device itself or independently via the recharging slot at the back of the cradle.

Charging by cable


Connect the charging cable and AC adaptor as shown.

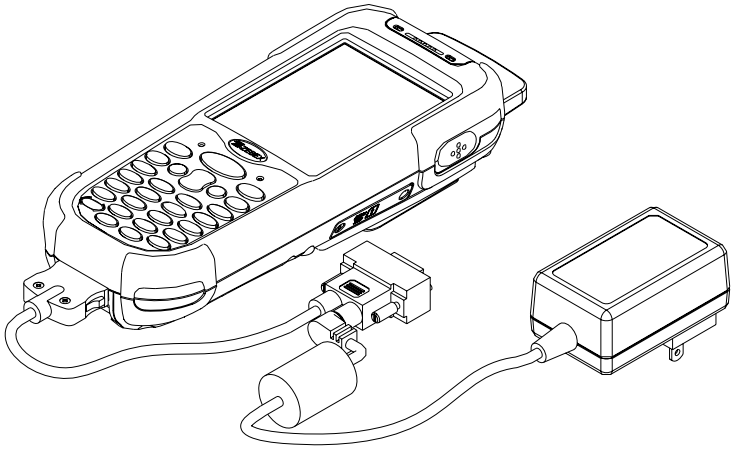

Charging by cradle

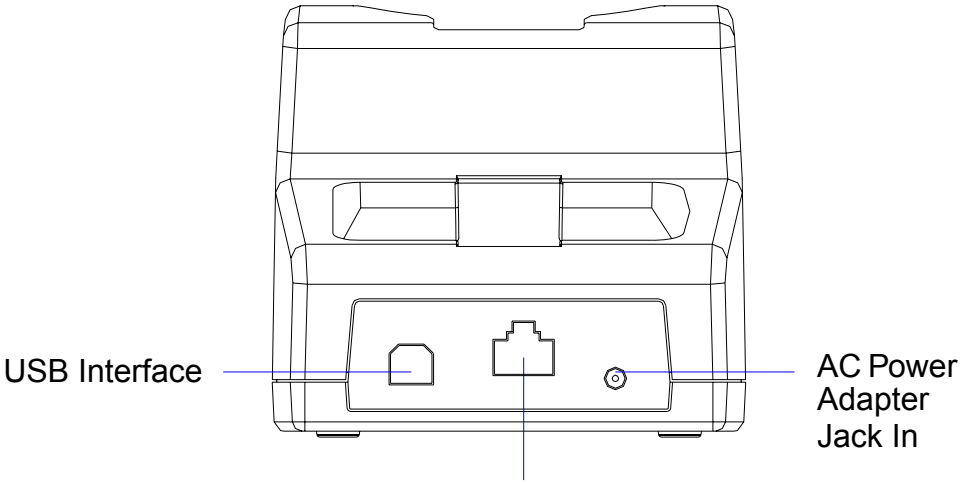

Cradle - rear view

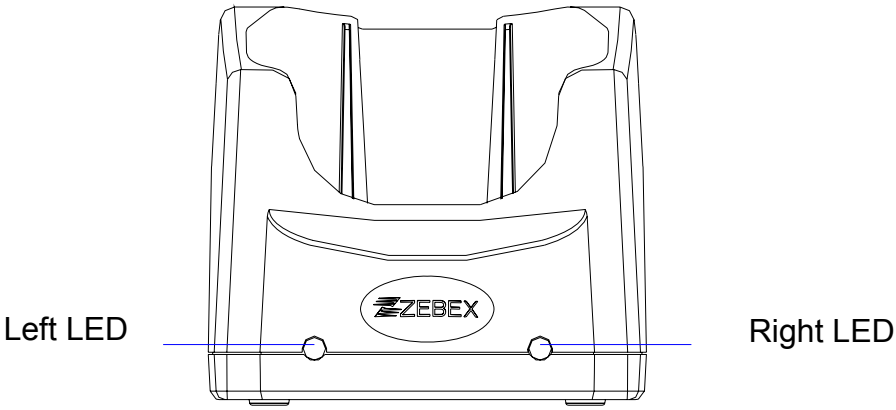

Cradle - front view


Cradle LEDs

Left LED - The LED lit when a battery is inserted into the rear battery slot of the cradle for recharge. It remains lit until the charge is complete.


Right LED - The LED lit when the cradle is connected to AC power.

Charging the battery separately in the cradle

Insert the battery into the compartment at the rear of the cradle.

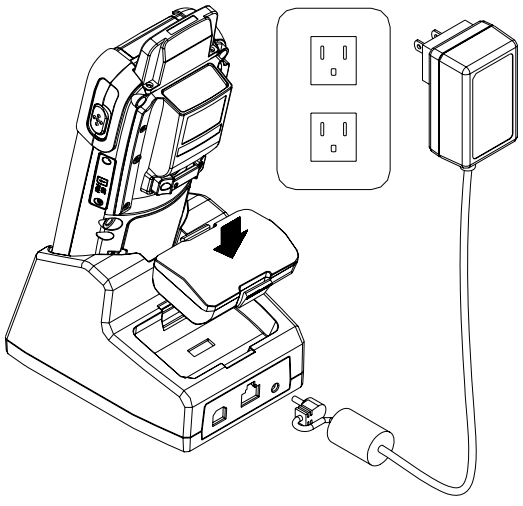

Connect the power jack to the cradle and plug AC adapter into the socket.

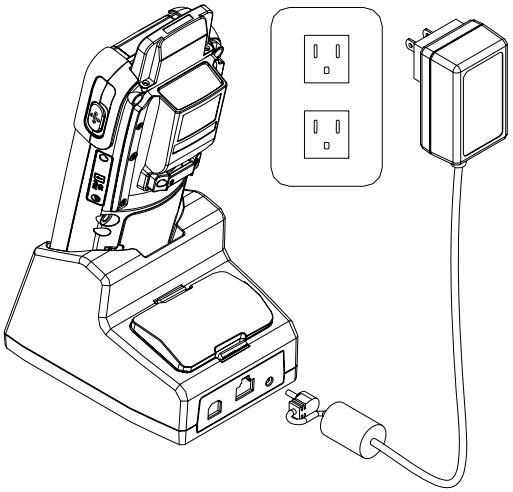

NOTES


When charging the battery for the first time, charge for at least 12 hours prior to use.

System Reset

Using the Warm reset function

Warm reset function allows you to return the device to the default settings, wile not wiping all data from the memory.

Insert the needle into the reset hole as shown and press down gently, to reset the device.

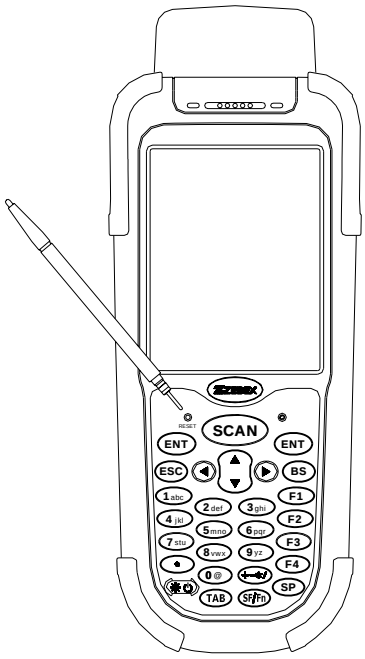

Using the Cold reset function

Cool reset function allows you to return the device to the factory settings, wile wiping all data from the memory.

Press down and hold the power key and Insert the needle into the reset hole to cold reset the device.

WARNING

Cold reset will erase ALL pre-configured data on the scanner. Check carefully to make sure you have uploaded all important files to your PC before proceeding with the reset.

PC System Requirements

Windows XP Operating System
64 MB RAM
50 MB free HDD space
Interface : USB / RS-232 ports
WLAN transmitter (optional)
Bluetooth transmitter/receiver (optional)


Connecting To a PC

In order to use the software supplied with the Z-2065, the mobile data terminal must be connected to a PC.

Connecting via the RS232


In order for the sync software to work properly, the cradle must be connected to your computer's COM port. Attach one end of the RS232 cable to the RS232/COM interface connector on the cradle and the other to the COM1 port on your PC.

1. Or can use attach one RS-232 cable to connect with your computer's COM port directly.

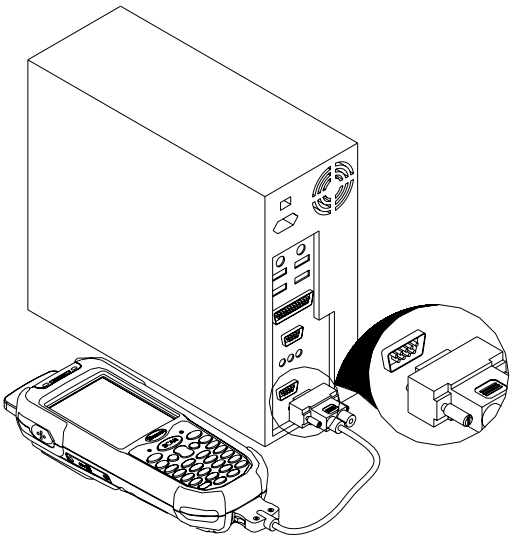


Connecting via USB Cradle

The cradle must also be connected via one of your PC's USB ports. Attach one end of the cable to the USB interface on the cradle and the other to your PC.

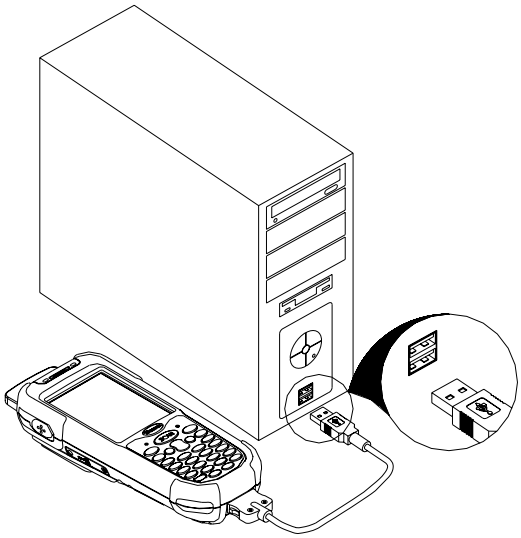


Inserting SD Card

1. Make sure the power is turn off.
2. Open the SD Slot cover as shown, Insert the SD card.
3. Close the SD slot Cover.

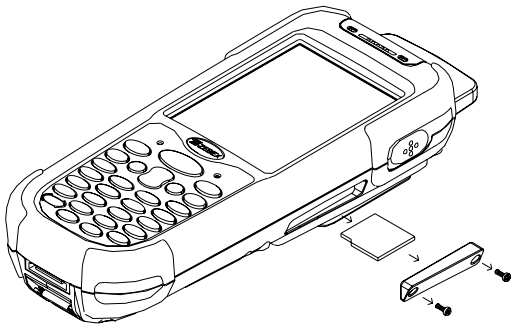

Remove the SD Card

1. Make sure the power is turn off.
2. Open the SD Slot cover as shown, Take off the SD card.
3. Closed the SD slot cover.

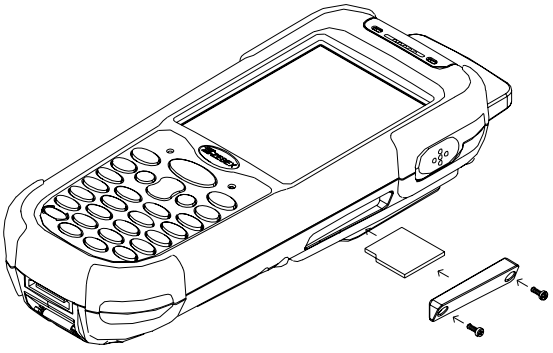

About The Product

ZEBEX Z-2065 WinCE.NET Handheld Computer comes with the one and only Jacket-module design, and makes most user friendly features to select as desired. The Jacket-module is a module at the back of device that is selectable in GPRS, GPS, RFID, WLAN or Bluetooth communications and 1D or 2D scanning engine, it satisfies all application from indoor to outdoor and from warehouse to transportation logistics. Z-2065 qualifies to use in most difficult environments with its rugged design with IP64 standard.

Further more, its round shape back deisgn allow it to sit in palm fitly for best operation comfort, and for future expansion, it has a gun grip design to broaden its application into more categories. Z-2065 has an unbeatable technology and ergonomic design that upgrades your with power.

Prerequisites

Skills Required

The following skills are required by developers aiming to develop application software for the ZEBEX Z-2065 series.

- Windows programming
- Good knowledge of one or more of the following:
  * Visual C++
  * Visual Basic .NET
  * Visual studio .NET
  * Visual C#
  * Active Server Pages and web programming

The following skills or experiences are also desirable.

- Windows CE devices
- ActiveSync
- Something networking experience.

Hardware Required

The following models of the ZEBEX Z-2065 series and the dedicated options are available.

Available models and the features:

	Model	P/N (device only)	P/N(include accessory)	WLAN & BT(WL)	Barcode 1D	Barcode 2D(SE4500)	GPRS(G) 2.5G	GPS(S)	RFID(H) HF
1	Z-2065WL1	882-65W100-000	882-65W100-100	◆	◆				
2	Z-2065WL2	882-65W200-000	882-65W200-100	◆		◆			
3	Z-2065W1GS	882-65W1GS-000	882-65W1GS-100	◆	◆		◆	◆	
4	Z-2065W2GS	882-65W2GS-000	882-65W2GS-100	◆		◆	◆	◆	
5	Z-2065W1GSH	882-65G1SH-000	882-65G1SH-100	◆	◆		◆	◆	◆
6	Z-2065W2GSH	882-65G2SH-000	882-65G2SH-100	◆		◆	◆	◆	◆
7	Z-2065W1G	882-65W1G0-000	882-65W1G0-100	◆	◆		◆		
8	Z-2065W2G	882-65W2G0-000	882-65W2G0-100	◆		◆	◆		
9	Z-2065W1S	882-65W1S0-000	882-65W1S0-100	◆	◆			◆	
10	Z-2065W2S	882-65W2S0-000	882-65W2S0-100	◆		◆		◆	
11	Z-2065W1H	882-65W1H0-000	882-65W1H0-100	◆	◆				◆
12	Z-2065W2H	882-65W2H0-000	882-65W2H0-100	◆		◆			◆

Specifications

Model	Z-2065 series
System	
CPU	Inter PXA 270 processor (Max. 520MHz)
RAM	128 Mbyte
F-ROM	64 Mbyte
LCD Display	3.5”, QVGA 240 X 320 TFT color panel with touch screen
Operating System	Microsoft Windows CE.NET 5.0
Power Management	
Main Battery	3.7V5,000mAH Li-ion rechargeable battery
3.7V 2,200 mAH Li-ion rechargeable	3.7V, 120mAH, Li-Poly rechargeable battery
Battery Life	8 hours (without wireless communication activated)
Scanning Performance	
Scan Engine	Symbol SE-955 1D laser engine Symbol SE-4400 2D image engine (optional)
Light Source	650 nm visible Laser Diode
Scan Rate	100 scans per second
Print Contrast	30% @ UPC/EAN 100%
Decoding Capability	
Barcode Symbologies	UPC/ EAN/ JAN, Code 128/EAN 128, Code 39, Code 93, Interleaved 2 of 5, Discrete 2 of 5, Codabar, MSI/Plessey
Card Slots	1 x Mini SD I/O card
Communications / Interfaces	
Bluetooth	Bluetooth Class 2
IrDA	Standard IrDA 1.3
USB	USB 2.0
RS-232	Programmable up to 115,200 bps
WLAN	802.11b/g (optional)
Dimensions	190.5 mm (L) x82..8 mm (W) x 50.5 mm (H)

Weight	Approx. 480 g (battery included)
Environmental	
Operating Temp.	0°C ~ 50°C
Storage Temp	-10°C ~ 60°C
Operating Humidity	10% ~ 70% (non-condensing)
Storage Humidity	5% ~ 70% (non-condensing)
Drop Durability	Withstand 1.2m (4 feet) drop to concrete
Environmental Sealing	IP64 rated sealing
Regulatory Approvals	CE & FCC Part 15B, 15 C,CE RF,LVD,ESD
Cradle	Single slot USB / RS-232 charging cradle with spare battery slot
Software &Development	Microsoft VC 6.0 development environment Supports SDK for program development

Using Barcode Scanner

Scanning Barcodes


The Z-2065 is a highly versatile tool that can scan a wide range of barcodes but it is imperative that it is used in the correct manner.

To scan a barcode:

1. Hold the Z-2065 horizontally and point it directly at the barcode you wish to scan.

2. Once in the correct position, press the **SCAN** button.


An audible alarm is heard and the barcode digits will appear on the LCD screen if the scan is successful.

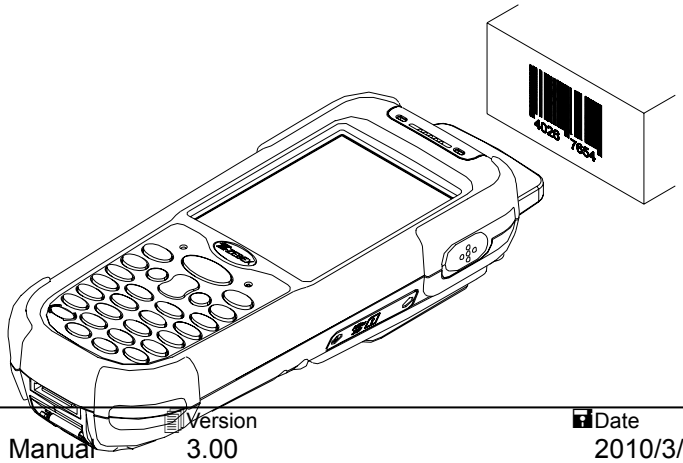


Using RFID Scanner (Optional)

Scanning RFID


To open Zebex RFID demo program, you can find program located on following path: "My Device\Flash Disk\RFID\RFID_ADJ\".

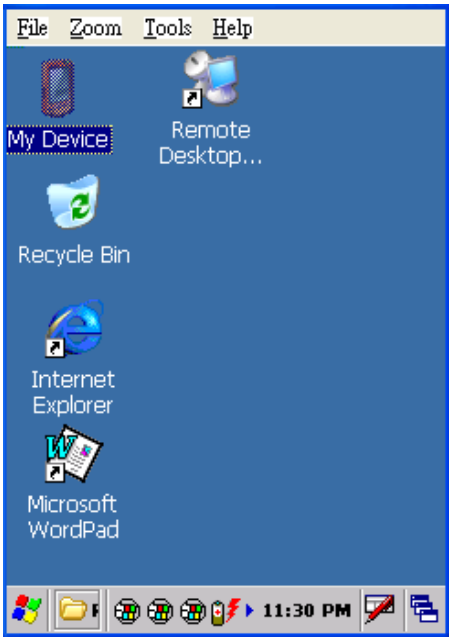

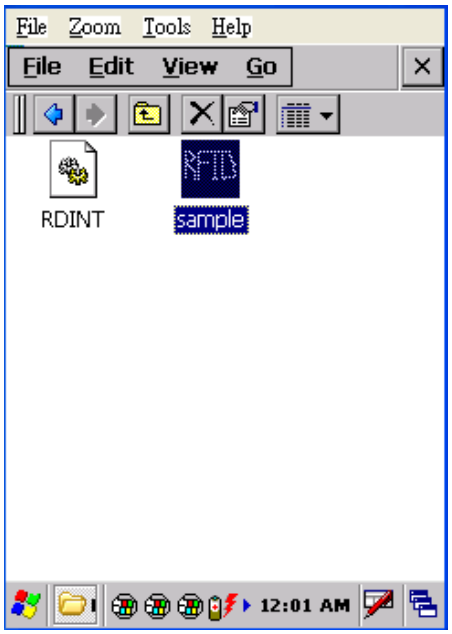

RFID Scanning Position

RFID scan module was installed in the back of terminals. The devices can read from 30 to 50mm distance from the back-side of terminals.

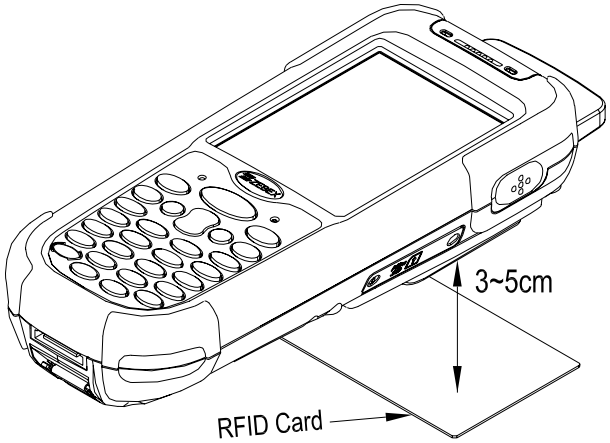


To scan a RFID


After opening Zebex RFID demo program, you will see main menu displayed as below. There are three main functionalities such as "Read UID", "RW

15693", and "RW Mifare". Please follow below steps to read UID.

Reading UID

1) Select COM port to reading UID, default setting was COM5. Then confirm by pressing " Open Port " button.
2) Select UID type, then confirm by pressing " Start " button. Demo program provide three UID types such as 15693, 14443A, and 14443B.
3) User can also adjust scanning rate by selecting how many msec for scanning once. Then confirm by clicking " Timer " button.
4) After scanning UID, it will be shown on column at the bottom of display. Data in column can be clear by pressing " Clear " button.
5) COM port can be stop by pressing " Close Port " button.
6) If user need to switch to another UID type, UID type by can be cancel by pressing " Stop " button. Then user can select another UID type as demand.

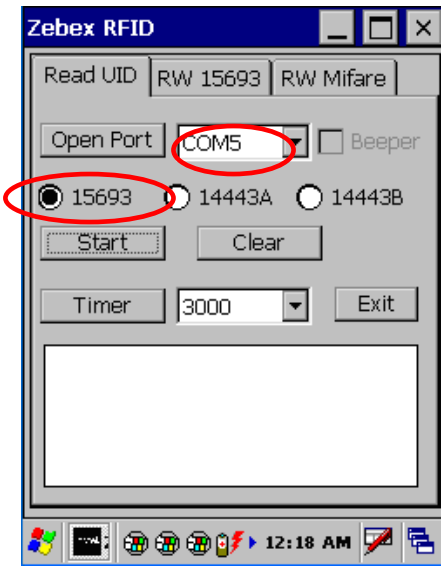

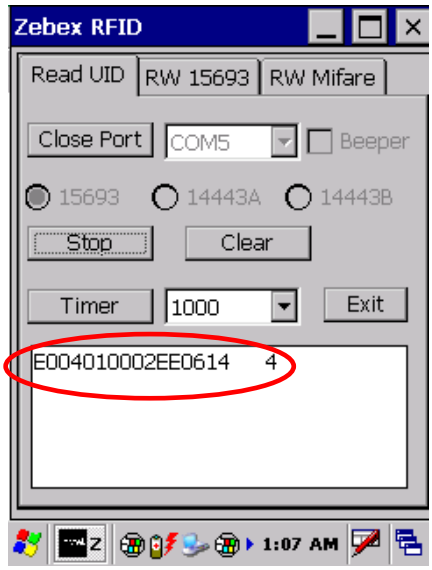


RW 15693

On RW 15693 function window, user can read and write information from RW 15693 UID card:

1) Set up protocol by pressing " SetProtocol " button, place UID card within valid range and press " CheckUID "button. The UID will display in the red circle of below diagram.
2) To read data from certain Block, first input the location in column next to Read Block. Then confirm by pressing " Read Block " button. Read Data will appear in column showed in green circle of below diagram.
3) To write UID from certain Block, first input the location in column next to " Write Block " button, then write the data into the longer column in blue circle. Confirm written

data by pressing " Write Block " button.

4) Information appear at bottom can be clear by pressing " Clear " button.

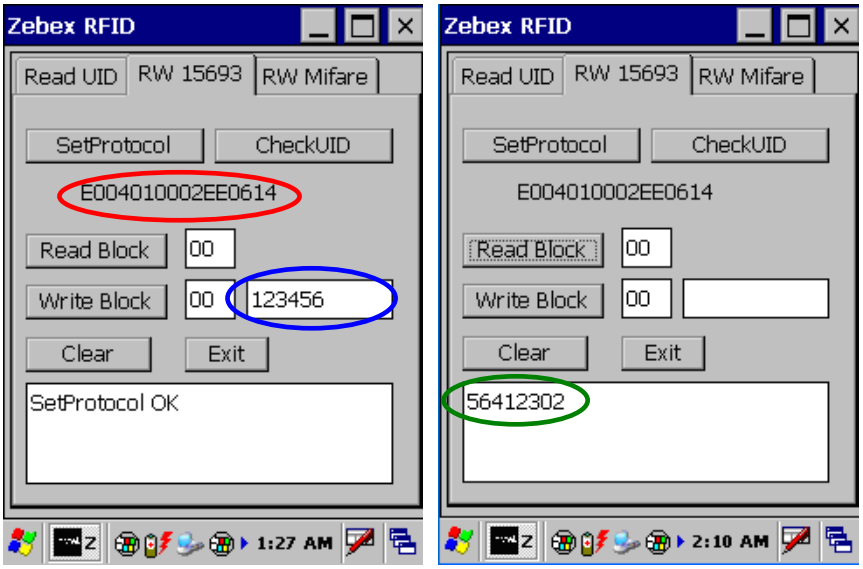


RW Mifare

On RW 15693 function window, user can read and write information from Mifare UID card:

1) Place UID card within valid range, check UID by pressing " Open Card " button. UID will display in red circle shown in below diagram.


2) To perform read and write commands, please refer to "**RW 15693"** sections.

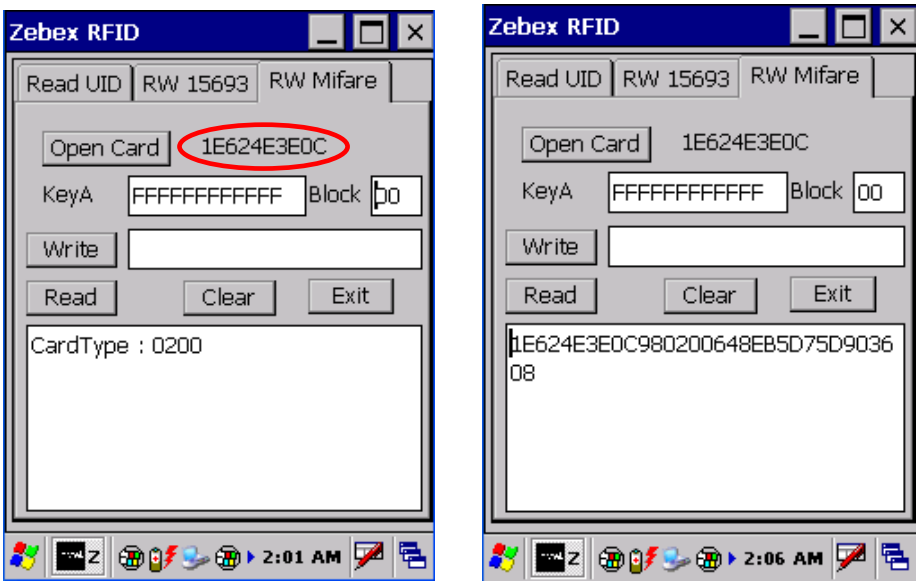

ZEBEX Hand-Held Terminal GPRS User's Guide


Make New Connection

1. Click **Network and Dial-Up Connections** in the settings.
Show as below figures.

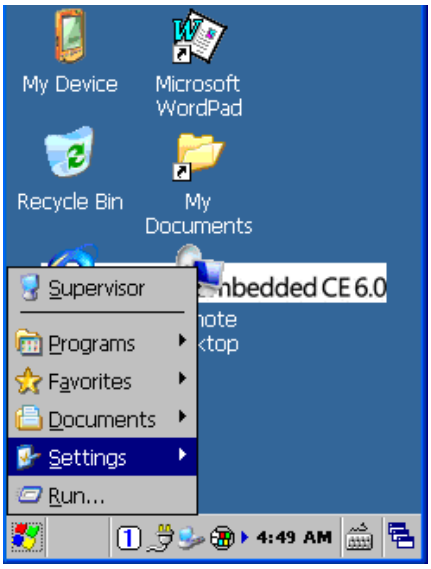





2. Click **Make New Connection** to create the new connection.
Show as below figures.

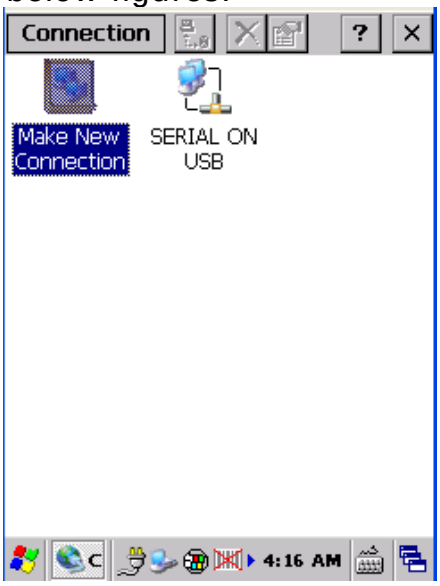

3. Select the **Dial-Up Connection** and press **Next** button to make new connection. Show as below figure.

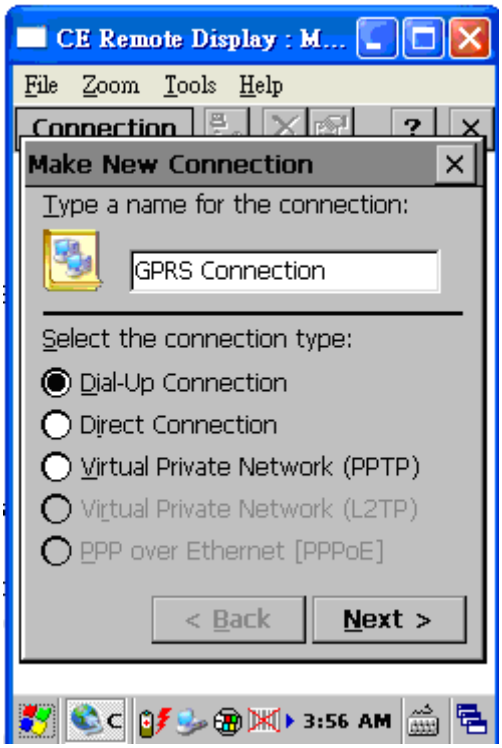


4. Press **Next** button to select the modem.

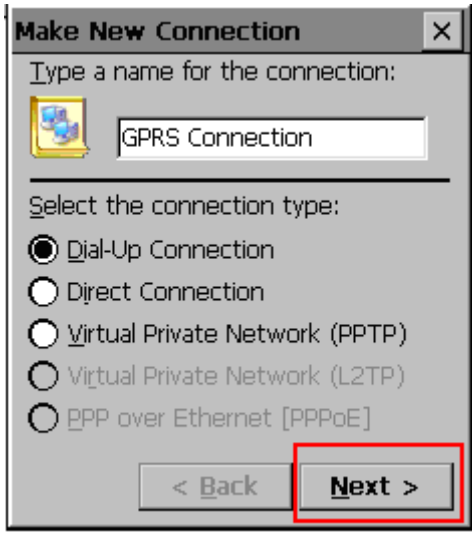


Set Connection Properties

1. Select **Internal GPRS Modem** and press the **Configure** button to change the settings of properties.

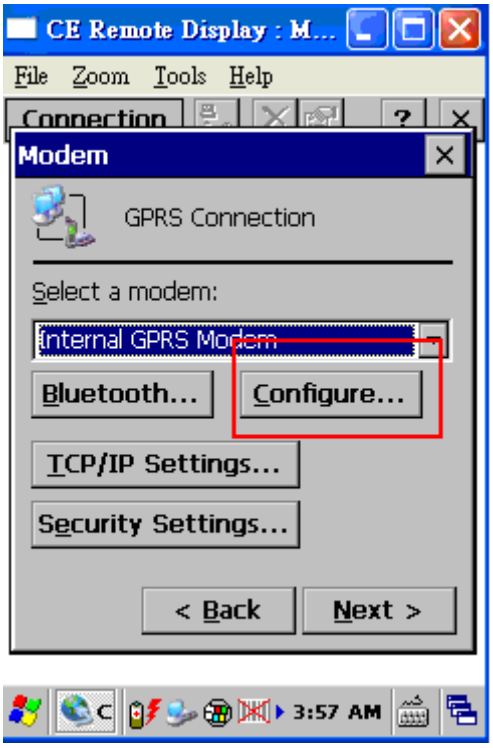

2. Change the **Baud Rate** to **115200** in Port Settings. Show as below figure.

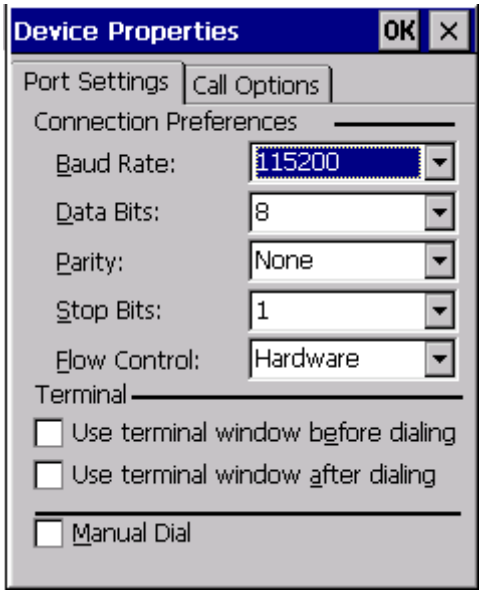

3. Input the dial string in Call Option. Show as below figure.


Input **+CGDCONT=1,"IP","APN"** to set the APN for GPRS connection. For the setting of known APN around the work, please refer below link:

http://www.quickim.com/support/gprs-settings.html



4. Press **OK** button to complete the settings.

5. Press **Next** button to set the phone number

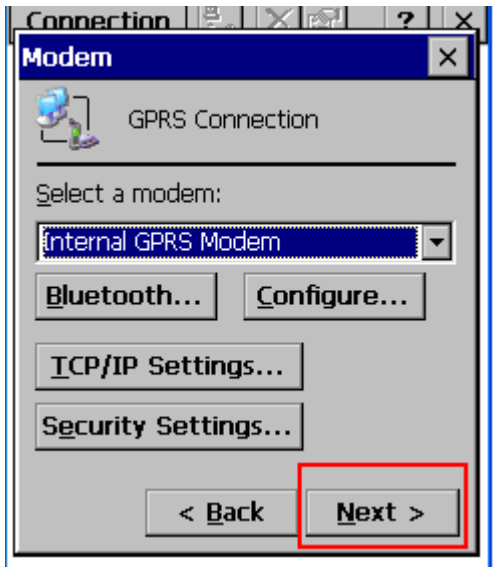

Phone Number

1. Set phone number to ***99#** or ***99***1#**. This number depends on the service provider. Show as below figure.




2. Press **Finish** button to finish the settings of new connection.





Set Dial Properties

1. Double Click the connection.

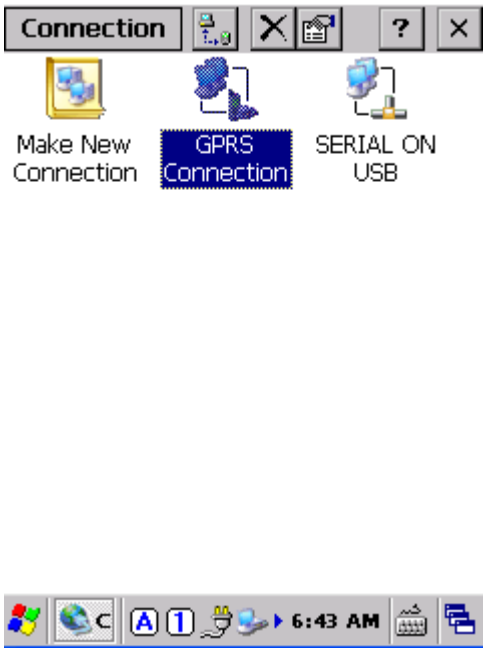





2. Press the **Dial Properties** button.



3. Create new one or select one setting in the **Location** and press the **Edit** button.

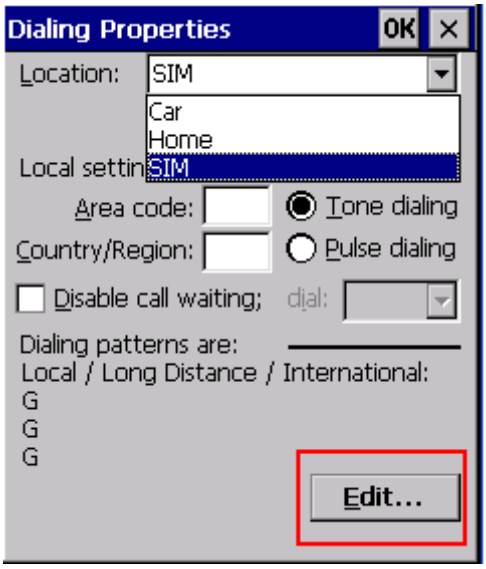

4. Set the **Dialing Patterns** as below figure.

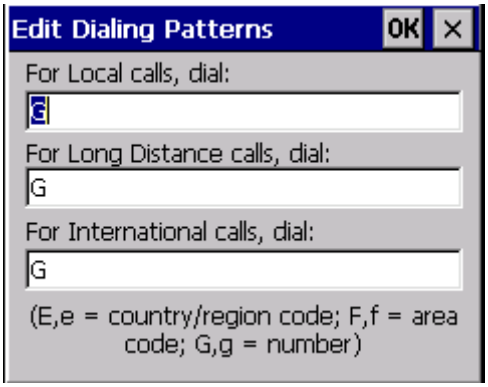

Connect to GPRS Service

1. Press the **Connect** button.



2. During the Dial-Up. It shows the status as below figure.




3. It shows below figure when connected to GPRS service.



Disconnect GPRS Service

1. Double click the connection icon in taskbar.

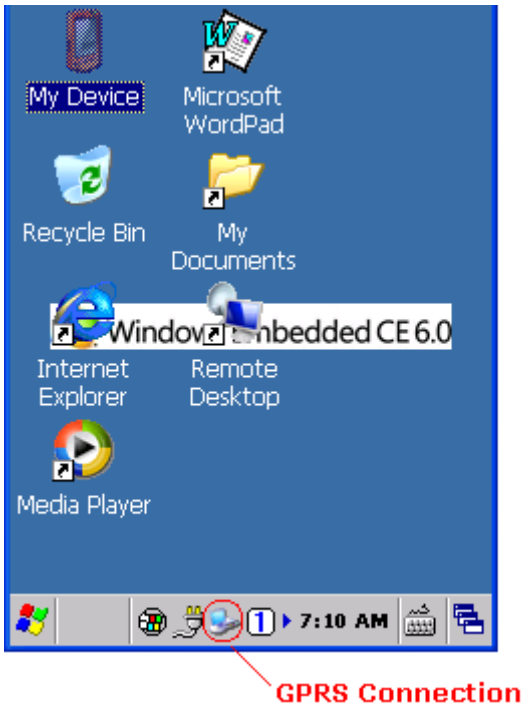

2. Press the **Disconnect** button.



Using the Zebex PowerPack

To save your time and effort in developing applications on Z-2070, ZEBEX provides it's owndesign system management tool to called "PowerPack" to let you control it directly.


The PowerPack management tools which installs in each of our WinCE product. It is free charge for you. We offer several function for let you control your device without any programming.


Backlight

This application is set up the Backlight of LCD Panel and Key pad. It allows operators to set backlight duration, and also backlight can be set up as On & Off.

The Backlight Setting screen including 3 parts:

1. LCD
2. Keypad
3. Brightness Control Bar

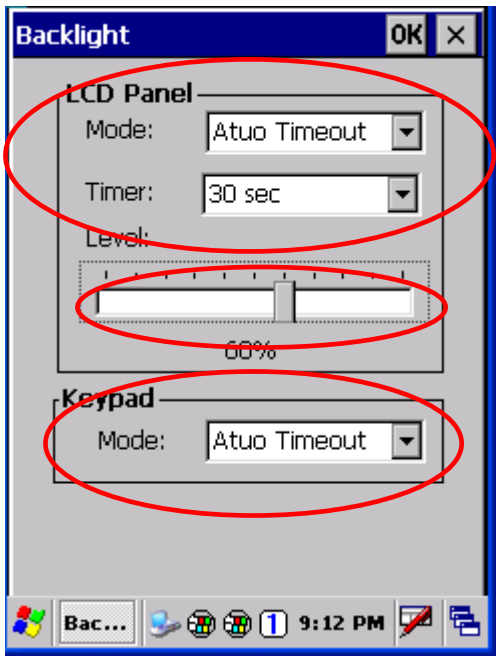

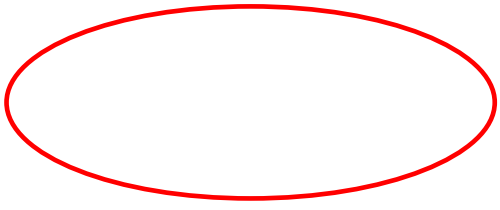



1. **LCD**
   The LCD backlight setting.

   Auto Mode: This function can be set up the LCD backlight to be auto off as Device hasn't been activated for certain interval.
   You can set up the Auto off time from 15 sec to 15 min.

   Always ON: This function can set up the backlight to be always on Until the system into suspend mode.

   Always OFF: This function can set up the backlight to be always off.

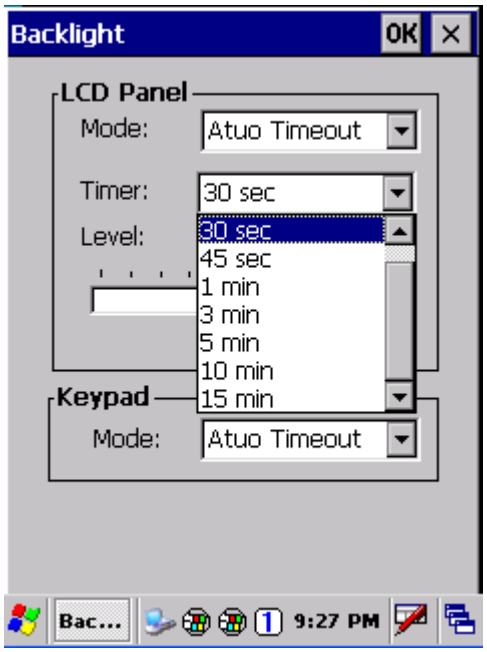

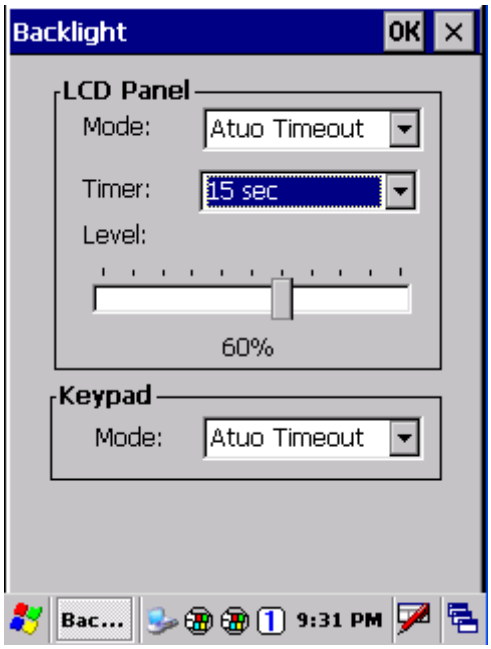

2. **Keypad**
   The Keypad Backlight setting.

   Auto Mode: This function can be set up the keypad backlight to be auto off as device hasn't been activated for certain interval.
   The interval of the time for auto off was fixed on 5 seconds.

   Always ON: This function can set up the keypad backlight to be always on until the system into suspend mode.

   Always OFF: This function can set up the backlight to be always off.

3. **Brightness Control Bar**
   The brightness of the backlight can be changed via control bar. Put up to light and put down to dark.

Calculator

This calculator function allows operators to add, subtract, multiply, and divide that simply provide basic logistic function in our daily basis.

The upper zone of the display area displays the memory content, and the lower zone is key pad.




Button description:

MC : Clear buffer of memory.
MR : Got the value of buffer.
MS : Storage the value to buffer.
M+ : Append the value to the buffer.
CE : Clear the display area to “0”, but keep the value in buffer.
C : Clear the display and the buffer of memory.
+/- : Change the value sign form Plus to Minus or Minus to Plus.
0~9 : Numeric key.
/ : Division function.
∗ : Multiplication function.
— : Subtraction function.
+ : Addition function.
. : A decimal point of dot.
= :To be equal to, The amount.

File Transfer

File Transfer is a simple file transferring function tool, the tool can transfer file to another devices via blue tooth. Communication agreement of file transferring was adopted with OBEX agreement which shared with cell phone or Notebook PC. So you can simply use this function to transfer file to cell phone or Notebook PC, or doing file transferring between two terminals.

File Transfer is capable to auto-search devices with Bluetooth communication, so all devices within valid range will be listed in window of **"1. Select Remote Device."**

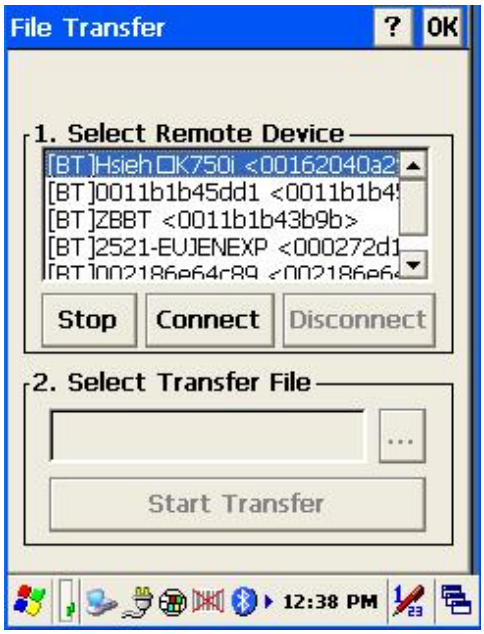

Function Instructions:

1. Select Remote Device

All devices with Bluetooth Communication functions are listed on the display.

Query	**:**	**For searching usable devices.**
Stop	**:**	**Stop searching.**
Connect	**:**	**For connecting with one device.**
Disconnect	**:**	**For disconnecting with current devices.**

2. Select Transfer File


Select file need to be transferred, press ... bottom for selecting file.


Start Transfer	**:**	**Start transferring file to targeted devices.**

Ex. File Transferred Operation By Using Bluetooth


1. **File Transferring by using Bluetooth:**
   Make sure Bluetooth devices was activated, Bluetooth Communication devices can be activated under Switch Function within PowerPack software utilities**.**

   1.1 Select "**Query** " for searching Bluetooth devices, below window will pop up on display.

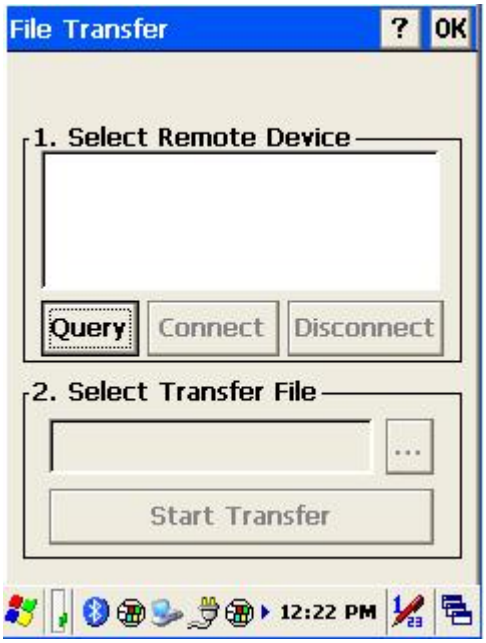

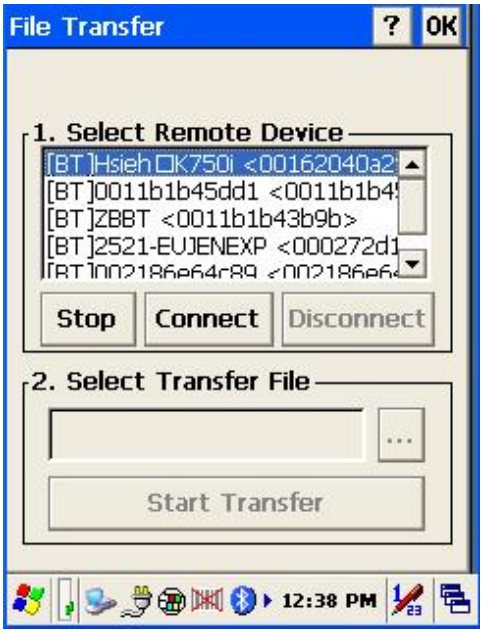


   1.2 Select Bluetooth devices for receiving file, select " **Connect** " for connecting with devices, or select " **Disconnect** " to disconnect with current devices.

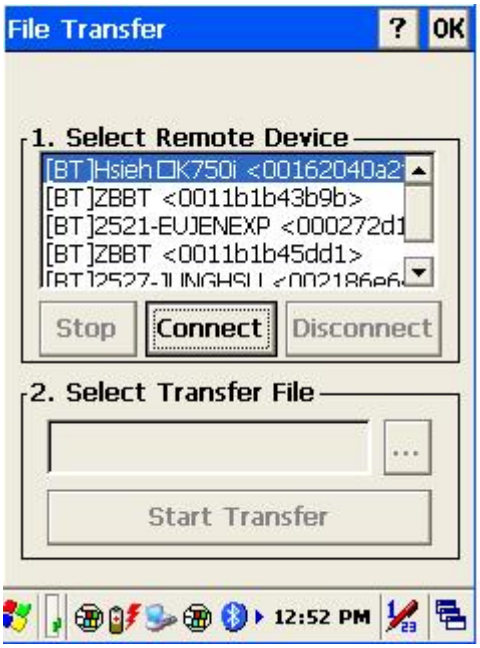




1.3 Click " **...** " bottom to select the file need to be transferred, then click " **OK** " bottom to confirm.

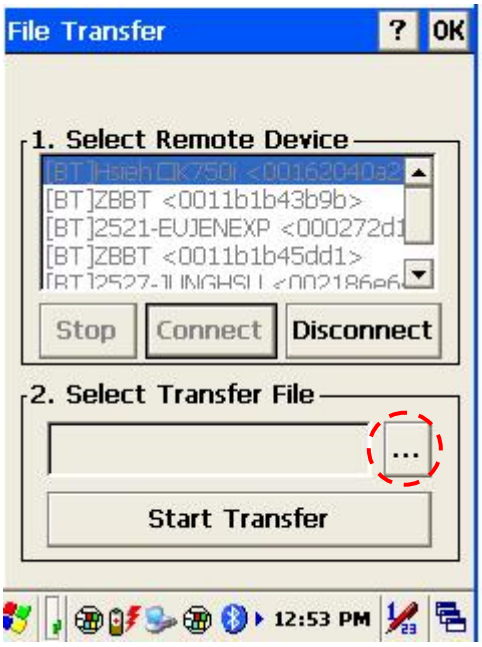




1.4 Select " **Start Transfer** " bottom to start file transferring.

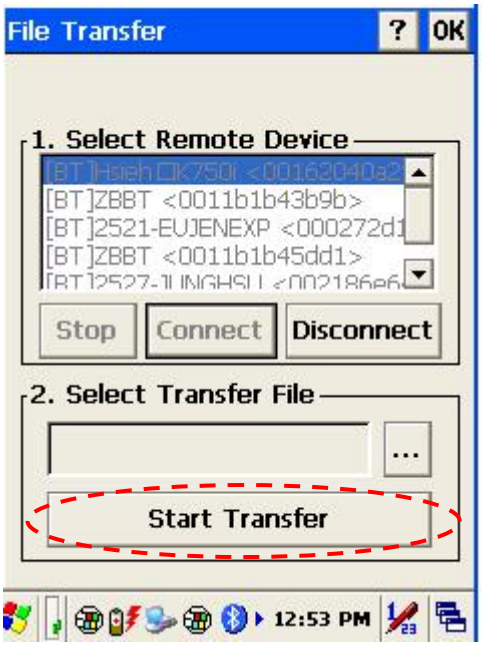




Preload Manager

The Preload Manager is an auto execution program for ZEBEX's WinCE device. You may set programs into the Preload list box and running the program by automatically or manually.

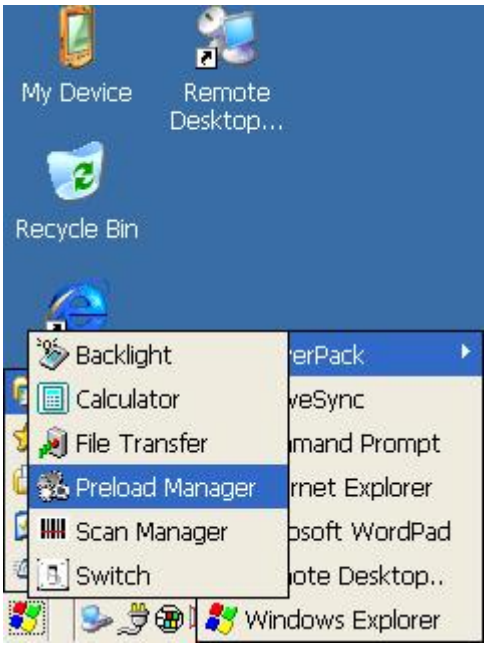

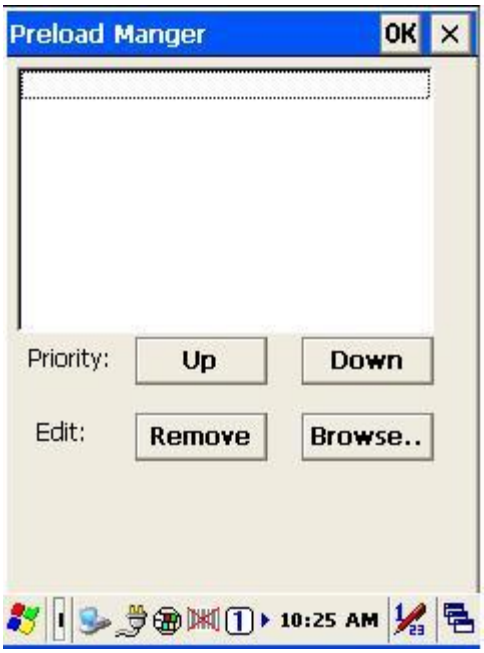

1. Modify Window located on top of display, providing functionalities of Priority, Remove and Browse.
2. Priority : Providing "**UP** "and "**DOWN** " two bottoms for adjusting priority on the lists.
1. Edit：Providing "**Remove** " 與 "**Browse..**" two functionalities，below are instructions:
   Remove：Deleting selected functionalities.
   Browse.：Selecting program for preloading, files can be selected from window by clicking Browse bottoms.

Preload Operation

1. Selected Program：

1.1 By clicking "**Browse..**"，Below menu will appear, select preload program by using folder. Programs can be selected more than once.





Confirming file by clicking "**OK**" will get back to Preload Manager main page. Then complete its process.





2. Reset preload priority：


If the preload priority need to be set up as below：


(1)play music -> (2)open explorer -> (3)check everything

Follow steps listed below :

2.1 Select by clicking play music.exe program and click" **Up** " bottom, Therefore, play music.exe will be shifted up.

2.2 Then select by clicking check everything program and click "**Down**" bottom. Therefore, check everything program will be shifted down.

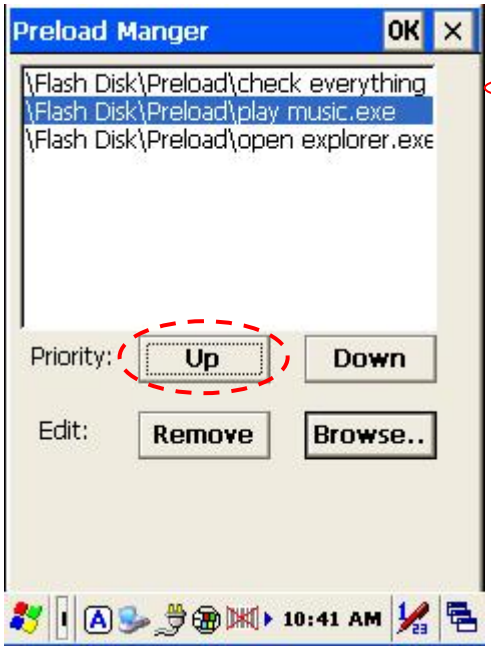

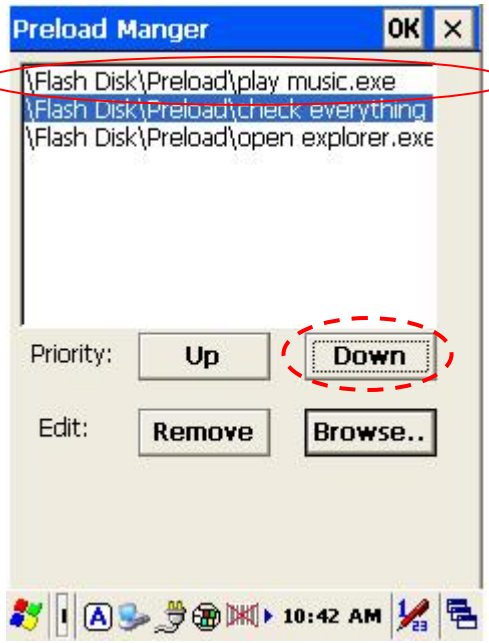



3. Remove a program:

In order to remove “open explorer” program, select by clicking program, then select “Remove” by clicking on bottom to finish command.






Switch

The WiFi & Bluetooth switch utility. This application provides as a switch function to let you easy turn on or off the function and power for WiFi and Bluetooth interface. Window for setting up Wifi will pop up by double-clicking small icon within red circle which shown as below diagram.



Under the content of “Profile”, the available wireless network access point will be searching by clicking “ Scan ” button. You can select an access point and press “ Configure ” button to connect with that network.




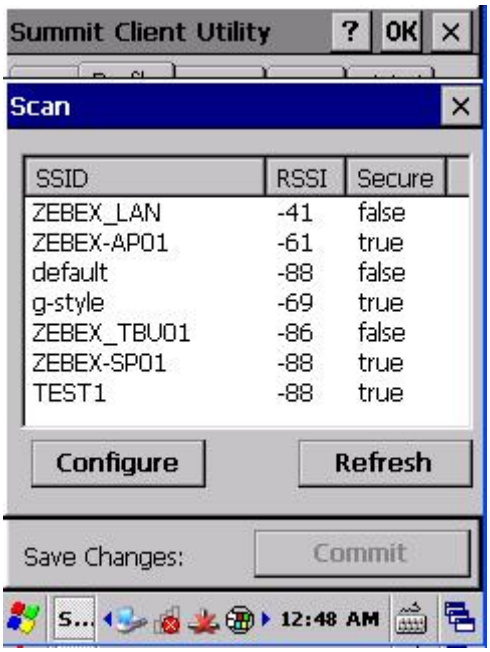


Existing access point can also be selected from Edit Profile shown as below diagram.



Under content of main menu, existing profile (WiFi) can be set up as Auto Profile. Existing Profile lists can be viewed existing profile by clicking " List " button, check profile and click on " OK " button. Select "On" from Auto Profile menu to complete Auto Profile setting.

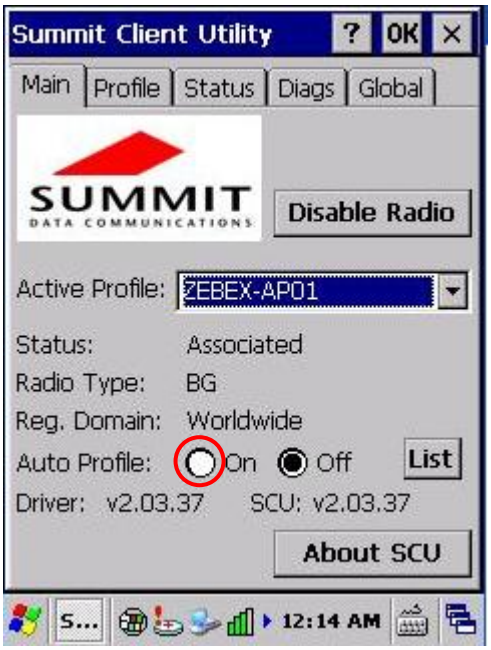


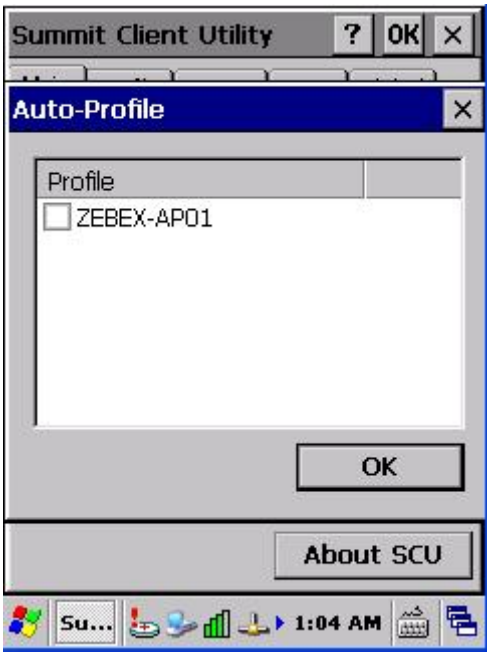

TrayScan


The TrayScan program is a barcode reader set up program, it offer you an easy way to enable or disable the barcode scanner, and also offer you to set up each barcode symbolic properties.

.

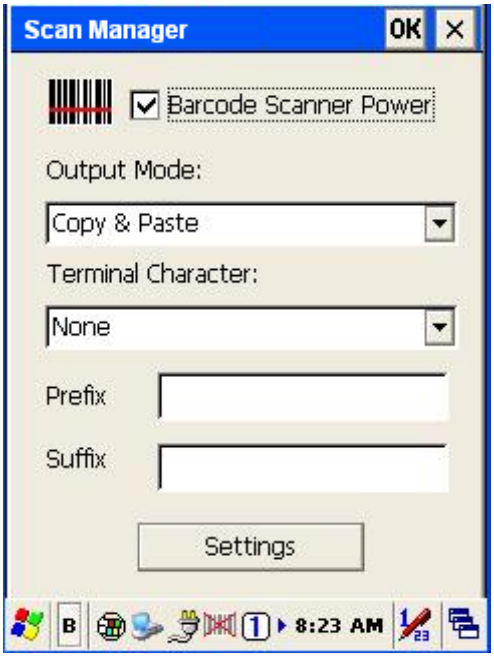

Below are instructions of functions on main page:

1. Output Mode
   Providing three output methods such as Copy & Paste / Key Emulation / None (Copy to Clipboard).

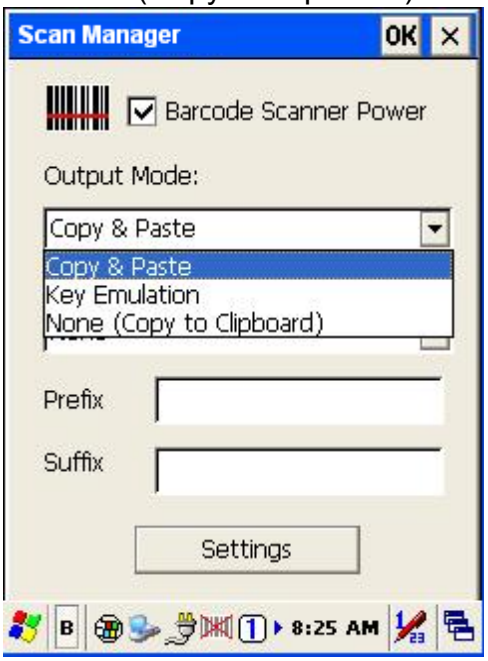

1.1 Copy & Paste

Copy and paste the barcode information into application that need to execute data as input. (ex. WordPad），

1.2 Key Emulation


Transfer barcode information via Key Emulation to executed software's edit window. Key Emulation function can also be used for barcode scanning under conditions of Terminal Emulation, Command Promp and some other program without touch panel. Read data will be transferred to application program.

1.3 None(copy to clipboard)

Function provide required barcode information to application program, after this function was activated, scanner will read barcode information and save data into clipboard.

2. Terminal Character

Set the terminator control code with barcode data. We offer "Enter", "Space", "Tab", and "None" for selections. Terminator control code will be sent every time when barcode was read.

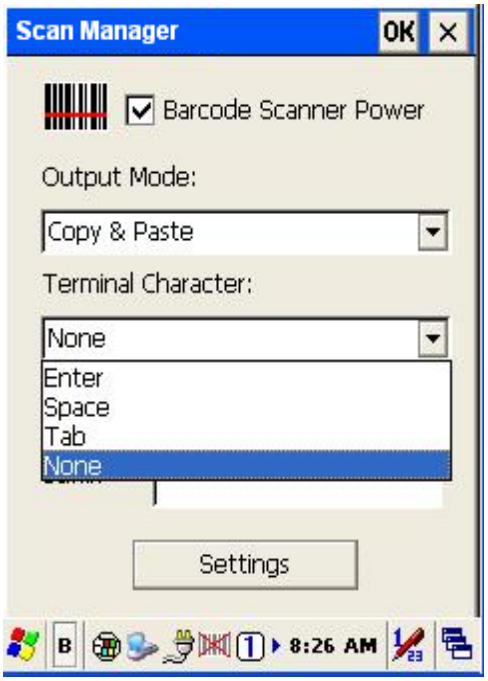

3. Suffix


Set the suffix character with barcode data.


4. Prefix

Set the preamble character with barcode data.

5. Setting

To set the barcode parameter value of each kind of barcode for barcode scanner. Press the" Setting " button in TrayScan application to start the barcode setting.

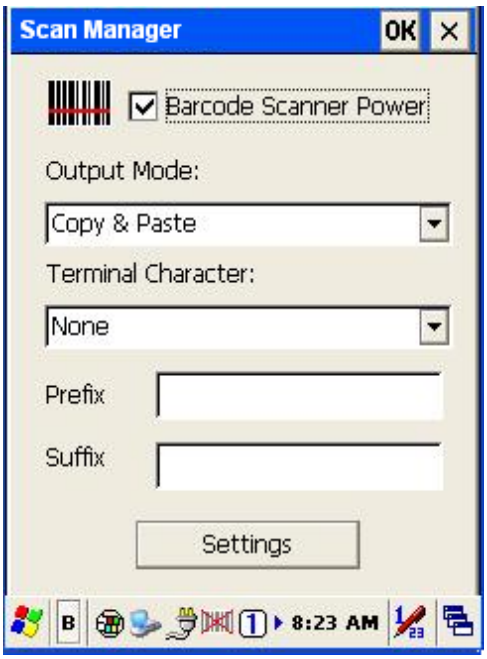


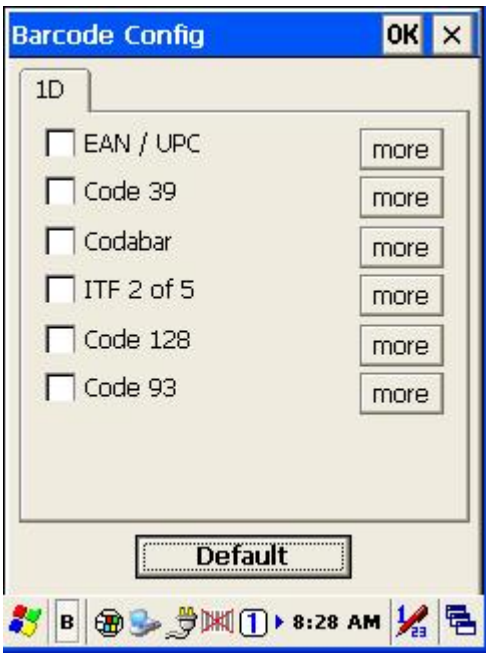


To check the barcode type selection for enable the type of barcode for read.


Press "more" button to setting the barcode parameter value of each kind of barcode.

Press "Default "button to use system default value to set up the barcode parameter. The default value was show in below pictures.

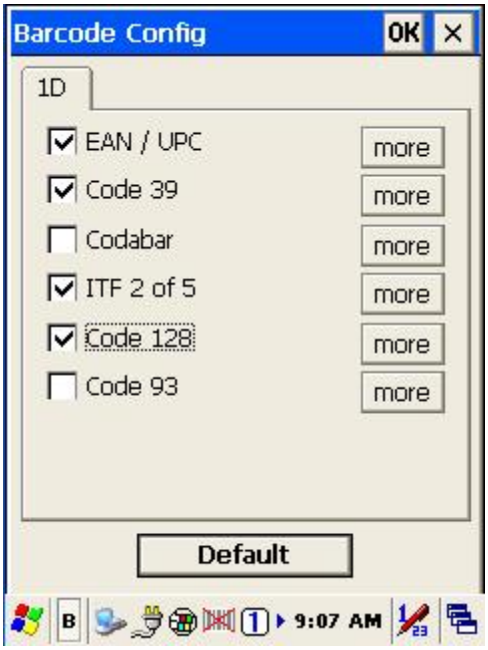



The default values of EAN/UPC code and Code39.

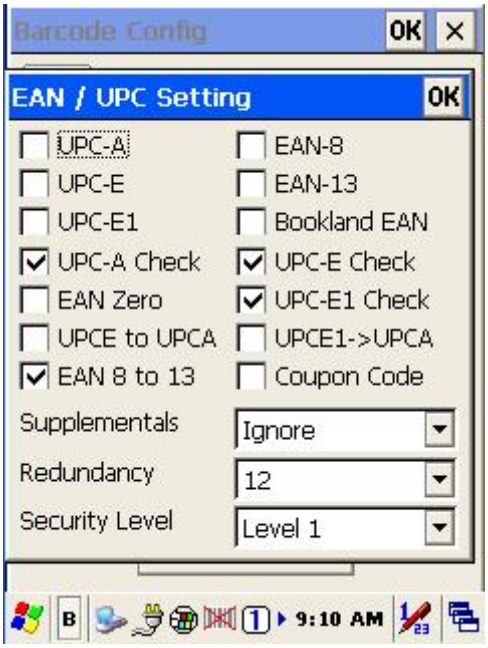

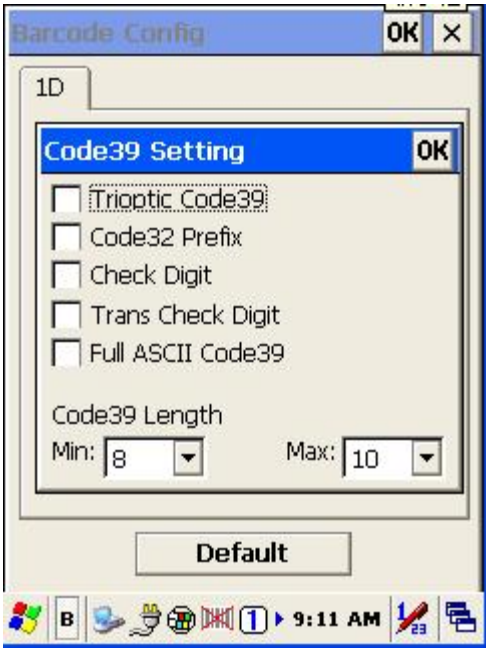

The default values of ITF 2 of 5 code and Code128.

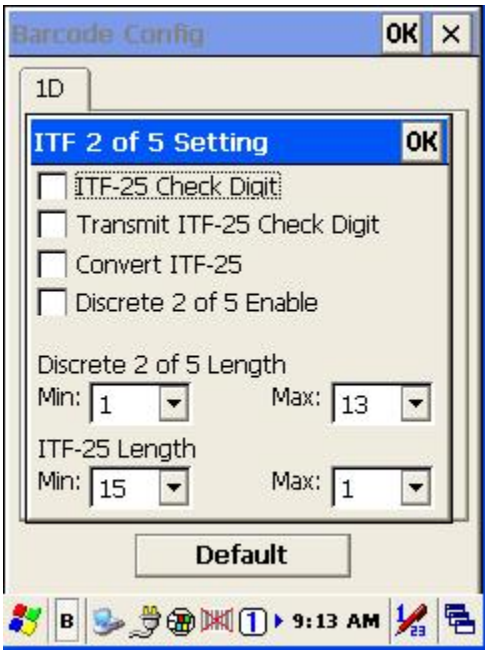

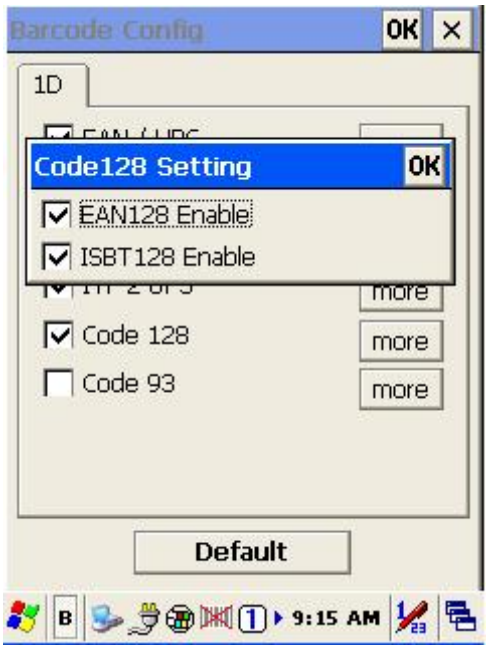

Backup/Restore

You can find this application is located on path “\settings\control Panel\”.






This application provides you an easy way to backup or restore the device setting information into Flash Disk and storage card. Application also provides selection of Flash Disk when there is no storage card. When Mini SD Card was installed into devices, program will auto-search and provides selection of SD Card from menu.





Backup : Select backup data as saved devices, press ” **Backup** ” bottom to proceed backup. Display will restore when backup was finished.

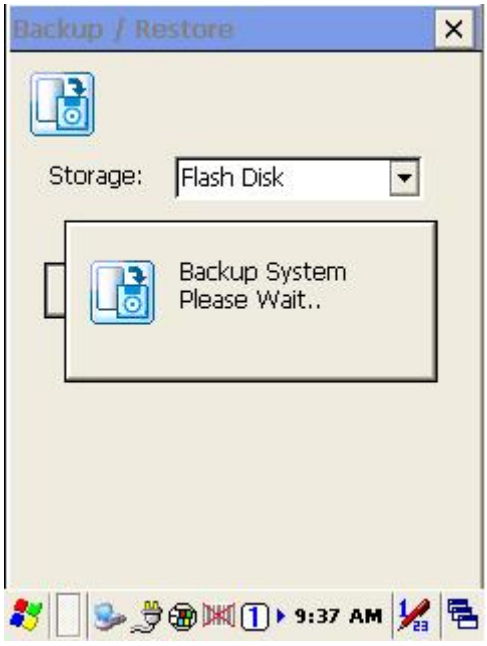



Firmware Information


This application will check and display the version information of the device's operation system and PowerPack utility.

You can find this application is located on path " \settings\control Panel\".





This information is good for identify device firmware version for future update or maintenance.

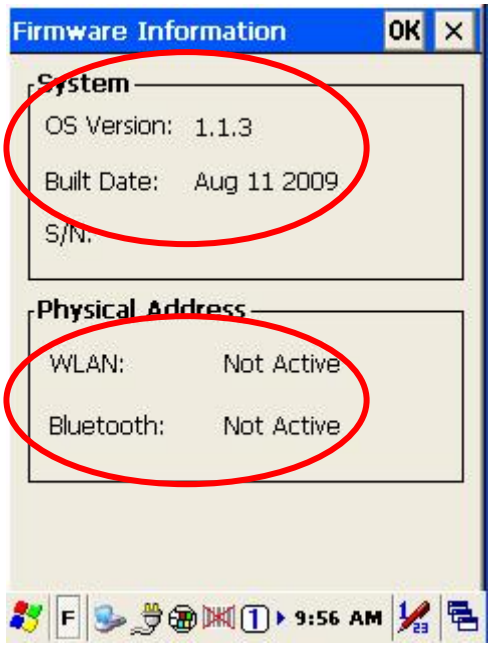


Function Key Manager

This application utility is provides you an easier way to set up function key for your device. Through using this function key set up utility you will easily and quickly to start the application program like, Window Media Player, Calculator… etc, or your own designed application program, and even the windows system function, like increasing or decreasing the volume or doing the adjustment of brightness on LCD panel.

You can find this application is located on path "\settings\control Panel\".



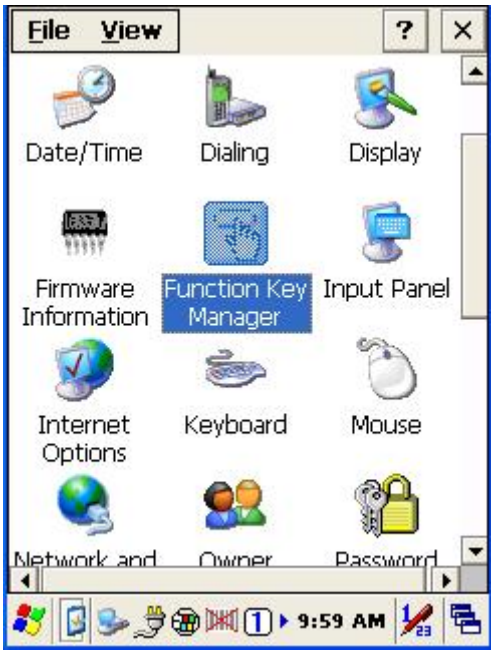

Program provides eight different function key (F1~F8) for set up, default setting was shown as below:

F1: SIP ON/OFF。

F2: Backlight Manager。

F3: Power Switch。


F4: Calculator.exe。

F5: Volume + 。


F6: Volume -。

F7: Backlight +。

F8: Backlight -。

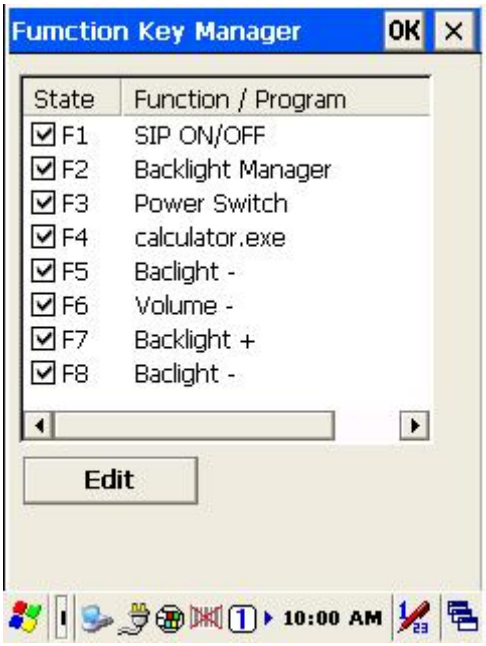

Function Key Manager Set Up Instruction:

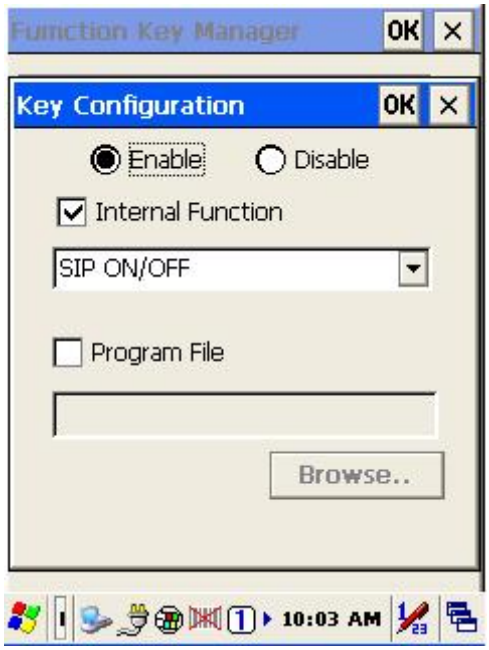

Enable/ Disable : Enable or Disable Function Key

Provide two set up methods of Internal Function and Program File


Internal Function : Provide following options,


SIP ON/OFF
Backlight Manager
Power Switch
Stylus Calibration
Wi-Fi ON/OFF
Bluetooth ON/OFF
Volume +
Volume –
Backlight +
Backlight –
Cut
Copy
Paste

Program File : Install application program according to demand, this function can be used for setting up auto-execution.


1. Edit Internal Function items：


1.1 Select items need to be modified, select by clicking ” **Edit** ” bottom to enter set up window as below:

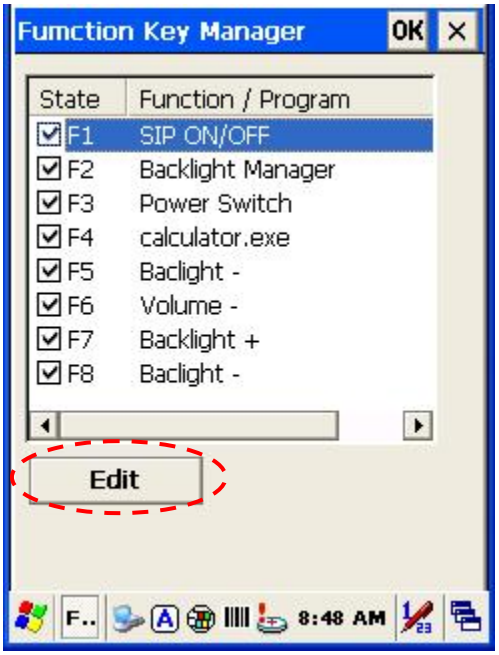

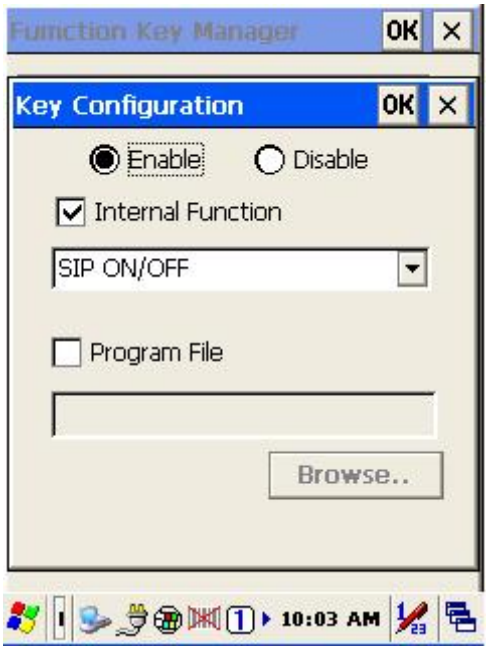


1.2 Select new functional item and complete editing.

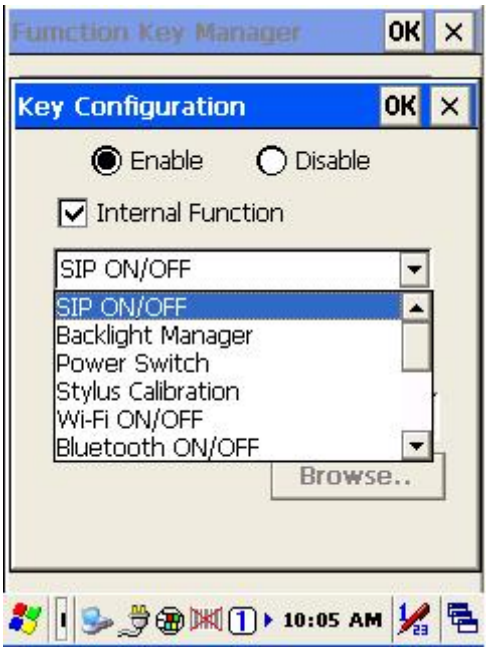


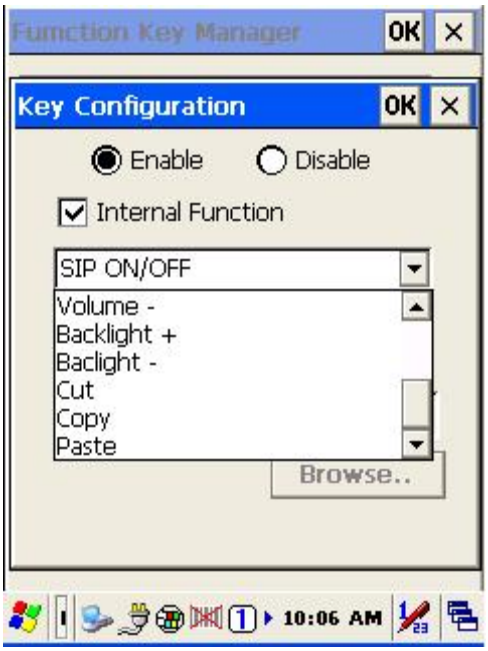

2. Edit application software for auto-execution：

2.1 Select Program File item，then click ” **Browse** ” bottom to enter File Opening Window.

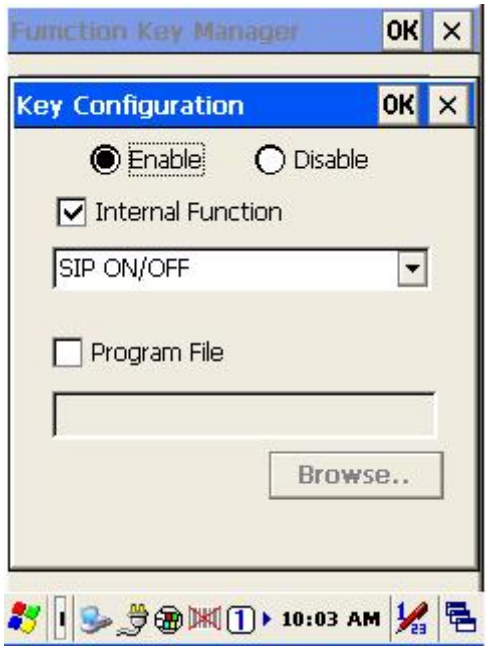

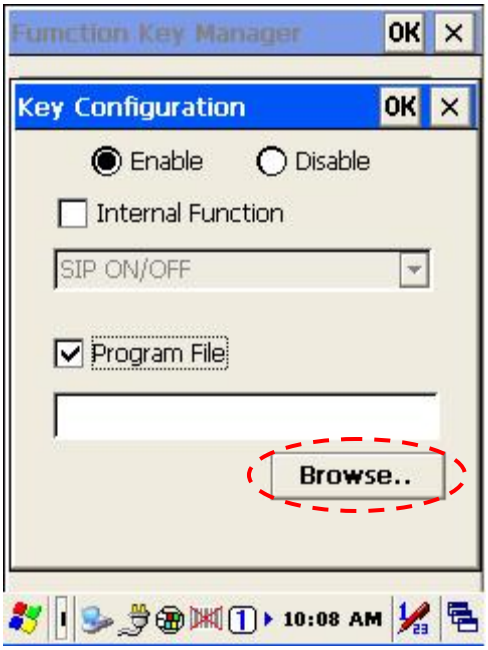



2.2 Select software required auto-execution, then select ” **OK** ” bottom to complete selecting process.





2.3 Confirmed Function / Program had been updated within column. Select by clicking ” **OK** “ bottom to complete editing process. When Function Key Manager Main Page reappear on the display, F1 on function key item lists had been updated to testkeypadChar.

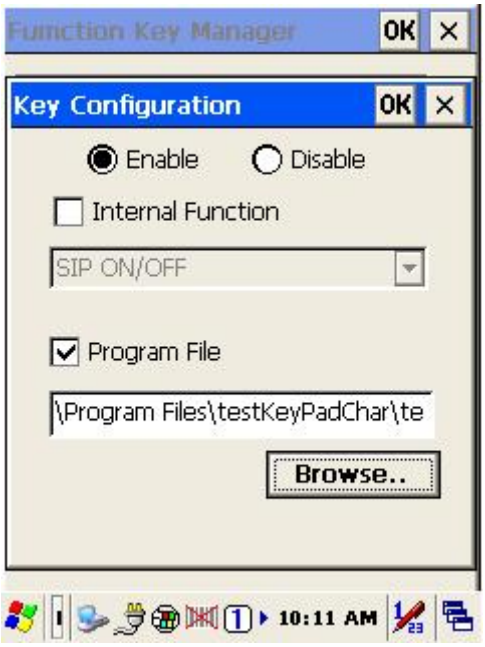

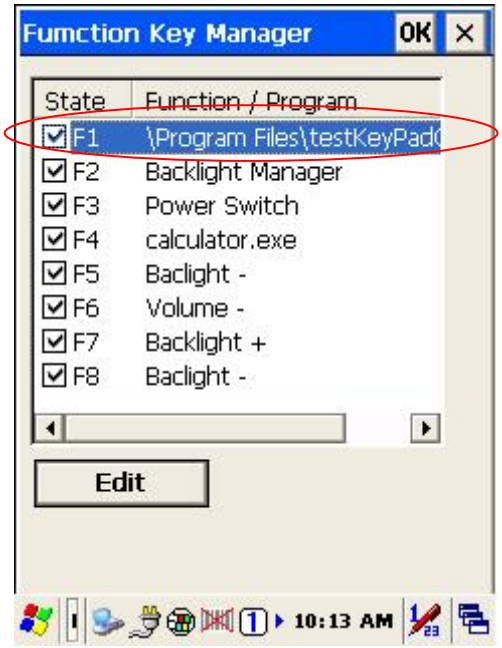

How to order

Please offer Part Number or Model Name for next purchase.

1. Z-2065 Series Windows CE.NET Handheld Computer Set.

Part Number	Model Name	Description
882-65W100-100	Z-2065WL1	WindowsCE.NET Handheld Computer, W/Wireless LAN/BT module/1D engine/RS-232 DB9(F) cable / USB interface
882-65W200-100	Z-2065WL2	WindowsCE.NET Handheld Computer, W/Wireless LAN/BT module/2D imager/RS-232 DB9(F) cable / USB interface
882-65W1GS-100	Z-2065W1GS	WindowsCE.NET Handheld Computer, W/Wireless LAN/BT/GPRS/GPS module/1D engine/RS-232 DB9(F) cable / USB interface
882-65W2GS-100	Z-2065W2GS	WindowsCE.NET Handheld Computer, W/Wireless LAN/BT/GPRS/GPS module/2D imager/RS-232 DB9(F) cable / USB interface
882-65G1SH-100	Z-2065W1GSH	WindowsCE.NET Handheld Computer, W/Wireless LAN/BT/GPRS/GPS module/1D engine/RFID(H)/RS-232 DB9(F) cable / USB interface
882-65G2SH-100	Z-2065W2GSH	WindowsCE.NET Handheld Computer, W/Wireless LAN/BT/GPRS/GPS module/2D imager/RFID(H)/RS-232 DB9(F) cable / USB interface
882-65W1G0-100	Z-2065W1G	WindowsCE.NET Handheld Computer, W/Wireless LAN/BT/GPRS module/1D engine/RS-232 DB9(F) cable / USB interface
882-65W2G0-100	Z-2065W2G	WindowsCE.NET Handheld Computer, W/Wireless LAN/BT/GPRS module/2D imager/RS-232 DB9(F) cable / USB interface
882-65W1S0-100	Z-2065W1S	WindowsCE.NET Handheld Computer, W/Wireless LAN/BT/GPS module/1D engine/RS-232 DB9(F) cable / USB interface
882-65W2S0-100	Z-2065W2S	WindowsCE.NET Handheld Computer, W/Wireless LAN/BT/GPS module/2D imager/RS-232 DB9(F) cable / USB interface
882-65W1H0-100	Z-2065W1H	WindowsCE.NET Handheld Computer, W/Wireless LAN/BT module/1D engine/RFID(H)/RS-232 DB9(F) cable / USB interface
882-65W2H0-100	Z-2065W2H	WindowsCE.NET Handheld Computer, W/Wireless LAN/BT module/2D imager/RFID(H)/RS-232 DB9(F) cable / USB interface
Standard Accessories		
170-70R449-180	RS-232 Cable	RS232 charging cable for Z-2050/2065
173-0U0000-150	MINI USB Cable	Terminal to PC USB port
862-206502-400	Battery Pack	Lithium-Ion rechargeable battery pack, 3.7V 5000 mAh

560-820500-741	Stylus Pen	Length: 95.7cm, including reset thimble
623-220500-061	Sling	Sling for stylus pen
623-220650-051	Hand Strip	Z-2065 hand strip and stylus pen holder
560-020650-891	Hand Strip Holder	Z-2065 hand strip holder
11S-900180-008	AC Adapter	AC 100~240V 50/60HZ 0.6A, DC 9V/2A
11S-000000-008	Integrated Plug head	for 11S-900180-008 Type: Britain/ U.S./Australia/Europe

2. CRD-60 Communication and Battery charging Cradle Set.



Part Number	Model Name	Description
882-60CR00-000	CRD-60	Z-2065 communication and battery charging cradle
Standard Accessories		
174-1RF050-150	RS-232 Cable	RS232 cable connect from CRD-60 to PC RS-232 Dsub port.





PIN-OUT configuration	
DB-9(F)	
1	CD (Carrier detect)
2	TxD (Transmit data)
3	RxD (Receive data)
4	DSR (Data set ready)
5	GND (Signal ground)
6	DTR(Data terminal ready)
7	CTS (Clear to send)
8	RTS (Request to send)
9	RI (Ring indicator)



PIN-OUT configuration	
1	NC
2	TxD (Transmit data)
3	RxD (Receive data)
4	NC
5	GND (Signal ground)
6	NC
7	CTS (Clear to send)
8	RTS (Request to send)
9	NC
10	GND(Signal ground)



173-0U3000-150 — USB Cable — RJ45 USB type B cable connect from CRD-60 to PC USB port.



3. Z-2065 Series Optional Accessories

	Part Number	Model Name	Description
	**170-70R449-180**	RS-232 cable	RS232 charging cable for Z-2050/2065

PIN-OUT configuration	
DB-9 (Female)	
1	CD (Carrier detect)
2	TxD (Transmit data)
3	RxD (Receive data)
4	DSR (Data set ready)
5	GND (Signal ground)
6	DTR (Data terminal ready)
7	CTS (Clear to send)
8	RTS (Request to send)
9	RI (Ring indicator)

	**173-0U0000-150**	MINI USB Cable	Terminal to PC USB port
	**174-1RF050-150**	RS-232 Cable	RS-232 cable connect from CRD-60 to PC RS-232 Dsub port.
	**173-0U3000-150**	USB Cable	RJ45 USB type B cable connect from CRD-60 to PC USB port.
	**862-206502-400**	Battery Pack	Lithium-ion rechargeable battery pack, 3.7V, 5000mAh
	**560-820500-741**	Stylus Pen	95.7mm, including reset thimble

	Part Number	Model Name	Description
	**623-220500-061**	Sling	Sling for stylus pen
	**623-220650-051**	Hand Strip	Z-2065 hand strip and stylus pen holder
	**560-020650-891**	Hand Strip Holder	Z-2065 hand strip holder
	**862-206502-400**	AC Adapter	AC 100~240V 50/60HZ 0.6A, DC 9V/2A
	**11S-000000-008**	Adapter Head	Britain type head ,interchangeable plug, for 11S-900180-008 AC adapter
	**11S-000001-008**	Adapter Head	U.S. type head ,interchangeable plug, for 11S-900180-008 AC adapter
	**11S-000002-008**	Adapter Head	Australia type head ,interchangeable plug, for 11S-900180-008 AC adapter
	**11S-000003-008**	Adapter Head	Europe type head ,interchangeable plug, for 11S-900180-008 AC adapter

<< MEMO >>