

Experts In Home Cleaning™



CLEANview POWERBRUSH

מדריך למשתמש
דגם 44L6 240 - 220 וולט


תודה	2
הוראות בטיחות	3
מראה המוצר	4
הרכבה	5
הפעלה	11-6
תחזוקה וטיפול	12
פתרון בעיות	13
חלקי חילוף	14
אביזרים	14
אחריות	15
שירות לקוחות	16

אנו מודים לכם על שקניתם CleanView PowerBrush של BISSELL

אנו שמחים שרכשתם CleanView PowerBrush של BISSELL. בתכנון המערכת עתירת הטכנולוגיה והמושלמת הזו לניקוי הבית כללנו את כל הידע שלנו בנושא טיפול ברצפות.

מכשיר CleanView PowerBrush של BISSELL בנוי היטב, ואנו מגבים אותו בשנת אחריות של חברת אלקטרה מוצרי צריכה (1951) בע"מ, לה מחלקת שירות לקוחות ייעודית ובעלת ידע, כך שאם אי פעם תיתקלו בבעיות, תקבלו סיוע מהיר ומקצועי.

הסבא רבא שלי המציא את מטאטא הרצפות בשנת 1876. היום, ביסל היא חברה עולמית מובילה בתכנון, ייצור ושירות של מוצרים איכותיים לבית כמו CleanView PowerBrush של BISSELL שלכם.



מארק ג'. ביסל
יו"ר ומנכ"ל

הוראות בטיחות חשובות

- יש להוציא את התקע מהשקע לפני ניקוי המכשיר ולפני שמבצעים בו פעולות תחזוקה
- מכשיר זה אינו מיועד לשימוש על ידי אנשים (ובכלל זה ילדים) בעלי יכולות פיזיות, סנסוריות או מנטאליות מוגבלות, או על ידי אנשים חסרי ניסיון וידע, אלא אם משיגה עליהם אדם שאחראי על בטיחותם או מנחה אותם כיצד להשתמש במכשיר.
- יש להשיג על ילדים על מנת לוודא שאינם משחקים עם המכשיר.
- אין לשאוב חומרים רעילים (מלבין, אמוניה, נוזל לפתיחת סתימות, דלק וכדומה).
- אין לשנות את הדק ההארקה
- אין להשתמש במכשיר למטרה אחרת מלבד זו המתוארת במדריך למשתמש
- יש להשתמש רק באביזרים מומלצים על ידי היצרן
- למניעת נזק למרכיבים הפנימיים, יש להשתמש אך ורק במוצרי ניקיון מתוצרת BISSELL שיועדו לשימוש במכשיר זה
- יש לנקות פתחים מאבק, מוך, שערות וכדומה.
- יש להחזיק את המכשיר על משטח ישר
- יש לכבות את כל המתגים לפני ניתוק המכשיר מהחשמל
- יש לפעול במשנה זהירות בעת ניקוי מדרגות
- בעת שימוש במכשיר בסביבת ילדים יש להקדיש תשומת לב מירבית.

שמרו הוראות אלה לשימוש עתידי

דגם זה מיועד לשימוש ביתי בלבד.

⚠ אזהרה: מכשיר זה חייב הארקה.

חשוב

המכשיר נועד לשימוש במתח 220-240 וולט בתדר 50/60 הרץ בלבד.

בעת שימוש במכשיר חשמלי, יש להקפיד על אמצעי זהירות בסיסיים, ובכלל זה:

יש לקרוא את כל ההוראות לפני תחילת השימוש במכשיר שלכם.

חברו תמיד לשקע הארקה תקני. נתקו את המכשיר מהחשמל אם אינו בשימוש ובבואכם לבצע בו פעולות תחזוקה או לפתור בעיה.

⚠ אזהרה: לצמצום סכנת שרפה, התחשמלות או פציעה:

- מיועד אך ורק לשימוש ביתי.
- אין לטבול במים; יש להשתמש רק במשטחים שהורטבו כחלק מתהליך הניקוי
- אין להשאיר את המכשיר מחובר לחשמל.
- אין לתקן את המכשיר בעודו מחובר לחשמל.
- אם פתיל הזינה ניזוק, כדי להימנע מסכנה החלפתו תיעשה ע"י היצרן, ע"י סוכן השירות שלו או ע"י אדם מוסמך אחר.
- אין להשתמש במכשיר אם הופל, ניזוק, הושאר מחוץ לבית או נפל למים.
- אין למשוך את המכשיר או לשאת אותו מכבל החשמל, אין להשתמש בכבל כידי, אין לסגור את הדלת על הכבל או למשוך את הכבל מסביב לפניות או קצוות חדים, אין לדרוס את הכבל בשואב או לחשוף את כבל החשמל למשטחים מחוממים
- אין לשאת את המכשיר בזמן השימוש
- אין למשוך את הכבל כדי לנתק את המכשיר מהחשמל. לניתוק המכשיר מהחשמל, אחזו בתקע ולא בכבל, והוציאו אותו מהשקע.
- אין לגעת בתקע או במכשיר בידיים רטובות
- אין להחדיר חפצים לפתחי המכשיר, אין להשתמש כשפתחים חסומים, ואין לחסום זרימת אוויר
- אין לחשוף שיער, בגדים רפויים, אצבעות או חלקי גוף לפתחים או לחלקים נעים
- אין להרים חפצים חמים או לוהטים
- אין לשאוב חומרים דליקים או בעירים (נוזל למצית, דלק, קרוסן, וכו') ואין להשתמש בנוכחות נוזלים או אדים נפיצים.
- אין להשתמש במכשיר בשטח סגור מלא באדים שמקורם בצבע שמן, מדלל, חומרים למניעת עש, אבק דליק, או אדים נפיצים או רעילים אחרים.
- אין להפעיל את המכשיר אם דלת החגורה אינה מורכבת כראוי במיקום המתאים



⚠ אזהרה:

לצמצום סכנת שרפה
והתחשמלות כתוצאה מנזק
במרכיבים פנימיים, השתמשו
רק בחומרי ניקוי של BISSELL
שמועדים לשימוש עם מכשיר
זה. חומרי ניקוי שאינם מתוצרת
BISSELL עלולים להזיק למכשיר
ולגרום לביטול האחריות.

חומר ניקוי:

החזיקו בהישג יד כמות גדולה של חומר ניקוי 2x של BISSELL. כך תוכלו לנקות ולהגן בזמן המתאים לכם.
השתמשו תמיד בחומרי הניקוי המקוריים של BISSELL לניקוי עמוק. חומרי ניקוי שאינם מתוצרת BISSELL
עלולים להזיק למכשיר ולגרום לביטול האחריות.



2X ל' 1.5
Wash & Protect
Professional
Formula w/
Scotchgard™
Protector
#81L5-E
נוסחה מקצועית
לשטיפה והגנה



2X Wash ל' 1.5
& Protect Pet
Stain & Odour
Formula w/
Scotchgard™
Protector
#66W9-E
להסרת כתמים
ונטרול ריחות
של חיות מחמד



2X Wash ל' 1.5
& Protect Fresh
Fragrance
Formula w/
Scotchgard™
Protector
#92F4-E
לשטיפה והגנה
בניחוח רענן



2X Wash ל' 1.5
& Protect Spring
Breeze Fragrance
Formula w/
Scotchgard™
Protector
#12W4-E
לשטיפה והגנה
בניחוח משב
אביבי



2X ל' 1.5
Wash & Protect
Lavender
Fragrance
Formula w/
Scotchgard™
Protector
#33D2-E
לשטיפה והגנה
בניחוח לבנדר



473 מ"ל
חומרי ניקוי
לרצפות
קשות
מסדרת 2X
#56L9-E



651 מ"ל
מסיר
כתמים
קשים
#0400-E

הערה: אפשר שתמצאו חומרי ניקוי נוספים \ אחרים של BISSELL בתחנות השירות שבאזורכם.

⚠ אזהרה:

יש לחבר את המכשיר לחשמל רק לאחר שהשלמתם את הרכבתו לפי ההנחיות הבאות ולמדתם את ההנחיות ואת נהלי ההפעלה.


מכשיר CleanView PowerBrush מגיע מפורק לחמישה חלקים קלים להרכבה:

- מכלול ידית
- מכלול גוף עליון
- מתלה עליון לצינור
- מכלול גוף תחתון
- מתלה תחתון לצינור


באריזה כלולים שלושה ברגי פיליפס. תמצאו אותם מודבקים למכלול הידית.

להרכבת מכשיר הניקוי שלכם כל הנדרש לכם הוא רק מברג פיליפס.


1. החליקו את מכלול הגוף העליון לתוך הגוף התחתון והבריגו אותו למקום עם שני ברגים.
2. לחיבור מתלה הצינור העליון אל מכלול הידית, וודאו ש"הלשוניות" במתלה הצינור העליון מצביעות לעבר חלקה העליון של הידית. כעת, החליקו את המתלה ככל שתוכלו לעבר חלקה העליון של הידית. סובבו את מתלה הצינור עד לשמיעת צליל נקישה.
3. החליקו את מכלול הידית כלפי מטה לתוך הגוף העליון עד הסוף וחברו עם בורג.
4. חברו את מתלה הצינור התחתון אל חלקו האחורי של הגוף העליון. לשם כך, דחפו אותו לתוך החריצים הפתוחים והחליקו מטה עד לשמיעת צליל נקישה.
5. כרכו את הצינור הגמיש סביב מתלה הצינור והדקו אותו למקום כפי שמתואר בתמונה.
6. קבעו את הצינור הגמיש למקומו באמצעות הסגר לנעילת הצינור.

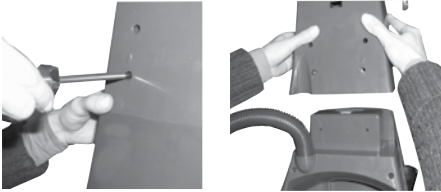


1

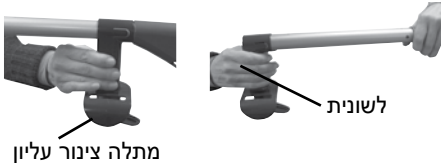

2

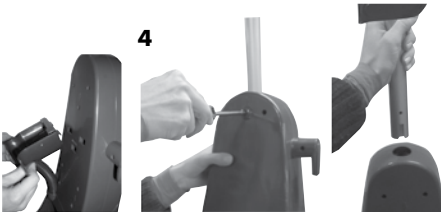

3

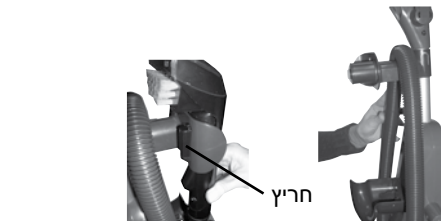

4



5

תכונות ואביזרים

מכשיר CleanView PowerBrush של BISSELL, מערכת לניקוי הבית שמשתמשת בשילוב של מי ברד חמימים, חומרי ניקוי מתקדמים של BISSELL, הנעת מברשת ושאיבה כדי לנקות בבטחה את השטיחים.

מברשת Dirt Lifter Powerbrush™

מברשת DirtLifter PowerBrush מיועדת לשיפור ביצועי הניקיון. דוגמת הזיפים מרימה בבטחה את הלכלוך העמוק ומנקה ברכות את סיבי השטיח. המתלה הצף מתאים את עצמו לגובה השטיח. כשהמכשיר מופעל ובמצב עומד, השטיח שלכם מוגן היות שהמברשות מורמות מהשטיח.

חוגה ReadyTools™

התכונה Ready Tools מאפשרת לכם לבחור בין ניקוי רצפות (FLOOR CLEANING) ובין ניקוי באמצעות כלים (TOOLS) פשוט על ידי סיבוב החוגה. מצב TOOLS מאפשר ניקוי מעל הרצפה של ריפוד, מדרגות, לאורך הפנלים, ואזורים פחות נגישים אחרים. זה פשוט! בחרו את הכלי המתאים לעבודה, חברו אותו לצינור הגמיש ואתם יכולים להתחיל לנקות.

כוסית מדידה

המכשיר שלכם לניקוי עמוק מצויד בכוסית מדידה להוספת הכמות המתאימה של חומר ניקוי למיכל הב-2. לשם נוחות, כוסית המדידה בנויה לתוך המכסה של מיכל הב-2.

מיכל מים ב-2-1

מערכת מיכל המים ב-2-1 שלנו כוללת בתוכה מיכל עמיד שמיועד למים נקיים. בעודכם מנקים, המים הנקיים שבמיכל הפנימי יתרוקנו ויתערבבו עם חומר הניקוי. מים מלוכלכים שנשאבים מהשטיח שלכם יצטברו מסביב לדפנות החיצוניות של המיכל הפנימי. באופן זה, המים הנקיים נשמרים תמיד בנפרד מהמים המלוכלכים. עובדה זו מאפשרת למשתמש למקסם את שטח המיכל, ועם זאת לסחוב רק מיכל אחד אל הכיור וממנו לצורך ריקון המים ומילויים.

אזהרה:

לצמצום סכנת שריפה, השתמשו במכשיר הניקוי ק שלכם רק בחומר לניקוי עמוק של BISSELL המיועד למכשירים גדולים. שימוש בחומרי ניקוי שמכילים לימון או שמן אורנים עלול להזיק למכשיר זה ולגרום לביטול האחריות עליו. אין להשתמש בחומרים כימיים לניקוי כתמים או במסירי לכלוך שמכילים ממסים. מוצרים אלה עלולים ליצור ריאקציה עם חלקי הפלסטיק של המכשיר לניקוי עמוק שתגרום להיווצרות סדקים או חורים.



חוגה ReadyTools



כוסית מדידה



ידית נשיאה

זהירות:

לסוגי שטיחים מסוימים נטייה להתמלא פלומה ככל שהם מתבלים. חבטות חוזרות ונשנות באותו אזור באמצעות שואב רגיל או מכשיר לניקוי לעומק עשויות להחמיר את הבעיה.

תכונות מיוחדות (המשך)

Scotchgard™ Protector מגן




שכבת ההגנה שמגיעה בדרך כלל מבית החרושת מתבלה עם הזמן כתוצאה מתנועה רבה וניקוי יומיומי, ובכלל זה ניקוי לעומק. כדי להשיב את ההגנה החשובה הזאת, BISSELL היא היחידה שמציעה חומרי ניקוי עם מגן Scotchgard. חומרי ניקוי אלה מעניקים הגנה נוספת מפני לכלוך וכתמים קשים, כדי שהשטיחים שלכם ייראו טוב זמן ממושך יותר.

לפני תחילת הניקוי


1. תכננו את הפעולות באופן שישאיר לשטיח זמן להתייבש.
2. הזיזו את הרהיטים לאזור אחר אם אתם מנקים את כל החדר (אופציונלי).
3. לפני תחילת הניקוי העמוק, שאבו את האזור בשואב אבק.
4. תכננו את מסלול הניקיון שלכם כך שיישאר לכם נתיב יציאה. מומלץ להתחיל את הניקוי מהפינה הרחוקה ביותר מהיציאה.
5. **טיפול מקדים** (אופציונלי)
מומלץ לבצע טיפול מקדים כדי לשפר את יעילות הניקיון במקרה של שטיחים מלוכלכים מאד באזורים שבהם יש תנועה רבה, כגון מבואות או מסדרונות.

הטיפול המקדים:

- א. השתמשו בחומר הניקוי Tough Stain Precleaner של BISSELL. רססו בנדיבות ובאופן שווה את השטח המלוכלך, אך הקפידו לא להרטיב את האזור יתר על המידה.
- ב. המתינו 3 עד 5 דקות לפני הניקוי העמוק.
- ג. נקו כרגיל בעזרת מכשיר לניקוי עמוק של BISSELL, על פי ההוראות שלהלן.

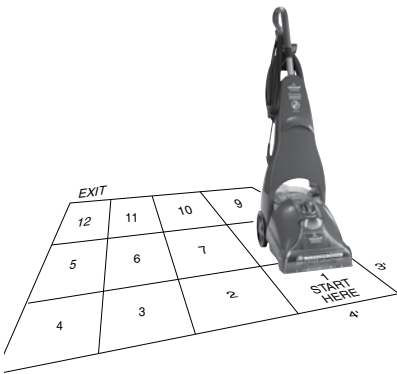

מלאו את מיכל מים -ב2-1

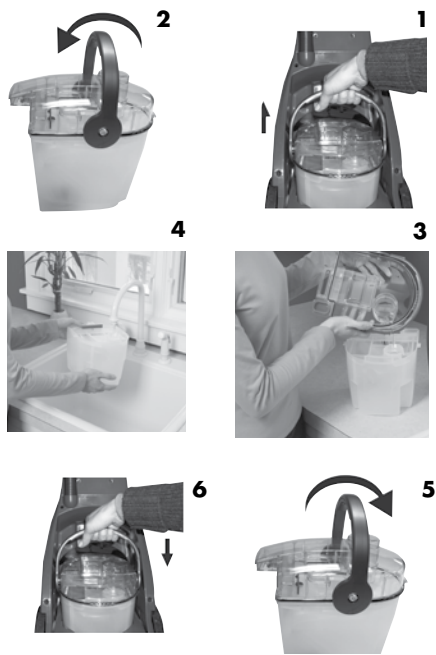

1. הרימו את הידית לנשיאת המיכל ושלפו את המיכל מבסיס המכשיר.
2. נשאו אותו כמו דלי אל הכיור. סובבו את הידית קדימה, לפתיחת המכסה. הסירו את המכסה, הפכו את המיכל ומצאו את כוסית המדידה המובנית.
3. מלאו חומר ניקוי 2X של BISSELL עד לקו המילוי של כוסית המדידה ומזגו לתוך פתח המיכל הפנימי.
4. מלאו את המיכל במי ברז פושרים נקיים.
***אין להרתיח או לחמם מים במיקרוגל.**
זה יכול להרוס את המיכל הפנימי.
5. החזירו למקומו את חלקו העליון של המיכל על ידי התאמת המכסה וקצוות המיכל. כדי להשיב את המכסה למקומו, הידית צריכה להיות במצב קדימה. כדי לסגור את המכסה סובבו את הידית למצב נשיאה.
- הערה: לפני שאתם מרימים את המיכל, זכרו לסגור את המכסה ולבדוק שהוא סגור היטב.**
6. החזירו את המיכל לבסיס המכשיר. מקמו אותו היטב במקומו. סובבו את ידית המיכל בחזרה למצב נעול.


עצה:

שאיבה יסודית לפני ניקוי עמוק
תמנע חסימה מהירה של פילטר
הסיבים.

⚠ אזהרה:


לצמצום סכנת שרפה והתחשמלות
כתוצאה מנזק במרכיבים פנימיים,
השתמשו רק בחומרי ניקוי של
BISSELL שמיועדים לשימוש עם
המכשיר לניקוי עמוק. חומרי ניקוי
שאינם מתוצרת BISSELL עלולים
להזיק למכשיר ולגרום לביטול
האחריות.

ניקוי שטיח

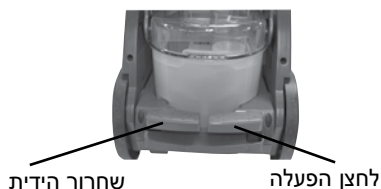

1. חברו את המכשיר לשקע חשמל מתאים. להפעלת המכשיר לחצו ברגלכם על מתג החשמל האדום שבגב המכשיר.
2. ברגלכם, לחצו על המנוף האפור לשחרור הידית שבגב המכשיר, מתחת למיכל המים.
3. בעת לחיצה על לחצן הריסוס, בצעו מעבר רטוב אחד לאט ומעבר נוסף בחזרה. הניחו לחומר הניקוי ולמברשת DirtLifter PowerBrush לעשות את העבודה בשבילכם.


זהירות: אין להרטיב יתר על המידה.

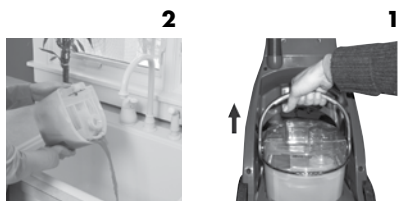

4. שחררו את לחצן הריסוס ובצעו על אותו אזור מעבר רטוב אחד לאט ומעבר נוסף בחזרה כדי להסיר מים מלוכלכים שנתרו ולעזור בייבוש האזור.

5. חזרו על מעברי הניקיון עד שהתמיסה הנשאבת נראית נקיה. המשיכו לעבור על האזור מבלי ללחוץ על לחצן הריסוס, עד שתראו שהמכשיר אינו שואב יותר מים.

רוקנו את מיכל המים -ב1- / נקו את המברשת הנשלפת

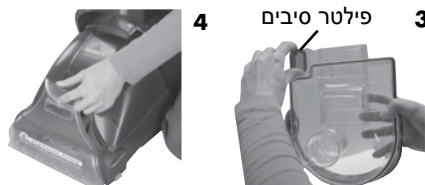

1. כבו את המכשיר. הוציאו את מיכל המים 1-ב2- מהבסיס תוך אחיזה בידית לנשיאת המיכל. נישאו את המיכל כמו דלי לכיור או החוצה, ושפכו את המים המלוכלכים. הסירו את חלקו העליון של המיכל על ידי סיבוב הידית קדימה לפתיחת המכסה והסירו את המכסה מהמיכל.



2. רוקנו את המים המלוכלכים מתחתית המיכל.
3. בתום כל שימוש, הסירו ושטפו את פילטר הסיבים שממוקם על מכסה המיכל.
4. לניקוי המברשת, אחזו בה בחלקה העליון ומשכו אותה קדימה כדי לשלוף אותה ממקומה. נקו את המברשת הנשלפת במי ברז זורמים.

5. לסיום, החזירו את המברשת למקומה. לשם כך, הרימו מעט את חלקו הקדמי של המכשיר על מנת ליישר את החריצים שבתחתית עם הווים שבמברשת. תחילה חברו בבסיס ואחר כך הקליקו את המברשת למקומה.

הערה: אם המברשת איה מחוברת כראוי כוח השאיבה יפחת.

רוקנו את מיכל המים -ב2-1/ נקו את המברשת הנשלפת (המשך)

6. כדי להמשיך ולנקות את השטיח, שובו לעיין בעמודים 8 עד 9, החל מהפסקה "מלאו את מיכל המים -ב2-1" שבעמוד 8.


אם סיימתם לנקות, נא עיינו בפסקה "תחזוקה וטיפול" שבעמוד 12.

Ready Tools™

מכשיר CleanView PowerBrush שלכם מגיע מצויד בצינור ובאביזר אחד לפחות לניקוי מדרגות, ריפוד ועוד.

חשוב! אם אתם משתמשים במכשיר לניקוי ריפוד, בדקו את תוויות הריפוד.

1. לפני הניקוי, בדקו תחילה את תווית היצרן. "W" או "WS" בתווית פירושה שאפשר להשתמש במכשיר לניקוי עמוק. אם על התווית מופיע הקוד "X" או "S" (מחוקים בקו אלכסוני), או אם כתוב עליה "ניקוי יבש בלבד", אין לבצע ניקוי במכשיר. אין להשתמש במכשיר לניקוי קטיפה או משי. בהיעדר תווית היצרן או קוד, בדקו עם חנות הרהיטים.
2. בדקו את עמידות הצבע במקום נסתר.
3. במידת האפשר, בדקו את מילוי הריפוד. מילוי צבעוני עלול לצבוע את הבד כשהוא רטוב.
4. תכננו את הפעולות באופן שיאפשר לריפוד זמן להתייבש.
5. שאבו ביסודיות כדי לאסוף כללוקים ואת שיערות חיות המחמד. השתמשו במברשת ובאביזר לניקוי חריצים כדי לנקות את קפלי הבד ואת הציציות.
6. כדי להתחיל לנקות באמצעות אביזרים, עקבו אחר ההוראות בעמודים 7 עד 8 למילוי מיכל המים -ב2-1.
7. כווננו את החוגה ReadyTools למצב TOOLS.
8. חברו את אביזר הניקוי לקצה הצינור.

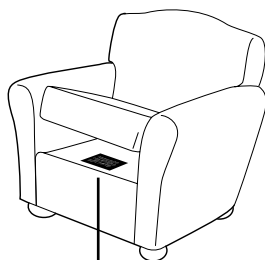

תווית היצרן


עצה:

כדי לנקות באמצעות האביזר לניקוי חריצים, החליקו את המברשות קדימה לניקוי הכתם, ואחורה לשאיבה.




7

Ready Tools (המשך)



11

9. נקו על ידי לחיצה על לחצן הריסוס כדי לרסס תמיסה על האזור שדורש ניקוי. באיטיות, הזיזו את האביזר אחורה וקדימה על פני האזור המלוכלך. שחררו את לחצן הריסוס כדי לשאוב מים מלוכלכים. המשיכו לנקות את האזור, קטע קטן בכל פעם, עד להסרת הלכלוך.
זהירות: אין להרטיב יתר על המידה.



12

10. בתום הניקיון, הסירו ושטפו את האביזרים במי ברז נקיים וזורמים.

11. מומלץ לשאוב מים נקיים מקערה כדי לנקות את הצינור.

12. לפני ליפוף הצינור על מתלה האביזרים, הרימו את קצה הצינור ומתחו אותו כדי לוודא שלא נותרו בו מים.

13. כרכו את הצינור הגמיש סביב מתלה האביזרים.

14. רוקנו את מיכל המים 2ב-1 ושטפו אותו, לפי ההוראות שבעמודים 9 עד 10.



15

בורג

15. אם נהיה קשה לסובב את החוגה ReadyTools, ייתכן שצריך לנקות את מכלול המסב שמחזיק את החוגה. כדי לנקותו, הוציאו תחילה את המברשת ומצאו את הבורג שמחזיק את מכלול המסב במקומו. בעזרת מברג פיליפס, הוציאו את הבורג והניחו אותו בצד.

16. הוציאו את מכלול המסב; החזיקו אותו מתחת למים זורמים תוך שאתם מוודאים שהמים זורמים דרך החוגה ומסביבה. סובבו את החוגה כ-10 פעמים בכיוון השעון ו-10 פעמים נוספות נגד כיוון השעון. פעולה זו אמורה לשחרר לכלוכים שהצטברו סביבה.

הזרימו מים דרך כאן



16

17. נגבו את מכלול המסב בעזרת מטלית עדינה והחזירו אותו בחזרה למכשיר. החזירו את המברשת למקומה.

18. החזירו את החוגה ReadyTools למצב FLOOR CLEANING.

טיפול במכשיר

מספר צעדים פשוטים יסייעו לכם להבטיח תחזוקה טובה של המכשיר שלכם, ותוצאות אופטימליות.

1. כבו את המכשיר. נתקו את המכשיר מהחשמל וכרכו את כבל החשמל.
2. לאחר ריקון מיכל המים -ב2-1, שטפו אותו במי ברז זורמים חמים בעודכם דואגים לנקות מתחת לתא הפנימי העמיד ומסביבו. נקו את פילטר הסיבים האדום. במידת הצורך, אפשר לשטוף את המברשת הנשלפת. עיינו בעמוד 9.
3. החזירו את מיכל המים -ב2-1 למקומו במכשיר.
4. אפשר למשוך מגלגלת המברשת שיערות חופשיות או לכלוכים ולזרוק אותם.
5. לניקוי האביזרים המתחברים, נתקו אותם מהצינור ושטפו במי ברז נקיים וזורמים. יבשו אותם לפני האחסון. נקו את הצינור על ידי שאיבת מים נקיים מקערה. לפני שאתם כורכים אותו בחזרה במכשיר, הרימו את קצה הצינור ומתחו אותו כדי לוודא שלא נותרו בו מים. עיינו בעמוד 11, בתמונות 11 ו-12.
6. נגבו את חלקו החיצוני של המכשיר במטלית רכה.
7. לאחר שהשטיח התייבש, שאבו אותו פעם נוספת להסרת שיערות ופלומה.

אחסון המכשיר

אחסנו את המכשיר בארון או במרתף עד לשימוש הבא. אחסנו את המכשיר באזור מוגן ויבש. מאחר שהמכשיר משתמש במים, אין לאחסן אותו במקום שבו יש סכנת קיפאון. קיפאון יזיק למרכיבים הפנימיים ויבטל את האחריות.

⚠ אזהרה:

לצמצום סכנת שרפה, התחשמלות או פציעה, נתקו את המכשיר משקע החשמל לפני טיפול.

פתרון בעיות

עוצמת ריסוס פחותה או המכשיר לא מרסס

סיבות אפשריות

1. ייתכן שהמיכל הפנימי ריק.

2. ייתכן שמידל -ב2-1 אינו ממוקם כראוי.
3. המשאבה התעייפה.

4. ייתכן שחגורת המשאבה שבורה.

פתרונות

1. כבו את המכשיר; מלאו שנית את המיכל הפנימי במי ברז חמים.


2. כבו את המכשיר; הוציאו את המיכל והחזירו אותו למקומו.
3. כבו את המכשיר; כעבור דקה, הפעילו את המכשיר ולחצו על לחצן הריסוס.

4. כבו את המכשיר ונתקו מהחשמל. כדי לבדוק אם חגורת המשאבה שבורה, יידרש לכם מברג בעל ראש שטוח.

א. הכניסו את להב המברג לתוך החרץ של דלת הגישה לחגורה כדי לשחררה. בדקו סימני שבירה בחגורה. אתם אמורים לראות את חגורת המשאבה משירות הלקוחות של BISSELL. החגורה החלופית תגיע עם הוראות התקנה מלאות.

ב. כשמחליפים את דלת הגישה לחגורה, יש לוודא שמישירים את החרצים של דלת הגישה של החגורה עם החרצים שבמכשיר, להחליק את הדלת למקומה ולסגור אותה.

ב.

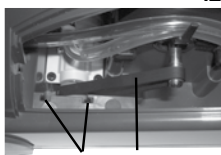

חגורת משאבה חריצים

א.



מברשת DirtLifter PowerBrush אינה מסתובבת

פתרונות

1. עיינו בפתרון 4 שלעיל או בדקו אם רצועת המברשת או רצועת המשאבה קרועות.

1. רצועת המברשת או רצועת המשאבה אינן במקומן או שהן שבורות.

פתרונות

1. כונו את החוגה ReadyTools למצב CLEANING FLOOR או TOOLS לצורך ביצוע עבודת הניקיון.
2. תקנו את הזווית; הפעילו לחץ רב יותר כלפי מטה.

3. וודאו שהמברשת מחוברת כראוי. לשם כך, העלו מעט את חלקו הקדמי של המכשיר באופן שיישר את החרצים שבבסיס המכשיר עם הווים שעל גבי המברשת. תחילה חברו בבסיס ואחר כך הקליקו את המברשת למקומה. נא עיינו בתמונה 5 שבמוד 9.

4. התקינו מחדש את המכסה; עיינו בתמונה שבעמוד 8.

5. מידל -ב2-1 צריך לשבת היטב במקומו כדי לתפקד; הוציאו והחזירו למקום את מידל -ב2-1.

6. רוקנו את מידל -ב2-1 ומלאו מחדש. נא עיינו בפרק הפעלה.

7. נקו את פילטר הסיבים. עיינו בעמוד 9.

המכשיר אינו שואב תמיסה

סיבות אפשריות

1. ייתכן שהחוגה ReadyTools אינה מכוונת להגדרה הנכונה.

2. מיקום האביזר לקוי. (לאביזרים מתחברים ידנית בלבד).

3. ייתכן שהמברשת הנשלפת אינה מחוברת כראוי.

4. מכסה המידל -ב2-1 אינו מותקן כראוי.

5. מידל -ב2-1 אינו ממוקם כראוי.

6. המים שנאספו במידל -ב2-1 הגיעו לרמה המקסימאלית.

7. ייתכן שפילטר הסיבים חסום.

פעולות תחזוקה או שירות אחרות שאינן נכללות במדריך זה

בוצעו על ידי אנשי שירות מוסמכים.

אנו מודים לכם על בחירתכם במוצר של BISSELL.

אין להחזיר מוצר זה לחנות.


שם חלק	מק"ט	פריט
מכלול מיכל מלא	203-0104	1
בסיס מיכל	203-0102	2
מברשת נשלפת	203-8114	3
רצועת משאבה חלופית (עם הנחיות)	215-0628	4
רצועת מברשת חלופית (עם הנחיות)	015-0621	5
פילטר סיבים	203-0105	6



אביזרים וחומרי ניקוי

אף כי ייתכן שלא כל החלקים האלה הגיעו עם המכשיר שלכם, אם תרצו, תוכלו לרכוש את כולם.

שם חלק	מק"ט	פריט
אביזר לרצפות קשיחות	203-0149	1
מברשת 3 אינץ' לניקוי כתמים קשים	203-6651	2
מברשת ריפוד 4 אינץ'	203-8114	3
מברשת מדרגות 6 אינץ'	203-6654	4
מברשת ידנית Powered TurboBrush™	203-6652	5
אביזר לניקוי חריצים מרסס -ב2-1 עם מברשת	203-0116	6
אביזר לניקוי חריצים מרסס	203-6655	7
אביזר למקומות לא נגישים Deep Reach™ Tool	203-8113	8
תיק רשת לאחסון אביזרים	210-3040	9

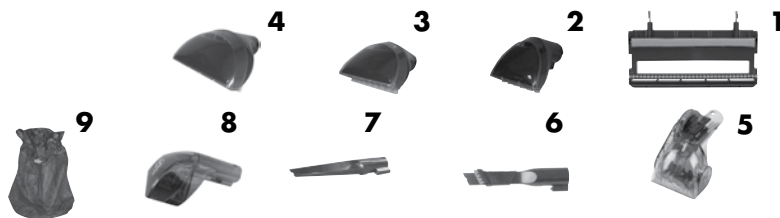

חומר ניקוי: עיינו בתחתית עמוד 4 של מדריך זה בפירוט המלא של קו חומרי הניקוי הנמכרים.

אם נחוץ לך שירות למוצר של BISSELL שברשותך:

התקשר אל שירות הלקוחות של BISSELL למספרים שמופיעים למטה ואנו נמסור לך את פרטי מרכז שירות הלקוחות המורשה של BISSELL באזורך. לשאלות בנושא אחריות ולחלקי חילוף, התקשרו אל המספרים שלמטה.

פניות בישראל:

ראשון - חמישי 08:00 - 17:00

אלקטרה מוצרי צריכה 1951 בע"מ

רח' ספיר 1

אזור תעשייה חדש

ראשון לציון 75704

ישראל

טלפון: 039633030

פניות מהמזרח התיכון ואפריקה:

ראשון - חמישי 09:00 - 18:00

BISSELL Middle East FZE

PO Box 61286

Office 017, Technopark Building

Jebel Ali Free Zone

Dubai

United Arab Emirates

טלפון: 971-4-881-8597

או בקרו באתר של BISSELL -

www.bissell.com

בעת פנייה אל BISSELL, הכינו מראש את מספר הדגם של שואב האבק.

נא רשמו את מספר הדגם שלכם: _____

נא רשמו את תאריך הרכישה שלכם: _____

הערה: שמרו את קבלת הרכישה המקורית שלכם. במקרה של תביעת אחריות היא מהווה הוכחה לתאריך הקנייה. לפרטים עיינו בפרק 'אחריות' בעמוד 15.

בתום חייו, אין להשליך את המכשיר ביחד עם פסולת ביתית רגילה. תחת זאת, מסרו אותו בנקודת איסוף רשמית למחזור. כך תסייעו לשמור על הסביבה.



Experts In Home Cleaning™

©2012 BISSELL Homecare, Inc.
Grand Rapids, Michigan

כל הזכויות שמורות. הודפס בסין

מק"ט 120-4538

גרסה 5/12

בקרו באתר שלנו בכתובת: www.bissell.com

Scotchgard הוא סימן מסחרי של 3M





תוקף תעודה זו מותנה בצירוף חשבונית קנייה מקורית

היצרן: BISSELL

היבואן: אלקטרה מוצרי צריכה (1951) בע"מ מרח' שמעון ישראלי 3,

את חדש ראשל"צ, טל: 03-9633030.

סוג המכשיר: שואב אבק BISSELL

דגם: 2T22

אנו אחראים בזאת לפעולתו התקינה של המכשיר לתקופה של שנה מתאריך האספקה.

אחריות זו לא תחול במקרים הבאים:

1. קלקול הנובע מהפעלה שלא לפי הוראות השימוש.
2. קלקול עקב אספקת חשמל לא סדירה.
3. שבר מכל סיבה שהיא.
4. תקלה שנגרמה כתוצאה מגורמים חיצוניים: שריפה, גשם, ברק וכד'.
5. נעשה שימוש במכשיר למטרות מסחריות.
6. החלפת שקיות אבק, מסננים ורפידות אינה כלולה באחריות.

האחריות האמורה תקפה בתנאי ששואב האבק יובא לתיקון בצירוף תעודה זו, כשהיא חתומה ע"י הסוחר ובצירוף חשבונית הקניה, **למעבדות המפורטות על הכריכה האחורית של חוברת זו.**

כל טיפול או תיקון שלא באמצעות המעבדות האמורות יגרום לביטולה של אחריות זו.

פרטים למילוי על ידי הסוחר

שם הקונה: _____

תאריך המכירה: _____

חתימת הסוחר: _____

שם וכתובת הסוחר: _____

תחנות שירות ברחבי הארץ


08-6378368 טל:	סלון ששון, א.ת. חדש	1. אילת
08-8525104 טל:	חשמל קמי, מרכז מסחרי ב' חנות 24	2. אשדוד
08-6271410 טל:	מאור הנגב 96, רח' יאיר 27	3. באר שבע
08-6274563		
04-6326088 טל:	אחים איטח, הנשיא 53	4. חדרה
04-8671507 טל:	שירות רם, רח' ביאליק 9	5. חיפה
04-8620162		
04-8227227	- סניף נווה שאנן, רח' טרומפלדור 29	
04-8720642	- סניף קריות, שד' ההסתדרות 279	
04-9832011 טל:	שרות רם האלונים 97	6. טבעון
04-6720991 טל:	המקלט, רח' הגלבוע 5	7. טבריה
02-6241741 טל:	שירות כל, רח' הגידם 1	8. ירושלים
08-9465678 טל:	חשמל אדיר, רח' עמק האלה 80,	9. מודיעין
09-7603355 טל:	שי קור המעבדה, דוד אלעזר 6	10. כפר סבא
09-8337733 טל:	בר מנחם נחום, רח' רמז 15	11. נתניה
04-6522357 טל:	חשמל דושניצקי, שד' ארלזרוב 6	12. עפולה
04-8764559 טל:	ס.א.פ, רח' החרושת 28, א.ת. קרית ביאליק	13. קרית ביאליק
04-6903674 טל:	שירות רם סחר, רח' רסקו 44	14. קריית שמונה
03-9666105 טל:	השחזות ראשון, רח' עין הקורא 11	15. ראשון לציון
03-7511145 טל:	אלקטרו ברק, רח' התקווה 25	16. רמת גן
03-5477745 טל:	מעבדות השרון, ויצמן 1 פינת סוקולוב	17. רמת השרון
09-7603387 טל:	טל אור, רח' עקיבא 1	18. רעננה
03-5371015 טל:	אלקטרו מור, רח' לה גרדיה 22	19. תל אביב
03-6830191 טל:	אליאס, רח' העליה 20	20. תל אביב
	י. רובין מכשירי גילוח בע"מ, רח'	21. תל אביב
3-6872161 טל:	יסוד המעלה 8	

כתובתנו באינטרנט: <http://www.electra-consumer.co.il>

לקוחות נכבדים,
החברה שומרת לעצמה את הזכות לשנות את המפרטים המצוינים בהוראות ההפעלה
ללא הודעה מוקדמת, ומבלי שתחול עליה חבות כל שהיא עקב כך.

שירות ואחריות
אלקטרה

רח' שמעון ישראלי 3, א.ת. חדש, ראשון לציון, מיקוד 75143 טל" 03-9633030

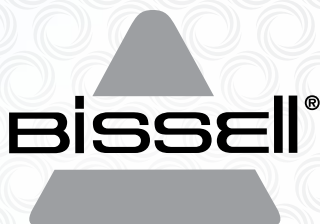

Experts In Home Cleaning™

CLEANview POWERBRUSH

USER'S GUIDE

44L6 SERIES 220-240V

- 2 Thank You
- 3 Safety Instructions
- 4 Product View
- 5 Assembly
- 6-11 Operations
- 12 Maintenance and Care
- 13 Troubleshooting
- 14 Replacement Parts
- 14 Accessories
- 15 Warranty
- 16 Consumer Care




Thanks for buying a BISSELL CleanView PowerBrush

We're glad you purchased a BISSELL CleanView PowerBrush. Everything we know about floor care went into the design and construction of this complete, high-tech home cleaning system.

Your BISSELL CleanView PowerBrush is well made, and we back it with a limited two-year warranty. We also stand behind it with a knowledgeable, dedicated Consumer Care department, so, should you ever have a problem, you'll receive fast, considerate assistance.

My great-grandfather invented the floor sweeper in 1876. Today, BISSELL is a global leader in the design, manufacture, and service of high quality homecare products like your BISSELL CleanView PowerBrush.



Mark J. Bissell
Chairman & CEO

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should be observed, including the following:

READ ALL INSTRUCTIONS BEFORE USING YOUR DEEP CLEANER.

Always connect to a properly Earthed outlet. Unplug from outlet when not in use and before conducting maintenance or troubleshooting.

WARNING: To reduce the risk of fire, electric shock, or injury:

- Use indoors only
- Do not immerse; use only on surfaces moistened by cleaning process
- Do not leave machine when it is plugged in
- Do not service machine when it is plugged in
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent in order to avoid a hazard
- Do not use machine if it has been dropped, damaged, left outdoors or dropped into water
- Do not pull or carry by cord, use cord as a handle, close door on cord, pull cord around sharp corners or edges, run appliance over cord, or expose cord to heated surfaces
- Do not carry the appliance while in use
- Do not unplug by pulling on cord; unplug by grasping plug not the cord
- Do not handle plug or appliance with wet hands
- Do not put any object into appliance openings, use with blocked opening or restrict air flow
- Do not expose hair, loose clothing, fingers or body parts to openings or moving parts
- Do not pick up hot or burning objects
- Do not pick up flammable or combustible materials (lighter fluid, petrol, kerosene, etc.) or use in the presence of explosive liquids or vapours
- Do not use appliance in an enclosed space filled with vapours given off by oil base paint, paint thinner, some moth proofing substances, flammable dust, or other explosive or toxic vapours
- Do not operate the appliance unless the belt door is securely assembled in the location provided

www.bissell.com

- Remove plug from electrical outlet before cleaning or maintaining the appliance
- Not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety
- Children should be supervised to ensure that they do not play with the appliance
- Do not pick up toxic material (chlorine bleach, ammonia, drain cleaner, petrol, etc.)
- Do not modify the Earthed plug
- Do not use for any purpose other than described in this User's Guide
- Use only manufacturer's recommended attachments
- Use only cleaning products formulated by BISSELL for use in this appliance to prevent internal component damage
- Keep openings free of dust, lint, hair, etc.
- Keep appliance on a level surface
- Turn off all controls before unplugging
- Be extra careful when cleaning stairs
- Pay close attention when working around children

SAVE THESE INSTRUCTIONS FOR FUTURE USE

This model is for household use only.

WARNING:


This appliance must be Earthed.

IMPORTANT

FOR OPERATION ON A 220-240 VOLT A.C. 50/60 Hz POWER SUPPLY ONLY.

If your appliance is fitted with a nonrewireable BS 1363 plug it must not be used unless a 13 amp (ASTA approved to BS 1362) fuse is fitted in the carrier contained in the plug. (Spares may be obtained from your BISSELL supplier). If for any reason the plug is cut off, it must be disposed of, as it is an electric shock hazard should it be inserted into a 13 amp socket.

Product view

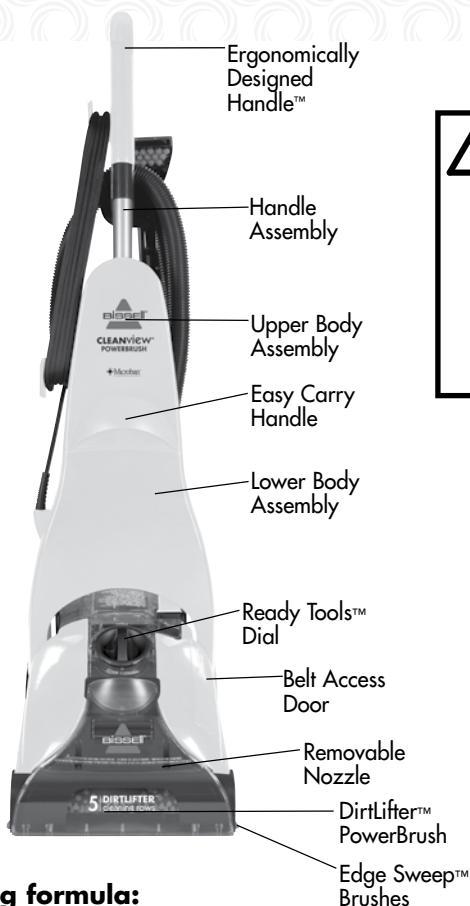

WARNING:

To reduce the risk of fire and electric shock due to internal component damage, use only BISSELL cleaning formulas intended for use with the deep cleaner. Non-BISSELL cleaning formulas may harm the machine and void the warranty.

Cleaning formula:

Keep plenty of genuine BISSELL 2X cleaning formula on hand so you can clean and protect whenever it fits your schedule. Always use genuine BISSELL deep cleaning formulas. Non-BISSELL cleaning formulas may harm the machine and will void the warranty.



1.5 L
2X Wash
& Protect
Professional
Formula w/
Scotchgard™
Protector
#81L5-E



1.5 L
2X Wash &
Protect Pet
Stain & Odour
Formula w/
Scotchgard™
Protector
#66W9-E



1.5 L
2X Wash &
Protect Fresh
Fragrance
Formula w/
Scotchgard™
Protector
#92F4-E



1.5 L
2X Wash
& Protect
Spring Breeze
Fragrance
Formula w/
Scotchgard™
Protector
#12W4-E



1.5 L
2X Wash
& Protect
Lavender
Fragrance
Formula w/
Scotchgard™
Protector
#33D2-E



473 mL
2X Hard
Floor
Solutions
#56L9-E



651 mL
Tough
Stain
Precleaner
#0400-E

Note: Additional BISSELL formula options may be available at your local retailer.

Assembly

Your CleanView PowerBrush comes in five easy to assemble components:

- **Handle assembly**
- **Upper body assembly**
- **Upper hose rack**
- **Lower body assembly**
- **Lower hose rack**



Three Phillips head screws are included and can be found taped to the handle assembly.

The only tool you will need to assemble your cleaner is a Phillips head screwdriver.

1. Slide upper body assembly onto lower body and secure with two screws.
2. With the "tabs" on upper hose rack pointing toward top of handle, attach upper hose rack to handle assembly by sliding it to top of handle until it can go no further. Turn hose rack until it snaps into place.
3. Slide handle assembly down into upper body until it will go no further and secure with screw.
4. Attach lower hose rack to back of upper body by pushing into open slots and sliding down until it snaps into place.
5. Wrap flex hose around hose rack and secure it into notched out holder as shown.
6. Keep flex hose locked in place with hose secure latch.

WARNING:

Do not plug in your cleaner until you have completely assembled it per the following instructions and are familiar with all instructions and operating procedures.

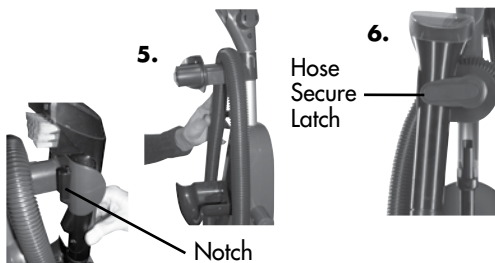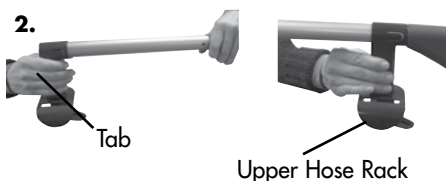

Operations

Special features

Your BISSELL CleanView PowerBrush is a home cleaning system that uses a combination of hand hot tap water, BISSELL advanced cleaning formula, brush agitation and suction to safely clean carpets.

DirtLifter™ Powerbrush

The DirtLifter PowerBrush is designed to enhance cleaning performance. The bristle pattern safely lifts out the deep down dirt while gently grooming carpet fibers. The floating suspension self-adjusts to all carpet heights. When the power is ON and the machine is in the upright position, your carpet is protected because the brushes are lifted up off the carpet.

ReadyTools™ Dial

The ReadyTools feature allows you to choose between FLOOR CLEANING or cleaning with TOOLS simply by turning the dial. The TOOLS setting allows for above floor cleaning of upholstery, stairs, creases along baseboards, and other hard to reach areas. Simply choose the tool that is appropriate for the job, attach to flex hose and you are ready to go.

Measuring cup

Your deep cleaner is equipped with a measuring cup for adding the proper amount of formula to the 2-in-1 tank. For convenience the measuring cup is built into the lid of the 2-in-1 tank.

2-in-1 water tank

Our 2-in-1 water tank system is designed with a heavy duty bladder inside for clean water. As you clean, the clean water in the bladder will empty and mix with the cleaning formula. Dirty water pulled out of your carpet will collect around the outside of the bladder so clean and dirty water are always kept separate. This allows the user to maximize tank space, yet only carry one tank to and from the sink for emptying and filling.

⚠ WARNING:

To reduce the risk of fire, use only BISSELL deep cleaning formula for full size machines in your deep cleaner. Use of cleaning formulas that contain lemon or pine oil may damage this appliance and void the warranty. Chemical spot cleaners or solvent-based soil removers should not be used. These products may react with the plastic materials used in your deep cleaner causing cracking or pitting.



ReadyTools
Dial



Measuring Cup



Carry
Handle

ATTENTION:

Some Berber carpets have a tendency to fuzz with wear. Repeated strokes in the same area with an ordinary vacuum or deep cleaner may aggravate this condition.

Operations

Special features continued

Scotchgard™ Protector

Carpet protection applied at the mill typically wears down over time from heavy foot traffic and everyday cleaning, including deep cleaning. To help restore this important protection, only BISSELL offers cleaning formulas with Scotchgard protector. This offers extra protection against dirt and tough stains to keep your carpets looking good longer.




Before you clean

1. Plan activities to give your carpet time to dry.
2. **Move furniture** to another area if cleaning an entire room (optional).
3. Vacuum area with a dry vacuum cleaner before deep cleaning.
4. Plan your cleaning route to leave an exit path. It is best to begin cleaning in the corner farthest from your exit.
5. **Pretreating** (optional)
Pretreating is recommended to improve cleaning effectiveness for heavily soiled carpet in high traffic areas such as entry ways and hallways.

To pretreat:

- A. Using the BISSELL Tough Stain Precleaner, generously spray evenly over soiled area, do not overwet.
- B. Wait 3-5 minutes before deep cleaning.
- C. Clean as normal using your BISSELL deep cleaner, following the instructions below.

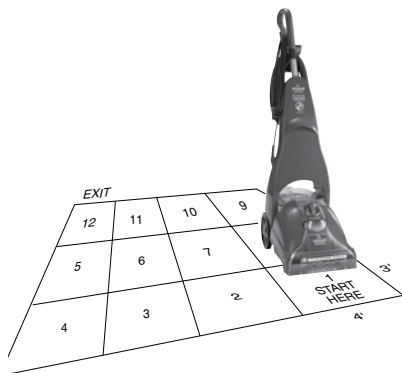

Operations

Fill the 2-in-1 water tank

1. Remove the tank from the base of the machine by lifting the tank carry handle.
2. Carry like a bucket to the sink. Rotate the handle forward to unlatch the lid. Remove lid, turn over and locate built in measuring cup.
3. Fill with BISSELL 2X formula to the indicated fill line on the built in measuring cup and pour into mouth of the bladder.
4. Fill the bladder with clean hand hot tap water.
***Do not boil or microwave water as it can destroy the bladder.**

5. Replace the top of the tank by matching the lid and tank edges. Handle must be in the forward position in order to replace lid. Rotate the handle to the carrying position to latch the lid.

Note: Remember to secure the lid and test to make sure it is secure before picking up the tank.

6. Place tank into machine base, seating firmly in place. Rotate tank handle back into latched position.



Tip: Thorough vacuuming before deep cleaning will prevent early clogging of the lint trap.


WARNING:

To reduce the risk of fire and electric shock due to internal component damage, use only BISSELL cleaning formulas intended for use with the deep cleaner. Non-BISSELL cleaning formulas may harm the machine and void the warranty.

Operations

Carpet cleaning


1. Plug the deep cleaner into a proper outlet. Turn the power ON by pressing the red power switch on the back of the unit with your foot.
2. With your foot, press the gray handle release lever located on the back of unit below water tank.
3. While pressing the spray trigger, make one slow forward wet pass and another back. Let the formula and DirtLifter PowerBrush do the work for you.
Caution: Do not overwet.
4. Release the spray trigger and make one slow forward and backward pass over the same area to remove any residual dirty water and aid in drying.
5. Repeat cleaning passes until solution being pulled up appears clean. Continue passes without pressing the spray trigger until you can't see any more water being suctioned up.

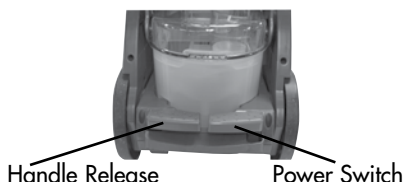

Empty the 2-in-1 water tank/clean removable nozzle

1. Turn power switch OFF. Remove the 2-in-1 water tank from the base using the tank carry handle. Carry the tank like a bucket to a utility sink or outside where you will dispose of the collection water. Remove the top of the tank by rotating the handle forward to unlatch lid and lifting lid off tank.
2. Empty collection water from bottom of tank.
3. After each use, remove and rinse the lint screen located on the tank lid.
4. If nozzle needs to be cleaned, remove by grasping handle at the top and pulling forward. Clean removable nozzle by rinsing under running water.
5. When finished, replace nozzle by slightly raising front of machine to line up slots on the base with the hooks on nozzle. Attach at base first and then click nozzle into place.

NOTE: If nozzle is not attached properly loss of suction will occur.

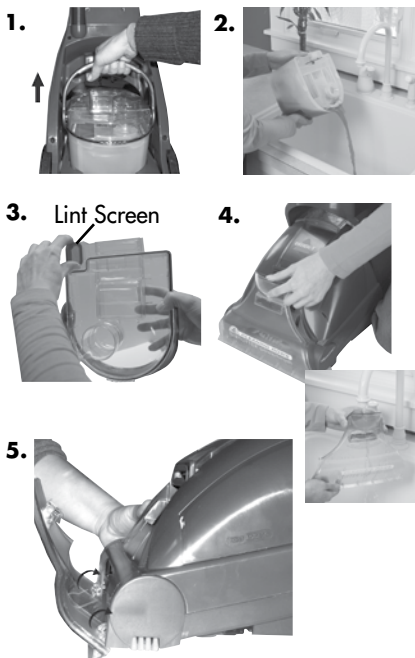

Operations

Empty the 2-in-1 water tank/clean removable nozzle continued

6. To continue carpet cleaning, refer back to pages 8 through 9, beginning with "Fill the 2-in-1 water tank" on page 8.


If cleaning is complete, refer to the "Maintenance and care" section on page 12.

Ready Tools™

Your CleanView PowerBrush comes equipped with a hose and at least one attachment for cleaning stairs, upholstery, and more.

Important! If using the machine to clean upholstery, check upholstery tags.

1. Check manufacturer's tag before cleaning. "W" or "WS" on the tag means you can use your deep cleaner. If the tag is coded with "X" or "S" (with a diagonal strike through), or says "Dry Clean Only," do not proceed. Do not use on velvet or silk. If manufacturer's tag is missing or not coded, check with your furniture dealer.
2. Check for colourfastness in an inconspicuous place.
3. If possible, check upholstery stuffing. Coloured stuffing may bleed through fabric when wet.
4. Plan activities to give upholstery time to dry.
5. Vacuum thoroughly to pick up loose debris and pet hair. Use a vacuum with a brush attachment and a crevice tool to clean in fabric folds and tufts.
6. To begin cleaning with attachments, follow the instructions on pages 7-8 for filling the 2-in-1 water tank.
7. Set the ReadyTools dial to the TOOLS setting. This will allow spray and suction from the hose.
8. Attach the cleaning tool to the end of the hose.

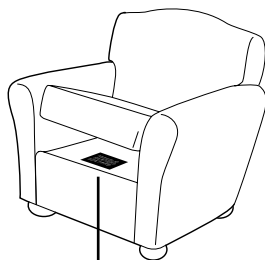

Manufacturer's tag

Tip: To clean with sliding crevice tool, slide brushes forward to clean stain, slide back to suction



Operations


Ready Tools™ continued

9. Clean by pressing the spray trigger to spray solution onto the area to be cleaned. Slowly move the tool back and forth over the soiled surface. Release the spray trigger to suction dirty water. Continue to clean in the area, working in small sections, until dirt is removed.


Caution: Do Not Overwet.

10. When finished cleaning, remove and rinse tool(s) in clean, running water.
11. It is recommended that you suction clean water from a bowl to rinse out the hose.
12. Before wrapping hose onto tool rack, lift end of hose and stretch out to ensure all water is cleared from hose.
13. Wrap flex hose around tool rack.
14. Empty 2-in-1 water tank and rinse out, following instructions on pages 9 through 10.
15. If the ReadyTools dial becomes difficult to turn, the diverter assembly that holds the dial may need to be cleaned. To clean, first remove nozzle and locate screw that holds the diverter assembly in place. With a Phillips screwdriver, remove the screw and set aside.
16. Remove diverter assembly; hold under running water making sure water flows through and around the dial. Turn the dial about 10 times clockwise and 10 more times counter clockwise. This should free up any debris.
17. Wipe diverter assembly with a soft cloth and replace back on machine. Replace nozzle.
18. Return ReadyTools dial to FLOOR CLEANING setting.

11.



12.



Run water through here

15.



Screw

16.



Maintenance and care

Machine care

For best results, a few simple steps can assure your machine is well maintained after your cleaning is complete.

1. Turn power switch OFF. Unplug the machine and wrap the power cord.
2. After emptying the 2-in-1 water tank, rinse it with running hot tap water, taking care to clean underneath and around the heavy duty bladder. Clean out red lint screen. Removable nozzle may be rinsed if necessary. Refer to page 9.
3. Replace the 2-in-1 water tank on the machine.
4. Any loose hair or debris can be pulled from the brush roll and thrown away.
5. To clean attachments, remove from hose and rinse in clean, running water. Dry before storing. Clean the hose by suctioning clean water from a bowl. Before wrapping back on machine, lift end of hose and stretch out to ensure all water is cleared from hose. Refer to page 11, illustrations 11 and 12.
6. Wipe the machine's exterior with a soft cloth.
7. After carpet is dry, vacuum again to remove hair and fuzz.


Machine storage

Put the unit away in a closet or basement for the next use. Store cleaner in a protected, dry area. Since this product uses water, it must not be stored where there is a danger of freezing. Freezing will damage internal components and void the warranty.

Troubleshooting

Reduced Spray OR No Spray Possible causes

1. Bladder may be empty.
2. 2-in-1 tank may not be seated properly.
3. Pump may have lost prime.
4. The pump belt may be broken.

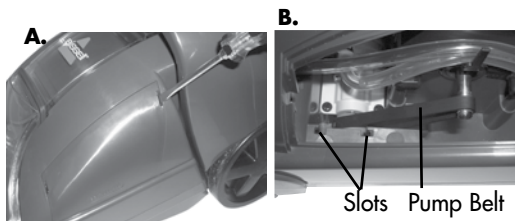

DirtLifter PowerBrush Does Not Turn Possible causes

1. The brush belt or pump belt is off or broken.

Cleaner Not Picking Up Solution Possible cause

1. ReadyTools dial may be on the wrong setting.
2. Poor tool position. (Hand held attachments only).
3. Removable nozzle may not be properly attached.
4. 2-in-1 tank lid is not properly installed.
5. 2-in-1 tank is not properly seated.
6. 2-in-1 tank has picked up maximum dirty water.
7. The lint screen may be clogged.

Other maintenance or service not included in the manual should be performed by an authorized service representative.

Thank you for selecting a BISSELL product.



WARNING:

To reduce the risk of fire, electric shock or injury, unplug from the outlet before servicing.

Remedies

1. Turn power switch OFF; Refill bladder with clean hot tap water.
2. Turn power switch OFF; remove tank and reset tanks.
3. Turn power switch OFF; after 1 minute turn ON and depress spray trigger.
4. Turn power switch OFF and unplug from the outlet. To check if a pump belt has broken, you will need a flat head screwdriver.

A. Insert the blade end into the slot of the belt access door to release. Examine the belt for breakage. You should be able to see the pump belt looped around the motor shaft. If it is broken or missing, please refer to Replacement Parts on page 14. A replacement belt may be ordered by calling BISSELL Consumer Care. Complete installation instructions will accompany the replacement belt.

B. When replacing belt access door be sure to line up slots of belt access door with slots in machine, slide door into place and snap shut.

Remedies

1. Refer to Remedy 4 above to check if brush belt or pump belt is broken.

Remedies

1. Set ReadyTools dial to either FLOOR CLEANING or TOOLS for the cleaning job.
2. Adjust angle; apply more downward pressure.
3. Make sure nozzle is on correctly by slightly raising front of machine to line up slots on the base of the machine with the hooks on nozzle. Attach at base first and then click nozzle into place. Refer to image 5 on page 9.
4. Re-install lid; refer to the image on page 8.
5. 2-in-1 tank must be firmly seated to function; remove and reseal 2-in-1 tank.
6. Empty 2-in-1 tank and refill, refer to the Operation section.
7. Clean out lint screen. Refer to page 9.

Please do not return this product to the store.

Replacement parts

Item	Part No.	Part Name
1	203-0104	Tank Assembly Complete
2	203-0102	Tank Base
3	203-8114	Removable Nozzle
4	215-0628	Replacement Pump Belt (with instructions)
5	015-0621	Replacement Brush Belt (with instructions)
6	203-0105	Lint Screen



Accessories and formula

While not all of these parts may not have come with your machine, all are available to you for purchase, if desired.

Item	Part No.	Part Name
1	203-0149	Hard Floor Tool
2	203-6651	3" Tough Stain Tool
3	203-8114	4" Upholstery Tool
4	203-6654	6" Stair Tool
5	203-6652	Powered TurboBrush™ Hand Tool
6	203-0116	Spraying 2-in-1 Crevice Tool w/Brush
7	203-6655	Spraying Crevice Tool
8	203-8113	Deep Reach™ Tool
9	210-3040	Mesh Tool Storage Bag



Cleaning Formula: Refer to the bottom of page 4 of this guide for a full selection of cleaning formula available for purchase.

If your BISSELL product should require service:

Call BISSELL Consumer Care at the numbers below and we will give you the location of a BISSELL Authorized Service Center in your area. If you have questions about your warranty or need replacement parts please contact the numbers below.

For Israel inquiries:

Sunday - Thursday 9 am - 5 pm

Electra Consumer Prod. 1951 Ltd.

1, Sapir St.

New Industrial Zone

Rishon Le Zion 75704

Israel

Telephone: 039633030

For Middle East & Africa inquiries:

Sunday - Thursday 9 am - 6 pm

BISSELL Middle East FZE

PO Box 61286

Office 017, Technopark Building

Jebel Ali Free Zone

Dubai

United Arab Emirates

Telephone: 971-4-881-8597

Or visit the BISSELL website - **www.bissell.com**

When contacting BISSELL, have model number of cleaner available.

Please record your Model Number: _____

Please record your Purchase Date: _____

NOTE: Please keep your original sales receipt. It provides proof of purchase date in the event of a warranty claim. See Warranty on page 15 for details.



Do not throw the appliance away with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this you will help to preserve the environment.



Experts In Home Cleaning™

©2012 BISSELL Homecare, Inc
Grand Rapids, Michigan
All rights reserved. Printed in China
Part Number 120-4538
Rev 5/12
Visit our website at:
www.bissell.com
Scotchgard is a trademark of 3M