


MOTOROLA

C341a
CDMA

START HERE >

Welcome

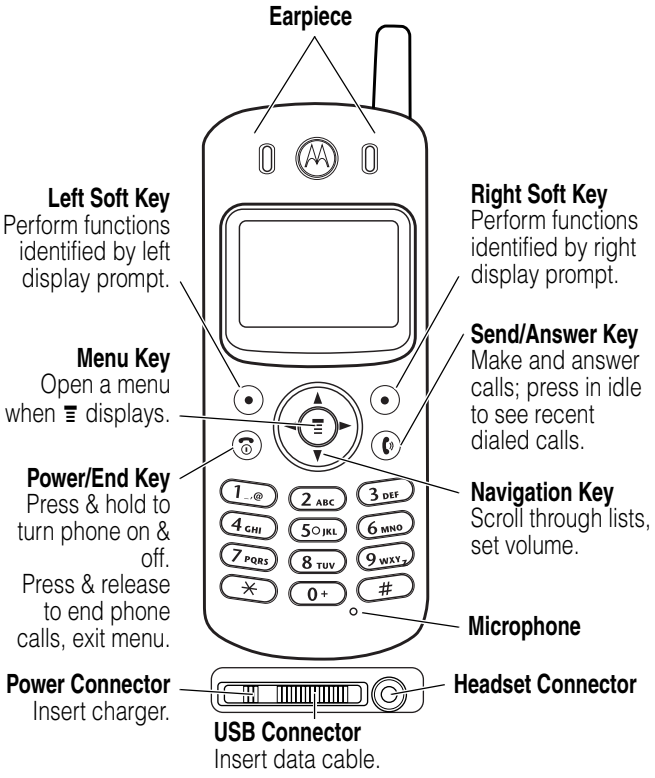

You can change your phone's covers and keypads (see "Changing Your Phone's Cover" on page 9). Your phone may not appear exactly as the phone image above.

All key locations, sequences and functions remain the same with any of the various covers.

Motorola, Inc.,
Consumer Advocacy Office
1307 East Algonquin Road
Schaumburg, IL 60196

1-800-331-6456 (United States)
1-888-390-6456 (TTY/TDD United States)
1-800-461-4575 (Canada)

www.motorola.com (United States)
www.motorola.ca (Canada)

MOTOROLA and the Stylized M Logo are registered in the US Patent & Trademark Office. All other product or service names are the property of their respective owners.

© Motorola, Inc. 2004.

The information contained in Motorola's user's guides is believed to be correct at the time of printing. Motorola reserves the right to change or modify any information or specifications without notice. The contents of Motorola's user manuals are provided "as is." Except as required by applicable by law, no warranties of any kind, either expressed or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or contents of this guide.

Manual number: 6809484A28-O

Contents

Getting Started 5
What's in the Box? 5
About this Guide 5
Installing the Battery 6
Charging the Battery 7
Battery Use 8
Changing Your Phone's Cover 9
Turning Your Phone On 12
Adjusting the Volume 12
Making a Call 13
Answering a Call 13
Viewing Your Phone Number 13
Learning to Use Your Phone 14
Using the Display 14
Using the 4-Way Navigation Key 16
Using Menus 17
Entering Text 19
Locking and Unlocking Your Phone 27
Changing a Code or Password 29
If You Forget a Code or Password 29
Locking and Unlocking the Keypad 30
Setting Up Your Phone 31
Storing Your Name and Phone Number 31
Setting the Time and Date 31
Setting a Ring Style 31
Setting Answer Options 32
Setting a Wallpaper Image 33
Setting a Screen Saver Image 33

Zooming In and Out 34
Setting Display Color. 35
Setting Display Contrast 35
Adjusting the Backlight 35
Calling Features 36
Changing the Active Line 36
Redialing a Number 36
Using Automatic Redial. 36
Using Caller ID 37
Canceling an Incoming Call 37
Turning Off a Call Alert 38
Calling an Emergency Number 38
Viewing Recent Calls 39
Returning an Unanswered Call 40
Using the Notepad 41
Attaching a Number 42
Calling With Speed Dial 42
Calling With One-Touch Dial 42
Using Voicemail. 43
Muting the Phone 44
Using Call Waiting. 45
Phone Features. 46
Main Menu 46
Feature Quick Reference 48
Specific Absorption Rate Data 60
Index 62

Getting Started



CAUTION: Before using the phone for the first time, read the *Important Safety and Legal Information* included in the gray-edged pages at the back of this guide.

What's in the Box?

Your wireless phone typically comes with a battery and a charger. Optional accessories can customize your phone for maximum performance and portability.

To purchase Motorola Original™ accessories, call the Motorola Customer Call Center at 1-800-331-6456 in the United States or 1-800-461-4575 in Canada.

About this Guide

This user's guide introduces you to your Motorola wireless phone and shows you how to use its features.

Note: A reference guide for your phone is also available that describes your phone's features in more detail.

To obtain the reference guide for your phone, or another copy of this user's guide, see the Motorola Web site at:

`http://motorola.com/consumer/manuals`

or contact the Motorola Customer Call Center at 1-800-331-6456 in the United States or 1-800-461-4575 in Canada.

Optional Features



This label identifies an optional network or subscription-dependent feature that may not be offered by all service providers in all geographical areas. Contact your service provider for more information.

Optional Accessories



This label identifies a feature that requires an optional Motorola Original™ accessory.

Installing the Battery

Install and charge the battery before you use your phone.


CAUTION: This phone comes with a 750 mAh (milliamp hours) battery and should be used only with Motorola Original batteries rated at 750 mAh or 1100 mAh. Use of any other battery could affect the performance of the phone and could also cause the phone to become noncompliant with the Specific Absorption Rate levels established by the FCC's Radiofrequency Exposure Guidelines.



™ Your phone is designed to be used only with Motorola Original batteries and accessories.

To Install the Battery

1. Remove the phone's back cover as described in "Changing Your Phone's Cover" on page 9.
2. Insert the battery, printed arrow first, **under the tabs** at the bottom of the battery compartment and push down.

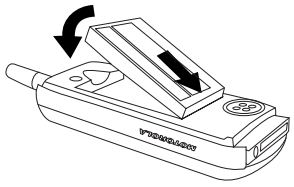

3. Replace the phone's cover.

Charging the Battery

New batteries are shipped partially charged. Before you can use your phone, you need to install and charge the battery, as indicated by the following instructions. Some batteries perform best after several full charge/discharge cycles.

To Charge the Battery

1. Plug the charger into the left jack on the bottom of your phone.



2. Plug the other end of the charger into the appropriate electrical outlet.
3. When your phone indicates **Charge Complete**, remove the charger.

When you charge the battery, the battery level indicator in the upper right corner of the display shows how much of the charging process is complete. See “Battery Level Indicator” on page 15.



Battery Use

Caution: To prevent injuries or burns, do not allow metal objects to contact or short-circuit the battery terminals.

To maximize battery performance:

- Always use Motorola Original™ battery chargers. The phone warranty does not cover damage caused from using non-Motorola battery chargers.
- New batteries or batteries that have been stored for a long time may require a longer initial charge time.
- Keep the battery at or near room temperature when charging.
- Do not expose batteries to temperatures below -10° C (14° F) or above 45° C (113° F). Always take your phone with you when you leave your vehicle.
- When you do not intend to use a battery for a while, store it uncharged in a cool, dark, dry place, such as a refrigerator.
- Over time, batteries gradually wear down and require longer charging times. This is normal. If you charge your battery regularly and notice a decrease in talk time or an increase in charging time, then it is probably time to buy a new battery.

The rechargeable batteries that power this product must be disposed of properly and may need to be recycled. Refer to your battery's label for battery type. Contact your local recycling center for proper disposal methods. Never dispose of batteries in a fire because they may explode.





Changing Your Phone's Cover

Since you can change your phone's covers and keypads, it may not appear exactly as the phone pictured. All key locations, sequences, and functions remain the same with any of the covers.

Important: To maintain compliance with FCC RF exposure guidelines, use only the housings supplied by Motorola with your CDMA phone, or a housing approved by Motorola for use with your CDMA phone. Use of housings not supplied by Motorola, or not approved by Motorola for use with your CDMA phone, may cause the phone-housing combination to exceed FCC RF exposure guidelines.

Removing a Cover and Keypad

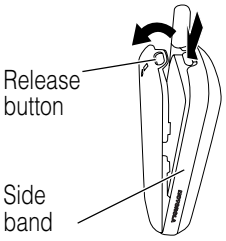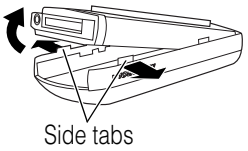Do This	
1 Press down on the cover release button at the top of your phone. **2** Pull the top of the phone's back cover to release it.	
Note: If the cover has a removable side band, remove it at this point.	
3 Pull the side tabs away from the phone, then **4** Lift up on the bottom of the phone to pull it out of the front cover.	

Note: Always use Motorola Original™ covers. The phone warranty does not cover damage caused from using non-Motorola accessories.


Installing a Cover and Keypad

Always use the keypad and side band (if applicable) that matches the new cover.

Do This

Note: If your phone has an end cap, install it before attaching the front cover.

1 Place the keypad in the new front cover and slide the top of the phone into the top of the new front cover.

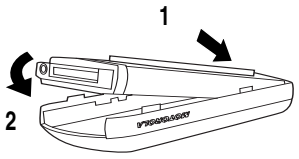


2 Press the bottom of the phone into the front cover until the side tabs snap into place.

Note: If the cover has a removable side band, attach it at this point.

3 Insert the bottom of the back cover.

4 Press the top of the back cover down until it hooks over the cover release button.

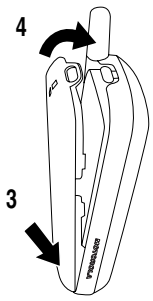

Turning Your Phone On

To Turn Your Phone On

1 Press and hold ⏻ (the End/Power key)



2 If necessary, enter your four-digit unlock code and press **OK** (•) to unlock your phone

Note: The unlock code is originally set to 1234 or the last four digits of your phone number (see page 27).

Adjusting the Volume

Press right and left on the ⊕ to:

- increase or decrease earpiece volume during a call
- increase or decrease the ringer volume setting when the idle display is visible

  Tip: At the lowest volume setting, press ⊕ down to activate silent alert. Press up to reset ring alert.
- Turn off an incoming call alert

Making a Call

Do not block the antenna while you are on a call.



Press		To
1	keypad keys	dial the phone number **Tip:** If you make a mistake, press **DELETE** (⊙) to delete the last digit. Holding **DELETE** (⊙) clears all digits.
2	✆	make the call
3	⏻	end the call and "hang up" the phone when you are finished

Answering a Call

When you receive a call, your phone rings and/or vibrates and displays an incoming call message.

Press		To
1	✆ or **ANSWER** (⊙)	answer the call
2	⏻	end the call and "hang up" the phone when you are finished

Note: If the phone is locked, unlock it to answer the call.

Viewing Your Phone Number


Press ☰ #⃣ to view your number from idle. While you are on a call, press ☰ > **My Tel. Numbers**.

Learning to Use Your Phone

See page 1 for a basic phone diagram.

Using the Display


The *idle display* (shown below) is the standard display when you are *not* on a call or using the menu.

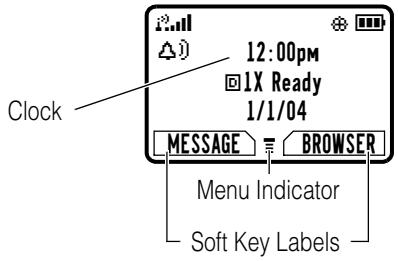

The ☰ (menu) indicator at the bottom center of the display indicates you can press the menu key (☰) to go to the main menu to see more features.

Labels at the bottom corners of the display show the current soft key functions. Press the left soft key (⊙) or right soft key (⊙) to perform the function indicated by the left or right soft key label.

At the top of the display are a number of status indicators:

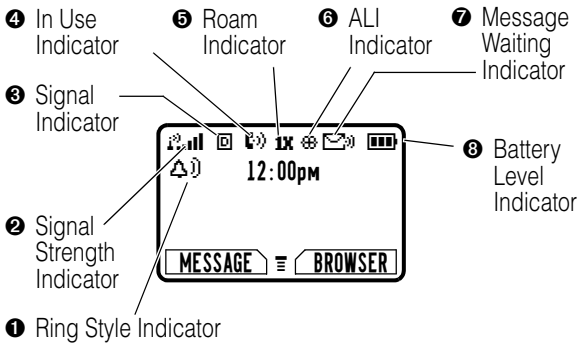

❶ Ring Style Indicator Shows the ring style setting.

= loud	= soft
= vibrate	= vibrate and ring
= silent	

❷ Signal Strength Indicator Vertical bars show the strength of the network connection. You cannot make or receive calls when the (no signal) indicator is displayed.



❸ Signal Indicator Shows when you are receiving a digital or analog signal.

❹ In Use Indicator Shows that a call is in progress.



❺ Roam Indicator Shows that your phone is seeking or using another network system outside your home network. A 1x icon indicates that it is using a CDMA 1X network.

❻ **ALI Indicator** Shows the status of the automatic location information feature:

ALI on ALI off




❼ **Message Waiting Indicator** Displays when you receive a text message, voice message, or both.



❽ **Battery Level Indicator** Vertical bars show the battery charge level. Recharge the battery when you see **Low Battery** and hear the low battery alert.

Using the 4-Way Navigation Key


Use the 4-way navigation key to navigate the menu system, change feature settings, and play games.

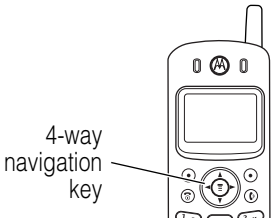

Tip: Down and up are the primary movements within menus. Move left and right to change feature settings, navigate the datebook, and edit text.

Using Menus

From the idle display, press ⓜ to display the main menu.

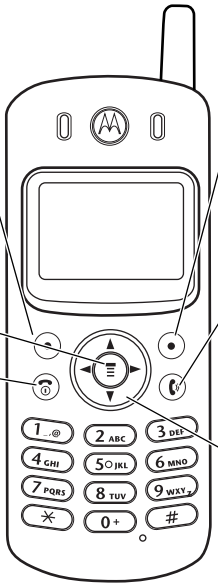

Left Soft Key

Perform functions identified by left display prompt.

Menu Key

Power/End Key

Press & hold to power phone on & off.

Press & release to end phone calls and exit menus.

Right Soft Key

Perform functions identified by right display prompt.

Send/Answer Key

Make and answer calls & view recent dialed calls.

Navigation Key

Scroll through menus and lists, and set feature values.

Select a Menu Feature

From the idle display, select a menu feature as follows:


Find the Feature	ⓜ > **Messages** > **Create Message**

This example shows that from the idle display, you must press ⓜ, scroll to and select **Messages** from the main

menu, then scroll to and select **Create Message**. Use ⊕ to scroll, and use the left/right soft keys to select the functions listed in the bottom left and right corners of the display.

Select a Feature Option


Some features require you to select an item from a list:

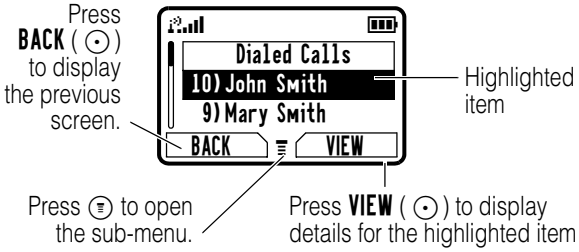


- Press ⊕ to scroll up or down to highlight an item.
- In a numbered list, press a number key to highlight the item.
- In an alphabetized list, press a key repeatedly to cycle through the letters on the key and highlight the closest matching list item.
- When an item has a list of possible values, press ⊕ to the left or right to scroll and select a value.
- When an item has a list of possible numeric values, press a number key to set the value.

Entering Text


Some features require you to enter information:

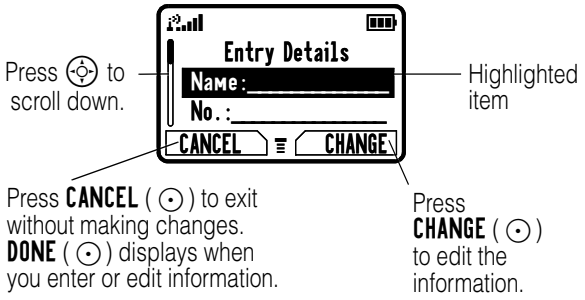

The message center lets you compose and send text messages. A *flashing cursor* shows where text will display:

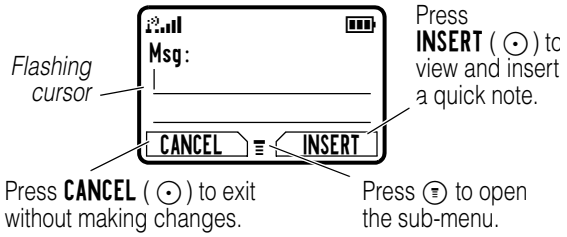

When you enter text using the standard tap method (see page 21), the flashing cursor changes to a *block cursor*, and the soft key functions change:

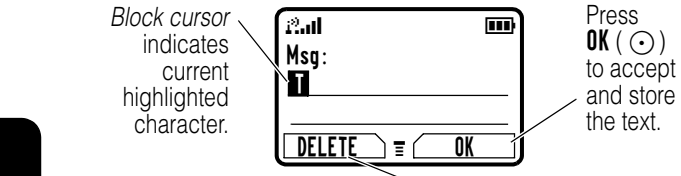

Choosing a Text Entry Method

Multiple text entry modes make it easy for you to enter names, numbers, and messages.

Press ⓕ from any text entry screen to select a text entry method:

iTAP (**it**)	Let the phone predict each word as you enter it (see page 23).
Tap Method (**T**)	Enter letters, numbers, and symbols by pressing a key one or more times (see page 21).
Numeric (12)	Enter numbers only.
Symbol (@)	Enter symbols only (see page 26).

Note: The text entry method you select remains active until you select another method.

Using the Tap Method

This is the standard method for entering text on your phone.

Press ⓜ from a text entry screen and select **Tap Method**.

Press		To
1	A number key 1 or more times	select a letter, number, or symbol shown in the "Character Chart" on page 22
2	Number keys	enter the remaining characters
3	**OK** (⊙)	store the text

Tap Method Text Entry Rules

- Press a number key repeatedly to cycle through its characters (see chart on page 22).
- If you do not press a key for 2 seconds, the character in the block cursor is accepted, and the cursor moves to the next position.
- Press ⊕ left or right to move the flashing cursor to the left or right in a text message.
- The first character of every sentence is capitalized. Press ⊕ down to force the character to lowercase while it is highlighted by the block cursor.

- Your phone may support multiple languages. The current language setting determines whether a new message begins on the left or right side of the display.

  You can switch languages within a message. Press ⊛ to select the text entry method and language you want to use.

- If you enter or edit information and do not want to save your changes, press ⏻ to exit without saving.
  - Press and hold a number key to cycle between tap, iTAP, and numeric text entry methods.



Character Chart

Use this chart as a guide for entering characters with the tap method.

1 .@	*space* . 1 ? ! , @ _ & ~ : ; " - ( ) ' ¿ ¡ % £ $ ¥ ¤ €
2 ABC	a b c 2 ä å á à â ã ά α β ç
3 DEF	d e f 3 δ ð ë é è ê ε φ
4 GHI	g h i 4 ğ ï í î ι γ η ι
5 JKL	j k l 5 κ λ
6 MNO	m n o 6 ñ ö ø ó ò ô õ μ υ ω
7 PQRS	p q r s 7 π ß ş σ
8 TUV	t u v 8 θ ü ú ù û τ
9 WXYZ	w x y z 9 Þ ξ ψ
0 +	+ - 0 x * / \ [ ] = > < # §

Note: This chart may not reflect the exact character set available on your phone.

Using iTAP® Software Text Entry Method

iTAP software is a predictive text entry method that lets you enter a word using one keypress per letter.


Press ⓜ from any text entry screen and select **iTAP**.

Entering Words

Do This		To
1	Press a number key one time	enter the first letter of the word The letters associated with the key are shown at the bottom of the display.
2	Press number keys (one per letter)	enter the rest of the word Alternative words and letter combinations are shown at the bottom of the display. The word choices are updated with each keypress.
3	Press ⊕	highlight the word you want
4	Press **SELECT** (⊙)	enter the word at the flashing cursor A space is automatically inserted after the word.



For example, to spell the word “art,” press 2 ABC 7 PQRS 8 TUV. The display shows:

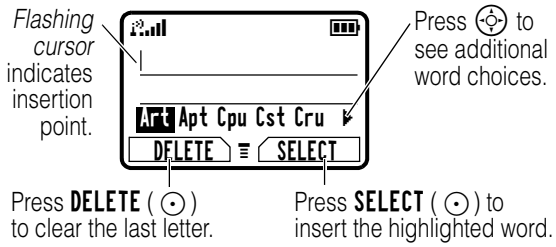

Entering Novel Words

If the word you want is not displayed by the iTAP software:

Do This		To
1	Press **DELETE** ( ) one or more times	delete letters until you see a letter combination that matches the start of the word
2	Press left or right	highlight the letter or letter combination
3	Press **SELECT** ( ), then press to the left	shift the cursor to the left and “lock” the selected word portion
4	Continue to enter letters and highlight letter combinations	spell the word

Entering Punctuation

Press	To
0+ or 1 ∞	enter punctuation or other characters (see “Character Chart” on page 22).

Using Capitalization

The first word of a sentence is automatically capitalized, with the words that follow in lowercase.

Press	To
⊕ up or down	change the words to initial character capitalized, all uppercase characters, or all lowercase characters

Entering Numbers

Do This		To
1	Enter the first digit and press ⊕ to highlight it	put the iTAP software in the number entry method
2	Press number keys	add digits to the number
3	Press SELECT (⊙)	enter the number



Deleting Letters and Words

Place the cursor to the right of the text you want to delete, and then:

Do This	To
Press **DELETE** (⊙)	delete one letter at a time
Hold **DELETE** (⊙)	delete the entire message



Using the Symbol Method

To enter symbol characters in a message, press ☰ from any text entry screen and select **Symbol**.

Do This		To
1	Press a number key one time	display its symbol options at the bottom of the display See “Symbol Chart” on page 27.
2	Press ⊕ **or** Press the number key repeatedly	highlight the symbol you want
3	Press **SELECT** (⊙)	enter the symbol

Symbol Chart

Use this chart as a guide for entering characters in symbol method.

1	*space* . ? ! , @ _ & ~ : ; " - ( ) ' ¿ ¡ % £ $ ¥ ¤ €
2 ABC	@ _ \
3 DEF	/ : ;
4 GHI	" & '
5 JKL	( ) [ ] { }
6 MNO	¿ ¡ ~
7 PQRS	< > =
8 TUV	$ £ ¥ ¤ €
9 WXYZ	# % *
0 +	+ - x * / \ [ ] = > < # §

Locking and Unlocking Your Phone

You can lock your phone manually or set the phone to lock automatically whenever you turn it off.

A locked phone still rings or vibrates for incoming calls or messages, *but you must unlock it to answer.* To use a locked phone, enter the unlock code.

You can make emergency calls on your phone even when it is locked (see page 38).

Lock Your Phone Manually

Find the Feature Ⓜ > Settings > Security > Phone Lock > Lock Now

Press	To
1 keypad keys	enter your unlock code
2 OK (⊙)	lock the phone



Unlock Your Phone

Tip: Your phone's unlock code is set to 1234 or the last four digits of your phone number.

At the Enter Unlock Code prompt:

Press	To
1 keypad keys	enter your unlock code
2 OK (⊙)	unlock your phone

Set Your Phone to Lock Automatically

You can set your phone to lock every time you turn it off.

Find the Feature Ⓜ > Settings > Security > Phone Lock > Automatic Lock > On

Press	To
1 keypad keys	enter your unlock code
2 OK (⊙)	activate automatic lock

Changing a Code or Password

Your phone's four-digit unlock code is set to 1234, and the six-digit security code is set to 000000 at the factory. Your service provider may reset these numbers before you receive your phone.

If your service provider has *not* reset these numbers, we recommend that you change them to prevent others from accessing your personal information. The unlock code must contain four digits, and the security code must contain six digits.



To change a code or password:

Find the Feature Ⓜ > Settings > Security > New Passwords

If You Forget a Code or Password

If you forget your security code, contact your service provider.

If you forget your unlock code, try entering 1234 or the last four digits of your phone number. If that does not work, at the **Enter Unlock Code** prompt:

Press		To
1	Ⓜ	display the unlock code bypass screen
2	keypad keys	enter your security code
3	OK (⊙)	submit your security code

Locking and Unlocking the Keypad

You can lock the keypad to prevent accidental keypresses (for example, when carrying your phone in a purse or pocket).

Press	To
ⓜ ⊛	lock or unlock your keypad



Note: Incoming calls and messages unlock the keypad.

Setting Up Your Phone

Storing Your Name and Phone Number



To store or edit the name and phone number information on your phone:

Find the Feature Ⓜ > Settings
> Phone Status
> My Tel. Numbers

Setting the Time and Date

To use the datebook, you must set the time and date.

Find the Feature Ⓜ > Settings
> Other Settings
> Initial Setup
> Time and Date

Setting a Ring Style

Your phone rings or vibrates to notify you of an incoming call or other event. This ring or vibration is called an *alert*.

You can select one of five different ring styles:

= loud	=soft
=vibrate	=vibrate and ring
=silent	

The ring style indicator in the display shows the current ring style (see page 15).

To set a ring style:

Find the Feature > Ring Styles > Style

Press	To
1	scroll to the ring style
2 SELECT ( )	select the ring style

Each ring style contains settings for specific event alerts, ringer ID, and ringer and keypad volume. To change these settings:

Find the Feature > Ring Styles
> Style Detail

* Style represents the current alert style, such as **Loud**, **Soft**, **Vibrate**, **Vibe&Ring**, or **Silent**.

Setting Answer Options

You can use different methods to answer an incoming call.

Find the Feature > Settings
> In-Call Setup
> Answer Options

The **Answer Options** menu includes:

Multi-Key	answer by pressing any key

Setting a Wallpaper Image

You can set a picture or an animation as a wallpaper (background) image in your phone's idle display.

Note: When you set an animation as a wallpaper image, only the first frame of the animation is displayed.

Find the Feature MENU > **Settings** > **Other Settings** > **Personalize** > **Wallpaper**

Setting	Description
Picture	select the picture or animation for the background image in your idle display
Layout	select **Center** or **Tile**

Setting a Screen Saver Image

You can set a picture or an animation as a screen saver image. The image displays when the phone detects no activity for a specified time.

The screen saver image fills the display. An animation repeats for one minute, then the first frame of the animation displays.

Find the Feature MENU > Settings > Other Settings > Personalize > Screen Saver

Setting	Description
Picture	select the picture that displays when your phone is idle
Delay	select how long your phone must be idle before the screen saver picture displays



Zooming In and Out

Press and release MENU, then press and hold MENU to zoom in and out on the display. Zoom in to increase text size, zoom out to display more information.

You can also zoom in and out from the menu:

Find the Feature MENU > Settings > Other Settings > Initial Setup > Zoom

Setting Display Color

You can select the color palette that your phone uses to display indicators, highlights, and soft key labels.

Find the Feature MENU > Settings > Other Settings > Personalize > Color Style

Setting Display Contrast

Find the Feature MENU > Settings > Other Settings > Initial Setup > Contrast

Adjusting the Backlight

You can set the amount of time that the display backlight remains on, or turn off the backlight to conserve battery power.

Find the Feature MENU > Settings > Other Settings > Initial Setup > Backlight



Caution: Your battery will not last as long if you use the **Continuous** setting. Your phone might not offer this setting.

Calling Features

For basic instructions on how to make and answer calls, see page 13.

Changing the Active Line



Change the active phone line to make and receive calls from your other phone number.

Find the Feature MENU > Settings > Phone Status > Active Line

Redialing a Number

If you hear an ordinary busy signal:

Press	To
1 END	hang up
2 SEND	redial the busy number

Using Automatic Redial

If the network is busy, you hear a fast busy signal, and your phone displays **Call Failed**.

With automatic redial, your phone automatically redials the number for four minutes. When the call goes through, your

phone rings or vibrates one time, displays **Redial Successful**, and then connects the call.

You must turn on automatic redial to use the feature. To turn automatic redial on or off:

Find the Feature	MENU > Settings > Other Settings > Initial Setup > Auto Redial

When automatic redial is turned off, you can manually activate the feature to redial a phone number. When you hear a fast busy signal and see **Call Failed**:

Press	To
SEND or **RETRY** (⊙)	activate automatic redial

Using Caller ID



Calling line identification (caller ID) displays the phone number for incoming calls.

The phone displays the caller's name when the name is stored in your phonebook, or **Incoming Call** when caller ID information is not available.

Canceling an Incoming Call

While the phone is ringing or vibrating:

Press	To
END or **IGNORE** (⊙)	cancel the incoming call



Depending on your phone settings and/or service subscription, the call may be forwarded to another number, or the caller may hear a busy signal.

Turning Off a Call Alert

You can turn off your phone's incoming call alert before answering the call.

Press	To
left or right	turn off the alert

Calling an Emergency Number

Your service provider programs one or more emergency phone numbers, such as 911, that you can call under any circumstances, even when your phone is locked.

Note: Emergency numbers vary by country. Your phone's preprogrammed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues.

Press		To
1	keypad keys	dial the emergency number
2		call the emergency number

Viewing Recent Calls

Your phone keeps a list of the calls you recently received and dialed, even if the calls did not connect. The lists are sorted from newest to oldest, and contain up to 10 entries. The oldest entries are deleted as new ones are added.

Shortcut: From the idle display, press ⓢ to display the dialed calls list.

Find the Feature ⓜ > Recent Calls

Press	To
1 ⊕	scroll to **Received Calls** or **Dialed Calls**
2 SELECT (⊙)	select the list
3 ⊕	scroll to an entry **Note:** ✓ means the call connected.
4 ⓢ	call the entry's number **Tip:** Press and hold ⓢ for 2 seconds to send the number as DTMF tones during a call.
or	
VIEW (⊙)	view entry details
or	
ⓜ	open the menu to display other options as described in the following list



The menu can include the following options:

Option	Description
Store	Create a phonebook entry with the number in the No. field.
Delete	Delete the entry.
Delete All	Delete all entries in the list.
Send Message	Open a new text message with the number in the To field.
Add Digits	Add digits after the number.
Attach Number	Attach a number from the phonebook or recent call lists, after the highlighted number.
Send Tones	Send the number to the network as DTMF tones. This option is only available during a call.



Returning an Unanswered Call

Your phone keeps a record of your unanswered calls, and displays:

- the (missed call) indicator

- **X Missed Calls Y Unknown**, where **X** is the total number of missed calls and **Y** is the number of missed calls with no caller ID information

Press		To
1	**VIEW** (⊙)	see the received calls list
2	⊕	select a call to return
3	✆	make the call

Using the Notepad

Your phone stores the most recent number entered on the keypad in a temporary *notepad*. This can be a phone number that you called, or a number that you entered but did not call. To retrieve the number stored in the notepad:

Find the Feature ☰ > **Recent Calls** > **Notepad**

Press	To
✆	call the number
or	
☰	open the **Dialing Menu** to attach a number or insert a special character
or	
STORE (⊙)	create a phonebook entry with the number in the **No.** field



Attaching a Number

While dialing (with digits visible in the display):

Press	To
Ⓜ > Attach Number	attach a number from the phonebook or recent call lists

Calling With Speed Dial

Each entry you store in your phonebook is assigned a unique *speed dial* number. To speed dial a phonebook entry:

Press		To
1	keypad keys	enter the speed dial number for the entry you want to call
2	#	submit the number **Note:** Some networks let you skip this step for speed dial numbers 1 through 99.
3	Ⓢ	call the entry

Calling With One-Touch Dial

To call phonebook entries 1 through 9, just press and hold the one-digit speed dial number for 1 second.

We recommend that you reserve phonebook entry 1 (speed dial number 1) for storing and dialing your

voicemail number. Your service provider may have already done this for you.

Using Voicemail



You can listen to your voicemail messages by calling your network voicemail phone number. Voicemail messages are stored on the network—not on your phone.

Storing Your Voicemail Number

Storing your voicemail number on your phone makes it easy for you to listen to new voicemail messages. Usually, your service provider has already done this for you.

Find the Feature Ⓜ > **Messages** > **Message Settings** > **Voicemail No.**

Press		To
1	keypad keys	enter your voicemail number
2	**OK** (⊙)	store the number

Note: You cannot store **Pause**, **Wait**, or **n** characters in this number. If you want to store your voicemail number with these characters, create a phonebook entry for it. Then, you can use the entry to call your voicemail. For more about these characters, see page 50.

Receiving a Voicemail Message

When you receive a voicemail message, your phone displays the ✉ (voice message waiting) indicator and a **New VoiceMail** notification.

Press	To
CALL (⊙)	listen to the message(s)

Listening to a Voicemail Message

Find the Feature ☰ > **Messages** > **VoiceMail**

The phone calls your voicemail number. If no voicemail number is stored, your phone prompts you to store one.

Shortcut: If your voicemail number is also stored as phonebook entry number 1, you can press and hold 1 ∞ to listen to your voicemail message(s).

Turning Off the Voice Message Waiting Indicator

To clear the ✉ (voice message waiting) indicator:

Find the Feature ☰ > **Messages**
☰ > **Clear Count**

Muting the Phone

To mute your phone during a call, press **MUTE** (⊙) (if available) or ☰ > **Mute**.

Using Call Waiting



When you are on a call, an alert tone sounds to indicate that you have received a second call.

Press	To
1 ⓢ	answer the new call
2 ⓢ	switch back to the first call



Phone Features

Main Menu

- **Recent Calls**
  - Received Calls
  - Dialed Calls
  - Notepad
  - Call Times
  - Data Times
  - Data Volumes
- **Phonebook**
- **Datebook**
- **Ring Styles**
- **Messages**
  - Voicemail
  - Create Message
  - Inbox
  - Outbox
  - Quick Notes
  - Drafts
  - Browser Alerts
  - Message Settings
  - Cleanup Messages
- **Shortcuts**
- **Browser ***
  - Ringtones & Images
  - Games
  - Email & IM
  - Flirt
  - News & Info
  - Finance & Biz
  - My Finder/Director
  - What's New
  - My Menu
- **Calculator**
- **Picture Viewer**
- **Settings**
  (see next page)

Shortcuts
Change display zoom: Press ⊜, then press and hold ⊜
Change ringer alert: Press ⊕ left to switch to silent alert. Press right to reset to ring alert.
Display my phone number: Press ⊜ #
Display dialed calls list: Press ✆
Exit menu system: Press ⏻

Note: Select **More** when it displays in the menu to see additional menu items.

This is the standard phone menu layout. Menu organization and feature names may vary on your phone. Not all features may be available for all users.

* This is an optional network or subscription-dependent features.

Settings Menu

- **Phone Status**
  - My Tel. Numbers
  - Active Line
  - Battery Meter
  - Other Information
- **Browser Setup**
- **Connection**
  - Incoming Call
- **In-Call Setup**
  - In-Call Timer
  - Answer Options
- **Security**
  - Phone Lock
  - Lock Keypad
  - Lock Application
  - Restrict Calls
  - New Passwords
- **Location**
- **Other Settings**
  - Personalize
    - Main Menu
    - Keys
    - Color Style
    - Wallpaper
    - Screen Saver
    - Banner
  - Initial Setup
    - Time and Date
    - Auto Redial
    - Backlight
    - Zoom
    - TTY Setup
    - Scroll
    - Language
    - Contrast
    - DTMF
    - Master Reset
    - Master Clear
  - Network
    - Current Network
    - Set Mode
    - Srvc Status
    - Service Tone
    - Call Drop Tone
  - Car Settings
    - Auto Answer
    - Auto Handsfree
    - Power-Off Delay
    - Charger Time
  - Headset
    - Auto Answer



Feature Quick Reference

You can do more with your phone than make and receive phone calls! For example, you can:

- store frequently called numbers in the phonebook for easy dialing
- organize your meetings and other events in the datebook
- browse the Web
- download applications
- send messages, and more.

This section provides information to help you use features on your phone that are not described in this user's guide. For more detailed information, see the reference guide.

Calling Features

Feature	Description
Three-Way Call	During a call: Dial third party's number, press ⓒ to call, and then press ⓒ again to connect 
Restrict Calls	Restrict outgoing or incoming calls: ⓜ > **Settings** > **Security** > **Restrict Calls** 

Feature	Description
TTY Calls	Set up your phone for use with an optional TTY device:  Ⓜ > **Settings** > **Other Settings** > **Initial Setup** > **TTY Setup**

Message Features

Feature	Description
Inbox Setup	Set up or edit the text message inbox settings: Ⓜ > **Messages** Ⓜ > **Inbox Setup** **Note:** In many cases, your service provider has already set up the text message inbox for you. Contact your service provider for details.
Send Message	Send a text message: Ⓜ > **Messages** > **Create Message**
Received Messages	Read received messages: Ⓜ > **Messages** > **Inbox** Press Ⓜ to perform various operations on the selected message.
Quick Note	Send or create a quick note message: Ⓜ > **Messages** > **Quick Notes**
Sent Messages	View sent messages: Ⓜ > **Messages** > **Outbox**

Phonebook Features

Feature	Description
Create Entry	Create a new phonebook entry: Ⓜ > **Phonebook** Ⓜ > **New** > **Phone Number** or **Email Address**
Dial Number	Call a number in the phonebook: Ⓜ > **Phonebook** > *entry to call*
Store a PIN Code in a Number	While entering a number: Ⓜ > **Insert Pause**, **Wait**, or **'n'** **Pause**: waits for the call to connect, then sends the remaining digit(s). If your network does not recognize the first pause character, try two (**pp**). **Wait**: waits for the call to connect, then prompts you for confirmation before it sends the remaining digit(s). **'n'**: prompts you for a number before dialing the call. The number you enter is inserted into the dialing sequence in place of the n character

Personalizing Features

Feature	Description
Change Alerts	Change the alerts for incoming calls, messages, or other events: Ⓜ > **Ring Styles** > **Style Detail** * > *event name* * **Style** represents the current alert style, such as **Loud**, **Soft**, **Vibrate**, **Vibe&Ring**, or **Silent**.
Ring Volume	Adjust ringer volume: Ⓜ > **Ring Styles** > **Style Detail** * > **Ring Volume** * **Style** represents the current alert style, such as **Loud**, **Soft**, **Vibrate**, **Vibe&Ring**, or **Silent**.
Keypad Volume	Adjust keypad keypress volume: Ⓜ > **Ring Styles** > **Style Detail** * > **Key Volume** * **Style** represents the current alert style, such as **Loud**, **Soft**, **Vibrate**, **Vibe&Ring**, or **Silent**.
My Tones	Compose your own ring tones, manage ring tones that you have composed or downloaded: Ⓜ > **Ring Styles** > **My Tones**



Feature	Description
Soft Keys	Change soft key labels in the idle display: Ⓜ > **Settings** > **Other Settings** > **Personalize** > **Keys**
Shortcuts	Create a shortcut to a menu item: Highlight the menu item, then press and hold Ⓜ Select a shortcut: Ⓜ > **Shortcuts** > *shortcut name*

Menu Features

Feature	Description
Language	Set menu language: Ⓜ > **Settings** > **Other Settings** > **Initial Setup** > **Language**
Master Reset	Reset all options *except* unlock code, security code, lifetime timer: Ⓜ > **Settings** > **Other Settings** > **Initial Setup** > **Master Reset**



Feature	Description
Master Clear	Reset all options *except* unlock code, security code, lifetime timer, clear all user settings and entries: Ⓜ > Settings > Other Settings > Initial Setup > Master Clear **Caution:** Master clear *erases all user-downloaded content and user-entered information* stored in your phone's memory, including phonebook and datebook entries. Once you erase the information, it cannot be recovered.

Dialing Features

Feature	Description
Auto PIN Dial	Automatically dial an authenticating PIN code for outgoing calls: Ⓜ > Settings > Other Settings > Initial Setup > Auto PIN Dial 



Feature	Description
DTMF Tones	Activate DTMF tones: Ⓜ > Settings > Other Settings > Initial Setup > DTMF Send DTMF tones during a call: Press number keys Send stored numbers as DTMF tones during a call: Highlight a number in the phonebook or recent call lists, then press Ⓜ > Send Tones

Call Monitoring Features

Network connection time is the elapsed time from the moment you connect to your service provider's network to the moment you end the call by pressing the end key. This time includes busy signals and ringing.

The amount of network connection time you track on your resettable timer may not equal the amount of time for which you are billed by your service provider. For billing information, please contact your service provider directly.

Feature	Description
Call Times	View call timers: Ⓜ > Recent Calls > Call Times 

Feature	Description
In-Call Timer	Display time or cost information during a call:  Ⓜ > **Settings** > **In-Call Setup** > **In-Call Timer**

Handsfree Features

Feature	Description
Speaker-phone	Activate a connected external speakerphone during a call:  Press **SPEAKER** (⊙) (if available) or Ⓜ > **Spkrphone On**
Auto Answer (car kit or headset)	Automatically answer calls when connected to a car kit or headset:  Ⓜ > **Settings** > **Other Settings** > **Car Settings** or **Headset** > **Auto Answer**
Auto Handsfree (car kit)	Automatically route calls to a car kit when connected:  Ⓜ > **Settings** > **Other Settings** > **Car Settings** > **Auto Handsfree**



Feature	Description
Power-Off Delay (car kit)	Set the phone to stay on for a period of time after the ignition is switched off: Ⓜ > **Settings** > **Other Settings** > **Car Settings** > **Power-Off Delay**
Charger Time (car kit)	Charge the phone for a period of time after the ignition is switched off: Ⓜ > **Settings** > **Other Settings** > **Car Settings** > **Charger Time**

Data Call Features

Feature	Description
Send Data	Connect your phone to the device, then place the call through the device application
Receive Data	Connect your phone to the device, then: Ⓜ > **Settings** > **Connection** > **Incoming Call** > **Next Call** > **Data In Only** Reset normal voice operation: Ⓜ > **Settings** > **Connection** > **Incoming Call** > **Next Call** > **Normal**

Network Features

Feature	Description
Network Settings	View network information and adjust network settings: Ⓜ > **Settings** > **Other Settings** > **Network** 

Personal Organizer Features

Feature	Description
Add Datebook Event	Add an event to the datebook: Ⓜ > **Datebook** > *day* Ⓜ > **New**
View Datebook Event	View or edit event details: Ⓜ > **Datebook** > *day* > *event name*
Event Reminder	View event reminder: **VIEW** (⊙) Dismiss event reminder: **EXIT** (⊙)
Calculator	Calculate numbers: Ⓜ > **More** > **Calculator**
Currency Converter	Convert currency: Ⓜ > **More** > **Calculator** Ⓜ > **Exchange Rate** Enter exchange rate, press **OK** (⊙), enter amount, select **$** function

Security Features

Feature	Description
Lock Application	Lock phone applications: Ⓜ > **Settings** > **Security** > **Lock Application**

Entertainment Features

Feature	Description
Launch Browser	Start a browser session: Ⓜ > **Browser** 
Browser Options	In a browser session, press: **BACK** (⊙) to go back, Ⓢ to scroll to a link, **SELECT** (⊙) to select a link, or Ⓜ to open the menu 
Download Ringtones, Wallpapers, and Screen Savers	Download an application: Ⓜ > **Browser** > **Ringtones, Wallpapers, and Screen Savers** select a category, select application, select pricing option  **Note:** Your service provider may use a different name for the **Browser** feature.

Feature	Description
Launch Game	Launch a game or application: Ⓜ > **Browser** > **Games** **Note:** Your service provider may use a different name for the **Browser** feature.
Picture Viewer	Manage pictures and animations: Ⓜ > **Picture Viewer**
Radio	Use the optional Motorola Original™ FM Stereo Radio Headset accessory: Ⓜ > **Radio** **Note:** This feature is available only when the optional FM Stereo Radio Headset accessory is plugged into your phone (see phone illustration, page 1).



Specific Absorption Rate Data

This model wireless phone meets the government's requirements for exposure to radio waves.

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government and by the Canadian regulatory authorities. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age or health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC and by the Canadian regulatory authorities is 1.6 W/kg.[1] Tests for SAR are conducted using standard operating positions accepted by the FCC and by Industry Canada with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station, the lower the power output.

Before a phone model is available for sale to the public in the U.S. and Canada, it must be tested and certified to the FCC and Industry Canada that it does not exceed the limit established by each government for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) reported to the FCC and available for review by Industry Canada. The highest SAR value for this model phone when tested for use at the ear is 1.58 W/kg, and when worn on the body, as

described in this user guide, is 0.6 W/kg (Body-worn measurements differ among phone models, depending upon available accessories and regulatory requirements).[2]

While there may be differences between the SAR levels of various phones and at various positions, they all meet the governmental requirements for safe exposure. Please note that improvements to this product model could cause differences in the SAR value for later products; in all cases, products are designed to be within the guidelines.

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications & Internet Association (CTIA) Web site:

`http://phonefacts.net`

or the Canadian Wireless Telecommunications Association (CWTA) Web site:

`http://www.cwta.ca`

1. In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.
2. The SAR information includes the Motorola testing protocol, assessment procedure, and measurement uncertainty range for this product.

Index

A

accessories
  connector ports 1
  optional 6, 49
  standard 5
Add Digits feature 40
alert
  creating 51
  defined 31
  turning off 12, 38
ALI indicator 16
animation
  screen saver 33
  viewing 59
  wallpaper 33
answering a call 13
application, locking and unlocking 58
Attach Number feature 40
auto PIN dial 53
automatic location information
  indicators 16
automatic redial 36

B

battery
  car kit charger time 56
  charging 7
  extending battery life 8
  installing 6
  level indicator 8, 15, 16
block cursor, defined 20
browser applications 58

C

calculator 57
call
  adding digits after phone number 40
  alert 12
  alert, turning off 38
  answer options 32
  answering 13
  call waiting 45
  canceling 37
  deleting 39
  dialed calls list 39
  dialing 13
  dialing a recent call 39
  emergency number 38
  ending 13
  making 13
  muting 44
  placing

received calls list 39
receiving 13
recent calls 39
restricting 48
speakerphone 55
storing 39
three-way call 48
timers 54, 55
unanswered call 40
Call Failed message 36
call waiting 45
caller ID 37, 41
calling line identification. *See* caller ID
car kit
automatic answer 55
automatic handsfree 55
charger time 56
power-off delay 56
clock
illustration 14
codes
changing 29
default 28, 29
if you forget a code/password 29
color, display 35
contrast, display 35
cursor 19

D

data call
receive 56
send 56
date, setting 31
datebook 57
deleting a call 39
dialed calls list 39
dialing a number 13
digital signal indicator
defined 15
illustration 15
display
color 35
contrast 35
description 14
idle display 14
illustration 14
language 52
zooming in/out 34
DTMF tones 39
activating 54
sending 40, 54

E

earpiece
illustration 1
volume, adjusting 12
emergency number 38
end key
functions 1, 12, 17

ending a call 13
Enter Unlock Code message 28, 29

F

flashing cursor, defined 19
FM Stereo Radio Headset 59
4-way navigation key 16

G

games 58

H

handsfree use
  automatic answer 55
  automatic call routing 55
  charger time 56
  power-off delay 56
  speakerphone, activating 55
headset
  automatic answer 55
  FM Stereo Radio Headset 59

I

idle display, defined 14
in use indicator
  defined 15
  illustration 15
incoming call
  canceling 37
Incoming Call message 37
indicators
  ALI 16
  battery level 8, 15, 16
  digital signal 15
  in use 15
  loud ring style 15, 32
  menu 14
  message waiting 15, 16
  missed call 40
  ring style 15, 32
  roam 15
  signal strength 15
  silent ring style 15, 32
  soft ring style 15, 32
  vibrate and ring style 15, 32
  vibrate style 15, 32
  voice message waiting 44
iTAP software 23

K

key
  end 1, 12, 17
  4-way navigation 16
  left soft key 1, 14, 17, 52
  lock 30
  menu 1, 17, 18

navigation 1
right soft key 1, 14, 17, 52
send 1, 13, 17, 39
volume control 12
keypad
answering calls 33
locking and unlocking 30
volume, adjusting 51

L

language, setting 52
left soft key
functions 1, 14, 17
personalizing 52
lock
application 58
keypad 30
phone 27
loud ring style indicator 15, 32
Low Battery message 16

M

making a call 13
master clear 53
master reset 52
menu
Dialing Menu 41
entering text 19
language, setting 52
Last Calls Menu 40
lists 18
navigating 17
using features 5, 18
menu indicator 14
menu key 1, 17, 18
message
deleting 49
inbox setup 49
locking 49
outbox 49
quick note 49
reading 49
sending 49
status 49
message waiting indicator
defined 16
illustration 15
micro-browser
using 58
microphone 1
missed call indicator 40
Missed Call message 41
muting a call 44
my telephone number 13, 31, 46
my tones 51

N

n character, storing in a number 50

navigation key 1
network settings 57
notepad
  defined 41
  entering digits 41
  retrieving digits 41
number
  storing your number 31
  viewing your number 13, 46
numeric text entry 20

O

one-touch dial
  defined 42
  using 42
  voicemail number 42
optional accessory, defined 6
optional feature, defined 6
outbox 49

P

passwords. *See* codes
pause, storing in a number 50
phone
  active phone line, changing 36
  alert, turning off 12, 38
  answer options 32
  clear stored information 53
  codes 29
  date, setting 31
  keypad, answering calls 33
  keypad, locking and unlocking 30
  language, setting 52
  locking 27, 28
  network settings 57
  reset all options 52
  security code 29
  time, setting 31
  turning on/off 12
  unlock code 28, 29
  unlocking 12, 27, 28
phone number
  active phone line, changing 36
  adding digits after 40
  attaching two numbers 40, 42
  redialing 36
  storing in phonebook 50
  storing your number 31
  viewing your number 13, 46
phonebook
  attaching two numbers 40, 42
  dialing a number 50

one-touch dial 42
speed dial number, defined 42
speed dial, using 42
storing an entry 50
picture
screen saver 33
viewing 59
wallpaper 33
PIN code
dialing automatically 53
PIN code, storing in number 50
predictive text entry 23
prompt, storing in a number 50

Q

quick note 49

R

radio 59
received calls list 39
recent calls 39
redial
automatic redial 36
busy number 36
reference guide 5
restricting calls 48
right soft key
functions 1, 14, 17
personalizing 52
ring alert
turning off 12, 38
ring style
defined 32
indicators 15, 32
personalizing 32, 51
setting 31
ring style indicator
defined 15, 32
illustration 15
ring tone, creating 51
ringer
volume, adjusting 12
ringer volume, adjusting 51
roam indicator
defined 15
illustration 15

S

screen saver 33
security code
changing 29
default 29
send key 1, 13, 17, 39
sending a call. *See* making a call
shortcuts
creating 52
standard 46

signal strength indicator
defined 15
illustration 15
silent ring style indicator 15, 32
soft keys
functions 14
illustration 1, 17
labels 14
personalizing 52
soft ring style indicator 15, 32
speakerphone, activating 55
special characters 50
speed dial
number, defined 42
using 42
storing a call 39
symbol text entry 26, 27

T

tap method text entry 21, 22
telephone number
storing your number 31
viewing your number 13, 46
text
block cursor 20
character chart 22
entering from keypad 19
entry method, changing 20
flashing cursor 19
iTAP software predictive text entry 23
numeric method 20
symbol chart 27
symbol method 26, 27
tap method 21, 22
three-way call 48
time, setting 31
timers 54, 55
travel charger, using 7
TTY device 49

U

unlock
application 58
keypad 30
phone 27
unlock code
bypassing 29
changing 29
default 28, 29
entering 28

V

vibrate alert
indicator 15, 32
setting 31

turning off 12, 38
voice message waiting indicator 44
voicemail
checking 44
dialing with one-touch dial 42
setup 43
volume
earpiece 12
keypad 51
ringer 12, 51

W

wait, storing in a number 50
wallpaper 33
Web pages 58

Z

zooming in/out 34

motorola.com

6809484A28-O