

DIGITAL ANSWERING MACHINE

EASY RECALL™

For Loud & Crystal Clear Voice & TTY Messages.



Operating Instructions

Clarity®, a Division of Plantronics, Inc., 4289 Bonny Oaks Drive, Chattanooga, TN 37406
VOICE (800) 426-3738 TTY (800) 772-2889 www.clarityproducts.com ©2004 Clarity, a Division of Plantronics, Inc.
All rights reserved. Clarity and Easy Recall are trademarks or registered trademarks of Plantronics, Inc.

Important Safety Instructions

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and persons including the following:

1. Read and understand all instructions.
2. Follow all warnings and instructions marked on the telephone.
3. Do not use this telephone near a bathtub, wash basin, kitchen sink or laundry tub, in a wet basement, near a swimming pool or anywhere else there is water.
4. Avoid using a telephone (other than a cordless type) during a storm. There may be a remote risk of electrical shock from lightning.
5. Do not use the telephone to report a gas leak in the vicinity of the leak.
6. Unplug this telephone from the wall outlets before cleaning. Do not use liquid cleaners or aerosol cleaners on the telephone. Use a damp cloth for cleaning.
7. Place this telephone on a stable surface. Serious damage and/or injury may result if the telephone falls.
8. Do not cover the slots and openings on this telephone. This telephone should never be placed near or over a radiator or heat register. This telephone should not be placed in a built-in installation unless proper ventilation is provided.
9. Operate this telephone using the electrical voltage as stated on the base unit or the owner's manual. If you are not sure of the voltage in your home, consult your dealer or local power company.
10. Do not place anything on the power cord. Install the telephone where no one will step or trip on the cord.
11. Do not overload wall outlets or extension cords as this can increase the risk of fire or electrical shock.
12. Never push any objects through the slots in the telephone. They can touch dangerous voltage points or short out parts that could result in a risk of fire or electrical shock. Never spill liquid of any kind on the telephone.
13. To reduce the risk of electrical shock, do not take this phone apart. Opening or removing covers may expose you to dangerous voltages or other risks. Incorrect reassembly can cause electric shock when the appliance is subsequently used
14. Unplug this product from the wall outlets and refer servicing to the manufacturer under the following conditions:
 - A. When the power supply cord or plug is frayed or damaged.
 - B. If liquid has been spilled into the product.
 - C. If the telephone has been exposed to rain or water.
 - D. If the telephone does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions. Improper adjustment may require extensive work by a qualified technician to restore the telephone to normal operation.
 - E. If the telephone has been dropped or the case has been damaged.
 - F. If the telephone exhibits a distinct change in performance.
15. Never install telephone wiring during a lightning storm.
16. Never install telephone jacks in wet locations unless the jack is specifically designed for wet locations.
17. Never touch uninsulated telephone wires or terminals unless the telephone line has been disconnected at the network interface.
18. Use caution when installing or modifying telephone lines.
19. Use only the power cord and batteries indicated in this manual. Do not dispose of batteries in a fire. They may explode. Check with local codes for possible special disposal instructions.

SAVE THESE INSTRUCTIONS

Important Safety Instructions

The following items are included as part of the CS-03 Requirements. The standard connecting arrangement for the equipment is CA11A. This product meets the applicable Industry Canada technical specifications.

NOTICE: The Canadian Department of Communications label identifies certified equipment. This certification means that the equipment meets certain telecommunications network protective operational and safety requirements. The Department does not guarantee that the equipment will operate to the user's satisfaction. Before installing this equipment, users should ensure that it is permissible to be connected to the facilities of the local telecommunications company. The equipment must also be installed using an acceptable method of connection. In some cases, the company's inside wiring associated with a single line individual service may be extended by means of a certified connector assembly (telephone extension cord). The customer should be aware that compliance with the above conditions may not prevent degradation of service in some situations. Repairs to certified equipment should be made by an authorized Canadian maintenance facility designated by the supplier. Any repairs or alterations made by the user to

Important Safety Instructions

this equipment, or equipment malfunctions, may give the telecommunications company cause to request the user disconnect the equipment.

Users should ensure for their own protection that the electrical ground connections of the power utility, telephone lines and internal metallic water pipe system, if present, are connected together. This precaution may be particularly important in rural areas. Caution: Users should not attempt to make such connections themselves, but should contact the appropriate electric inspection authority, or electrician, as appropriate. The Ringer Equivalent Number is an indication of the maximum number of terminals allowed to be connected to a telephone interface. The termination on an interface may consist of any combination of devices subject only to the requirement that the sum of the Ringer Equivalent Number of all the devices not exceed five.

SAVE THESE INSTRUCTIONS

Contents

Introducing the Easy Recall

Warranty Service	2
Sales Receipt	2
Help from Clarity	2

Features	3
-----------------------	---

Setting Up Your Easy Recall

Installing the Backup Batteries	4
Connecting the Easy Recall	4
Pre-programmed Outgoing Messages	5
Recording Personal Outgoing Voice Messages	6
Setting the Time and Date	7
Template for Remote Retrieval of Messages	9
Template for Setting Time	10

Using Your Easy Recall

Playing Back Voice Messages	11
Tone and Volume Control	12
Varying Playback Speeds	12
Setting Your 4 Digit Access Code	13
Remote Retrieval of Your Voice and TTY Messages	14
Recording a Telephone Conversation	15
Recording a Memo	16
Connecting Other Assistive Listening Devices	17

Retrieving your TTY Messages

Reading your TTY Messages	17
Personalizing Your Outgoing TTY Message	18
Recording a Combo Voice and TTY Message	19

Master Clear	19
---------------------------	----

Specifications	20
-----------------------------	----

Troubleshooting Chart	21
------------------------------------	----

FCC Statement	22
----------------------------	----

Warranty	23
-----------------------	----

Index	24
--------------------	----

Introducing the EASY RECALL

Thank you for selecting the Easy Recall answering machine from Clarity. These Operating Instructions and the associated Quick Operating Guide provide you with the information you need to use your Easy Recall effectively and safely. Read this manual thoroughly before using your answering machine. Keep the manual near the machine for easy reference.

Warranty Service

Your answering machine is designed to provide years of quality service. But, should the machine malfunction and the Trouble-shooting Chart on page 17 not resolve the problem, follow the Warranty procedure on page 18.

Sales Receipt

Be sure to save your sales receipt as proof of purchase date should you need warranty service.

Help from Clarity

For help with using your Easy Recall answering machine, call our Customer Service department at (800) 426-3738.

Please make sure your Easy Recall answering machine package includes the items shown in Figure 1.

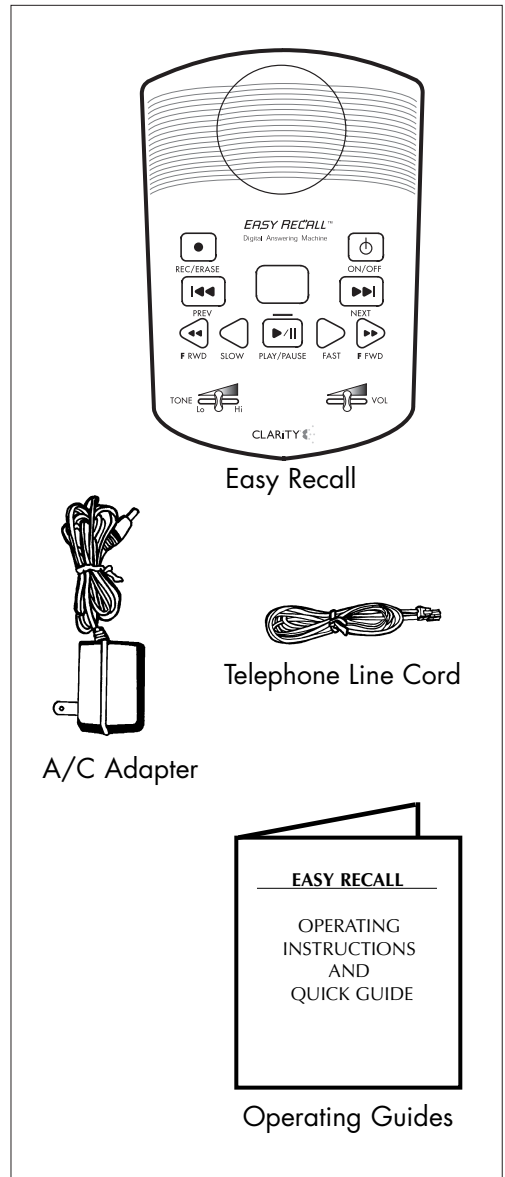


Figure 1 - Package Components

Features on the EASY RECALL

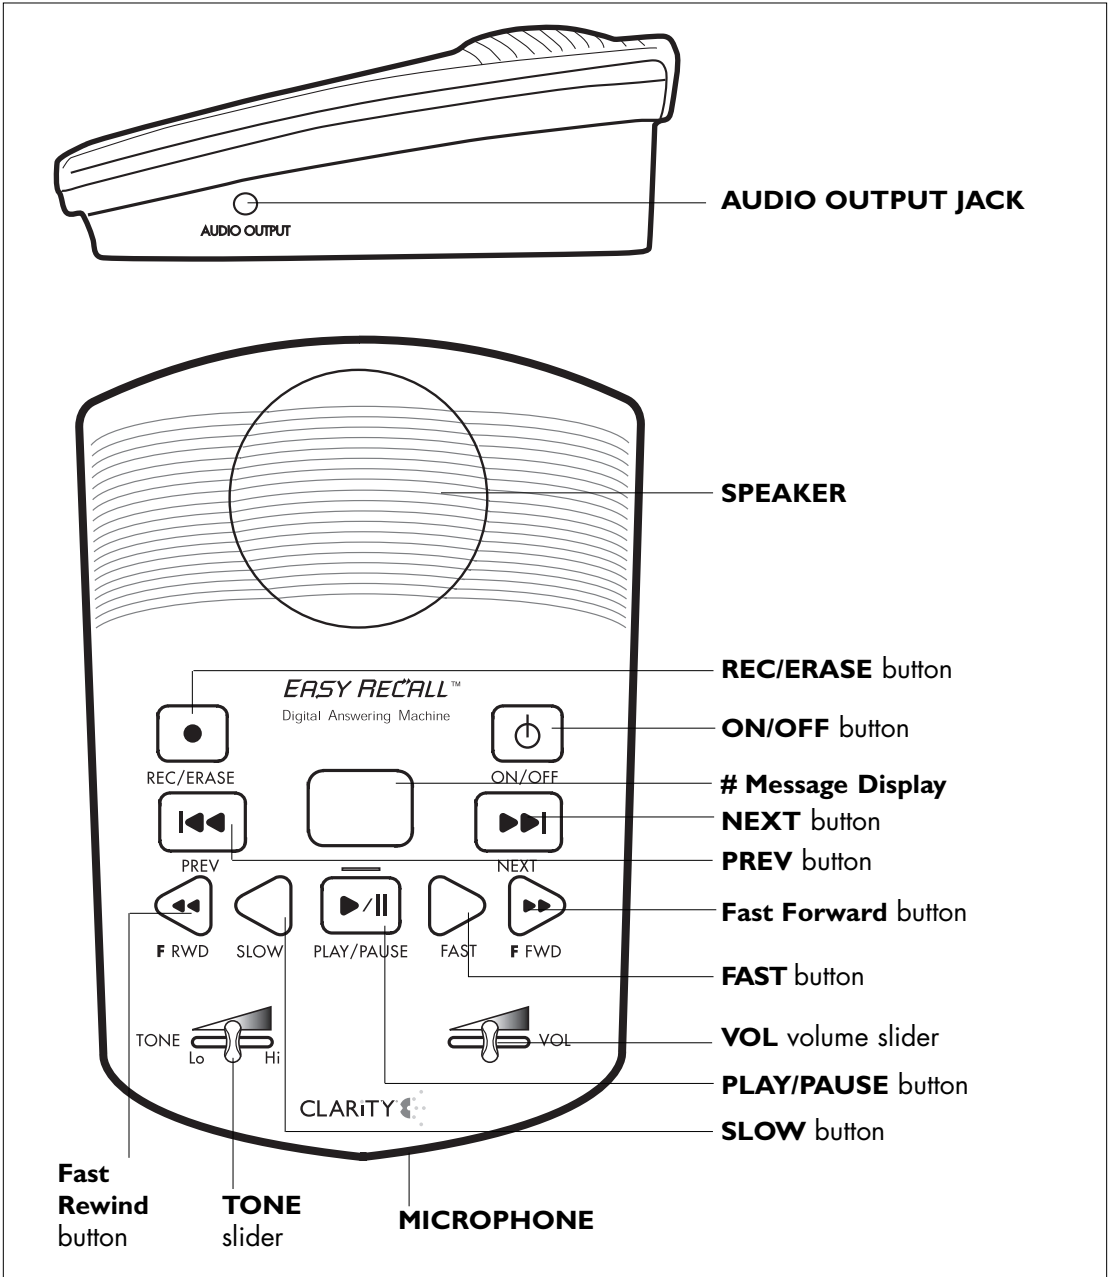


Figure 2 - Base Unit Controls

Setting up Your Easy Recall

Connecting Your Easy Recall Answering Machine

1. First, for your safety, always disconnect the telephone line when installing or changing the battery.
2. **Optional** - install a 9-volt battery [not included] for back up. The battery compartment is located on the bottom of the unit.
3. Insert the AC Adapter cord into the receptacle on the back of the Easy Recall. Then plug the AC Adapter into an electrical outlet.

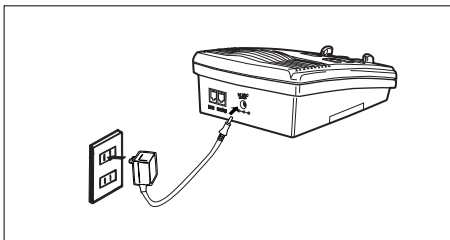


Figure 3 - Connecting the AC Adapter

4. Plug the telephone line cord that comes with the Easy Recall into the telephone jack in the

wall and into the jack on the back of the phone labeled LINE.

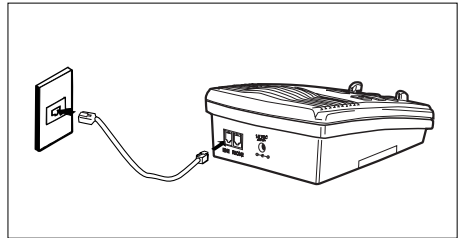


Figure 4 - Connecting the telephone line cord

5. If using a TTY, connect the telephone line cord into the jack labeled PHONE on the back of the Easy Recall and into the phone jack of the TTY.

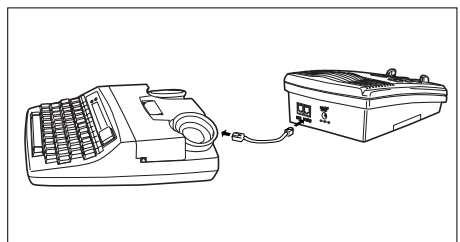


Figure 5 - Connecting a TTY

Setting up Your EASY RECALL (continued)

- If using a telephone, connect the telephone line cord into the jack labeled PHONE on the back of the Easy Recall and into the phone jack of the telephone.

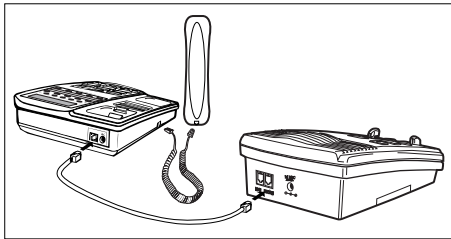


Figure 6 - Connecting a telephone

- When the Easy Recall is turned on, it will announce, **"The machine is on."**

Note: Your Easy Recall answering machine has a maximum capacity of 24 messages or 14 minutes. Each message has a maximum time limit of two minutes.

You can personalize the following features:

- If you want to identify when your messages were received, you must program the date and time into your Easy Recall answering machine; to program the date and time use the included template, and follow the directions in this manual.
- To personalize your outgoing voice [or TTY] message, just follow the easy recording directions in this manual.

Note: Your Easy Recall answering machine has a maximum capacity of 24 messages or 14 minutes. Each message has a maximum time limit of two minutes.

Pre-programmed Outgoing Messages

This unit has been pre-programmed with the following features:

- A factory installed outgoing voice message, **"Please leave**

Setting up Your EASY RECALL (continued)

a message after the tone.”


- A factory installed outgoing TTY message, **“LV MSG GA.”**
- A factory installed Remote Access Code [1 1 1 1]. To change your Remote Access Code, use the included template, and then follow the directions in this manual.

Recording Your Outgoing Voice Message

Your Easy Recall Answering Machine already comes with the following pre-recorded, outgoing voice message: **“Please leave a message after the tone.”**

Follow these directions to program a personal outgoing voice message. Make sure the machine is **ON**. Remember, your personal message will override the factory installed one.

1. Simultaneously press and hold down the **REC/ERASE** and **SLOW** keys for 2 seconds.

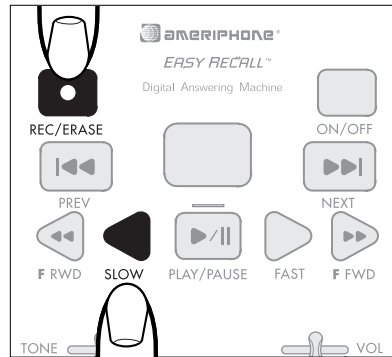

2. When you lift your fingers, the number 29 will appear in the display window.




3. Speak clearly into the microphone and record your outgoing message. [You'll have a maximum of 29 seconds to do so].

Setting up Your EASY RECALL (continued)

4. The display window will show how much time you have remaining.



5. Press the **ON/OFF** key when you are through.

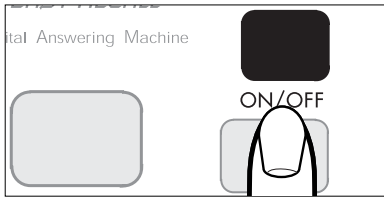

6. The Easy Recall will automatically replay your recorded message.
7. To hear your current outgoing message, press **PREV & FRWD**.


If you are not satisfied with your message, just repeat the recording process.

Setting the Time & Date

To know when your messages were received, you must program the date and time.

Make sure the machine is **ON** and follow these simple steps to set the date and time.

1. Fit the Time Set Template over the Easy Recall's keys.

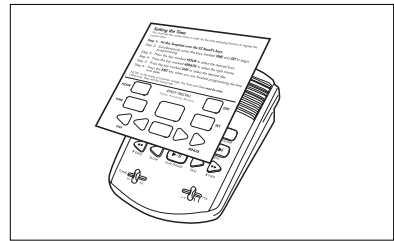


2. Simultaneously press the keys now marked **TIME** and **SET** for 2 seconds and then release. The display will show a **ti** to indicate the unit is now in Time mode.




Setting up Your EASY RECALL (continued)

3. Press the key marked **HOUR** to select the desired hour.

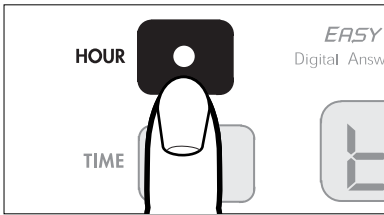


4. Press the key marked **MINUTE** to select the minute.

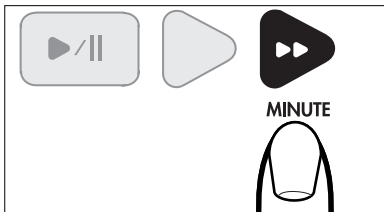


5. Press the key marked **DAY** to select the day.




6. Press the key marked **SAY** to verify the time setting.

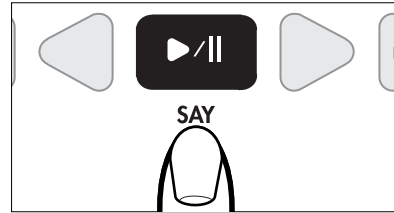

7. Press the **EXIT** key when you are finished.

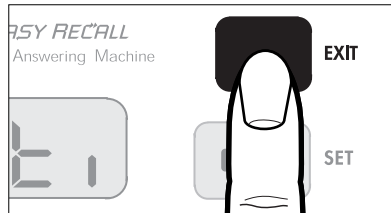

8. To review your settings, press **F-RWD**.

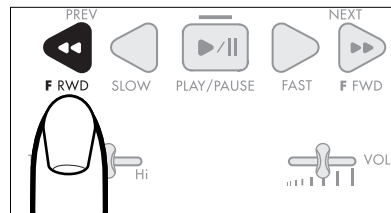

NOTE: In the event of a power outage, the Time and Date MAY NEED RESETING.




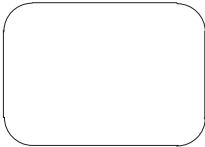

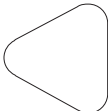
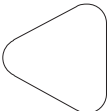

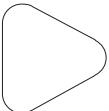
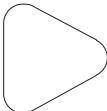
Setting up Your EASY RECALL (continued)

English Template for the Easy Recall's keys



Setting your 4-digit code for remote retrieval of your messages.

- Step 1:** Fit this Template over the EZ Recall's keys.
- Step 2:** Simultaneously press the keys marked **SAY** and **EXIT**.
- Step 3:** You *must* select 4-digits (0 - 9) by repeatedly pressing the keys numbered **1st**, **2nd**, **3rd**, and **4th** for the respective digits until the desired code is reached.
- Step 4:** Press the **SAY** key to verify the code. The unit will repeat the code numbers you have entered.
- Step 5:** Press the **EXIT** key when finished.

SAY		<i>EASY RECALL</i> Digital Answering Machine		EXIT
				
				
1st	2nd	3rd	4th	

Setting up Your EASY RECALL (continued)

English Template for the Easy Recall's keys (cont.)



Setting the Time

You must set the correct time in order for the time stamping function to register the correct time.

Step 1: Fit this Template over the EZ Recall's keys.

Step 2: Simultaneously press the keys marked **TIME** and **SET** to begin programming.


Step 3: Press the key marked **HOUR** to select the desired hour.

Step 4: Press the key marked **MINUTE** to select the right minute.

Step 5: Press the key marked **DAY** to select the desired day.

Step 6: Press the **EXIT** key when you are finished programming the time and date.

NOTE: In the event of a power outage, the Time and Date *must be reset*.

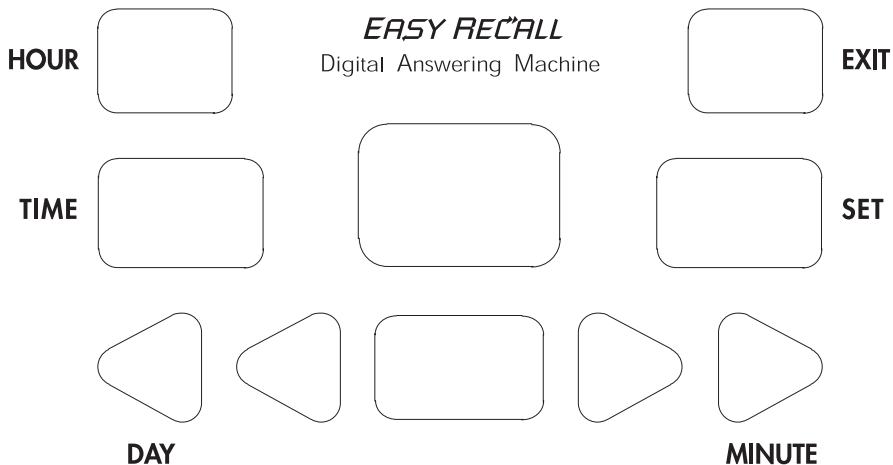


Using Your EASY RECALL


How to Playback Voice Messages

The number flashing in the display window [i.e., alternating between “- -”, “03”] will show the number of voice messages you’ve received. The number flashing after “ti” will indicate how many TTY messages you’ve received.


1. Press the **PLAY/PAUSE** key to listen to all voice or TTY messages. [The last message received will be the first one replayed.]

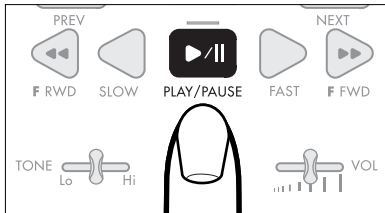

If you have voice and TTY messages, but you **ONLY** want to play voice messages, press the **FAST** key [See the TTY section for retrieving TTY messages].

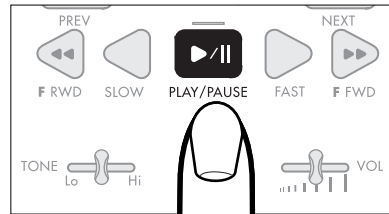


2. To **delete** a message, press the **REC/ERASE** key while playing the message to be deleted.

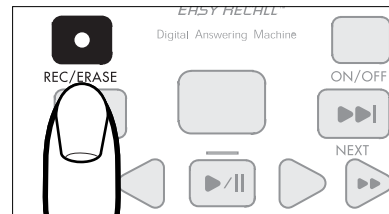


- Note:** Unless deleted, individual messages will automatically be **SAVED**.

3. Press **PREV** key to **replay** the message you’ve just heard. Press **PREV** repeatedly to search for other previous messages.

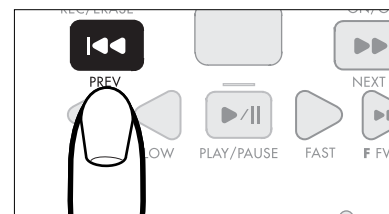


Using Your EASY RECALL (Continued)


4. Use the **TONE** and **VOLUME** slide controls to adjust for optimum hearing clarity.

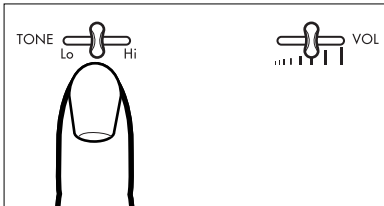


5. To listen to the next message, press the **NEXT** key.

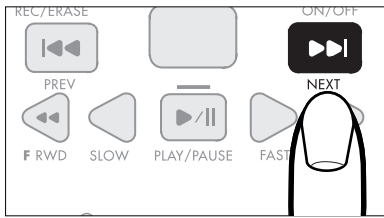


6. To skip ahead **within** the message in 1 – 2 second increments, press the **F FWD** [Fast Forward] key.

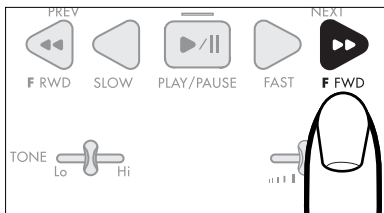

7. To go back within the message in 1 – 2 second increments, press the **F RWD** [Fast Rewind] key.

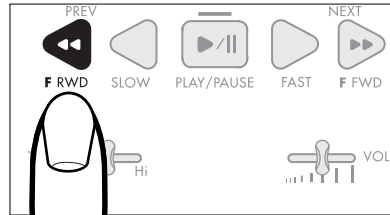


8. To pause while playing a message, press the **PLAY/PAUSE** key; press again to resume.

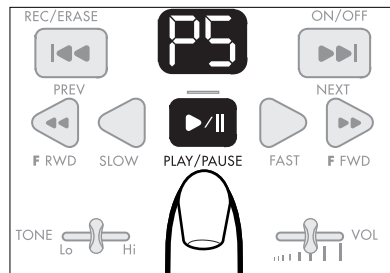


9. To slow the playback **speed down in 5% increments**, press the **SLOW** key once. You can press the **SLOW** key a maximum of 5 times to achieve a total slowdown of 25%.

Using Your EASY RECALL (Continued)

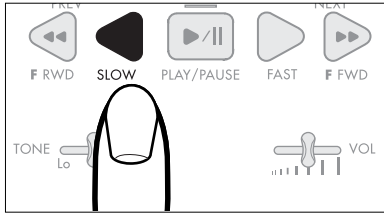

10. To increase the playback **speed in 5% increments**, press the **FAST** key once. Pressing the **FAST** key a maximum of 5 times achieves a total speed up of 25%.

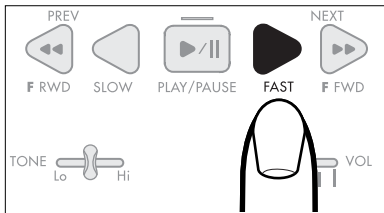


11. To return to regular speed, press the **SLOW** key [if in fast playback mode] or the **FAST** key [if in slow playback mode] until the desired playback speed is reached.

Setting Your 4-Digit Access Code for Remote Retrieval of Your Messages

Your Easy Recall comes with a factory set access code of 1 1 1 1. To program a personal access code, make sure the answering machine is ON and follow these instructions:


1. Fit the Access Code Template over the Easy Recall's keys.

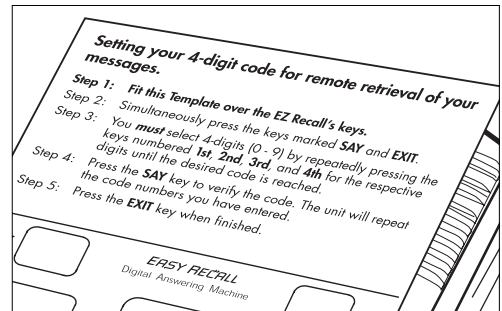


2. Simultaneously press the keys marked **ACCESS** and **CODE** for 2-seconds [The display will show the letters **Pd**, indicating the unit is in access code mode].
3. You **MUST** select a 4-digit code number, from 1111 to 9999.

Using Your EASY RECALL (Continued)


You can't use 0 when programming your 4 digit code. Use the keys labeled **1st**, **2nd**, **3rd** and **4th** to select each of the four-digit numbers for your personal access code.

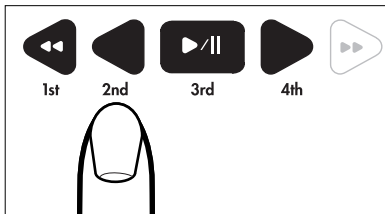


4. Press the **SAY** key to verify your access code.

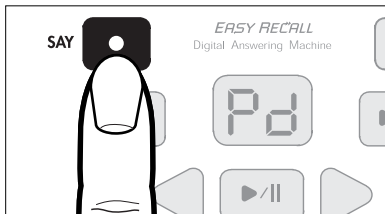

5. Press the **EXIT** key when finished.

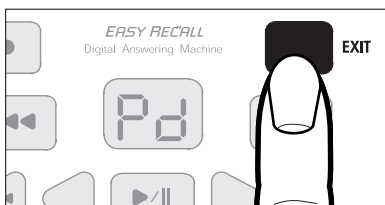

6. To review the time, outgoing message and access code; press the **F RWD** [Fast Rewind] key.

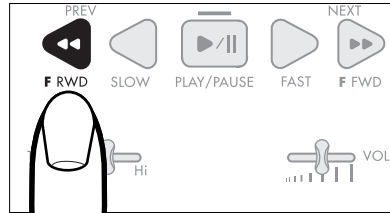

Remote Retrieval of Your Voice and TTY Messages When You Are Away from Home

1. Call and wait for the Easy Recall to answer.
2. Enter your access code the second you begin hearing your outgoing message. Upon recognizing the access code, the machine will beep and begin playing your messages. If you have no messages, it will say so and hang up. If you have messages, the following table lists your message options:


Key	Action
2	Delete the current message
7	Replay the message you've just heard
9	Skip forward to hear next message
0	Exit

Using Your EASY RECALL (Continued)

Recording a Telephone Conversation [Maximum recording time - 2 minutes per call]

Note: All parties must be made aware and must consent to having their telephone conversation recorded.

1. Simultaneously press and release the **REC/ERASE** and **PLAY/PAUSE** keys for 2 seconds.

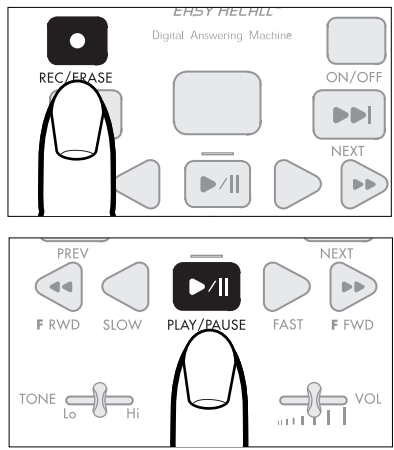


2. The display window will show the letters **rc**.

3. The current telephone conversation will now be recorded.
4. Press the **ON/OFF** key to end the recording.



5. The recorded conversation will be stored in the machine's memory where it can be reviewed or erased like any other voice message.

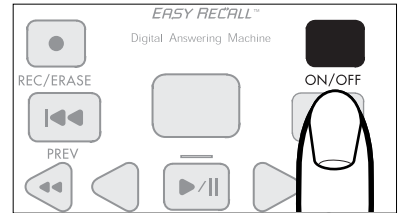


Using Your EASY RECALL (Continued)

Recording a Memo [maximum recording time – 2 minutes per memo]

You can record a memo when you want to leave a personal message for someone in your household. Memo messages will be registered on the display panel and replayed just like incoming voice messages. Make sure the machine is ON and follow these instructions:


1. Press the **REC/ERASE** key for 2 seconds, and then release.

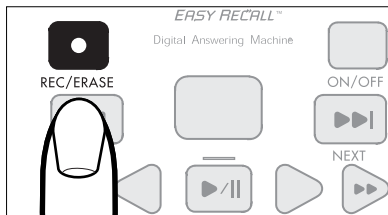


2. Speak directly into the microphone to record your message. The display window will read **rc** while the memo is being recorded.



3. Press the **ON/OFF** key to stop recording.

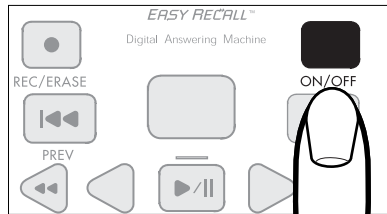


4. Press the **PLAY/PAUSE** key to hear what was just recorded.

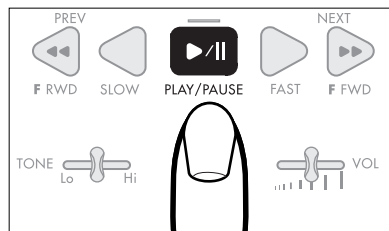

Using Your EASY RECALL (Continued)


5. Press the **REC/ERASE** key while the memo is playing if you want to delete the memo.

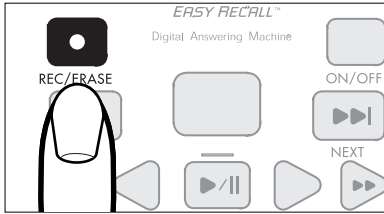

Connecting Other Assistive Listening Devices

A neckloop, headset or cochlear implant can be attached to the Easy Recall to optimize listening quality without losing any of the unit's features.


Note: When using the audio output jack, the speaker of the Easy Recall will still emit sound.

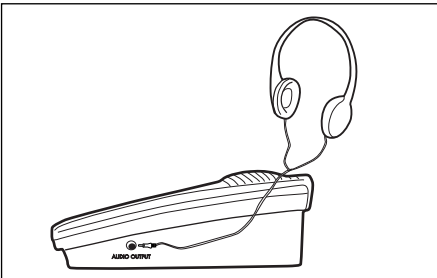

Retrieving TTY Messages

Reading Your TTY Messages

- The TTY must be in acoustic mode, NOT direct connected, to work properly.
- The number blinking after the flashing **td** in the display window indicates the number of TTY messages that have been received.
- When using the Easy Recall with the Q90D, you must use the cable included with the Q90D with an optional adapter. The optional adapter plugs into the HCO jack of the Q90D. Ensure that the Q90D is online at this time, but disconnected from the phone line. (If you have questions, please call Customer Service at 800-426 3738.)
- Turn the TTY on and place it next to the answering machine as shown here.

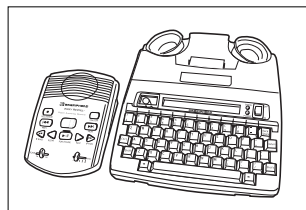

Retrieving TTY Messages (continued)

- Set both Volume and Tone controls to mid-range. Adjust according to need.
- If you have ONLY TTY messages, press **PLAY**. If you have both voice and TTY messages but you only want to play the TTY messages, press **SLOW**.
- The # of messages from the answering machine will appear on your TTY's screen.
- Press the **ERASE** key while playing the message to be deleted in order to delete a message; otherwise the message will be **SAVED**.
- Press the **PREV** key to replay the message you've just heard. Press **PREV** repeatedly to search for other previous messages.
- To skip forward and listen to the next message, press the **NEXT** key.
- If any message gets garbled, press the spacebar on your TTY to clear.

Personalizing your Outgoing TTY Message

An outgoing message can be recorded using the **REC/ERASE** and **FAST** keys (Record off phone line like recording a conversation).

1. Make a TTY phone call.
2. Inform recipient you are recording a message.
3. Press the **REC/ERASE** and **FAST** keys and type the outgoing message.
4. Press **ON/OFF** to end the recording.

Retrieving TTY Messages (continued)

Recording a Combo Voice and TTY Message

An outgoing message can be recorded using the **REC/ERASE** and **FAST** keys (Record off phone line like recording a conversation).

1. Make a TTY phone call.
2. Inform recipient you are recording a message.
3. Record the voice portion of the message by pressing the **REC/ERASE** and **FAST** keys. Lift your fingers and speak into the handset.
4. Put the handset into the acoustic couplers of the TTY.
5. Type the TTY message.
6. Press **ON/OFF**.

Master Clear

1. Press **REC/ERASE**, **F-RWD** and **ON/OFF** keys simultaneously [using both hands if necessary], then release all keys at the same time. "**Master Clear**" will be said by machine. This will:
 - Clear all personalized outgoing messages and returns to the unit's factory default outgoing messages.
 - Erase the time and date setting.
 - Reset the personalized access code to 1 1 1 1.
2. To re-program any of these features, just follow the previous instructions.

Specifications

Input Power

15VDC / 400 mA

Optional 9-volt alkaline battery [back up]

Approx. 1 1/2 hours

Maximum recording capacity

Max. of 14 minutes or 24 messages, whichever comes first. Limit of up to 2 minutes per message.

Pre-recorded outgoing messages

Voice and TTY

Maximum outgoing message length

Approx. 29-seconds

Speaker size and impedance

3" 8 ohm

Number of rings before answering

3 rings – if there are messages

5 rings – if there aren't any messages

Time and date stamping

Available

Personalized remote access code

Must be 4-digits

Factory pre-set at: 1 - 1- 1- 1

Adjustable message playback speeds

75% to 125% of normal speed

Headset or neckloop output jack

3.5 mm [stereo output]

Weight

16 oz.

Dimensions

7.5" L, 5 .5" W, 2.5" H

Operating Temperature Range

10° – 40° C

Operating Humidity Range

85% Maximum - non-condensing

Troubleshooting Chart

The chart below will help you solve most problems that may arise during operation of your Easy Recall. Should the difficulty continue, contact Clarity or your authorized dealer for assistance.

PROBLEM	SOLUTION
Easy Recall unit isn't responding to ANY button commands.	Reset the unit by unplugging the AC adapter and removing the batteries for 10 – 20 seconds before re-installing them and plugging the AC adapter back in.
Easy Recall unit not functioning.	Make sure the unit is plugged in and turned ON. Reset the unit as indicated above.
Easy Recall not receiving TTY messages.	<p>Place the TTY close to the Easy Recall to ensure receipt of the TTY signals.</p> <p>Make sure the TTY is ON and in acoustic coupler mode, not direct connect mode.</p> <p>The Q90D cellphone connector allows the Q90D to receive text messages from the Easy Recall. Ensure Q90D is on line, but not connected to the phone line.</p>

Regulatory Compliance

Part 68 of FCC Rules Information

This equipment complies with Part 68 of the FCC rules. On the bottom of this equipment is a label that contains, among other information, the FCC registration number and ringer equivalence number (REN) for this equipment. If requested, this information must be provided to the telephone company.

A plug and jack used to connect this equipment to the premises wiring and telephone network must comply with the applicable FCC Part 68 rules and requirements adopted by the ACTA. A compliant telephone cord and modular plug, RJ11 USOC, is provided with this product. It is designed to be connected to a compatible modular jack that is also compliant. See installation instructions for details.

The REN is used to determine the number of devices that may be connected to a telephone line. Excessive RENs on a telephone line may result in the devices not ringing in response to an incoming call. In most but not all areas, the sum of RENs should not exceed five (5.0). To be certain of the number of devices that may be connected to a line, as determined by the total RENs, contact the local telephone company. For products approved after July 23, 2001, the REN for this product is part of the product identifier that has the format US:AAAEQ##TXXXX . The digits represented by ## are the REN without a decimal point (e.g., 03 is a REN of 0.3). For earlier products, the REN is separately shown on the label.

If this telephone equipment causes harm to the telephone network, the telephone company will notify you in advance that temporary discontinuance of service may be required. But if advance notice isn't practical, the telephone company will notify the customer as soon as possible. Also, you will be advised of your right to file a complaint with the FCC if you believe it is necessary.

The telephone company may make changes in its facilities, equipment, operations or procedures that could affect the operation of the equipment. If this happens the telephone company will provide advance notice in order for you to make necessary modifications to maintain uninterrupted service.

If trouble is experienced with this telephone equipment, for repair or warranty information, please contact Clarity at (800) 426-3738. If the equipment is causing harm to the telephone network, the telephone company may request that you disconnect the equipment until the problem is resolved.

This telephone equipment is not intended to be repaired and it contains no repairable parts. Opening the equipment or any attempt to perform repairs will void the warranty. For service or repairs, call (800) 426-3738.

Connection to party line service is subject to state tariffs. Contact the state public utility commission, public service commission or corporation commission for information.

If your home has specially wired alarm equipment connected to the telephone line, ensure the installation of this telephone equipment does not disable your alarm equip-

Regulatory Compliance (continued)

ment. If you have questions about what will disable alarm equipment, consult your telephone company or a qualified installer.

This telephone equipment is hearing aid compatible.

We recommend the installation of an AC surge arrester in the AC outlet to which this equipment is connected. The telephone companies report that electrical surges, typically lighting transients, are very destructive to customer terminal equipment connected to AC power sources

Customer-Owned Coin/Credit Card Phones:

To comply with state tariffs, the telephone company must be given notification prior to connection. In some states, the state public utility commission, public service commission or corporation commission must give prior approval of connection.

Part 15 of FCC Rules Information

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Your telephone equipment has been tested and found to comply with the limits of a Class B digital device, pursuant to Part 15 of FCC rules. These limits are designed to provide

reasonable protection against harmful interference in residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation; if this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, you are encouraged to try to correct the interference by one of the following measures:

1. Where it can be done safely, reorient the receiving television or radio antenna.
2. To the extent possible, relocate the television, radio or other receiver with respect to the telephone equipment. (This increases the separation between the telephone equipment and the receiver.)
3. Connect the telephone equipment into an outlet on a circuit different from that to which the television, radio, or other receiver is connected.
4. Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

THE PARTY RESPONSIBLE FOR PRODUCT COMPLIANCE:

Clarity, A Division of Plantronics, Inc.
4289 Bonny Oaks Drive,
Chattanooga, TN 37406

Industry Canada Technical Specifications

This product meets the applicable Industry Canada technical specifications.

Before installing this equipment, users should ensure that it is permissible to be connected to the facilities of the local telecommunications company. The equipment must also be installed using an acceptable method of connection. In some cases, the company's inside wiring associated with a single line individual service may be extended by means of a certified connector assembly (telephone extension cord). The customer should be aware that compliance with the above conditions may not prevent degradation of service in some situations.

Repairs to certified equipment should be made by an authorized Canadian maintenance facility designated by the supplier. Any repairs or alterations made by the user to this equipment, or equipment malfunctions, may give the telecommunications company cause to request the user to disconnect the equipment.

Users should ensure for their own protection that the electrical ground connections of the power utility, telephone lines and internal metallic water pipe system, if present, are connected together. This precaution may be particularly important in rural areas.

Caution: Users should not attempt to make such connections themselves, but should contact the appropriate electric inspection authority, or electrician, as appropriate.

The Ringer Equivalence Number is an indication of the maximum number of terminals allowed to be connected to a telephone interface. The termination on an interface may consist of any combination of devices subject only to the requirement that the sum of the Ringer Equivalence Numbers of all the devices does not exceed five.

[The term "IC:" before the certification/registration number only signifies that the Industry Canada technical specifications were met.]

Warranty

This warranty applies only to Clarity products that are purchased and used in the United States or Canada.

Clarity warrants the Easy Recall answering machine telephone against any defect in materials or workmanship for the period of one year from the date of purchase. If our extended warranty is purchased, this same warranty also applies to the period covered by the extended warranty.

If your Clarity product is defective and returned within 30 days of the date of purchase, your Clarity dealer will replace it at no charge.

If returned after 30 days but within one year from the date of purchase, we will repair at no charge. In the repair of your Easy Recall answering machine, we may use new or reconditioned replacement parts. If we elect to replace your Easy Recall answering machine, we may replace it with a new or reconditioned product of the same or similar design. Repair or replacement will be warranted for either 90 days or the remaining time on the original warranty period, whichever is longer.

Implied warranties, including those of fitness for a particular purpose and merchantability (an unwritten warranty that the product is fit for ordinary use), are limited to one year from date of purchase. We will not pay for loss of time, inconvenience, loss of use of your Easy Recall answering machine phone, or property damage caused by your Easy Recall answering machine or its failure to work, or any other incidental or consequential damages. Some

states do not allow limitations on how long an implied warranty lasts or the exclusion of incidental or consequential damages, so the above exclusions or limitations may not apply to you.

To get warranty service for your Easy Recall answering machine phone, you must provide proof of the purchase date within 30 days of the date of purchase or return your Easy Recall answering machine to the place where you purchased it for immediate replacement or refund. After 30 days, call Clarity at (800) 426-3738, for the authorized service center nearest you. You must prepay all shipping costs. We suggest you save the original package materials in the event you need to ship the Easy Recall answering machine. When in need of warranty repair, please call our customer service department at the above mentioned numbers. They will help you process your return shipment.

This warranty does not cover defects resulting from accidents, damage while in transit to our service location, alterations, unauthorized repair, failure to follow instructions, misuse, use outside the United States or Canada, fire, flood, and acts of God. Nor do we warrant the product to be compatible with any particular telephone equipment, party line, key telephone systems or more sophisticated switching systems. If your Easy Recall answering machine is not covered by this warranty, call Customer Service at (800) 426-3738, for advice on repair of your Easy Recall answering machine and other repair information. The repair shall be warranted for 90 days.

Index

Connecting the Easy Recall	4
Features	3
Recording your personal outgoing voice message	6
Recording a telephone conversation.....	15
Recording a memo	16
Remote retrieval of your voice message	14
Retrieving TTY messages	17-19
Sales Receipt	2
Setting up your Easy Recall.....	4-10
Setting the time and date	7
Setting your 4 digit access code.....	13
Template for remote retrieval of messages	9
Template for setting time	10
Tone and volume controls	12
Troubleshooting	21
Using your Easy Recall	11-17
Warranty Service	2



4289 Bonny Oaks Drive • Chattanooga, TN 37406

TEL: (800) 426-3738 • FAX: (800) 325-8871

email: claritycs@plantronics.com website: www.clarityproducts.com

RÉPONDÉUR NUMÉRIQUE
EASY RECALL™

Pour une excellente réception de messages vocaux et ATS.



Mode d'emploi

Clarity®, une filiale de Plantronics, Inc., 4289 Bonny Oaks Drive, Chattanooga, TN 37406
VOIX (800) 426-3738 TTY (800) 772-2889 www.clarityproducts.com

© 2004 Clarity, une filiale de Plantronics, Inc. Tous droits réservés.

Amplifying Your Life et Clarity sont des marques de commerce ou des marques de commerce déposées de Plantronics, Inc.

RENSEIGNEMENTS IMPORTANTS SUR LA SÉCURITÉ

Lorsque vous utiliserez votre téléphone, suivez toujours les mesures de sécurité de base suivantes afin de réduire les risques d'incendie, de choc électrique et de blessures.

1. Lire et bien comprendre toutes les instructions.
Se conformer à tous les avertissements et à toutes les instructions marqués sur l'appareil.
2. Pendant un orage électrique, ne pas utiliser de téléphone autre qu'un téléphone sans cordon. Il pourrait y avoir un léger risque de choc électrique.
3. Ne pas utiliser le téléphone près d'une fuite de gaz. Si vous croyez qu'il y a une fuite de gaz, signalez celle-ci immédiatement en utilisant un téléphone qui ne se trouve pas à proximité de la fuite de gaz.
4. Ne pas utiliser le téléphone dans un endroit humide ou lorsque vous êtes mouillé. Par exemple, ne pas l'utiliser sous la douche, près d'une piscine, d'une baignoire, d'un lavabo de cuisine ou de salle de lavage, ni dans un sous-sol humide. Ne pas utiliser de nettoyeurs liquides ou en aérosol. Si un liquide quelconque est renversé sur l'appareil, débranchez la prise téléphonique et le cordon d'alimentation immédiatement. Ne pas le brancher de nouveau avant qu'il soit complètement sec.
5. Ne pas placer cet appareil dans un endroit où les cordons risquent d'être piétinés. Protéger les cordons de tout dommage ou frottement.
6. Si l'appareil ne fonctionne pas normalement, lire la section "En cas de difficultés". Si vous ne trouvez pas la solution à votre problème ou si l'appareil est endommagé, reportez-vous à la garantie d'Clarity. Ne pas ouvrir l'appareil sauf pour suivre les instructions contenues dans ce manuel.
L'ouverture et l'assemblage de l'appareil peuvent exposer l'utilisateur à des tensions dangereuses ou à d'autres risques. L'ouverture de l'appareil entraîne automatiquement l'annulation de la garantie.
7. Débrancher l'appareil de la prise murale et confier toute réparation à un technicien qualifié dans les conditions suivantes:
 - A. Si le cordon est endommagé.
 - B. Si un liquide a été renversé sur l'appareil.
 - C. Si l'appareil a été exposé à la pluie ou à l'humidité.
 - D. Si l'appareil ne fonctionne pas normalement quand les instructions d'utilisation sont respectées, ne faites que les rajustements qui sont expliqués dans ce manuel d'utilisation

- E. Si l'appareil a été échappé ou s'il semble être endommagé.
- F. Si le rendement de l'appareil est nettement réduit.

RENSEIGNEMENTS SUPPLÉMENTAIRES À L'INTENTION DES UTILISATEURS CANADIENS

AVIS: L'étiquette du ministère des Communications du Canada identifie le matériel homologué. Cette étiquette certifie que le matériel est conforme à certaines normes de protection, d'exploitation et de sécurité des réseaux de télécommunications. Le ministère ne garantit pas toutefois que le matériel fonctionnera à la satisfaction de l'utilisateur.

Avant d'installer le présent matériel, l'utilisateur doit s'assurer qu'il est permis de le raccorder aux installations de l'entreprise locale de télécommunications. Le matériel doit également être installé selon une méthode de raccordement approuvée. L'abonné ne doit pas oublier que malgré le respect des conditions énoncées ci-dessus, il se peut qu'il y ait dégradation du service dans certaines situations. Le matériel homologué doit être réparé par un centre d'entretien canadien autorisé désigné par le fournisseur. La compagnie de télécommunications se réserve le droit de demander à un utilisateur de débrancher un appareil s'il a effectué des réparations ou des modifications ou si l'appareil fonctionne mal.

Pour sa propre protection, l'utilisateur doit s'assurer que tous les fils de mise à la terre de la source d'énergie électrique, des lignes téléphoniques et des canalisations d'eau métalliques, s'il y en a, sont raccordés ensemble. Cette précaution est particulièrement importante dans les régions rurales.

MISE EN GARDE: L'utilisateur ne doit pas tenter de faire les raccordements de mise à la terre lui-même; il doit avoir recours à un service d'inspection des installations électriques ou à un électricien, le plus tôt possible.

AVIS: Le facteur de charge attribué à chaque appareil permet de déterminer le nombre total de téléphones pouvant être raccordés à une même ligne. Pour éviter les surcharges, la somme des facteurs de charge des appareils raccordés à la ligne ne doit pas dépasser 100, quel que soit le modèle utilisé.

CONSERVEZ CES INSTRUCTIONS

Présentation de l'Easy Recall

Service de garantie.....	2
Reçu de caisse.....	2
Aide d'Clarity.....	2

Particularités	3
-----------------------------	----------

Installation de l'Easy Recall

Installation du répondeur Easy Recall	4
Messages sortants préprogrammés	5
Enregistrement des votre message vocal sortant.....	6
Réglage de l'heure et de la date	7
Réglage de l'heure template.....	9

Utilisation de l'Easy Recall

Écoute des messages.....	10
Programmation, de votre code d'accès	12
Template pour la récupération des messages a distance.....	13
Récupération à distance des messages vocaux.....	14
Enregistrement d'une conversation téléphonique.....	15
Enregistrement d'un message interne.....	16
Branchement d'autres prothèses auditives	17

Récupération des messages ATS

Lecture des messages ATS	17
Personnalisez votre message sortant ATS	18
Enregistrement combiné de voix et de message ATS.....	19

Remise à zéro	19
----------------------------	-----------

Caractéristiques	20
-------------------------------	-----------

Guide de dépannage	21
---------------------------------	-----------

Garantie	22
-----------------------	-----------

Index	23
--------------------	-----------

Présentation du l' EASY RECALL

Merci d'avoir choisi le nouveau téléphone **EASY RECALL** d'CLARITY, Inc. Ce téléphone a été conçu pour répondre aux normes de qualité les plus élevées afin que vous puissiez l'utiliser sans problème pendant des années.

Service de garantie

Lisez attentivement les instructions suivantes avant d'utiliser votre téléphone. Conservez ce manuel pour référence ultérieure.

Reçu de caisse

Conservez votre reçu de caisse comme preuve d'achat pour tout service couvert par la garantie.

Aide d'Clarity

Si vous avez des questions au sujet de votre téléphone **EASY RECALL**, téléphonez à notre Service à la clientèle au (800) 426-3738.

Veuillez vous assurer que toutes les pièces suivantes se trouvent bien dans la boîte:

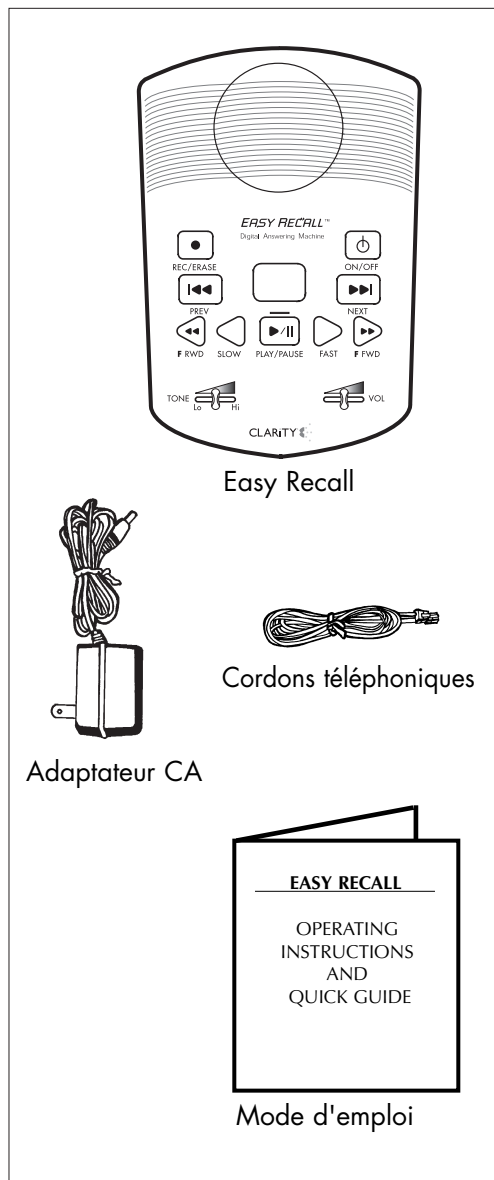


Figure 1 - Liste des pièces

Particularités de l' EASY RECALL

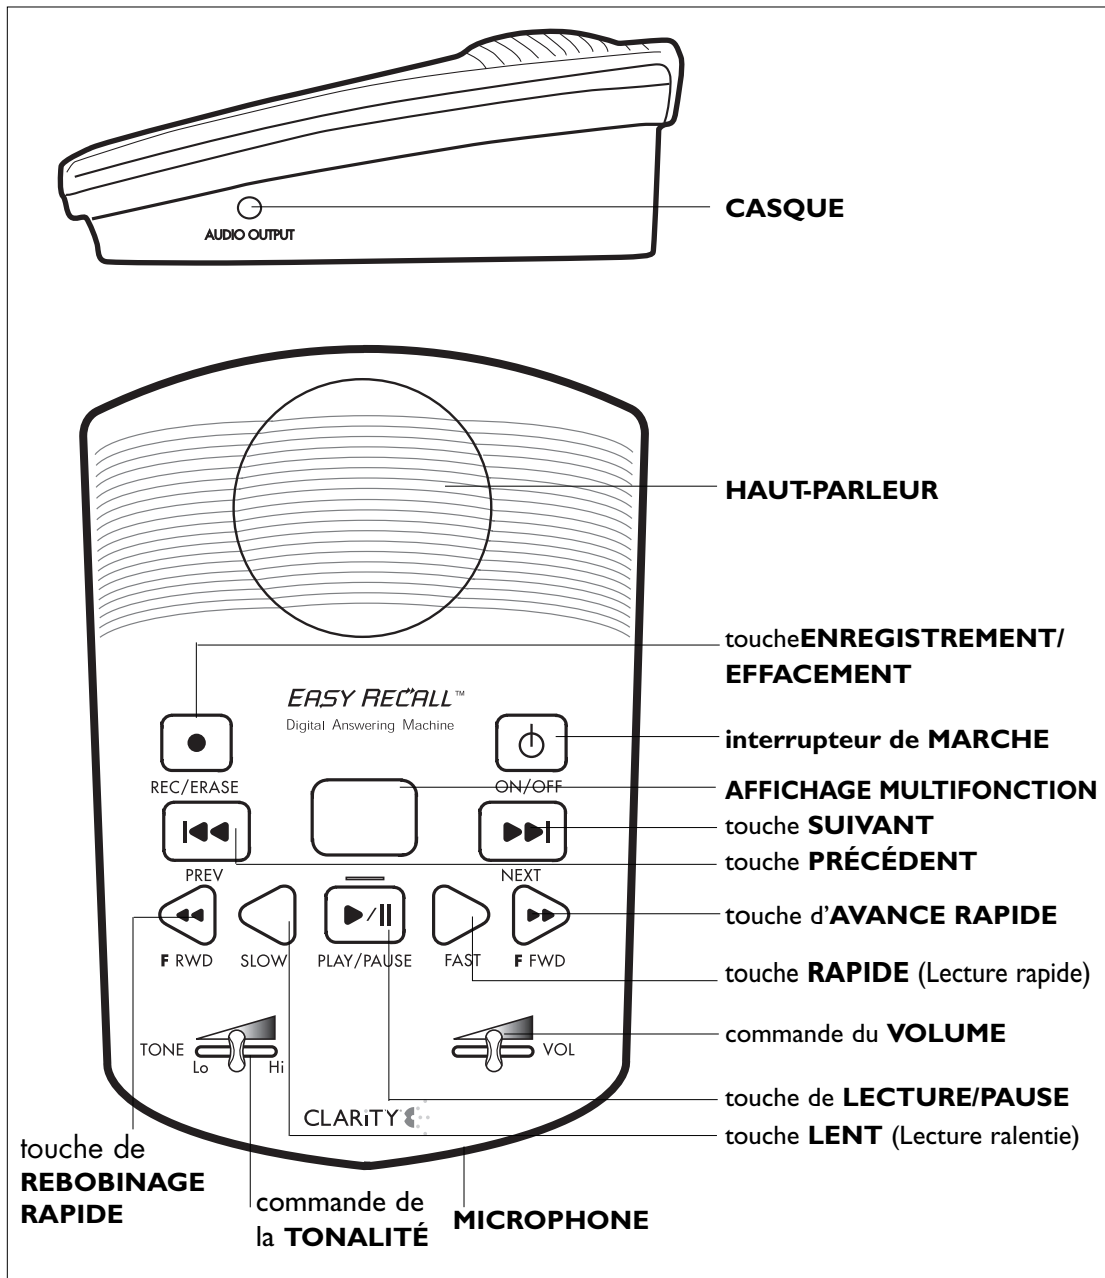


Figure 2 - Commandes de l'appareil

Installation de l'EASY RECALL

Installation du répondeur Easy Recall

1. Pour votre sécurité, débranchez toujours la ligne téléphonique avant d'installer ou de remplacer la pile.
2. **Option** - Installez une pile de 9 V de réserve (non fournie).
3. Insérez le cordon de l'adaptateur de c.a. dans la prise à l'arrière de l'Easy Recall. Branchez ensuite l'adaptateur de c.a. dans une prise électrique.

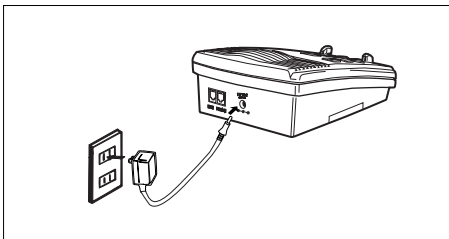


Figure 3 - Installation de l'appareil

4. Branchez le fil téléphonique livré avec l'Easy Recall dans la prise murale de téléphone et dans la prise LINE à l'arrière du téléphone.

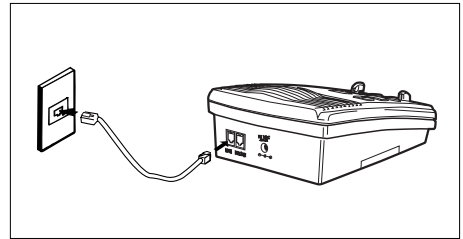


Figure 4 - Branchez le fil téléphonique

5. Si vous utilisez un ATS, branchez le fil téléphonique dans la prise PHONE à l'arrière de l'Easy Recall et dans la prise de téléphone de l'ATS.

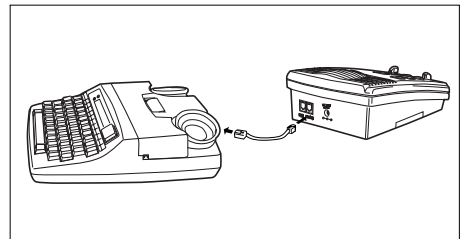


Figure 5 - Branchez un ATS

Installation de l'EASY RECALL(suite)

6. Si vous utilisez un téléphone, branchez le fil téléphonique dans la prise PHONE à l'arrière de l'Easy Recall et dans la prise téléphone du téléphone.

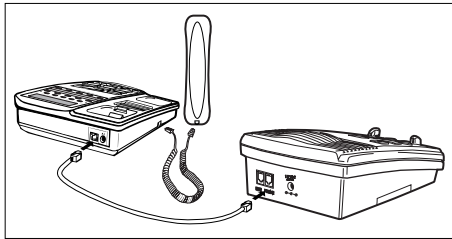


Figure 6 - Branchez un téléphone

Remarque : Le répondeur Easy Recall peut accumuler jusqu'à 24 messages ou 14 minutes d'enregistrement. Chaque message est limité à deux minutes.

Messages sortants pré-programmés

L'appareil a été préprogrammé comme suit :

- Un message sortant préenregistré en usine, disant : **Please leave a message after the tone (prière de laisser un message après le bip sonore).**
 - Un message ATS sortant préenregistré en usine : **LV MSG GA.**
 - Un code d'accès à distance **(1-1-1-1)** préenregistré en usine.
 - Si vous désirez horodater les messages reçus, vous devez auparavant mettre à l'heure l'horodateur du répondeur Easy Recall.
- Il est également possible de personnaliser certaines fonctions comme suit :
- Afin de programmer votre message sortant (ou ATS), il suffit de suivre les instructions du manuel.
 - Afin de programmer votre code d'accès secret et personnel, il suffit de suivre les instructions faciles du manuel.


Installation de l'EASY RECALL(suite)

Enregistrement de votre message vocal sortant

Le répondeur Easy Recall est livré avec le message suivant préenregistré en usine : **Please leave a message after the tone (prière de laisser un message après le bip sonore).**

Afin de programmer un message vocal sortant, suivez les instructions suivantes. Assurez-vous d'abord que l'appareil est **allumé (ON)**. Souvenez-vous que votre message personnel efface le message d'usine.

1. Appuyez simultanément et maintenez enfoncées les touches **REC./ERASE** et **SLOW** pendant 2 secondes.

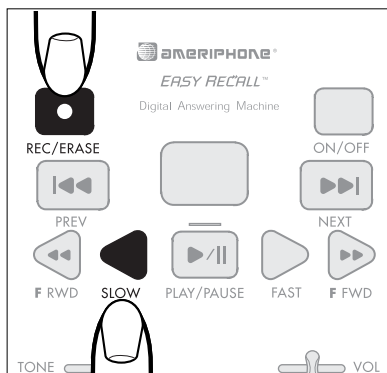


2. Parlez clairement dans le microphone pour enregistrer votre message sortant (vous avez jusqu'à 29 secondes pour le faire).



3. L'affichage indique le temps qui reste.
4. Appuyez sur **ON/OFF** lorsque vous avez terminé.



5. L'Easy Recall repasse alors automatiquement votre message enregistré.

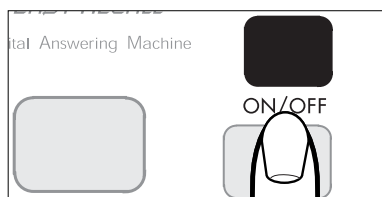

Installation de l'EASY RECALL(suite)

6. Si vous désirez écouter votre message sortant sans le remplacer, appuyez sur **PREV** et **FRWD**.


Si vous n'êtes pas satisfait du résultat, répétez l'opération.

Réglage de l'heure et de la date

Si vous désirez horodater les messages reçus, vous devez auparavant mettre à l'heure l'horodateur du répondeur.


Pour cela, assurez-vous que l'appareil est allumé (**ON**) et suivez les directives données ci-dessous :

1. Placez la légende sur les touches de l'Easy Recall.

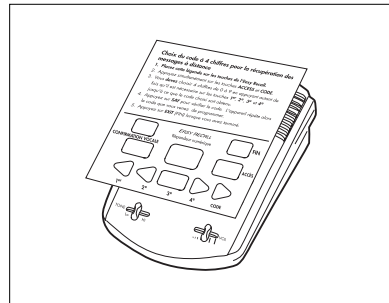


2. Appuyez simultanément sur les touches **TIME** et **SET (HEURE et RÉGLAGE)** pendant 2 secondes. L'affichage indique alors **T1** pour confirmer la fonction **TIME (HEURE)**.


Installation de l'EASY RECALL(suite)

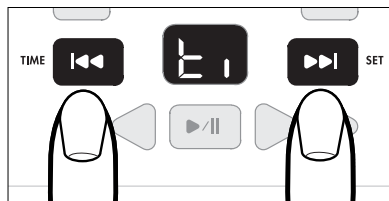


3. Appuyez sur la touche **HOUR (HEURES)** pour choisir les heures.

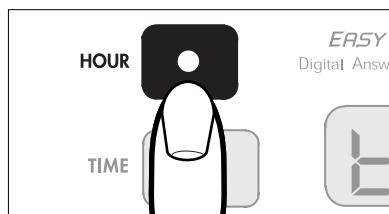

4. Appuyez sur la touche **MINUTE (MINUTES)** pour choisir les minutes.

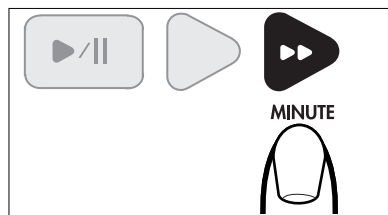


5. Appuyez sur la touche **DAY (JOUR)** pour choisir le jour.

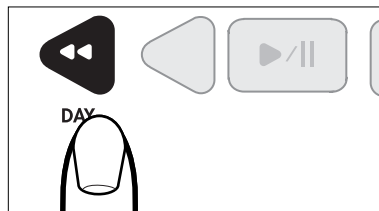

6. Appuyez sur **SAY (CONFIRMATION VOCALE)** pour obtenir confirmation de la programmation.



7. Appuyez sur **EXIT (FIN)** lorsque vous avez terminé.

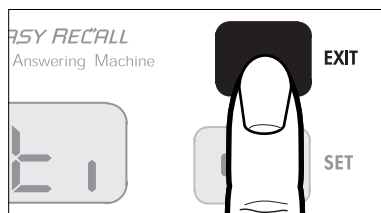

REMARQUE : En cas de panne de courant, l'heure et le jour **DOIVENT ÊTRE REPROGRAMMÉS.**

Installation de l'EASY RECALL(suite)

Guide on Français pour les touches de l' Easy Recall




Réglage de l'heure

L'appareil doit être mis à l'heure afin de permettre au compteur d'enregistrer l'heure exacte.

1. Placez cette légende sur les touches de l'Easy Recall.
2. Appuyez simultanément sur les touches **TIME** et **SET** pour commencer la programmation.
3. Appuyez sur la touche **HOUR** pour choisir les heures.
4. Appuyez sur la touche **MINUTE** pour choisir les minutes.
5. Appuyez sur la touche **DAY** pour choisir le jour.
6. Appuyez sur **SAY** pour obtenir une confirmation vocale de la programmation. Appuyez sur **EXIT** (FIN) lorsque vous avez terminé.

REMARQUE : En cas de panne de courant, l'heure et le jour **doivent être reprogrammés**.

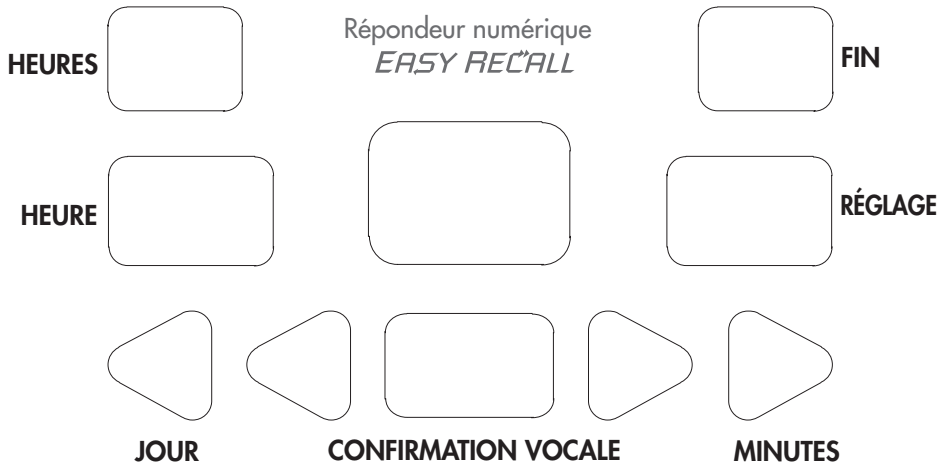


Utilisation de l'EASY RECALL (suite)


Écoute des messages

Le chiffre clignotant indique le nombre de messages vocaux reçus. Celui qui clignote après **TD** indique le nombre de messages ATS reçus.


1. Appuyez sur la touche **PLAY/PAUSE** pour **écouter tous** les messages vocaux ou ATS (le dernier message reçu passe le premier).

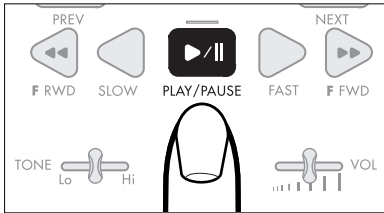

Si vous voulez **SEULEMENT** écouter les messages vocaux, appuyez sur la touche **FAST**. (Voir la rubrique ATS pour récupérer seulement les messages ATS.)

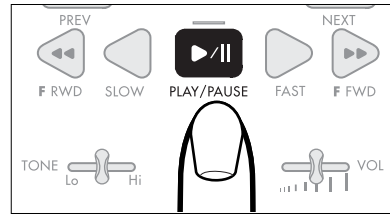


2. Appuyez sur la touche **REC/ERASE** pour effacer le message courant.

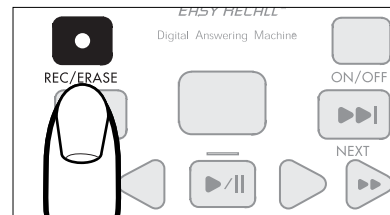


Remarque : À moins d'être effacé, chaque message est automatiquement sauvegardé.

3. Appuyez sur la touche **PREV** pour **réécouter** le message que vous venez d'entendre. Appuyez à plusieurs reprises sur **PREV** pour localiser d'autres messages précédents.

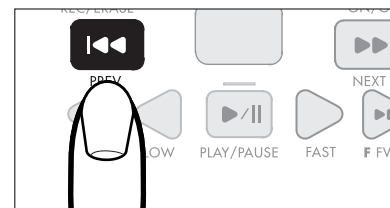


Utilisation de l'EASY RECALL (suite)


4. Réglez le volume **VOLUME** et la tonalité **TONE** pour une meilleure clarté.

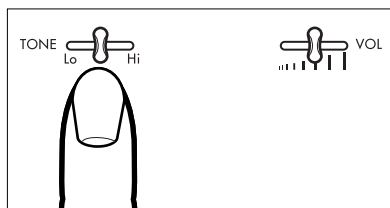


7. Pour revenir par intervalles de 1 à 2 secondes pendant le message, appuyez sur la touche de rebobinage rapide **FRWD**.

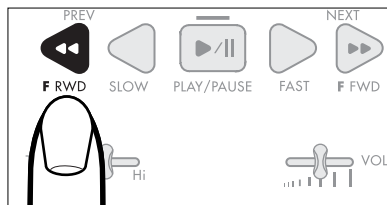


5. Pour écouter le message suivant, appuyez sur la touche **NEXT**.

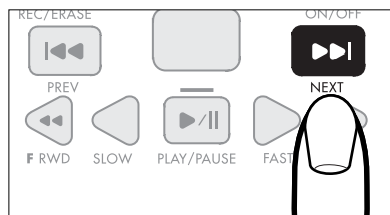

6. Pour avancer par intervalles de 1 à 2 secondes pendant le message, appuyez sur la touche d'avance rapide **FFWD**.

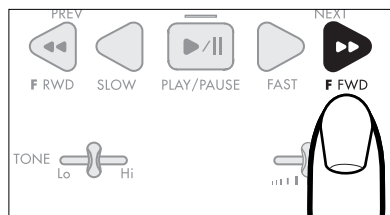


8. Si vous désirez interrompre momentanément l'écoute d'un message, appuyez sur la touche **PLAY/PAUSE**.

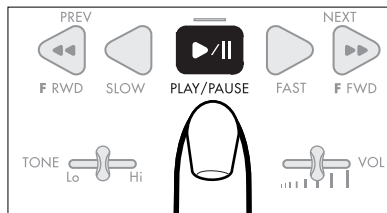


9. Pour ralentir la vitesse de lecture par intervalles de 5 %, appuyez une fois sur **SLOW**. En appuyant 5 fois sur la touche **SLOW**, on obtient le ralentissement optimal de 25 %.

Utilisation de l'EASY RECALL (suite)

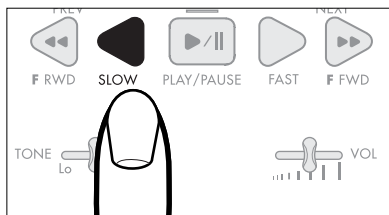

10. Pour accélérer la lecture par intervalles de 5 %, appuyez une fois sur la touche **FAST**. En appuyant 5 fois sur **FAST**, on obtient l'accélération optimale de 25 %.

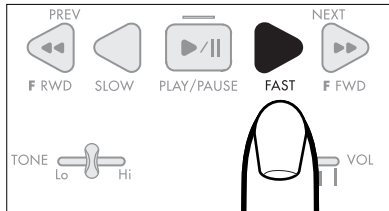


11. Pour revenir à la vitesse normale, appuyez sur **SLOW** (en lecture accélérée) ou sur **FAST** (en lecture ralentie) jusqu'à ce que la vitesse voulue soit atteinte.

Programmation de votre code d'accès de 4 chiffres pour récupération des messages à distance.

L'Easy Recall est livré avec un code d'accès à distance (1-1-1-1) préenregistré en usine. Afin de programmer votre code d'accès personnel, assurez-vous que l'appareil est allumé (ON) et suivez les instructions ci-après :


1. Placez la légende de code d'accès sur les touches de l'Easy Recall.

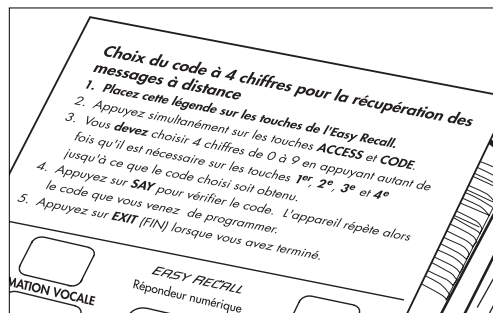

2. Appuyez simultanément sur les touches **ACCESS** et **CODE (ACCÈS et CODE)** pendant 2 secondes (l'affichage indique **PD**, ce qui confirme la fonction de code d'accès).


Installation de l'EASY RECALL (suite)

Guide on Français pour les touches de l' Easy Recall




Choix du code à 4 chiffres pour la récupération des messages à distance

1. Placez cette légende sur les touches de l'Easy Recall.
2. Appuyez simultanément sur les touches **ACCESS** et **CODE**.
3. Vous **devez** choisir 4 chiffres de 0 à 9 en appuyant autant de fois qu'il est nécessaire sur les touches **1^{er}**, **2^e**, **3^e** et **4^e** jusqu'à ce que le code choisi soit obtenu.
4. Appuyez sur **SAY** pour vérifier le code. L'appareil répète alors le code que vous venez de programmer.
5. Appuyez sur **EXIT** (FIN) lorsque vous avez terminé.

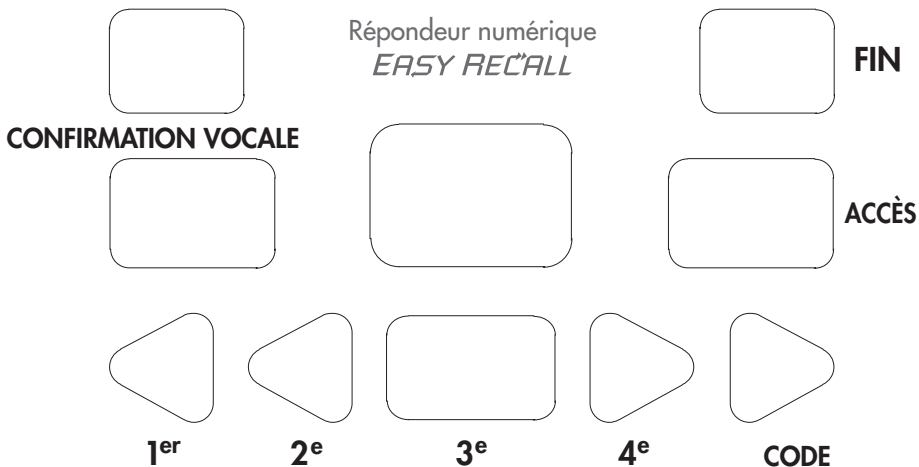

Utilisation de l'EASY RECALL (suite)


3. Vous DEVEZ choisir un code de 4 chiffres de 1111 à 9999. Le 0 n'est pas utilisé. Appuyez sur les touches **1^{er}**, **2^e**, **3^e** et **4^e** autant de fois qu'il est nécessaire jusqu'à ce que le code choisi soit obtenu.

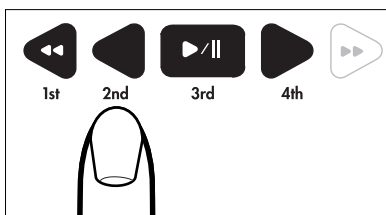


4. Appuyez sur **SAY (CONFIRMATION VOCALE)** pour vérifier le code.



5. Appuyez sur **EXIT (FIN)** lorsque vous avez terminé.

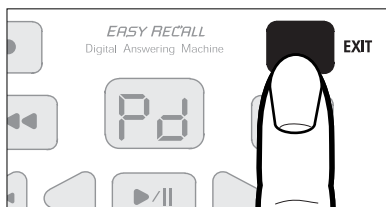

6. Appuyez sur **PREV** pour vérifier l'heure, le message sortant et le code d'accès.

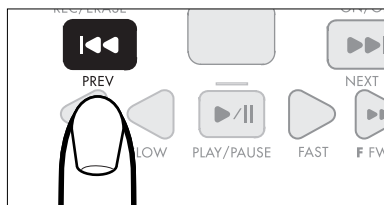

Récupération à distance de vos messages vocaux

1. Appelez votre numéro et attendez que l'Easy Recall réponde.
2. Composez votre code d'accès aussitôt que vous entendez le message sortant.
3. Appuyez sur **2** pour effacer le message courant; **sinon, il sera sauvegardé.**
4. Appuyez sur **7** pour réécouter le message que vous venez d'entendre. Appuyez à plusieurs reprises sur **7** pour localiser d'autres messages précédents.

Utilisation de l'EASY RECALL (suite)



- Appuyez sur **9** pour sauter au message suivant.
- Appuyez sur **EXIT (FIN)** lorsque vous avez terminé.




Enregistrement d'une conversation téléphonique (limite de 2 minutes par appel)

Remarque : Les intervenants doivent être avertis et doivent consentir à l'enregistrement de leur conversation.

- Appuyez simultanément sur les touches **REC./ERASE** et **PLAY/PAUSE** en les maintenant pendant 2 secondes.

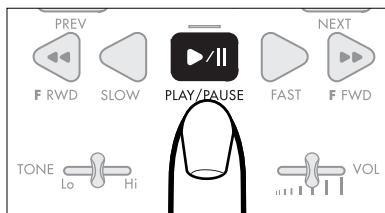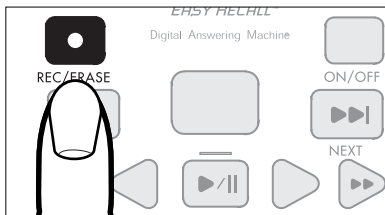

- L'affichage indique alors **RC**.
- La conversation téléphonique en cours s'enregistre.
- Appuyez sur la touche **ON/OFF** pour mettre fin à l'enregistrement.

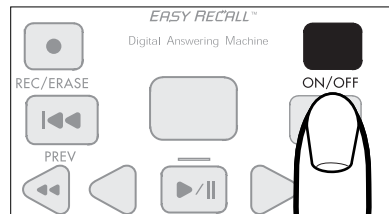


- L'enregistrement est stocké en mémoire et peut être écouté ou effacé comme tout autre message vocal.

Utilisation de l'EASY RECALL (suite)

Enregistrement de messages internes limités à 2 minutes

Il est possible d'enregistrer un message personnel destiné à quelqu'un dans la maison. Les messages internes sont affichés et écoutés comme les messages reçus. Assurez-vous que l'appareil est allumé avant de suivre les instructions ci-après :


1. Appuyez sur la touche **REC./ERASE** pendant 2 secondes.

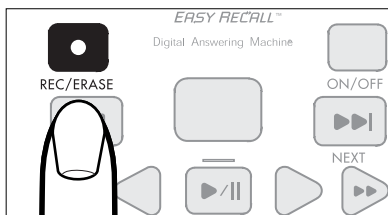


2. Parlez directement dans le microphone pour enregistrer votre message. L'affichage indique **RC** lors de l'enregistrement.



3. Appuyez sur **ON/OFF** pour arrêter l'enregistrement.

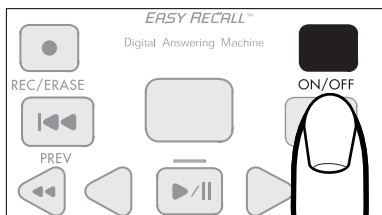

4. Appuyez sur la touche **PLAY/PAUSE** pour écouter ce que vous venez d'enregistrer.

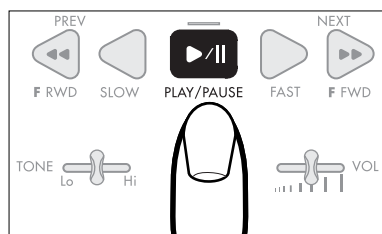

5. Appuyez sur **REC./ERASE** si vous désirez effacer le message interne.




Utilisation de l'EASY RECALL (suite)

Branchement d'autres prothèses auditives

Un pendentif, un casque mono ou un implant cochléaire peut être branché à l'EASY RECALL pour obtenir une qualité sonore optimale sans perdre l'usage d'une seule des particularités de l'appareil.


Remarque : L'utilisation d'une prothèse auditive ne coupe pas le haut-parleur de l'Easy Recall.

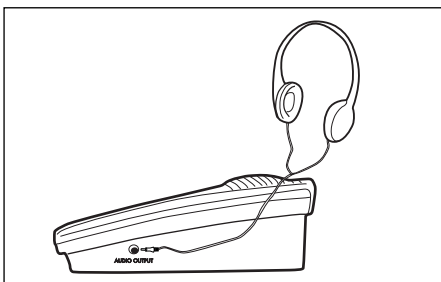

Récupération des messages ATS

Lecture des messages ATS

- Pour la lecture des messages ATS, vous devez utiliser un coupleur ATS incorporé.
- Pour bien fonctionner, le système ATS doit être en position acoustique et NON en connexion directe (Direct Connect).
- Le chiffre clignotant après **TD** indique le nombre de messages ATS reçus.
- Allumez l'appareil ATS et placez-le près du répondeur, tel qu'illustré.

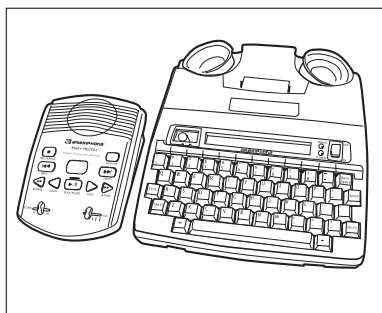

- Placez les commandes du volume et de la tonalité à mi-course avant de les régler à votre convenance.

Récupération des messages ATS (suite)

- Si vous avez SEULEMENT reçu des messages ATS, appuyez sur **PLAY**. Si vous avez à la fois des messages vocaux et ATS mais désirez lire les messages ATS seulement, appuyez sur **SLOW**.
- Les messages reçus par le répondeur sont affichés sur l'écran de l'ATS.
- Effacez un message en appuyant sur la touche **ERASE**, sinon il sera sauvegardé.
- Appuyez sur la touche **PREV** pour réécouter le message que vous venez d'entendre. Appuyez à plusieurs reprises sur **PREV** pour localiser d'autres messages précédents.
- Pour avancer et écouter le message suivant, appuyez sur la touche **NEXT**.
- Si un message s'est embrouillé, appuyez sur la barre d'espacement pour l'effacer.

Personnalisez votre message sortant ATS

Vous pouvez enregistrer un message sortant à l'aide des touches REC/ERASE et FAST (enregistre à partir de la ligne téléphonique comme pour une conversation).

1. Faites un appel téléphonique avec l'ATS.
2. Informez votre interlocuteur que vous enregistrez un message.
3. Appuyez sur les touches REC/ERASE et FAST et tapez le message sortant.
4. Appuyez sur la touche ON/OFF pour arrêter l'enregistrement.

Récupération des messages ATS (suite)

Enregistrement combiné de voix et de message ATS

Vous pouvez enregistrer un message sortant à l'aide des touches REC/ERASE et FAST (enregistre à partir de la ligne téléphonique comme pour une conversation).

1. Pour enregistrer, appuyez simultanément sur les touches **REC./ERASE** et **SLOW** pendant 2 secondes.
2. Tapez légèrement pour éviter les bruits de clavier qui peuvent perturber le signal ATS.
3. Enregistrez la portion vocale du message en appuyant sur les touches REC/ERASE et FAST. Soulevez les doigts et parlez dans le combiné.
4. Placez le combiné dans les coupleurs acoustiques de l'ATS.
5. Tapez le message ATS.
6. Appuyez sur la touche ON/OFF.

Remise à zéro

1. Appuyez simultanément sur les touches **REC, PREV et ON/OFF** (servez-vous des deux mains si nécessaire), puis relâchez-les en même temps. Les résultats suivants sont obtenus :
 - Efface les messages sortants personnalisés et les remplace par le message sortant préenregistré en usine.
 - Efface l'heure et la date.
 - Le code d'accès personnalisé est effacé et remplacé par 1-1-1-1.
2. Afin de reprogrammer l'une ou l'autre de ces fonctions, il suffit de suivre les instructions déjà données.

Caractéristiques

Puissance requise

5 V CC / 400 mA

Pile alcaline de réserve de 9V (option)

1 à 3 heures d'autonomie

Longueur optimale d'enregistrement

Accumulation de 24 messages ou 14 minutes d'enregistrement, au premier des termes échu. Chaque message est limité à 2 minutes.

Messages sortants préenregistrés

Vocaux et ATS

Longueur optimale du message sortant

Environ 29 secondes

Diamètre et impédance du haut-parleur

3 po et 8 ohms

Vérification à distance du nombre de messages

Présence de messages : le téléphone sonne 2 fois

Absence de messages : le téléphone sonne 4 fois

Horodatage

Disponible

Code d'accès personnalisé

Doit comporter 4 chiffres

Code préenregistré en usine :

1-1-1-1

Vitesse de lecture adaptable

De 75 % à 125 % de la vitesse normale

Prise de casque ou de pendentif

3,5 mm (sortie mono)

Poids

454 g (1 lb)

Dimensions

19 x 14 x 6,4 cm
(7,5 x 5,5 x 2,5 po)

Température de fonctionnement

de 10 à 40 °C

Humidité maximale

85 %, non condensable

La tableau ci-dessous vous aidera à résoudre les problèmes d'utilisation de l'Easy Recall. Si le problème persiste, appelez Clarity ou le détaillant autorisé.

PROBLÈME	SOLUTION
L'Easy Recall est inutilisable. Rien ne fonctionne.	Remettez l'appareil en fonction en débranchant l'adaptateur CA et en enlevant les piles. Rebranchez l'appareil et réinstallez les piles après environ 15 secondes.
L'Easy Recall ne fonctionne pas.	Assurez-vous que l'appareil est branché et allumé. Remettez l'appareil en fonction en suivant les instructions précédentes.
L'Easy Recall ne reçoit pas de messages ATS.	Placez l'ATS près de l'Easy Recall pour garantir la réception des signaux ATS. Assurez-vous que l'ATS est ALLUMÉ et qu'il est en position acoustique et non en connexion directe. Effectuez la remise à zéro (Master Clear) pour effacer tous les messages et revenir aux réglages d'usine.

La partie 68 de FCC règne l'information

Cet équipement est conforme à la partie 68 des règles de FCC. Sur le fond de cet équipement est une étiquette qui contient, entre l'autre information, le numéro d'immatriculation de FCC et le nombre d'équivalence de sonnerie (REN) pour cet équipement. Si demandées, ces informations doivent être fournies à la compagnie de téléphone.

Une prise et un cric relient cet équipement aux lieux au câblant et le réseau téléphonique doit être conforme de la partie 68 de FCC les règles applicables et des conditions adoptées par l'ACTA. Une corde conforme de téléphone et une prise modulaire, RJ11 USOC, est équipée de ce produit. Il est conçu pour être relié à un cric modulaire compatible qui est également conforme. Voir les instructions d'installation pour des détails.

Le REN est employé pour déterminer le nombre de dispositifs qui peuvent être reliés à une ligne téléphonique. RENs excessif sur une ligne téléphonique peut avoir comme conséquence les dispositifs ne sonnant pas en réponse à un appel d'arrivée. Dans les la plupart mais non tous les secteurs, la somme de RENs ne devrait pas excéder cinq (5,0). Pour être un certain nombre de nombre de dispositifs qui peuvent être reliés à une ligne, comme déterminé par le total RENs, contactez la compagnie locale de téléphone. Pour des produits approuvés après juillet 23, 2001, le REN pour ce produit fait partie de la marque de produit qui a le format US:AAAEQ##TXXXX. Les chiffres représentés par le ## sont les REN sans virgule décimale (par exemple, 03 est des REN de 0,3). Pour des produits plus tôt, le REN est séparément montré sur l'étiquette.

Si cet équipement de téléphone cause le mal au réseau téléphonique, la compagnie de

téléphone vous informera à l'avance que la cessation provisoire du service peut être exigée. Mais si l'isn?t de communication préalable pratique, la compagnie de téléphone informera le client aussitôt que possible. En outre, vous serez conseillés de votre droite de classer une plainte avec la FCC si vous la croyez est nécessaire.

La compagnie de téléphone peut faire des changements de ses équipements, équipement, opérations ou procédures qui pourraient affecter l'opération de l'équipement. Si ceci se produit la compagnie de téléphone fournira la communication préalable afin que vous puissiez pour faire des modifications nécessaires pour maintenir non interrompu service.

Si l'ennui est éprouvé avec cet équipement de téléphone, pour la réparation ou l'information de garantie, entrez en contact Clarity, (800) 426-3738.

Si l'équipement cause le mal au réseau téléphonique, la compagnie de téléphone peut demander que vous débranchez l'équipement jusqu'à ce que le problème soit résolu.

Cet équipement de téléphone n'est pas prévu pour être réparé et il ne contient aucune pièce réparable. L'ouverture de l'équipement ou de n'importe quelle tentative d' exécuter des réparations videra la garantie. Pour le service ou les réparations, appel (800) 426-3738 Le raccordement au service de ligne de partie est sujet à des tarifs d'état. Contactez la commission de équipement collectif public d'état, la commission de service public ou la commission de société pour information.

Si votre maison a particulièrement câblé l'équipement d'alarme relié à la ligne téléphonique, assurez l'installation de cet équipement de téléphone ne neutralise pas votre équipement d'alarme. Si vous avez des questions au sujet de ce qui neutralisera l'équipement

d'alarme, consultez votre compagnie de téléphone ou un installateur qualifié.

Cet équipement de téléphone est prothèse auditive compatible.

Téléphones Client-Possédés De Carte De Coin/Credit:

Pour se conformer aux tarifs d'état, la compagnie de téléphone doit être donnée l'avis avant le raccordement. Dans quelques états, la commission de équipement collectif public d'état, la commission de service public ou la commission de société doivent donner l'approbation préalable du raccordement.

La partie 15 de FCC règle l'information

Ce dispositif est conforme à la partie 15 des règles de FCC. L'opération est sujette aux deux conditions suivantes: (1) ce dispositif peut ne pas causer l'interférence nocive, et (2) ce

dispositif doit accepter n'importe quelle interférence reçue, y compris l'interférence qui peut causer l'opération peu désirée.

Votre système de l'avis Easy Recall a été examiné et avéré pour être conforme aux limites d'un dispositif numérique de la classe B, conformément à la partie 15 de règles de FCC. Ces limites sont conçues pour assurer la protection raisonnable contre l'interférence nocive dans l'installation résidentielle.

Cet équipement se produit, des utilisations, et peut rayonner l'énergie de fréquence par radio et, si non installé et utilisé selon les instructions, peut causer l'interférence nocive aux communications par radio. Cependant, il n'y a aucune garantie que l'interférence ne se produira pas dans une installation particulière; si cet équipement cause l'interférence nocive à la radio ou la réception des émissions télévisées, qui peut être déterminée en allumant

l'équipement au loin et, vous êtes encouragés à essayer de corriger l'interférence par un des mesures suivantes:

1. Là où il peut être fait sans risque, réorientez la télévision ou l'antenne de réception de radio.
2. Jusqu'au degré possible, remplacez la télévision, la radio ou tout autre récepteur en ce qui concerne l'équipement de téléphone. (ceci augmente la séparation entre l'équipement de téléphone et le récepteur.)
3. Reliez l'équipement de téléphone dans une sortie sur une différence de circuit de cela auquel la télévision, la radio, ou tout autre récepteur est reliée.
4. Consultez le revendeur ou un technicien expérimenté de radio/TV pour l'aide.

ATTENTION: Les changements ou les modifications pas expressément approuvées par le fabricant responsable de la conformité ont pu vider l'autorité

d'user?s pour actionner l'équipement.

RESPONSABLE DE LA CONFORMITÉ
DU PRODUIT :

Clarity®

A Division of Plantronics, Inc.

4289 Bonny Oaks drive

Chattanooga, TN 37406, USA

Téléphone : (800) 426-3738

Caractéristiques Techniques Du Canada D'Industrie

**Ce produit répond aux
caractéristiques techniques du
Canada d'industrie applicable.**

Avant d'installer cet équipement, les utilisateurs devraient s'assurer qu'il est permis d'être relié aux équipements de la compagnie locale de télécommunications.

L'équipement doit également être installé en utilisant une méthode acceptable de raccordement.

Dans certains cas, les company?s à l'intérieur du câblage lié à un service individuel de ligne simple peuvent être prolongés à l'aide d'un connecteur certifié (corde de

prolongation de téléphone). Le client devrait se rendre compte que la conformité dans les conditions ci-dessus puisse ne pas empêcher la dégradation du service dans quelques situations.

À l'équipement certifié devraient être dépannés par un service canadien autorisé d'entretien indiqué par le fournisseur. Tous les réparations ou changements faits par l'utilisateur à cet équipement, ou l'équipement fonctionne mal, peuvent donner à la compagnie de télécommunications la cause pour inviter l'utilisateur à débrancher l'équipement.

Les utilisateurs devraient s'assurer pour leur propre protection que les prises de terre au sol électriques de l'entreprise d'électricité, des lignes téléphoniques et du système métallique interne de conduite d'eau, si présent, sont reliées ensemble. Cette précaution peut être particulièrement importante dans des secteurs ruraux.

ATTENTION: Les utilisateurs ne devraient pas essayer d'établir de tels rapports eux-mêmes, mais devraient contacter l'autorité électrique appropriée d'inspection, ou l'électricien, comme approprié.

Le nombre d'équivalence de sonnerie est une indication du nombre maximum des bornes permises d'être relié à une interface de téléphone. L'arrêt sur une interface peut se composer de n'importe quelle combinaison de sujet de dispositifs seulement à la condition que la somme des nombres d'équivalence de sonnerie de tous les dispositifs n'exède pas cinq.

[la limite?IC:? avant que le nombre de certification/registration signifie seulement que les caractéristiques techniques du Canada d'industrie ont été rencontrées.]

Garantie

Cette garantie s'applique seulement aux appareils Clarity achetés et utilisés aux États-Unis et au Canada.

Clarity garantit ce téléphone EASY RECALL contre tous défauts dans les matières premières et la fabrication pendant l'année suivant la date d'achat. Si vous achetez une garantie prolongée, la même garantie s'applique pour toute la période visée par la garantie prolongée.

Si votre appareil Clarity est défectueux et que vous le retournez dans les 30 jours suivant la date d'achat, votre détaillant le remplacera sans frais.

Si vous le retournez après 30 jours mais au cours de l'année suivant la date d'achat, il sera réparé ou remplacé sans frais. Des pièces neuves ou des pièces remises à neuf peuvent être utilisées pour la réparation. Si nous choisissons de remplacer votre téléphone EASY RECALL, il se peut que ce soit par un téléphone neuf ou remis à neuf du même modèle ou d'un modèle semblable. La réparation ou le remplacement sera garanti pour une période de 90 jours ou pour la période non écoulée de la garantie originale, si celle-ci dépasse 90 jours.

Les garanties implicites, y compris celles touchant des appareils conçus pour un usage particulier et la valeur marchande (une garantie non écrite selon laquelle l'appareil convient à un usage normal), se limitent à une période d'un an suivant la date d'achat. Nous ne débourserez aucun frais entraîné par les pertes de temps, les inconvénients, l'impossibilité d'utiliser votre téléphone EASY RECALL, ni pour les dommages causés à la propriété par votre téléphone EASY RECALL ou par son mauvais fonctionnement ou pour tous autres dommages-intérêts indirects.

Étant donné que dans certains États, il n'y a pas de restriction sur la période couverte par la garantie implicite ni d'exclusion concernant les dommages-intérêts indirects par conséquent, ces restrictions ou exclusions

peuvent ne pas s'appliquer.

Pour toutes réparations ou service couverts par la garantie, joindre une preuve de la date d'achat. Dans les 30 premiers jours suivant la date d'achat, retournez votre téléphone EASY RECALL au détaillant auprès de qui vous l'avez acheté, qui vous le remplacera immédiatement. Après 30 jours, téléphonez à Clarity au numéro suivant: (800) 426-3738 (Voix), (800) 772-2889 (TTY) pour connaître l'adresse du centre de service le plus près de chez vous. Vous devez payer à l'avance les frais de transport. Nous vous suggérons de conserver l'emballage original au cas où vous auriez à le retourner. Si votre appareil est toujours garanti et a besoin d'être réparé, merci d'appeler notre service à la clientèle au (800) 426-3738 (Voix), (800) 772-2889 (TTY) AVANT de nous retourner votre appareil. Une conseillère vous préciera la procédure à suivre pour retourner votre téléphone.

Cette garantie ne couvre pas les dommages attribuables aux accidents, les dommages causés en transit, ceux provenant de modifications ou d'une réparation par un détaillant non autorisé, d'un défaut de suivre les instructions, d'un usage impropre, d'un usage hors des États-Unis ou du Canada, d'un incendie, d'une inondation ou d'une catastrophe quelconque. Nous ne garantissons pas que ce produit est compatible avec toute pièce de téléphone, avec des lignes communes, avec n'importe quel téléphone à touches ou avec des systèmes téléphoniques plus perfectionnés. Si votre téléphone EASY RECALL n'est pas couvert par cette garantie, téléphonez-nous au numéro suivant (800) 426-3738 (Voix), (800) 772-2889 (TTY) pour obtenir des conseils concernant la réparation de votre appareil. Toute réparation sera couverte par une garantie de 90 jours.

Index

Installation du répondeur	
Easy Recall	4
Particularités	3
Enregistrement de votre message vocal sortant	6
Enregistrement d'une conversation téléphonique.....	15
Récupération à distance de vos messages vocaux.....	14
Lecture des messages ATS	17
Reçu de caisse.....	2
Installation de l'EASY RECALL.....	4
Réglage de l'heure et de la date.....	7
Programmation de votre code d'accès de 4 chiffres	12
VOLUME et la tonalité	11
Guide de dépannage.....	18
Utilisation de l'EASY RECALL.....	10
Garantie.....	2



4289 Bonny Oaks Drive • Chattanooga, TN 37406

TEL: (800) 426-3738 • FAX: (800) 325-8871

email: claritycs@plantronics.com website: www.clarityproducts.com