

Telefon - Phone




**Bedienungsanleitung
Operating Instructions**

Inhaltsverzeichnis

1. Bedienelemente	3
2. Installation.....	4
2.1 Batterien einsetzen	4
2.2 Anschliessen	5
2.3 Wandmontage.....	5
2.4 Hörgeräte kompatibel.....	5
2.5 T-NET Anpassung.....	5
2.6 Displaykontrast einstellen	5
2.7 Standardeinstellungen programmieren	6
3. Bedienung	7
3.1 Telefonnummer wählen	7
3.2 Hörerlautstärke.....	7
3.3 Wahlwiederholung.....	7
3.4 Einstellbarer Tonruf.....	7
3.5 Speicherplätze eingeben	7
3.5.1 Rufnummer im Telefonbuch speichern.....	7
3.5.2 Wählen mit den Direktwahltasten	8
3.5.3 Wählen aus dem Telefonbuch	8
4. Rufnummernanzeige (clip).....	8
4.1 Anruferliste einsehen	8
4.2 Telefonnummer aus der Anruferliste direkt anwählen	9
4.3 Telefonnummer aus der Anruferliste löschen	9
4.4 Komplette Anruferliste löschen	9
5. "R" Signaltaste - T-NET Anpassung	10
5.1 "R" Taste an Nebenstellenanlagen	10
5.2 "R" Taste und die T- NET-Funktionen der DEUTSCHEN TELEKOM.....	10
6. Wichtige Hinweise	10
6.1 Fehlersuche	10
6.2 Telefonkabel austauschen	10
6.3 Garantie	11
6.4 Konformitätserklärung.....	12
Operating Instructions.....	13




1. BEDIENELEMENTE

Hörer Innenseite

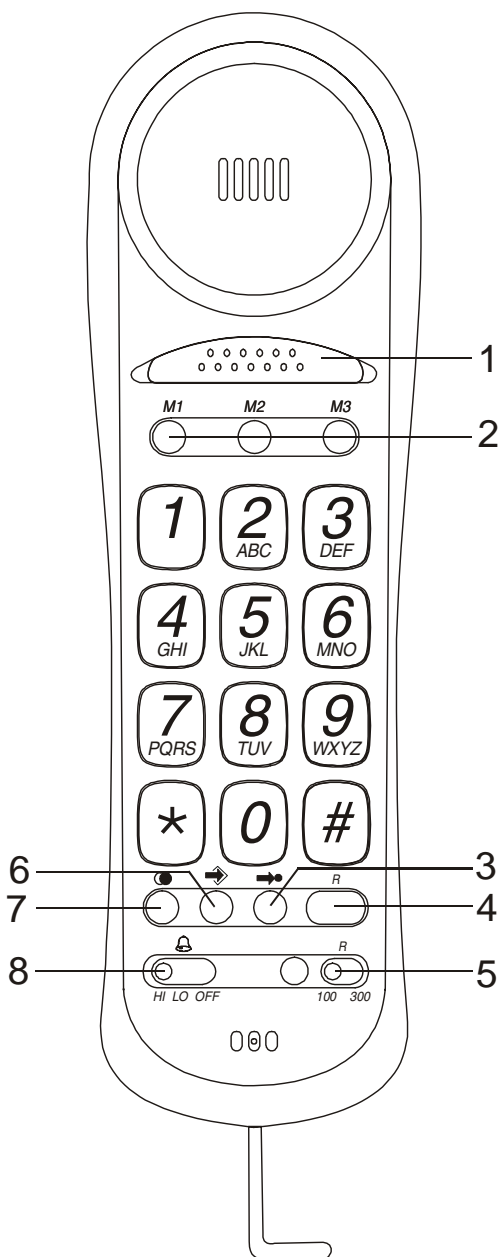

- | | | | |
|---|------------------|---|----------------------|
| 1 | Trenntaste | 5 | FLASH-Schalter |
| 2 | Direktwahltasten | 6 | Speichertaste |
| 3 | Kurzwahltaste | 7 | Wahlwiederholung |
| 4 | R-Signaltaste | 8 | Einstellbarer Tonruf |

Hörer Außenseite – linke Seite - rechte Seite

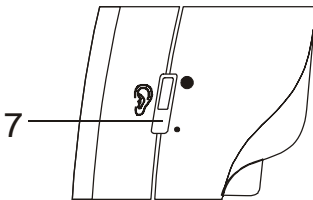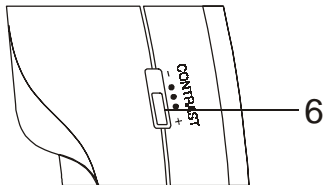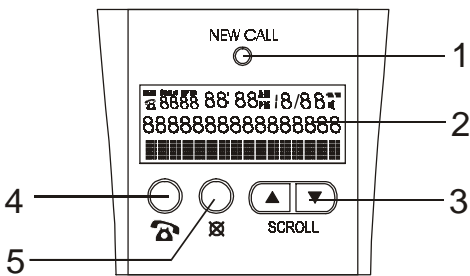


- | | | | |
|---|--------------|---|---------------------|
| 1 | LED New Call | 5 | Löschtaste |
| 2 | Display | 6 | Kontrasteinstellung |
| 3 | Scrolltasten | 7 | Hörerlautstärke |
| 4 | Taste Wählen | | |

2. INSTALLATION

2.1 BATTERIEN EINSETZEN

Bevor Sie Ihr neues Telefon mit dem Telefonnetz verbinden, sollten die vier mitgelieferten Batterien eingebaut werden. Bitte benutzen Sie immer Batterien des Typs AAA Alkaline. Die Batterien werden für die Rufnummernanzeige und für weitere Funktionen des Telefons benötigt. Bevor Sie die Batterien einbauen oder wechseln, achten Sie darauf, dass das Telefon nicht mit dem Telefonnetz verbunden ist. Das Batteriefach befindet sich in der Hörerablage Ihres Telefons.

1. Öffnen Sie das Batteriefach unter dem Telefonregister mit einem kleinen Schraubenzieher oder einem spitzen Gegenstand.
2. Legen Sie die Batterien ein. Achten Sie dabei auf die richtige Polung.
3. Schliessen Sie das Batteriefach.


Die Batterien sollten ausgetauscht werden, wenn im Display das Symbol  angezeigt wird. Alle vier Batterien müssen dann ersetzt werden, damit die Rufnummernanzeige und die gespeicherten Telefonnummern wieder einwandfrei funktionieren. Zeigt das Display keine Anzeige sind die Batterien bereits komplett entladen.

2.2 ANSCHLIESSEN

Verbinden Sie das beiliegende Telefonkabel mit der Telefonsteckdose und der Telefonbuchse auf der Unterseite des Telefons. Führen Sie dann das Kabel durch die Kabelführung entweder nach oben oder nach unten aus dem Telefongehäuse heraus. Das *AUDIOLINE TELEFON 4clip* arbeitet mit dem MFV-Wählverfahren (Tonwahl).

2.3 WANDMONTAGE

Ihr *AUDIOLINE TELEFON 4clip* ist auch zur Wandmontage geeignet. Benutzen Sie zur Befestigung zwei Schrauben, bohren Sie zwei Löcher im Abstand von 83 mm und lassen Sie die Schrauben 5 mm aus der Wand herausstehen. Stecken Sie nun das Telefon auf die Schrauben und schieben Sie es etwas nach unten. Wenn Sie das Telefon auf einem Tisch benutzen, muss sich der Einhängehaken des Hörers in der versenkten Position befinden, wie es in der Abbildung A dargestellt ist (Werkseinstellung). Bei einer Wandmontage wird der Einhängehaken des Telefonhörers herausgezogen und umgedreht. Siehe dazu die Abbildung B.

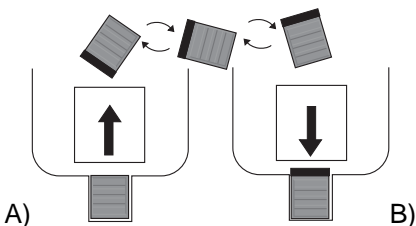

2.4 HÖRGERÄTE KOMPATIBEL

Das Telefon besitzt eine Spezialschaltung auf Induktionsbasis zur Sprachübertragung an Hörgeräte. Bitte stellen Sie Ihr Hörgerät auf „T“.

2.5 T-NET ANPASSUNG







Ihr *AUDIOLINE TELEFON 4clip* unterstützt die wichtigsten Mehrwertdienste der DEUTSCHEN TELEKOM (z.B.: Makeln, Anklopfen, Dreier-Konferenz, u.a.). Weitere Informationen erhalten Sie unter Punkt 5. Zur Freischaltung Ihrer Leitung für diese Funktionen (die z.T. gebührenpflichtig sind) wenden Sie sich bitte an die DEUTSCHE TELEKOM.

2.6 DISPLAYKONTRAST EINSTELLEN



Der Kontrast kann mit dem Schiebeschalter „KONTRAST“ auf der linken Seite des Hörers eingestellt werden.

2.7 STANDARDEINSTELLUNGEN PROGRAMMIEREN

Telefonnummern werden im Display immer mit der Ortsvorwahl oder bei Auslandsgesprächen auch mit der entsprechenden Landesvorwahl angezeigt. Werden diese Rufnummern direkt über die Anruferliste gewählt, kann bei Ortsgesprächen die Vorwahl natürlich weggelassen werden. Deshalb sollten Sie Ihre Ortsvorwahl und die Landesvorwahl von Deutschland (0049) eingeben. Weiterhin kann hier Datum und Uhrzeit eingegeben werden.

1. Heben Sie den Telefonhörer ab.
2. Halten Sie die Tasten ▼ und ▲ für 4 Sek. gedrückt.
3. Das Display zeigt „-----, Ortsvorwahl“. Geben Sie nun Ihre Ortsvorwahl mit max. 5 Stellen ein.
4. Drücken Sie die Taste  so oft, bis Sie die Meldung „Landesvorwahl“ im Display sehen. Bei der Eingabe einer 5-stelligen Ortsvorwahl springt das Display direkt zur nächsten Eingabe „Landesvorwahl“.
5. Geben Sie nun Ihre Landesvorwahl 0049 für Deutschland ein.
6. Drücken Sie die Taste  so oft, bis Sie die Meldung „ZEIT? DATUM?“ im Display sehen. Geben Sie jetzt über die Tasten ▼ und ▲ die aktuelle Stunde zwischen 00 und 23 ein und bestätigen Sie mit der Taste .
7. Geben Sie jetzt über die Tasten ▼ und ▲ die aktuelle Minutenangabe zwischen 1 und 59 ein und bestätigen Sie mit der Taste .
8. Geben Sie jetzt über die Tasten ▼ und ▲ die aktuelle Tagesangabe zwischen 1 und 31 ein und bestätigen Sie mit der Taste .
9. Geben Sie jetzt über die Tasten ▼ und ▲ den aktuellen Monat zwischen 1 und 12 ein und bestätigen Sie mit der Taste .

Wichtige Hinweise!

Müssen Sie einmal die Standardeinstellungen verändern, starten Sie die Programmierung wie unter Punkt 1. beschrieben. Mit der Taste  können Sie nun den blinkenden Cursor zu jeder Zahl hinbewegen und mit den Tasten ▼ und ▲ eine Änderung vornehmen. Durch mehrmaliges Drücken der Taste  gelangen Sie automatisch von der Ortsvorwahl, zur Landesvorwahl und zur Eingabe der Uhrzeit. Um eine Orts- oder Landesvorwahl zu kürzen, gehen Sie hinter das Ende Ihrer eingegebenen Zahlen (Cursor blinkt). Mit den Tasten ▼ und ▲ stellen Sie dann das Minuszeichen “-“ ein.

3. BEDIENUNG


3.1 TELEFONNUMMER WÄHLEN

Nehmen Sie den Telefonhörer ab und wählen Sie die gewünschte Telefonnummer. Um das Gespräch zu beenden, legen Sie den Hörer wieder auf die Ablage zurück. Mit der Trenntaste können Sie das laufende Gespräch beenden und Sie erhalten direkt eine neue Amtsleitung. Während eines Gesprächs wird im Display die aktuelle Gesprächsdauer angezeigt.


3.2 HÖRERLAUTSTÄRKE

Mit dem Schiebeschalter  können Sie die Hörerlautstärke in zwei Stufen Ihren Bedürfnissen anpassen.

3.3 WAHLWIEDERHOLUNG

Um die zuletzt gewählte Nummer zu wiederholen, heben Sie den Hörer ab und drücken die Taste .



3.4 EINSTELLBARER TONRUF




Mit dem Schiebeschalter "KLINGEL"  am Hörer können Sie die Stellungen "HI" (LAUT) oder "LO" (LEISE) auswählen, um die Lautstärke des Tonrufes Ihren Bedürfnissen anzupassen. Möchten Sie einmal nicht gestört werden, benutzen Sie die Stellung "OFF" (AUS).

3.5 SPEICHERPLÄTZE EINGEBEN

Mit Ihrem *AUDIOLINE TELEFON 4clip* können Sie 18 Rufnummern im Telefonbuch speichern. Die ersten drei Speicherplätze 01, 02, und 03 können als Direktwahltasten M1, M2 und M3 benutzt werden. Die weiteren Rufnummern werden über die Kurzwahltaste abgerufen.

3.5.1 RUFNUMMER IM TELEFONBUCH SPEICHERN

1. Zur Programmierung heben Sie den Hörer ab und halten Sie mit dem Daumen einer Hand die Trenntaste gedrückt, während Sie mit der anderen Hand die Eingaben machen.
2. Geben Sie die gewünschte Rufnummer mit maximal 16 Zahlen über das Zahlenfeld ein.
3. Drücken Sie die Speichertaste .
4. Drücken Sie die Kurzwahltaste .
5. Das Display zeigt die Anzeige „(--)“. Geben Sie nun über das Zahlenfeld den gewünschten Speicherplatz zwischen 01 und 18 ein und die eingegebene Rufnummer ist gespeichert. Bitte geben Sie den Speicherplatz immer zweistellig ein (1=01, 2=02, usw). Das Display zeigt die Meldung „GESPEICHERT“.
6. Am Ende der Eingaben lassen Sie die Trenntaste wieder los und legen den Hörer auf die Ablage.


Bei schon belegten Speicherplätzen zeigt das Display die Meldung „ÜBERSCHREIBEN“. Mit der Taste  wird der gewählte Speicherplatz mit der neuen Rufnummer überschrieben. Möchten Sie den Speicherplatz nicht überschreiben, drücken Sie eine der beiden Tasten  oder , um die Eingabe abubrechen.

3.5.2 WÄHLEN MIT DEN DIREKTWAHLTASTEN

1. Heben Sie den Hörer ab.
2. Gewünschte Direktwahl Taste M1, 2, 3 drücken.

Hinweis: Mit den Direktwahl Tasten M1, M2 und M3 werden die Speicherplätze 01, 02 und 03 angewählt.

3.5.3 WÄHLEN AUS DEM TELEFONBUCH

1. Heben Sie den Hörer ab.
2. Drücken Sie die Kurzwahl Taste  und den gewünschten Speicherplatz von 01 bis 18 auf dem Zahlenfeld.

4. RUFNUMMERNANZEIGE (CLIP)

Achtung!

Die Rufnummernanzeige ist ein optionaler Service Ihres Telefonproviders. Ihr Telefon zeigt die Rufnummern im Display, wenn Ihr Telefonprovider diesen Service anbietet. Bitte fragen Sie Ihren Telefonprovider für weitere Informationen. Steht dieser Service nicht zur Verfügung, werden eingehende Anrufe nicht im Display angezeigt.




Mit der Rufnummernanzeige können Sie bei eingehenden Gesprächen erkennen, wer Sie anruft. Wenn diese Funktion an Ihrer Telefonleitung zur Verfügung steht, zeigt Ihnen das Display bereits während des Klingelns die Rufnummer im Display an.


Wird der Anruf nicht entgegengenommen, bleibt diese Anzeige für 60 Sekunden im Display, bevor wieder die aktuelle Uhrzeit und das Datum angezeigt wird.

Ausserdem werden während Ihrer Abwesenheit alle Anrufe in der Anruferliste mit Datum und Uhrzeit gespeichert. Bis zu 99 Rufnummern werden in der Anruferliste gespeichert. Sobald die Liste voll ist, wird immer die älteste Rufnummer aus der Liste gelöscht.

Wurden während Ihrer Abwesenheit Anrufe registriert, blinkt die LED „NEW CALL“ und das Display zeigt die Anzahl der neu gespeicherten Rufnummern (XX NEU) an. Weiterhin wird die Gesamtzahl der in der Anruferliste gespeicherten Rufnummern angezeigt (XX ANRUF). Wie Sie die Anruferliste einsehen können, erfahren Sie im nächsten Kapitel 4.1.

4.1 ANRUFERLISTE EINSEHEN

Mit den Tasten  und  können Sie in der Anruferliste blättern. Mit der Taste  sehen Sie die neusten Rufnummern.

Während Sie mit der Taste  die schon länger gespeicherten Rufnummern sehen. Haben Sie den letzten Speicherplatz der Liste erreicht, zeigt das Display die Meldung „Ende der Liste“.

Im Display erscheint unter „CALL #“ die Nummer zwischen 1 und 99, des gerade angewählten Speicherplatzes.

Hinweise!

Hat ein Anrufer mehrmals versucht Sie zu erreichen, erscheint im Display die Anzeige „RPT“ und darunter die Anzahl der Anrufe. Als Datum und Uhrzeit wird immer der letzte Anruf angezeigt.

Werden alle neu aufgezeichneten Rufnummern kontrolliert, erlischt die LED „NEW CALL“ und die Anzeige „NEU“ im Display zeigt „0“.

Wird innerhalb von 20 Sekunden keine Taste gedrückt, wird die Anruferliste verlassen und das Display zeigt wieder die aktuelle Uhrzeit und das Datum sowie die Anzahl der in der Anruferliste gespeicherten Telefonnummern und die Anzahl der neu gespeicherten Rufnummern an.

Das Display meldet folgende Information, wenn keine Rufnummer zur Verfügung steht.


Erscheint im Display die Meldung „**Error**“, wurde die Rufnummer nur teilweise oder fehlerhaft empfangen.

Erscheint im Display die Meldung „**Nicht verfügbar**“, ist die Information der Rufnummer nicht verfügbar. Es könnte sich um ein internationales Gespräch handeln.


Erscheint im Display die Meldung „**Privat**“, hat der Anrufer das Senden seiner Rufnummer unterdrückt oder die Nummer konnte nicht übermittelt werden.

4.2 TELEFONNUMMER AUS DER ANRUFERLISTE DIREKT ANWÄHLEN


Sie können Telefonnummern, die in der Anruferliste gespeichert wurden, direkt anwählen.

1. Telefonhörer entweder abheben oder aufgelegt lassen.
2. Wählen Sie mit den Tasten ▼ und ▲ die gewünschte Telefonnummer aus.
3. Drücken Sie nun die Taste . Die ausgesuchte Rufnummer wird direkt angewählt. Telefonhörer abheben, wenn nicht bereits geschehen.

4.3 TELEFONNUMMER AUS DER ANRUFERLISTE LÖSCHEN

1. Wählen Sie mit den Tasten ▼ und ▲ die Rufnummer aus der Anruferliste, die Sie löschen möchten.
2. Drücken Sie nun zweimal die Taste  und die Rufnummer wird gelöscht.

4.4 KOMPLETTE ANRUFERLISTE LÖSCHEN

Drücken Sie die Taste  für 3 Sekunden. Das Display zeigt die Meldung „KEIN ANRUF“ und die komplette Anruferliste ist gelöscht.

5. "R" SIGNALTASTE - T-NET ANPASSUNG

Die "R" Signaltaste Ihres Telefons können Sie an Nebenstellenanlagen und bei der Verwendung der T-NET Funktionen der DEUTSCHEN TELEKOM nutzen.

5.1 "R" TASTE AN NEBENSTELLENANLAGEN

Haben Sie Ihr Telefon mit einer Nebenstellenanlage verbunden, können Sie alle Möglichkeiten, wie z.B. Anrufe weiterleiten, automatischen Rückruf usw. nutzen. Die „R“ Signaltaste verschafft Ihnen den Zugang zu diesen Möglichkeiten. An einer Nebenstellenanlage wird die FLASH-Zeit "100ms" benötigt. Stellen Sie dazu den Schiebeschalter „R“ auf die Einstellung „100ms“. Ob Ihr Telefon an Ihrer Nebenstellenanlage einwandfrei funktioniert, und welche weiteren Möglichkeiten Sie dadurch erhalten, erfahren Sie bei dem Händler, bei dem die Anlage gekauft wurde.

5.2 "R" TASTE UND DIE T- NET-FUNKTIONEN DER DEUTSCHEN TELEKOM

Ihr *AUDIOLINE TELEFON 4clip* unterstützt die wichtigsten Mehrwertdienste der DEUTSCHEN TELEKOM (z.B.: Makeln, Anklopfen, Dreier-Konferenz, u.a.). Das T- NET arbeitet mit der Einstellung "FLASH 300ms". Stellen Sie dazu den Schiebeschalter „R“ auf die Einstellung „300ms“. Zur Freischaltung der T- NET Funktionen (die z.T. gebührenpflichtig sind) wenden Sie sich bitte an die DEUTSCHE TELEKOM.


6. WICHTIGE HINWEISE

6.1 FEHLERSUCHE

Entfernen Sie alle zusätzlichen Telefonapparate und verbinden Sie nur das Telefon direkt mit der Telefonbuchse. Sollte der Fehler immer noch auftreten, verbinden Sie ein anderes Telefon (wenn vorhanden) mit der Telefonbuchse. Die Ergebnisse zeigen Ihnen, ob der Fehler am Gerät oder der Telefonleitung liegt. Natürlich können Sie auch die Störungsstelle Ihres Telefonnetzanbieters anrufen, die Ihnen weitere Hinweise zum Überprüfen Ihrer Anlage gibt.

6.2 TELEFONKABEL AUSTAUSCHEN

Müssen Sie Ihr Telefonkabel austauschen, finden Sie anhand der untenstehenden Zeichnung das passende Kabel bei Ihrem Händler.

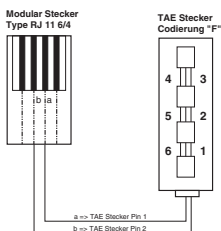

6.3 GARANTIE


AUDIOLINE - Geräte werden nach den modernsten Produktionsverfahren hergestellt und geprüft. Ausgesuchte Materialien und hoch entwickelte Technologien sorgen für einwandfreie Funktion und lange Lebensdauer. Sollte Ihr Gerät dennoch einen Defekt innerhalb der Garantiezeit aufweisen, wenden Sie sich bitte unter Vorlage Ihrer Kaufquittung ausschliesslich an das Geschäft, in dem Sie Ihr AUDIOLINE - Gerät gekauft haben. Die Garantiezeit beträgt 12 Monate, gerechnet vom Tage des Kaufs zu nachfolgenden Bedingungen: Innerhalb der Garantiezeit werden alle Mängel, die auf Material- oder Herstellungsfehler zurückzuführen sind, kostenlos beseitigt. Der Garantieanspruch erlischt bei Eingriffen durch den Käufer oder durch Dritte. Schäden, die durch unsachgemässe Behandlung oder Bedienung, durch falsches Aufstellen oder Aufbewahren, durch unsachgemässen Anschluss oder Installation sowie durch höhere Gewalt oder sonstige äussere Einflüsse entstehen, fallen nicht unter die Garantieleistung. Wir behalten uns vor, bei Reklamationen die defekten Teile auszubessern oder zu ersetzen oder das Gerät auszutauschen. Ausgetauschte Teile oder ausgetauschte Geräte gehen in unser Eigentum über. Schadenersatzansprüche sind ausgeschlossen, soweit sie nicht auf Vorsatz oder grober Fahrlässigkeit des Herstellers beruhen. Alle Gewährleistungsansprüche nach diesen Bestimmungen sind ausschliesslich gegenüber Ihrem Fachhändler geltend zu machen. Nach Ablauf von einem Jahr nach Kauf und Übergabe unserer Produkte können Gewährleistungsrechte nicht mehr geltend gemacht werden.

CONTENTS

1. Operational elements	14
2. Installation.....	15
2.1 Insert batteries	15
2.2 Connecting.....	16
2.3 Wall Mounting	16
2.4 Hearing aid compatible	16
2.5 T-NET Set-up	16
2.6 Adjusting the display contrast	16
2.7 Programming standard settings	17
3. Operation.....	18
3.1 Making a call	18
3.2 Receiver volume	18
3.3 Redial	18
3.4 Adjustable ringing tone	18
3.5 Using memory locations.....	18
3.5.1 Storing numbers in the phone book	18
3.5.2 Dialling using the direct dial buttons.....	19
3.5.3 Dialling from the phone book	19
4. Caller Display (CLIP)	19
4.1 Viewing the Caller List.....	19
4.2 Dialling a telephone number directly from the Caller List	20
4.3 Deleting numbers from the caller list.....	20
4.4 Deleting the entire caller list.....	20
5. The “R” Signal button - T-NET set-up.....	21
5.1 “R” Button on private exchanges	21
5.2 “R” Button and the DEUTSCHE TELEKOM T-Net functions	21
6. Important Information	21
6.1 Fault Finding	21
6.2 Replacing the telephone cable.....	21
6.3 Guarantee	22
6.4 Declaration of Conformity.....	23




1. OPERATIONAL ELEMENTS

Receiver inside

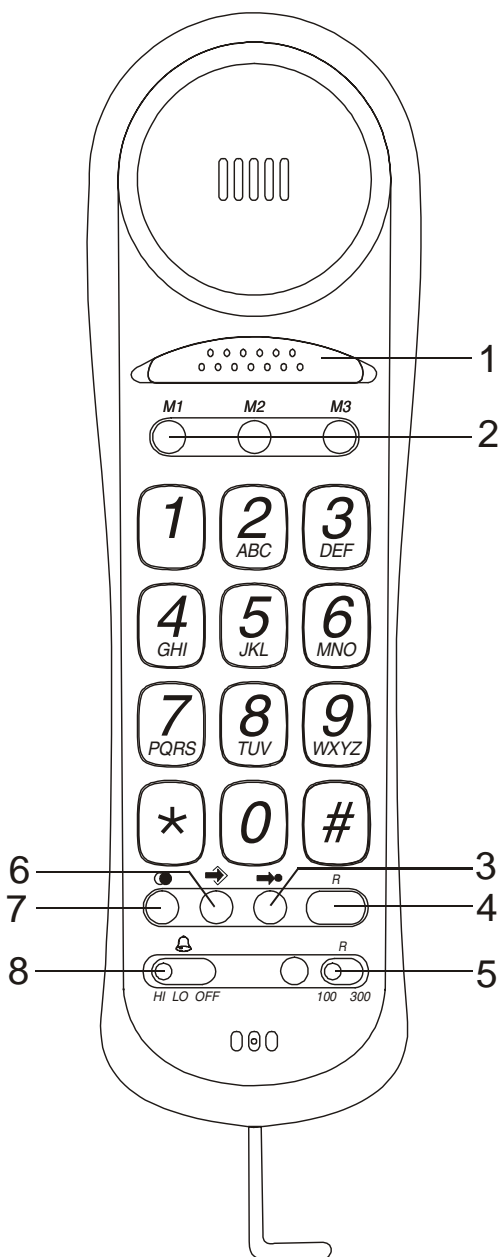

- | | | | |
|---|---------------------|---|-------------------------|
| 1 | Recall button | 5 | FLASH switch |
| 2 | Direct dial buttons | 6 | Save button |
| 3 | Speed dial button | 7 | Redial |
| 4 | R signal button | 8 | Adjustable ringing tone |

Receiver outside – left-hand side – right-hand side

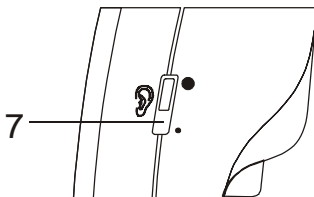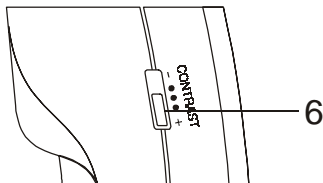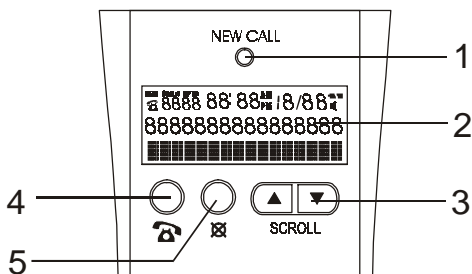


- | | | | |
|---|----------------|---|---------------------|
| 1 | New Call LED | 5 | Delete button |
| 2 | Display | 6 | Contrast adjustment |
| 3 | Scroll buttons | 7 | Receiver volume |
| 4 | Call button | | |

2. INSTALLATION

2.1 INSERT BATTERIES

Before connecting your new telephone to the telephone network, the supplied batteries should be installed. Please always use type AAA alkaline batteries. The batteries are required for the call number display and other features of the telephone. Before installing or changing the batteries make sure that the telephone is not connected to the telephone network.

1. Open the battery compartment under the telephone list with a small screwdriver or a pointed object.
2. Insert the batteries. Ensure that the polarity is correct.
3. Close the battery compartment.


The batteries should be changed when this symbol  appears in the display. All four batteries must then be replaced so that the call number display and the stored telephone numbers continue to work correctly. If the display is blank, then the batteries are already fully discharged.

2.2 CONNECTING

Connect the telephone cable provided to the telephone jack and the telephone socket on the underside of the telephone. Then feed the cable through the cable guide and away from the telephone either to the top or to the bottom. The *AUDIOLINE TELEFON 4clip* works using the TTD system (Touch-Tone Dialling).

2.3 WALL MOUNTING

Your *AUDIOLINE TELEPHONE 4clip* is also suitable for wall mounting. Use two screws for fixing it to the wall. Drill two holes 83 mm apart and leave the screws protruding 5 mm from the wall. Now place the telephone over the screws and push down slightly. When the telephone is used on a table, the receiver hanging hook must be in the flush position as shown in diagram A (factory setting). When mounting on the wall, the telephone receiver hanging hook is pulled out and rotated. This is shown in diagram B.

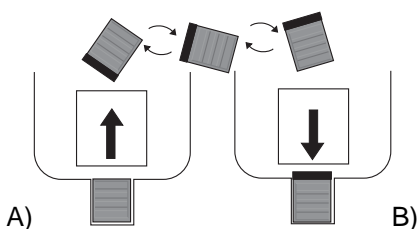

2.4 HEARING AID COMPATIBLE

The telephone has a special circuit working on the basis of induction for transmitting speech to hearing aids. Please set your hearing aid to "T".

2.5 T-NET SET-UP







Your *AUDIOLINE TELEPHONE 4clip* supports the most important DEUTSCHE TELEKOM added value functions (e.g. brokering, call waiting, three-way conference, etc.). More information can be found in item 5. Please contact DEUTSCHE TELEKOM to gain access to these functions (some of which are subject to charge).

2.6 ADJUSTING THE DISPLAY CONTRAST



The display contrast can be adjusted by means of the "CONTRAST" slide switch on the left-hand side of the receiver.

2.7 PROGRAMMING STANDARD SETTINGS

Telephone numbers are always shown in the display with the local dialling code or, in the case of international calls, also with the appropriate country code. If these numbers are dialled directly from the caller list, the dialling code can of course be omitted with local calls. Therefore, you should enter your local dialling code and the country code for Germany (0049). Moreover, you can also enter the date and time at this point.

1. Lift the receiver.
2. Press and hold the ▼ and ▲ buttons for 4 seconds.
3. The display will show "-----, local dialling code". Now enter your local dialling code with a maximum of 5 digits.
4. Press the  button as many times as necessary until you see the message "country code" in the display. If a 5 digit local dialling code is entered the display jumps directly to the next entry "country code".
5. Now enter the country code 0049 for Germany.
6. Press the  button as many times as necessary until you see the message "TIME? DATE?" in the display. Now enter the current hour between 00 and 23 using the ▼ and ▲ buttons and confirm with the  button.
7. Now enter the current minute between 1 and 59 using the ▼ and ▲ buttons and confirm with the  button.
8. Now enter the current day between 1 and 31 using the ▼ and ▲ buttons and confirm with the  button.
9. Now enter the current month between 1 and 12 using the ▼ and ▲ buttons and confirm with the  button.

Important information!


If you ever have to change the standard settings, start programming as described under item 1. You can now move the flashing cursor to any number using the  button and make a change using the ▼ and ▲ buttons. You can automatically go from the local dialling code to the country code and to the time entry by repeatedly pressing the  button. To shorten a local or country dialling code, go to after the end of the numbers you have entered (cursor flashes) and then use the ▼ and ▲ buttons to enter the minus sign "-".

3. OPERATION


3.1 MAKING A CALL

Lift the receiver and dial the required telephone number. To end the call, replace the receiver on the hook. By using the Recall button, you can terminate the current call and you will immediately get a new outside line. The actual duration of the call is shown in the display while the call is being made.


3.2 RECEIVER VOLUME

You can adjust the receiver volume to suit your requirements in two steps using the  slide switch.

3.3 REDIAL

To recall the last number dialled, lift the receiver and press the  button.


3.4 ADJUSTABLE RINGING TONE




By means of the “Ringer” slide switch  on the receiver you can choose the settings “HI” (LOUD), or “LO” (SOFT) to match the volume of the ringing tone to your requirements. If at any time you do not want to be disturbed, use the “OFF” setting.

3.5 USING MEMORY LOCATIONS

With your *AUDIOLINE TELEFON 4clip* you can store 18 telephone numbers in the phone book. The first three locations 01, 02, and 03 can be used as direct dial buttons M1, M2 and M3. The other numbers are called up using the speed dial button.

3.5.1 STORING NUMBERS IN THE PHONE BOOK

1. To program the numbers, lift the receiver and hold the Recall button pressed with the thumb of one hand while you enter the numbers using the other hand.
2. Enter the required telephone number with a maximum of 16 digits using the number pad.
3. Press the store button .
4. Press the speed dial button **Error! Not a valid link.**
5. The display shows “(--)”. Now enter the required storage location between 01 and 18 using the number pad and the telephone number entered will be stored. Please always enter the store location using two digits (1=01, 2=02, etc). The display shows the message “STORED”.
6. When you have finished entering the numbers, release the Recall button and place the receiver on the rest.



If a storage location has already been used, the display shows the message “OVERWRITE”. The selected storage location is overwritten with the new telephone number by means of the  button. If you do not want to overwrite the storage location, press one of the buttons  or  to cancel the entry.

3.5.2 DIALLING USING THE DIRECT DIAL BUTTONS

1. Lift the receiver.
2. Press the required direct dial button M1, 2, or 3.

Note: Storage locations 01, 02 and 03 are dialled using the direct dial buttons M1, M2 and M3.

3.5.3 DIALLING FROM THE PHONE BOOK

1. Lift the receiver.
2. Press the speed dial button   and the required storage location from 01 to 18 on the number pad.

4. CALLER DISPLAY (CLIP)

Warning!

Caller display is an optional service from your telephone provider. Your telephone will show the number in the display if your telephone provider offers this service. Please ask your telephone provider for further information. If this service is not available, incoming calls will not be shown in the display.





Using caller display, you can see with incoming calls who is calling you. If this function is available on your line, the display shows you the caller's telephone number while the telephone is ringing.

If the call is not accepted, this indication remains in the display for 60 seconds before the current time and date are shown once more.

Furthermore, in your absence, all calls are saved in a caller list with date and time. Up to 99 numbers are saved in the caller list. When the list is full, the oldest number is always deleted from the list.

If calls are registered during your absence, the "NEW CALL" LED flashes and the display shows the number of newly stored numbers (XX NEW). The total number of telephone numbers stored in the caller list is also displayed (XX CALLS). You can find out how to view the list in the next chapter 4.1.

4.1 VIEWING THE CALLER LIST

You can page through the caller list using the  and  buttons. You can see the latest numbers by means of the  button whereas you can view the numbers that have been stored for some time by using the  button. When you reach the last storage location the display shows the message "End of list".

The number of the currently selected storage location between 1 and 99 appears under "CALL #" in the display.

Note!

If a caller has tried to reach you several times, the message "RPT" appears in the display and beneath it the number of calls. The date and time of the last call is always shown.

When all newly recorded numbers have been checked, the “NEW CALL” LED goes off and the “NEW” indicator in the display shows “0”.

If no button is pressed within 20 seconds, the caller list is no longer displayed and the display shows the current time and date once more along with the number of telephone numbers stored in the caller list and the number of newly stored telephone numbers.

The display reports the following information when there is no telephone number available.


If the message “**Error**” appears in the display, the number has only been partially or incorrectly received.

If the message “**Not available**” appears in the display, the telephone number information is not available. This could have been an international call.


If the message “**Private**” appears in the display, the caller has suppressed the transmission of his telephone number or it was not possible to transmit the number.

4.2 DIALLING A TELEPHONE NUMBER DIRECTLY FROM THE CALLER LIST


You can dial telephone numbers directly that have been stored in the caller list.

1. Either lift the receiver or leave it on the rest.
2. Select the required telephone number using the ▼ and ▲ buttons.
3. Now press the  button and the telephone number will be dialled directly. Lift the receiver if you have not already done so.

4.3 DELETING NUMBERS FROM THE CALLER LIST

1. Select the telephone number that you want to delete from the caller list using the ▼ and ▲ buttons.
2. Now press the  button twice and the number will be deleted.

4.4 DELETING THE ENTIRE CALLER LIST

Press the  button for 3 seconds. The display will show the message “NO CALLS” and the entire caller list will be deleted.

5. THE "R" SIGNAL BUTTON - T-NET SET-UP

You can use the "R" signal button on your telephone on private exchanges and when using DEUTSCHE TELEKOM's T-Net functions.

5.1 "R" BUTTON ON PRIVATE EXCHANGES

If you have connected your telephone to a private exchange, you can use all the facilities such as call transfer, automatic recall, etc. The "R" signal button gives you access to these facilities. The FLASH time "100ms" will be required on a private exchange. For this purpose, set the "R" slide switch to the "100ms" setting. You can find out from the dealer from whom the equipment was purchased whether your telephone will work on your private exchange without any problems and what further facilities you will receive from this.

5.2 "R" BUTTON AND THE DEUTSCHE TELEKOM T-NET FUNCTIONS

Your *AUDIOLINE TELEPHONE 4clip* supports the most important DEUTSCHE TELEKOM added value functions (e.g. brokering, call waiting, three-way conference, etc.). The T-NET works using the "FLASH 300ms" setting. For this purpose, set the "R" slide switch to the "300ms" setting. Please contact DEUTSCHE TELEKOM to gain access to the T-NET functions (some of which are subject to charge).


6. IMPORTANT INFORMATION

6.1 FAULT FINDING

Remove all extra telephone equipment and connect only the telephone directly to the telephone socket. If the fault is still there, connect a different telephone (if available) to the telephone socket. The results will show you whether the fault lies with the unit or with the telephone line. Of course, you can always ring your telephone network provider's service department, which will give you more advice on checking your installation.

6.2 REPLACING THE TELEPHONE CABLE

If you have to replace your telephone cable, you can locate the appropriate cable at your dealer's with the help of the diagram below.

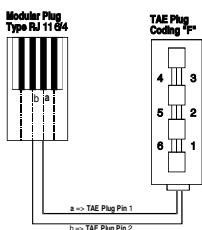

6.3 GUARANTEE

AUDIOLINE equipment is manufactured and tested in accordance with the most up to date production methods. Selected materials and highly developed technology ensure trouble-free operation and long life. If your unit should develop a fault within the guarantee period, however, please contact the shop where you bought your AUDIOLINE equipment exclusively and have your purchase receipt available for inspection. The guarantee period is 12 months from the day of purchase under the following conditions: within the guarantee period, all defects due to material or manufacturing faults will be repaired free of charge. The guarantee is invalidated if the equipment has been tampered with by the purchaser or third parties. Any damage caused by improper handling or operation, by incorrect positioning or storage, by improper connection or installation or by excessive force or other external influences is not covered by the guarantee. In the case of complaint, we reserve the right to repair or replace defective parts or to exchange the equipment. Exchanged parts or exchanged equipment become our property. Claims for compensation are excluded insofar as they do not relate to criminal intent or gross negligence on the part of the manufacturer. All guarantee claims according to these conditions must be raised exclusively with your dealer. Rights under the guarantee can no longer be enforced after the expiry of 24 months from purchase and delivery of our products. In the case of unnecessary or unjustified demands on the customer service department, we will levy our usual service charges for materials, time, postage and packing. Any complaints must be reported as soon as a problem is found. The guarantee is valid within the German Federal Republic.

6.4 DECLARATION OF CONFORMITY


WE AUDIOLINE GmbH
OF PROMENADENSTR. 1
D-41460 NEUSS
GERMANY

DECLARE UNDER OUR SOLE RESPONSIBILITY AS EU DISTRIBUTOR THAT THE PRODUCT

MODEL: TEL 4 - clip
DESCRIPTION: CORD CONNECTED TELEPHONE

IS IN CONFORMITY WITH THE BASIC REQUIREMENTS OF DIRECTIVE: 1999/5/EC

AUTHORISED SIGNATORY:

Signature: 
Name: MANFRED ZINNOW
Position in the company: MANAGING DIRECTOR
Date of issue: 03.07.2001

A copy of this declaration will be retained for 10 years after cessation of production.



SUPPLIER: AUDIOLINE GmbH, PROMENADENSTR. 1,
D-41460 NEUSS
PRODUCT: TEL 4 - clip

This product has been developed for use with an analogue telephone line (PSTN) within Germany. However, no guarantee can be accepted for trouble-free operation on all telecommunications terminal equipment connections due to the differences between the different telecommunications network operators.

AUDIOLINE GmbH
Promenadenstrasse 1
41460 Neuss

Service Hotline 0180 5 00 13 88
Internet: www.audioline.de
E-mail: info@audioline.de