ENG   Quick Start Guide

PHILIPS

1

2

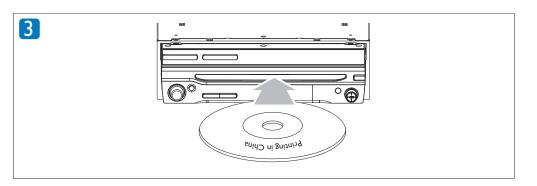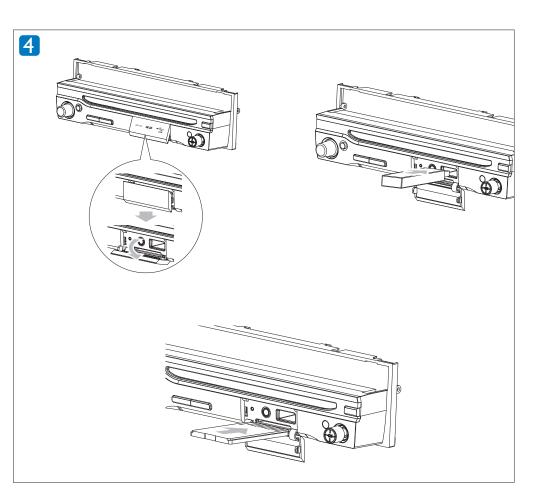## Connect wires: ISO connectors 1

1 Pull out the ISO connectors from the car dashboard and connect them to the bigger end of the supplied standard connector.

2 Connect the other end of supplied standard connector to the unit.

   • If necessary, connect the following:

	Connector	Connect to/with
❶	Black cable	Antenna
❷	Yellow cable	Video out 1
❸	Yellow cable	Video out 2
❹	Yellow cable	Camera in
❺	Green/white wire	Parking
❻	Black cable	Bluetooth microphone
❼	Blue cable	Subwoofer
❽	Red cable	Front line out L
❾	White cable	Front line out R
❿	Red cable	Rear line out L
⓫	white cable	Rear line out R

Mount in the dashboard 2

Note

• Check wire connection before you mount the unit into a car.
• If preset radio stations are lost when the ignition key is turned OFF and then back ON, reconnect the red leads crosswise to the yellow ones.

1 If the car does not have an on-board drive or navigation computer, disconnect the negative terminal of the car battery.

   • If you disconnect the car battery in a car that has an on-board drive or navigation computer, the computer may lost its memory.
   • If the car battery is not disconnected, to avoid short-circuit, ensure that bare wires do not touch each other.

2 Ensure that car dashboard opening is within these measurements:

   • Since the unit cannot be used if the dashboard opening's slant angle is above 20 degrees: Ensure that the horizontal slant of the car dashboard opening is between 0 and 20 degrees

3 Remove the screws on the both side of the unit.

4 Remove the mounting sleeve.

5 Install the sleeve into the dashboard and bend the tabs outward to fix the sleeve.

6 Place the rubber cushion over the end of the bolt.

7 Slide the unit into the dashboard until a click sound is heard.

   • If the unit cannot fit into the dashboard, remove the mounting bracket on the both side of the unit and replace them with the supplied short mounting brackets.

8 Attach the trim plate.

9 Reconnect the negative terminal of the car battery.

Turn on

1 Press the ⏻ to turn on the unit.
   ↳ The screen opens automatically.
   ↳ The available OSD (On-Screen Display) languages are displayed.

2 Touch a language to select.
   ↳ The OSD language is changed to the selected language immediately.

   • To adjust the screen tilt, press ▲ TILT ▼.
   • To close the screen, press OPEN/CLOSE.
   • To adjust the brightness/contrast, press ☼/◐, then adjust 4 WAY NAVIGATION.
   • To turn off the system, press ⏻ for 3 seconds.
   ↳ The screen closes automatically.

Set clock

1 Touch ↰ to display main menu.

2 Touch [Setting].
   ↳ The setup menu is displayed.

3 Touch [General].

4 Touch the [Clock mode] repeatedly to select:
   • [12hr] : 12 hour mode
   • [24hr] : 24 hour mode

5 Touch the hour digits, then touch + or −.

6 Touch the minute digits, then touch + or −.

7 If 12 hour mode is selected, touch + or − to select AM or PM.

8 Touch ↰ to exit.

Tune to a radio station

1 Touch ↰ to display the main menu.

2 Touch [Radio].
   ↳ Band and frequency information is displayed.

3 Touch [Band] repeatedly to select:
   • FM band options: FM1, FM2, FM3
   • AM band options: AM1, AM2

4 Briefly touch [Previous] or [Next] to tune to a radio station by step.

Play discs 3

1 Insert the disc into the disc slot with label side facing up.
   ↳ Play starts automatically.
   ↳ To remove the disc, press the ▲ button.
   ↳ When the disc is ejected, the unit switches to the previous source, if connected. Otherwise, the unit switches to [Radio] mode automatically.

Insert USB or SD/MMC card 4

1 Open the USB/SD/MMC card cover.

2 Insert the USB device or SD/MMC card into the USB socket or SD/MMC card slot.
   ↳ Play starts automatically.

Pair the Bluetooth-enabled devices

1 Turn on the Bluetooth function on the device.

2 Setup the Bluetooth function on your device.

3 Select "CED750" in the pairing list.

4 Enter default password "0000".
   ↳ il pairing succeeds. [Connect] is displayed on the panel.

Make a call

1 Pair the phone with the system.

2 Touch ↰ to return to main menu.

3 Touch [Bluetooth].
   ↳ The Bluetooth menu is displayed.

4 Touch 📞 to dial.

Receive call

1 If there is incoming call, [Incoming call…] flashes on the screen. Speak into the Bluetooth microphone.

2 When conversation ends, touch 📞 to terminate the call.