Quick Start Guide Model: 1460-4

Your new Victor calculator is versatile and loaded with features. Complete directions, explanation of key functions and user examples can be found in the enclosed instruction manual. Quick Start will guide you through the important settings prior to operation.

STEP 1 Register your product online at www.victortech.com or call (800) 628-2420. The advantages of taking a few moments to register your product are:
1. Verifies the date of purchase in the event of a warranty claim.
2. If you need support, your registration helps Victor find your product quickly and provide the assistance you need.
3. Online registration gives you the option to save a copy of your registration for your personal records.

STEP 2 Before using the printer for the first time
1. Slide off printer cover.
2. Remove the tape holding the twin spool ribbon in place.
3. Slide printer cover back into place.

STEP 3 Load the Paper
1. Turn ON calculator and set the slide switch P/NP/IP to the P position.
2. Place paper holder into position.
3. Install the paper roll on the holder.
4. Insert the paper into the printer slot.
5. Press the feed key ↑ to feed paper to desired length.

The following parts and accessories are available for your Victor 1460-4, and may be purchased from your local supply dealer, www.victortech.com, or by calling (800) 628-2420.
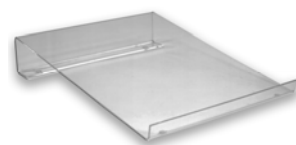
7010 Twin Spool Ribbon	7050 Paper Rolls	140 Sticky Add Roll	LS-125 Calculator Stand

---

TROUBLESHOOTING
1. Plug machine directly into wall outlet.
2. Turn ON and set slide switch P/NP/IP to P position.
3. Use a paper clip to depress the RESET button; located on the bottom of the calculator in the lower right corner.
4. Listen for activation noise.
5. Turn the machine right side up.
6. Test the machine.

If this procedure has not successfully resolved your problem or you have any questions regarding the operation of your Victor calculator, contact Victor's Customer Care Center at (800) 628-2420 or E-mail victor@victortech.com for further assistance.