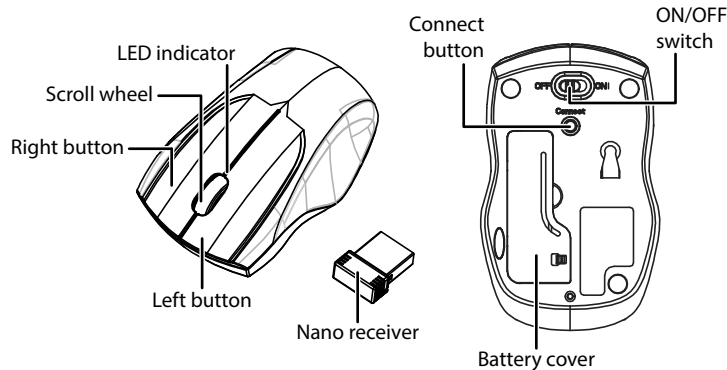## Package contents

- Wireless keyboard
- Wireless mouse and nano receiver
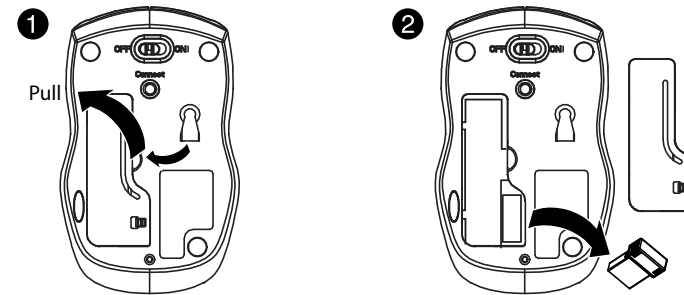- AA battery (1)
- AAA batteries (2)
- *Quick Setup Guide*

System requirements

- Windows® 8, Windows® 7, Windows Vista®, Windows® XP, or Mac OS 10.X or higher.
- One available USB port

Mouse features

LED indicator
Scroll wheel
Right button
Left button
Nano receiver
Connect button
ON/OFF switch
Battery cover

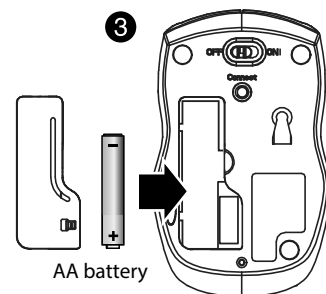Before using your new product, please read these instructions to prevent any damage.

Installing the mouse batteries and removing the nano receiver

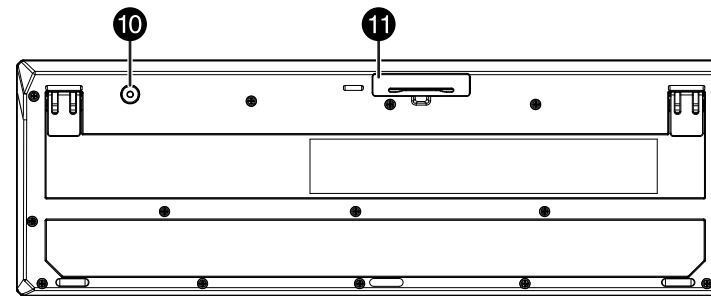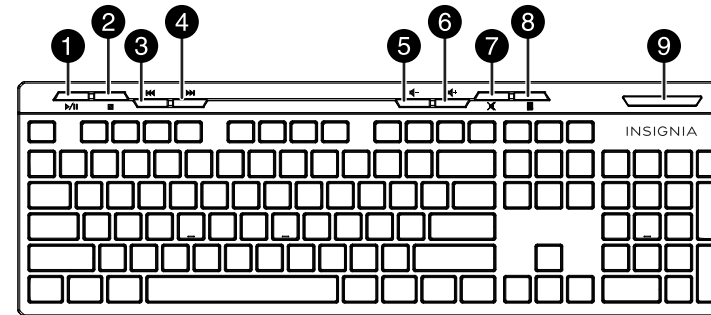1 Take the battery cover off.
2 Remove the nano receiver.

Pull

3 Insert the included AA battery into the battery compartment. Make sure that the + and - signs match the symbols in the compartment.
4 Replace the battery cover.

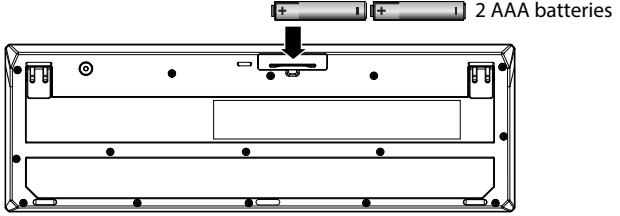**Tip**: Store the nano receiver in the mouse when it is not in use.

AA battery

Keyboard features

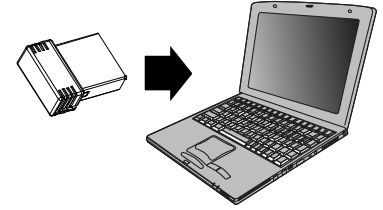| #	Icon	Function	Description
1	▶/‖	Play/Pause	Press to play or pause media.
2	■	Stop	Press to stop playing media.
3	◄◄	Previous	Press to select the previous media track.
4	►►|	Next	Press to select the next media track.
5	◀−	Volume down	Press to decrease the computer's volume.
6	◀+	Volume up	Press to increase the computer's volume.
7	✖	Mute	Press to turn off the computer's sound.
8	🖩	Calculator	Press to launch the Microsoft calculator.
9		LED indicator	Low battery and pairing indicator.
10		Connect button	Press to initiate pairing with your computer.
11		Battery cover	Remove to install or replace the batteries.

Installing the keyboard batteries

1 Take the battery cover off.
2 Insert two AAA batteries (included) into the battery compartment. Make sure that the + and - signs match the symbols in the compartment.
3 Replace the cover.

2 AAA batteries
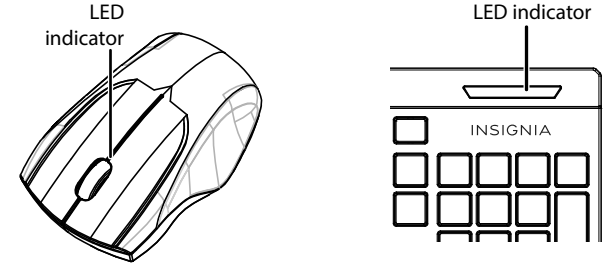
Connecting your mouse and keyboard to your computer

1 Plug the nano receiver into the USB port on your computer.
2 Slide the ON/OFF switch on your mouse to **ON**.
The computer automatically detects the mouse and keyboard and you can immediately begin using them.

If the mouse or keyboard does not work:
- Re-plug the nano receiver into the USB port on your computer, then press the connect button on the mouse and keyboard. The LED indicators on the mouse and keyboard flash steadily while in pairing mode (10 seconds). After pairing successfully, the LED indicators light solid for 10 seconds, then turn off.
- Check the batteries in your mouse or keyboard. The LED indicators blink for 10 seconds when the batteries are low.

LED indicators

LED indicator

LED indicator

INSIGNIA

Function	Description
Power ON	Red LED is on for 10 seconds, then turns off.
Low battery warning	Red LED blinks for 10 seconds.
Pairing	Red LED blinks for 10 seconds after pressing the **Connect** button.
Pairing failed	After pressing the **Connect** button, the LED blinks for 10 seconds, then turns off.
Paired successfully	After pressing the **Connect** button, the LED blinks, then lights solid for 10 seconds.

Cleaning your mouse and keyboard

- Wipe the mouse and keyboard with a damp, lint-free cloth.

Specifications

Keyboard:
- Dimension (L×W×H): 17.1 × 5.6 × .8 in. (43.4 × 14.3 × 2.06 cm)
- Weight: 16.9 oz. (.5 kg)
- Rating: 3V C.C. - 4mA
- Radio frequency: 2.4Ghz
- Operating distance: 33 feet (10 meters)
- Key number: 104 keys (US)
- Battery: 2 AAA alkaline batteries
- Battery life: 6 months (based on average usage)

Mouse:
- Dimension (L×W×H): 3.9 × 2.2 × 1.4 in. (9.90 × 6.20 × 3.67 cm)
- Weight: 1.9 oz. (.05 kg)
- Battery: 1 AA battery
- Battery life: 6 months (based on average usage)
- Radio frequency: 2.4Ghz
- Operating distance: 33 feet (10 meters)
- Rating: 3V C.C. - 10mA

Nano receiver:
- Dimension (L×W×H): .7 × .6 × .2 in. (1.8 × 1.4 × .6 cm)
- Weight: .04 oz. (.001 kg)
- Interface: USB 1.1, 2.0 , 3.0

Troubleshooting

My mouse or keyboard is not working.
- Make sure that your mouse and keyboard are turned on.
- Move your keyboard and mouse closer to your computer.
- Make sure that your computer meets the system requirements.
- Only use the mouse on a clean, flat, non-slippery surface to ensure smooth and accurate cursor action.
- Avoid using your mouse on reflective, transparent, or metallic surfaces.
- If your mouse or keyboard stops working:
  - Make sure that your mouse or keyboard and nano receiver are paired by pressing the connect button on the mouse or keyboard.
  - Replace the mouse or keyboard batteries.
  - Try connecting your nano reciver into a different USB port on your computer.

Legal notices

One-year limited warranty

Contact Insignia

1-877-467-4289 (U.S. and Canada) or 01-800-926-3000 (Mexico)
www.insigniaproducts.com