





...can save a life!


INTERRUPTERS

IRCUIT

AULT

ROUND

This message about...

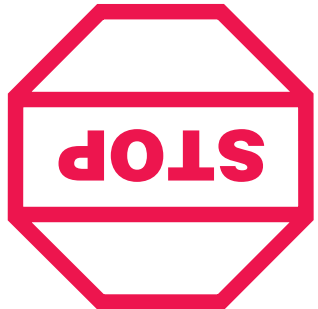

# Secador Iónico con Turmalina PROFESIONAL



**infiniti**  
by **CONAIR**

Manual de Instrucciones  
Modelo 213

**Línea Directa Gratuita**  
 Llame al: 1-800-3-CONAIR  
 O visite nuestro sitio en Internet:  
<http://www.conair.com>  
 Para más información sobre los productos de Conair

\*GFCI is a sensitive device which reacts immediately to a small electric current leak by stopping the electricity flow.

**A GFCI can save your life! Compared to that, the price is small! Don't wait...install one now!**



**WHY DO YOU NEED A GFCI?** Electricity and water don't mix. If your hair dryer falls in water while plugged in, the electric shock can kill you...

**IF YOU MUST USE YOUR HAIR DRYER IN THE BATHROOM, INSTALL A GFCI NOW!** Your local electrician can help you decide which type is best for you—a portable unit that plugs into the electrical outlet or a permanent unit installed by your electrician. The National Electrical Code now requires GFCI's in the bathroom, garages, and outdoor outlets of all new homes.

**USER MAINTENANCE**  
 Your dryer is virtually maintenance free. No lubrication is needed. For proper operating performance, the dryer must be kept clean. When cleaning is needed, unplug the cord, allow to cool and clean dust and lint from air intake openings with a small brush or the outer attachment of a vacuum cleaner. The outer surface of the dryer should be wiped clean with a cloth only.  
**Blocked or clogged air intake vents will cause the dryer to overheat.** If overheating occurs, an automatic safety device will shut the dryer or the heat off to prevent damage or personal injury. If the unit or the heat turns off, unplug the cord and allow the dryer to cool for 10 to 15 minutes before restarting. Make sure the air vents are clean.

**CAUTION**  
 NEVER allow the power supply cord to be pulled, twisted, or severely bent. Never wrap the cord tightly around the dryer. Damage will occur at the high flex point of entry into the dryer, causing it to rupture and short. Inspect the cord frequently for damage. **Stop use immediately if damage is visible or unit stops or operates intermittently.** If the cord or dryer is damaged or does not operate properly, return it for repair to an authorized Conair service representative only. No repairs should be attempted by the consumer.

**STORAGE - Important**  
 When not in use, your dryer should be disconnected, allowed to cool and stored in a safe, dry location, out of reach of children. Do not wrap line cord around dryer. Allow the cord to hang or lie loose and straight at the point of entry into the dryer.  
**LIMITED FIVE YEAR WARRANTY**  
 Conair will repair or replace (at our option) your unit free of charge for 60 months from the date of purchase if the appliance is defective in workmanship or materials. To obtain service under this warranty, return the defective product to the service center listed below that is nearest you, together with your purchase receipt and \$7.00 for postage and handling. California residents need only provide proof of purchase and should call 1-800-366-0937 for shipping instructions. In the absence of a purchase receipt, the warranty period shall be 60 months from the date of manufacture.

**LIMITED FIVE YEAR WARRANTY**  
 Conair will repair or replace (at our option) your unit free of charge for 60 months from the date of purchase if the appliance is defective in workmanship or materials. To obtain service under this warranty, return the defective product to the service center listed below that is nearest you, together with your purchase receipt and \$7.00 for postage and handling. California residents need only provide proof of purchase and should call 1-800-366-0937 for shipping instructions. In the absence of a purchase receipt, the warranty period shall be 60 months from the date of manufacture.

**THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER, DOES NOT ALLOW THE EXCLUSION OR LIMITATION OF SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF CONTRACT. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE.**

**SERVICE CENTER**  
 CONAIR CORPORATION  
 Service Department  
 7475 N. Glen Harbor Blvd.  
 Glendale, AZ 85307  
 ©2009 CONAIR CORPORATION  
 IB-9374

**Línea Grátis de Asistencia**  
 Llame al: 1-800-3-CONAIR  
 Visite en la web en:  
<http://www.conair.com>  
 para más información sobre los productos de Conair

**Instruction & Styling Guide**  
 Model 213

**!nfiniti!**  
 by **CONAIR**



**Tourmaline**  
 PROFESSIONAL  
 Ionic Styler



Este mensaje sobre los...

**G**ROUND  
**F**AULT  
**C**IRCUIT  
**I**NTERRUPTERS

*(Interruptores de circuito contra fallas a tierra)*

...¡Puede salvar una vida!

## ¡SI DEBE USAR EL SECADOR EN EL CUARTO DE BAÑO, INSTALE UN GFCI\* AHORA!

Su electricista le puede ayudar a decidir cual sistema escoger – un sistema amovible que se conecta al tomacorriente o un sistema permanente que él instalará. El Código Nacional de Electricidad ahora exige que todos los enchufes ubicados en los cuartos de baño, los garajes y las partes exteriores de las casas nuevas sean equipados con GFCI.

**¿POR QUÉ NECESITA UN GFCI?** La electricidad y el agua no deben juntarse. Si su aparato cayera al agua mientras esté conectado, una descarga eléctrica podría causar su muerte...



**¡Un GFCI puede salvar su vida! ¡Comparado con ella, el precio es bajo! ¡No espere... instale uno ahora mismo!**

\* Un GFCI es un dispositivo sensible que reacciona inmediatamente a una pequeña pérdida de corriente, deteniendo el flujo de electricidad.

## INSTRUCCIONES DE MANTENIMIENTO

Su secador casi no necesita mantenimiento. No necesita lubricación. Para que funcione correctamente, debe mantenerlo limpio. Cuando sea necesario limpiarlo, desconéctelo, permita que enfríe y saque el polvo y las pelusas de las aberturas de aire con un cepillo pequeño o el cepillo accesorio de una aspiradora. La superficie exterior del secador sólo se debe limpiar con un paño limpio.

**El secador se recalentará si las aberturas de aire estuvieran bloqueadas u obstruidas.** Si esto ocurriera, un sistema de seguridad apagará el secador o cortará la temperatura automáticamente para evitar daños al aparato o heridas. Si esto sucediera, desenchufe el aparato y permita que enfríe durante 10 a 15 minutos antes de encenderlo de nuevo. Asegúrese que las ventilaciones de aire estén limpias.

## PRECAUCIÓN

NUNCA jale, retuerza ni doble mucho el cable. Nunca lo enrolle con fuerza alrededor del aparato. Esto podría dañar la junta flexible que lo conecta al aparato, produciendo su ruptura o un cortocircuito. Inspeccione el cable con frecuencia para asegurarse que no esté dañado. **Deje de usar el aparato inmediatamente si el cable parece dañado o si el aparato dejara de funcionar o funcionara de manera intermitente.**

Si el cable o el aparato estuviesen dañados o si el aparato no funcionase correctamente, regréselo a un centro de servicio autorizado. No trate de repararlo.

## ALMACENAJE – Importante

Después de usar el aparato, desconéctelo, permita que enfríe y guárdelo en un lugar seco y seguro, fuera del alcance de los niños. **No enrolle el cable alrededor del aparato.** Permita que el cable cuelgue o que la junta que lo conecta al secador esté suelta y recta.