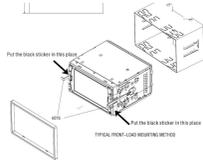
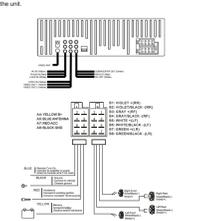
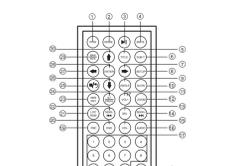


<p><b>XOMAX</b></p> <p>XM-2DT6209</p>  <p>INSTALLATION/OWNER'S MANUAL DVD Multimedia Receiver with 6.2" Touch Screen Display</p> 	<p><b>XM-2DT56207 CONTENTS XOMAX</b></p> <p><b>CONTENTS</b></p> <p>Warning 3</p> <p>Safety Information 4</p> <p>Preparation 6</p> <p>Wiring Diagram 7</p> <p>Control Locations 8</p> <p>General Operation 10</p> <p>AM/FM Tuner Operation 12</p> <p>Radio Operation 14</p> <p>Touch Screen Controls 15</p> <p>DVD Operation 16</p> <p>VCD Operation 17</p> <p>CD/MP3/MP4/WMA Operation 18</p> <p>JPEG/USB/SD Operation 19</p> <p>AUX IN/REAR VIEW Lens Operation 20</p> <p>Bluetooth Operation 21</p> <p>Set up Operation 23</p> <p>Troubleshooting 24</p> <p>Specifications 27</p>	<p><b>XM-2DT56207 WIRING XOMAX</b></p> <p><b>Wiring</b></p> <p><b>Safety Information</b></p> <p>Please read all instructions carefully before attempting to install or operate. Due to technical reasons, it is highly recommended that you XM-2DT56207 is installed by a professional installer or an authorized dealer. This product is only for use in vehicles with 12VDC negative ground only.</p> <p>To prevent damage or injury:</p> <ul style="list-style-type: none"> <li>• Make sure to ground the electrical system of the vehicle chassis ground.</li> <li>• Do not remove the fuse or adjust current of the unit.</li> <li>• Do not install the unit in a not exposed to direct sunlight or excessive heat or the possibility of water splashing.</li> <li>• Do not subject the unit to excessive shock.</li> <li>• When connecting a fuse, only use a new one with the prescribed rating. Using a fuse with the wrong rating may cause the unit to malfunction.</li> <li>• Do not connect wires when replacing a fuse, disconnected the wiring harness first.</li> <li>• Use only the provided hardware and wire harness.</li> <li>• Snap fitting into place making sure the inserted area is on the bottom.</li> <li>• Reorient or relocate the receiving antenna.</li> <li>• Do not place the equipment on a shelf or other elevated position.</li> <li>• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.</li> <li>• When extending the speaker, battery or ground cables, make sure to use automotive-grade cables or other cables with an area of 3.7mm (JPGV 18) or more to prevent voltage drop.</li> <li>• Do not touch the liquid crystal panel of the LCD or damaged or broken. The liquid crystal panel may be hazardous to your health or fatal. If the liquid crystal panel from the LCD contacts your body or clothing, wash it with soap immediately.</li> </ul> <p>Several states prohibit the installation of monochrome/DVD players if the screen is visible from the driver's seat. If you reside in a jurisdiction that has enacted such a law, this unit must not be installed so that the screen is visible from the driver's seat. When installing this unit in the front compartment, the unit must be positioned so that it facing the front passenger seat only. Failure to follow this instruction could result in driver distraction which could result in serious injury or death to the driver's occupants or persons outside the vehicle and/or property damage.</p> <p>This unit is designed so that it may be operated only when the vehicle is in "Park" and the parking brake is fully engaged. To avoid the risk of installing a parking brake lock feature when you operate the unit from operating, if the vehicle is not in "Park" and/or the parking brake is not fully engaged, when installing this unit, the installer must correct the parking brake lock feature (PBL Lock) to the parking brake mechanism to avoid the risk of installing a parking brake lock feature option. If you do not correct the parking brake lock feature option, the parking brake lock-out feature operates in order to a metal perforate of the vehicle. Failure to properly install the parking brake lock-out feature could lead to driver distraction which could result in serious injury or death to the driver's occupants or persons outside the vehicle and/or property damage.</p> <p>Once the parking brake lock-out feature is installed, the driver/owner must not attempt to deactivate the parking brake lock-out feature by (a) partially engaging the parking brake and/or (b) participating any device or unit designed to send necessary brake signals to the unit. Failure to follow these instructions could lead to driver distraction which could result in serious injury or death to the driver's occupants or persons outside the vehicle and/or property damage.</p> <p>When operating this unit, keep the unit's volume level low enough so that the vehicle's occupants can hear traffic-related sounds such as police and emergency vehicles. Failure to follow this instruction could lead to driver distraction which could result in serious injury or death to the vehicle's occupants or persons outside the vehicle and/or property damage.</p>	<p><b>XM-2DT56207 WIRING XOMAX</b></p> <p><b>E-MARK Compliance</b></p> <p>Concerning the addition of uniform technical prescriptions for wheeled vehicles, equipment and parts which can be fitted and/or used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:</p> <ul style="list-style-type: none"> <li>• Reorient or relocate the receiving antenna.</li> <li>• Increase the separation between the equipment and the receiver.</li> <li>• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.</li> <li>• Consult the dealer or an authorized service center for help.</li> </ul> <p>Mounting sleeve opening dimension: 7.16" x 3.97" (182mm x 101mm)</p>	<p><b>XM-2DT56207 WIRING XOMAX</b></p> <p><b>Preparation</b></p> <p><b>Before You Start</b></p> <ul style="list-style-type: none"> <li>• Disconnect negative battery terminal. Consult a qualified technician for instructions.</li> <li>• Avoid mounting the unit where it would be subject to high temperatures, such as from direct sunlight, or where it would be subject to dust, dirt or excessive vibration.</li> </ul> <p><b>Getting Started</b></p> <ul style="list-style-type: none"> <li>• Insert the supplied screw into the slots as shown, and slide the unit out of the mounting sleeve.</li> <li>• Install mounting sleeve into opening, bending tabs to secure.</li> <li>• Installation of this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:</li> <li>• Reorient or relocate the receiving antenna.</li> <li>• Increase the separation between the equipment and the receiver.</li> <li>• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.</li> <li>• Consult the dealer or an authorized service center for help.</li> </ul> <p>Mounting sleeve opening dimension: 7.16" x 3.97" (182mm x 101mm)</p> 	<p><b>XM-2DT56207 PREPARATION XOMAX</b></p> <p><b>Wiring Diagram</b></p> <p>Subwoofer output: The SUBWOOFER preamp audio output (Black jack with green RCA) is active in all auto modes.</p> <p>Rear camera input: The rear camera is not included in this device. This device supports the rear camera video input.</p> <p>Steering wheel control: Connect SWM KEY 15W KEY 25W GND</p> 	<p><b>XM-2DT56207 PREPARATION XOMAX</b></p> <p><b>Control Locations-1</b></p> 	<p><b>XM-2DT56207 PREPARATION XOMAX</b></p> <p><b>Control Locations-2</b></p> 	<p><b>XM-2DT56207 LOCATIONS XOMAX</b></p> <p><b>General Operation-1</b></p> <p><b>Profile of main interface</b></p> <ul style="list-style-type: none"> <li>• Rotate front play source: click to return the front play source.</li> <li>• Click screen area</li> <li>• Power saving mode</li> <li>• Radio</li> <li>• Back</li> <li>• Home</li> <li>• USB</li> <li>• Bluetooth</li> <li>• Sleep</li> <li>• Language</li> <li>• P-VID</li> <li>• App</li> <li>• Rear view lens</li> </ul> <p>Note: If there is any device connector, icons for DVD, USB, SD, iPod and camera are in grey indicating turn and click is invalid in this case.</p>	<p><b>XM-2DT56207 OPERATION XOMAX</b></p> <p><b>General Operation-2</b></p> <p><b>Setup Menu</b></p> <p>From the Main Menu screen, press <b>[ESC]</b> in the menu. Select one of the icons across the top of the screen (Language, Audio, Video, Tone and Calibration) to access the sub-menus for that category. Use the up and down Arrow keys on the right to scroll up and down through the available Sub-menu options.</p> <p>Note: The details of the setting menu please look at page 42 to 45.</p> <p>General</p> <ul style="list-style-type: none"> <li>• Tone: Select of on or is disable or enable the audible beep.</li> <li>• Camera: Select a format or frame image for camera input.</li> </ul> <p>Note: The details of the setting menu please look at page 42 to 45.</p> <p>Video</p> <ul style="list-style-type: none"> <li>• Time: Press the current time to edit, then use the up and down arrows to change the hour and minute settings.</li> <li>• All App: Select the application you want to use.</li> <li>• Language: Select desired language(the application is available only on certain models.)</li> </ul> <p>Audio</p> <ul style="list-style-type: none"> <li>• Auto: Auto-configure Turn the subwoofer output On or Off.</li> <li>• Loudness: Turn the Loudness function On or Off.</li> <li>• EQ: Select from EQ options: Pop, Rock, Classic, Jazz or Off.</li> </ul> <p>Video</p> <ul style="list-style-type: none"> <li>• Brightness and contrast adjust from the remote controller.</li> <li>• Press key <b>[ESC]</b> then press <b>[ESC]</b> repeat times in the remote controller.</li> </ul> <p>Radio Region: Set the unit for one for the following regions: USA, S.America, Canada, S.Mexico, Europe, or Home.</p> <p>Calibration: Press the enter of the "V" as indicated on the screen to calibrate the touch screen.</p> <p>AUX Input</p> <ul style="list-style-type: none"> <li>• Connect the optional audio/video source to the Aux Input(Red/White/Yellow RCA connectors). Refer to the manual for the details setting.</li> <li>• Dual zone function: Select the dual zone function you want to use.</li> <li>• While playing the radio/multimedia, GPS navigation can work at the same time. Switch the mode by remote control SRC or touch <b>[ESC]</b> key in the panel or touch the icon in the main interface.</li> </ul>	<p><b>XM-2DT56207 OPERATION XOMAX</b></p> <p><b>AM/FM Tuner Operation</b></p> <p>Touch Radio icon in main interface or press mode key in panel/SRC key in remote controller to switch to radio mode.</p> <p>Current Source Indicator: Display source currently used; touch the icon to access the main menu.</p> <p>Click indicator: Show current time.</p> <p>Power Saving Mode: Shut the screen display to saving power.</p> <p>EO Setting: Touch the icon to access the EO setting.</p> <p>Numeric Keyboard: Touch the icon, enter the frequency you're searching for.</p> <p>System Setting: Touch the icon to access the system setting.</p> <p>Tune Frequency: Touch this icon will tune the radio to a higher frequency by one frequency step.</p> <p>Semi-automatic Tune: Touch this icon will tune the radio to the next station at a lower frequency.</p> <p>Frequency Down: Touch this icon will tune the radio to the next station at a higher frequency.</p> <p>Frequency Up: Touch this icon will tune the radio to a lower frequency by one frequency step.</p>																																																			
<p><b>XM-2DT56207 OPERATION XOMAX</b></p> <p><b>AM/FM Tuner Operation</b></p> <p>Touch Radio icon in main interface or press mode key in panel/SRC key in remote controller to switch to radio mode.</p> <p>Current Source Indicator: Display source currently used; touch the icon to access the main menu.</p> <p>Click indicator: Show current time.</p> <p>Power Saving Mode: Shut the screen display to saving power.</p> <p>EO Setting: Touch the icon to access the EO setting.</p> <p>Numeric Keyboard: Touch the icon, enter the frequency you're searching for.</p> <p>System Setting: Touch the icon to access the system setting.</p> <p>Tune Frequency: Touch this icon will tune the radio to a higher frequency by one frequency step.</p> <p>Semi-automatic Tune: Touch this icon will tune the radio to the next station at a lower frequency.</p> <p>Frequency Down: Touch this icon will tune the radio to the next station at a higher frequency.</p> <p>Frequency Up: Touch this icon will tune the radio to a lower frequency by one frequency step.</p>	<p><b>XM-2DT56207 OPERATION XOMAX</b></p> <p><b>Radio Operation</b></p> <p>Touch BAND key in radio interface. Key in the remote control to switch bands among FM and AM.</p> <p>Semi-auto tuning: Touch key radio or in the remote control, the system will automatically search signal toward high frequency. When radio station is strong signal or fine receiving state, search will automatically stop. Or touch the key again, searching will also be stopped.</p> <p>Manual Tuning: Touch key in the radio interface key in the remote control to decrease/increase tuning frequency through the tuning stations with strong signal.</p> <p>Fully automatic tuning: Touch key in the radio interface key in the remote control, the system will automatically search radio station within but channels. The radio station with good signal or the receiving state will be stored in the preset frequency.</p> <p>TA Function Turn off: Touch this icon to switch to current radio station under any mode if the system detects emergency traffic news.</p> <p>Preset Scan: Touch this icon to scan the tuneable presets band and play them for 10 seconds each.</p> <p>Page search: Touch this icon to search radio menu page one and page ten.</p> <p>LOC/CI Tuning Mode: Touch this icon to scan radio station automatically. The most recent stations are stored.</p> <p>Semi-automatic Tune: Touching this icon will tune to the next station at a higher frequency. Look at page 13 for reference.</p> <p>Frequency Up: Touch this icon will tune the radio to a higher frequency by one frequency step.</p> <p>Frequency Down: Touch this icon will tune the radio to a lower frequency by one frequency step.</p>	<p><b>XM-2DT56207 OPERATION XOMAX</b></p> <p><b>Touch Screen Controls</b></p> <p>Touching area of touch screen Area A: Select the primary operation Area B: Enter and select previous chapter Area C: Enter and select next chapter Area D: Enter and select next chapter</p> <p>The touch screen is divided into nine areas, but only five areas are functional. Under mode of playing DVD and VCD, touch is shown as below:</p> <ul style="list-style-type: none"> <li>• Click the key to enter main interface</li> <li>• Click the key to enter system menu setting interface</li> <li>• Exit (back) the key to exit function menu</li> <li>• Fast forward touch the screen from 2 s to 4 s to 16 s, back to play</li> <li>• Click to select previous section(s)</li> <li>• Play/stop</li> <li>• Click to select next section(s)</li> <li>• Fast reverse touch the screen from 2 s to 4 s to 16 s, back to play</li> <li>• Stop/hold on time for stop at playback with memory, click again to stop completely</li> <li>• Page key(touch the key, left) will display another function menu/function</li> <li>• Click the key to enter primary menu of the disc.</li> <li>• Stop/hold on time for stop at playback with memory, click again to stop completely</li> <li>• Repeat and play section(click for the first time to select starting point A, click for second time to select end point B, the system will repeat play section between A and B, click for the first time, function of repeat and play section will be turned off)</li> <li>• Sub title mode touch to activate sub title on DVD's that have multiple sub title languages.</li> <li>• Hide menu touch to access DVD file menu.</li> <li>• Page key(touch the key to enter previous function menu).</li> <li>• Click the key to display play information, click A/D in center part of screen to cancel play information</li> </ul>	<p><b>XM-2DT56207 OPERATION XOMAX</b></p> <p><b>DVD Operation</b></p> <p>Insert DVD disc into disc tray slightly, the disc will be auto-loaded into the device automatically, and the system will automatically enter to DVD disc play mode. In disc play, click Area A at top left corner of the touch screen to return to main interface of the system. Click Area D in right corner of the touch screen, will allow a slow motion menu as below:</p> <ul style="list-style-type: none"> <li>• Display Item/Search: click have to display a number keyboard shown. Click number keyboard, click the <b>[OK]</b> key to confirm. Click <b>[ESC]</b> key to delete number forward and click the "TEXT" key to expand function keyboard. After confirmation, the system will automatically turn to designated disc item for play.</li> <li>• Click to enter the system menu.</li> <li>• Fast forward key</li> <li>• Click to select previous track</li> <li>• Play/pause key</li> <li>• Click to select next track</li> <li>• Fast backward key</li> <li>• Click to last next page menu</li> <li>• Repeat and play key (click key to turn off/and/or play)</li> <li>• Page down (to select next one) (shown)</li> <li>• Page down (to select next one) (shown)</li> <li>• Click to previous sub tracks</li> <li>• Click to next track</li> </ul> <p>Click number keyboard, click <b>[OK]</b> key to delete number forward, click <b>[OK]</b> key for confirmation. After confirmation, the system will automatically turn to designated position key disc for play. Click "EXIT" key to escape normal keyboard menu.</p>	<p><b>XM-2DT56207 OPERATION XOMAX</b></p> <p><b>VCD disc</b></p> <p>Insert VCD disc into disc tray slightly, the disc will be auto-loaded into the device automatically, and the system will automatically enter to DVD disc play mode. In disc play, click Area A at top left corner of the touch screen to return to main interface of the system. Click Area D in right corner of the touch screen, will allow a slow motion menu as below:</p> <ul style="list-style-type: none"> <li>• Display Item/Search: click have to display a number keyboard shown. Click number keyboard, click the <b>[OK]</b> key to confirm. Click <b>[ESC]</b> key to delete number forward and click the "TEXT" key to expand function keyboard. After confirmation, the system will automatically turn to designated disc item for play.</li> <li>• Click to enter the system menu.</li> <li>• Fast forward key</li> <li>• Click to select previous track</li> <li>• Play/pause key</li> <li>• Click to select next track</li> <li>• Fast backward key</li> <li>• Click to last next page menu</li> <li>• Repeat and play key (click key to turn off/and/or play)</li> <li>• Page down (to select next one) (shown)</li> <li>• Page down (to select next one) (shown)</li> <li>• Click to previous sub tracks</li> <li>• Click to next track</li> </ul> <p>Click number keyboard, click <b>[OK]</b> key to delete number forward, click <b>[OK]</b> key for confirmation. After confirmation, the system will automatically turn to designated position key disc for play. Click "EXIT" key to escape normal keyboard menu.</p>	<p><b>XM-2DT56207 OPERATION XOMAX</b></p> <p><b>CD/MP3/MP4/WMA Operation</b></p> <p>Insert the disc into disc tray slightly, the disc will be auto-loaded into the device automatically, and the system will automatically play CD/MP3/WMA/MP4 and the screen will display play interface shown. The system will automatically read disc information, and the user can directly click items displayed in the play interface for select and play.</p> <p>The above menu has functions same to those of DVD disc play menu, PBC function is only valid for VCD/DVD disc.</p> <p>Note: Functions above can also be done through corresponding keys of the remote controller.</p> <p><b>Go to search</b></p> <p>In DVD/VCD play, if you want fast search designated position for play with SEARCH function, click <b>[ESC]</b> key enter the interface shown as below:</p> <p>Click number keyboard, click <b>[OK]</b> key to delete number forward, click <b>[OK]</b> key for confirmation. After confirmation, the system will automatically turn to designated position key disc for play. Click "EXIT" key to escape normal keyboard menu.</p>	<p><b>XM-2DT56207 OPERATION XOMAX</b></p> <p><b>JPEG/USB/SD Operation</b></p> <p>Manual operation: click Camera in main interface, press SRC key in remote controller to switch to rear view mode. Auto operation: First connect remote device and reverse for (reflective when reverse level is high, after that reverse the car. At this point, the system will start any mode to rear view mode automatically. Reverse is off: the system will come back to previous mode.</p> <p><b>Bluetooth Operation</b></p> <ul style="list-style-type: none"> <li>• Bluetooth connection status display</li> <li>• Click to enter call making interface</li> <li>• Click to connect to phone number list</li> <li>• Click to enter music playback interface or make a phone call</li> <li>• Enter the phone number in the remote controller, click <b>[OK]</b> key to clear all, Enter the phone number, click <b>[OK]</b> key to device, Enter the default pass word: 0000 if necessary.</li> <li>• Turn off the bluetooth</li> <li>• Call/answer/transfer key</li> <li>• Source switch key (click the key to switch the voice between vehicle speaker and mobile device)</li> <li>• End key</li> <li>• Play/pause Bluetooth music</li> <li>• Repeat chapter</li> <li>• Stop key</li> <li>• Enter the system setting</li> </ul>	<p><b>XM-2DT56207 OPERATION XOMAX</b></p> <p><b>AUX in(Auxiliary device input)</b></p> <p>Click AUX in from the main interface, the disc will be auto-loaded into the device automatically, and the system will automatically play CD/MP3/WMA/MP4 and the screen will display play interface shown. The system will automatically read disc information, and the user can directly click items displayed in the play interface for select and play.</p> <p>The above menu has functions same to those of DVD disc play menu, PBC function is only valid for VCD/DVD disc.</p> <p>Note: Functions above can also be done through corresponding keys of the remote controller.</p> <p><b>Go to search</b></p> <p>In DVD/VCD play, if you want fast search designated position for play with SEARCH function, click <b>[ESC]</b> key enter the interface shown as below:</p> <p>Click number keyboard, click <b>[OK]</b> key to delete number forward, click <b>[OK]</b> key for confirmation. After confirmation, the system will automatically turn to designated position key disc for play. Click "EXIT" key to escape normal keyboard menu.</p>	<p><b>XM-2DT56207 OPERATION XOMAX</b></p> <p><b>Missed Calls</b></p> <p>Press Missed Calls to retrieve the list of missed calls from the mobile device. Touch the desired number to call. Press the page up/down buttons to navigate through the pages.</p> <p><b>Received Calls</b></p> <p>Press Received calls to retrieve the list of received calls from the mobile device. Touch the desired number to call. Press the page up/down buttons to navigate through the pages.</p> <p><b>Dialed Calls</b></p> <p>Press Dialed calls to retrieve the list of dialed calls from the mobile device. Touch the desired number to call. Press the page up/down buttons to navigate through the pages.</p> <p><b>Phone book</b></p> <p>Touch Phone book to download the phone book from the mobile device.</p> <p><b>Bluetooth Pairing</b></p> <p>Click <b>[ESC]</b> key to enter system setting, select Bluetooth setting. Set the connect type: Manual or Automatically. Auto operation: First connect remote device and reverse for (reflective when reverse level is high, after that reverse the car. At this point, the system will start any mode to rear view mode automatically. Reverse is off: the system will come back to previous mode.</p> <p><b>Bluetooth Operation</b></p> <ul style="list-style-type: none"> <li>• Bluetooth connection status display</li> <li>• Click to enter call making interface</li> <li>• Click to connect to phone number list</li> <li>• Click to enter music playback interface or make a phone call</li> <li>• Enter the phone number in the remote controller, click <b>[OK]</b> key to clear all, Enter the phone number, click <b>[OK]</b> key to device, Enter the default pass word: 0000 if necessary.</li> <li>• Turn off the bluetooth</li> <li>• Call/answer/transfer key</li> <li>• Source switch key (click the key to switch the voice between vehicle speaker and mobile device)</li> <li>• End key</li> <li>• Play/pause Bluetooth music</li> <li>• Repeat chapter</li> <li>• Stop key</li> <li>• Enter the system setting</li> </ul>	<p><b>XM-2DT56207 OPERATION XOMAX</b></p> <p><b>Answer a call</b></p> <p>Auto answer: The device will answer a call automatically if the Auto Answer feature is turned on.</p> <p>Manual answer: The device will answer manually, click the key to answer a call, and click key to end a call.</p> <p>Note: During an incoming call, the audio is muted for the current source and the incoming call screen will be displayed. Adjust the volume during the call with the volume control. Press the call icon screen or the End button on the remote controller to end a call in progress or to reject an incoming call. It is not possible to hear navigation voice guidance when using Bluetooth with a hands-free phone call. Voice guidance will resume once the call is ended.</p> <p><b>Phone book</b></p> <p>Touch Phone book to download the phone book from the mobile device.</p> <p><b>Bluetooth Pairing</b></p> <p>Click <b>[ESC]</b> key to enter system setting, select Bluetooth setting. Set the connect type: Manual or Automatically. Auto operation: First connect remote device and reverse for (reflective when reverse level is high, after that reverse the car. At this point, the system will start any mode to rear view mode automatically. Reverse is off: the system will come back to previous mode.</p> <p><b>Bluetooth Operation</b></p> <ul style="list-style-type: none"> <li>• Bluetooth connection status display</li> <li>• Click to enter call making interface</li> <li>• Click to connect to phone number list</li> <li>• Click to enter music playback interface or make a phone call</li> <li>• Enter the phone number in the remote controller, click <b>[OK]</b> key to clear all, Enter the phone number, click <b>[OK]</b> key to device, Enter the default pass word: 0000 if necessary.</li> <li>• Turn off the bluetooth</li> <li>• Call/answer/transfer key</li> <li>• Source switch key (click the key to switch the voice between vehicle speaker and mobile device)</li> <li>• End key</li> <li>• Play/pause Bluetooth music</li> <li>• Repeat chapter</li> <li>• Stop key</li> <li>• Enter the system setting</li> </ul>	<p><b>XM-2DT56207 OPERATION XOMAX</b></p> <p><b>Specifications-1</b></p> <p>Working voltage: direct current 12V Working voltage range: 10.8V-15V Maximum working electric current: 10A Installation space: less than 30 degrees tilted the front side and backward (DIN/DIN)</p> <p><b>FM Radio</b></p> <p>Frequency modulation: 87.5 MHz-108.0MHz (Europe) Flexibility: 130dB (150dB) S/N: 60dB (65dB) Frequency response range: 50Hz-20KHz Dynamic range: 95dB Frequency response: 20Hz-20KHz (20Hz-20KHz) Digital audio sampling: 24bit Electrostatic Shielding (ESD): Class 2 CD, 2-3 Seconds CD-DA: 10 Seconds WMA: 20seconds MP3: 10seconds MP3: 10seconds Power output: 80W/4M impedance 40W S/N: 60dB Frequency Response: 20Hz-20KHz</p> <p><b>Display</b></p> <p>Screen type: TFT Response time: up to 30 milliseconds Dose: 900 milliseconds Angle range: depression angle:45°, elevation angle:40° Left vision: up to 95° Right vision: 60°</p> <p><b>Environment temperature</b></p> <p>Operating temperature: 20°-70°C Storage temperature: -30°-50°C Operating humidity: 45%-95% (relative humidity) Maintenance humidity: 30%-95% (relative humidity)</p>																																																			
<p><b>XM-2DT56207 OPERATION XOMAX</b></p> <p><b>Setup Operation</b></p> <p><b>EQ setting</b></p> <p>Click the icon EQ in the menu or SEL key in the remote control to enter EQ setting. Press: <b>[ESC]</b> <b>[ESC]</b> in the menu to adjust.</p> <p><b>System menu setting</b></p> <p>Click icon <b>[ESC]</b> in the remote control to enter system menu setting interface, including Language setting, video setting, general setting and so on. Users can set the modes according to their own preference.</p> <p><b>General setting</b></p> <p>In the system menu setting interface, click "General" icon to enter setting interface shown.</p> <p><b>Language setting</b></p> <p>In the system menu setting interface, click "Language" icon to enter setting interface shown below. In the system menu setting interface, click "Audio" icon to enter setting interface shown below.</p> <p><b>RDS setting</b></p> <p>In the system menu setting interface, click "RDS" icon to enter setting interface shown below.</p> <p><b>Rating setting</b></p> <p>In the system menu setting interface, click "Rating" icon to enter setting interface shown below.</p> <p><b>Hardware setting</b></p> <p>In the system menu setting interface, click "Hardware" icon to enter setting interface shown.</p> <p><b>Tips for steering wheel control study</b></p> <p>Step 1: Under the radio interface, click the setup icon shown as above picture.</p> <p>Step 2: Select "Hardware" option. "Learn" shown as above picture.</p> <p>Step 3: After entering into the steering wheel control learning, click "Model", then push the steering wheel "radio" button in your car, it will come out a numerical value, then it is ok for the mode. Click "VOLD", then push the steering wheel "volume" button in your car, it will come out a numerical value, then it is ok for the VOL. Click other buttons accordingly, until all the numerical value come out. Then the steering wheel function can be used.</p>	<p><b>XM-2DT56207 OPERATION XOMAX</b></p> <p><b>PVOL setting</b></p> <p>In the system menu setting interface, click "PVOL" icon to enter setting interface shown.</p> <p><b>TS Car setting</b></p> <p>In the system menu setting interface, click "TS Car" icon to enter setting interface shown below.</p> <p><b>Trouble Shooting</b></p> <table border="1"> <thead> <tr> <th>Phenomenon</th> <th>Reasons</th> <th>Solution</th> </tr> </thead> <tbody> <tr> <td>Normal</td> <td></td> <td></td> </tr> <tr> <td>Not operating</td> <td>Fuse of machine power supply and auto-vehicle battery is burnt; voltage of power supply is not stable; Automatic protection system sends fault due to illegal operation</td> <td>Change for fuse of the correct type; Adjust voltage; Reset the system by pressing the Reset key; Check the wiring diagram.</td> </tr> <tr> <td>Turnover screen</td> <td>Auto Open of turnover screen setting is OFF</td> <td>Auto-open=ON</td> </tr> <tr> <td>Wrong information is shown on the screen</td> <td>No image; Connection of brake wire is not correct; Hot brake state</td> <td>Check and reconnected ACC and B+ in not correct; Correct brake wire with a capacitor of power supply correctly; Release brake state after car's parked safely.</td> </tr> <tr> <td>Error in start/operating</td> <td>DVD does not correspond with the present system video setting; Video signal line is not connected correctly.</td> <td>Adjust system video setting; Check and make sure of the connectivity; Unwrap one core.</td> </tr> <tr> <td>Disc cannot enter</td> <td>Image being pressed or overstressed</td> <td>Adjust image setting</td> </tr> <tr> <td>The device does not play</td> <td>Disc does not correspond with the present system video setting; Video signal line is not connected correctly.</td> <td>Adjust system video setting; Check and make sure of the connectivity; Unwrap one core.</td> </tr> <tr> <td>3D card readable by PC but not by the device</td> <td>Due to compatibility reasons of 3D card brand, not all of the 3D card can be read under the system. Or you may wrongly use MMC card as 3D card.</td> <td></td> </tr> </tbody> </table>	Phenomenon	Reasons	Solution	Normal			Not operating	Fuse of machine power supply and auto-vehicle battery is burnt; voltage of power supply is not stable; Automatic protection system sends fault due to illegal operation	Change for fuse of the correct type; Adjust voltage; Reset the system by pressing the Reset key; Check the wiring diagram.	Turnover screen	Auto Open of turnover screen setting is OFF	Auto-open=ON	Wrong information is shown on the screen	No image; Connection of brake wire is not correct; Hot brake state	Check and reconnected ACC and B+ in not correct; Correct brake wire with a capacitor of power supply correctly; Release brake state after car's parked safely.	Error in start/operating	DVD does not correspond with the present system video setting; Video signal line is not connected correctly.	Adjust system video setting; Check and make sure of the connectivity; Unwrap one core.	Disc cannot enter	Image being pressed or overstressed	Adjust image setting	The device does not play	Disc does not correspond with the present system video setting; Video signal line is not connected correctly.	Adjust system video setting; Check and make sure of the connectivity; Unwrap one core.	3D card readable by PC but not by the device	Due to compatibility reasons of 3D card brand, not all of the 3D card can be read under the system. Or you may wrongly use MMC card as 3D card.		<p><b>XM-2DT56207 OPERATION XOMAX</b></p> <p><b>Specifications-1</b></p> <table border="1"> <thead> <tr> <th>Trouble</th> <th>Reasons</th> <th>Solution</th> </tr> </thead> <tbody> <tr> <td>Radio</td> <td>Auto antenna does not reach out completely (LOC function is under working state)</td> <td>Connect auto antenna line correctly; Close LOC function.</td> </tr> <tr> <td>Weak signal</td> <td>Connection of ACC and B+ is not correct</td> <td>Check and reconnected ACC and B+ in not correct</td> </tr> <tr> <td>When it shut down</td> <td>Connection of ACC and B+ is not correct</td> <td>Check and reconnected ACC and B+ in not correct</td> </tr> <tr> <td>Disc/CD Reading</td> <td>Disc is scratched or scratched; Documents or records are damaged</td> <td>Clean or replace the disc; Replace the disc or choose stored the disc</td> </tr> <tr> <td>Break down during playing</td> <td>Wrong information is shown on the screen</td> <td>Close the EJECT key for 5 seconds to reload the disc</td> </tr> <tr> <td>Error in start/operating</td> <td>Disc is not fully accepted</td> <td>Take out the disc inside the machine and replace a new disc; Transport the screen</td> </tr> <tr> <td>Disc cannot enter</td> <td>Image being pressed or overstressed</td> <td>Adjust the weight setting of Lock feature; Use a complete disc; Keep the side with sign up when insert the disc.</td> </tr> <tr> <td>The device does not play</td> <td>The disc level surpasses the level setting of Lock function. The area inside of the disc is corrupted. Disc is inserted upside down.</td> <td>Adjust the weight setting of Lock feature; Use a complete disc; Keep the side with sign up when insert the disc.</td> </tr> <tr> <td>3D card readable by PC but not by the device</td> <td>Due to compatibility reasons of 3D card brand, not all of the 3D card can be read under the system. Or you may wrongly use MMC card as 3D card.</td> <td>The present system mainly support the following 3D brands: Kingfisher, Kingston, Panasonic, Apacer etc.</td> </tr> </tbody> </table>	Trouble	Reasons	Solution	Radio	Auto antenna does not reach out completely (LOC function is under working state)	Connect auto antenna line correctly; Close LOC function.	Weak signal	Connection of ACC and B+ is not correct	Check and reconnected ACC and B+ in not correct	When it shut down	Connection of ACC and B+ is not correct	Check and reconnected ACC and B+ in not correct	Disc/CD Reading	Disc is scratched or scratched; Documents or records are damaged	Clean or replace the disc; Replace the disc or choose stored the disc	Break down during playing	Wrong information is shown on the screen	Close the EJECT key for 5 seconds to reload the disc	Error in start/operating	Disc is not fully accepted	Take out the disc inside the machine and replace a new disc; Transport the screen	Disc cannot enter	Image being pressed or overstressed	Adjust the weight setting of Lock feature; Use a complete disc; Keep the side with sign up when insert the disc.	The device does not play	The disc level surpasses the level setting of Lock function. The area inside of the disc is corrupted. Disc is inserted upside down.	Adjust the weight setting of Lock feature; Use a complete disc; Keep the side with sign up when insert the disc.	3D card readable by PC but not by the device	Due to compatibility reasons of 3D card brand, not all of the 3D card can be read under the system. Or you may wrongly use MMC card as 3D card.	The present system mainly support the following 3D brands: Kingfisher, Kingston, Panasonic, Apacer etc.	<p><b>XM-2DT56207 SPECIFICATIONS XOMAX</b></p> <p><b>Specifications-1</b></p> <p>Working voltage: direct current 12V Working voltage range: 10.8V-15V Maximum working electric current: 10A Installation space: less than 30 degrees tilted the front side and backward (DIN/DIN)</p> <p><b>FM Radio</b></p> <p>Frequency modulation: 87.5 MHz-108.0MHz (Europe) Flexibility: 130dB (150dB) S/N: 60dB (65dB) Frequency response range: 50Hz-20KHz Dynamic range: 95dB Frequency response: 20Hz-20KHz (20Hz-20KHz) Digital audio sampling: 24bit Electrostatic Shielding (ESD): Class 2 CD, 2-3 Seconds CD-DA: 10 Seconds WMA: 20seconds MP3: 10seconds MP3: 10seconds Power output: 80W/4M impedance 40W S/N: 60dB Frequency Response: 20Hz-20KHz</p> <p><b>Display</b></p> <p>Screen type: TFT Response time: up to 30 milliseconds Dose: 900 milliseconds Angle range: depression angle:45°, elevation angle:40° Left vision: up to 95° Right vision: 60°</p> <p><b>Environment temperature</b></p> <p>Operating temperature: 20°-70°C Storage temperature: -30°-50°C Operating humidity: 45%-95% (relative humidity) Maintenance humidity: 30%-95% (relative humidity)</p>	<p><b>XM-2DT56207 SPECIFICATIONS XOMAX</b></p> <p><b>Specifications-2</b></p> <p>Working voltage: direct current 12V Working voltage range: 10.8V-15V Maximum working electric current: 10A Installation space: less than 30 degrees tilted the front side and backward (DIN/DIN)</p> <p><b>FM Radio</b></p> <p>Frequency modulation: 87.5 MHz-108.0MHz (Europe) Flexibility: 130dB (150dB) S/N: 60dB (65dB) Frequency response range: 50Hz-20KHz Dynamic range: 95dB Frequency response: 20Hz-20KHz (20Hz-20KHz) Digital audio sampling: 24bit Electrostatic Shielding (ESD): Class 2 CD, 2-3 Seconds CD-DA: 10 Seconds WMA: 20seconds MP3: 10seconds MP3: 10seconds Power output: 80W/4M impedance 40W S/N: 60dB Frequency Response: 20Hz-20KHz</p> <p><b>Display</b></p> <p>Screen type: TFT Response time: up to 30 milliseconds Dose: 900 milliseconds Angle range: depression angle:45°, elevation angle:40° Left vision: up to 95° Right vision: 60°</p> <p><b>Environment temperature</b></p> <p>Operating temperature: 20°-70°C Storage temperature: -30°-50°C Operating humidity: 45%-95% (relative humidity) Maintenance humidity: 30%-95% (relative humidity)</p>
Phenomenon	Reasons	Solution																																																											
Normal																																																													
Not operating	Fuse of machine power supply and auto-vehicle battery is burnt; voltage of power supply is not stable; Automatic protection system sends fault due to illegal operation	Change for fuse of the correct type; Adjust voltage; Reset the system by pressing the Reset key; Check the wiring diagram.																																																											
Turnover screen	Auto Open of turnover screen setting is OFF	Auto-open=ON																																																											
Wrong information is shown on the screen	No image; Connection of brake wire is not correct; Hot brake state	Check and reconnected ACC and B+ in not correct; Correct brake wire with a capacitor of power supply correctly; Release brake state after car's parked safely.																																																											
Error in start/operating	DVD does not correspond with the present system video setting; Video signal line is not connected correctly.	Adjust system video setting; Check and make sure of the connectivity; Unwrap one core.																																																											
Disc cannot enter	Image being pressed or overstressed	Adjust image setting																																																											
The device does not play	Disc does not correspond with the present system video setting; Video signal line is not connected correctly.	Adjust system video setting; Check and make sure of the connectivity; Unwrap one core.																																																											
3D card readable by PC but not by the device	Due to compatibility reasons of 3D card brand, not all of the 3D card can be read under the system. Or you may wrongly use MMC card as 3D card.																																																												
Trouble	Reasons	Solution																																																											
Radio	Auto antenna does not reach out completely (LOC function is under working state)	Connect auto antenna line correctly; Close LOC function.																																																											
Weak signal	Connection of ACC and B+ is not correct	Check and reconnected ACC and B+ in not correct																																																											
When it shut down	Connection of ACC and B+ is not correct	Check and reconnected ACC and B+ in not correct																																																											
Disc/CD Reading	Disc is scratched or scratched; Documents or records are damaged	Clean or replace the disc; Replace the disc or choose stored the disc																																																											
Break down during playing	Wrong information is shown on the screen	Close the EJECT key for 5 seconds to reload the disc																																																											
Error in start/operating	Disc is not fully accepted	Take out the disc inside the machine and replace a new disc; Transport the screen																																																											
Disc cannot enter	Image being pressed or overstressed	Adjust the weight setting of Lock feature; Use a complete disc; Keep the side with sign up when insert the disc.																																																											
The device does not play	The disc level surpasses the level setting of Lock function. The area inside of the disc is corrupted. Disc is inserted upside down.	Adjust the weight setting of Lock feature; Use a complete disc; Keep the side with sign up when insert the disc.																																																											
3D card readable by PC but not by the device	Due to compatibility reasons of 3D card brand, not all of the 3D card can be read under the system. Or you may wrongly use MMC card as 3D card.	The present system mainly support the following 3D brands: Kingfisher, Kingston, Panasonic, Apacer etc.																																																											