The communication distance (range) between any two ONELINK $^\circ$ Alarms is typically 50 feet (15 meters) inside of a home. Some features of a home, such as the number of floors. number/size of rooms, furniture and types of building materials used may reduce the range of the Alarms. Examples include suspended ceilings, ductwork, large metallic appliances (refrigerators) and metal study. A feature of ONELINK® Alarms is that they operate as a mesh network. All Alarms will repeat any alarm signal that is received to all other ONELINK® Alarms. Interference from structural conditions can be overcome by adding additional Alarms to route the wireless signal around obstructions

IMPORTANT!

- The range and proper operation of any wireless device will vary depending on its surroundings. It is very important that each Alarm is tested individually before and after installation to make sure that all Alarms respond properly
- The ONELINK® Alarms are not to be used outdoors or to transmi between buildings. The Alarms will not communicate properly
- Metal objects and metallic wallpaper may interfere with signals from wireless Alarms. Alarms should be tested after changes to your home such as remodeling, moving furniture, and with metal doors opened and closed.

Your First Alert® ONELINK® Smoke Alarm will automatically communicate potential fires with all other First Alert® ONELINK® Smoke Alarms. FCC NOTICE: This device complies with Part 15 of the FCC Rules cause harmful interference, and (2) this device must accept any interference eceived, including interference that may cause undesired operation. FCC ID: M7U5201L

ACAUTION!

Changes or modifications not expressly approved by BRK Brands, Inc. could void the user's authority to operate the equipment.

IF THIS SMOKE ALARM SOUNDS **RESPONDING TO AN ALARM**

During an alarm, you will hear a loud, repeating horn pattern: 3 beeps, pause, 3 beeps, pause.

- If the unit alarms and you are not testing the unit, it is warning you
 of a potentially dangerous situation that requires your immediate attention. NEVER ignore any alarm. Ignoring the alarm may result Never disconnect the AC power to quiet an unwanted alarm.
- Disconnecting the power disables the Alarm so it cannot sense smoke. This will remove your protection. Instead, open a window or fan the smoke away from the unit. The Alarm will reset automatically.
- . If the unit alarms get everyone out of the house immediately

ADANGER! • ELECTRICAL SHOCK HAZARD: Attempting to disconnect the power

connector from the unit when the power is on may result in electrical When an interconnected system of AC powered units is in alarm, the alarm

indicator light on the unit(s) that initiated the alarm will blink rapidly. It will remain OFF on any remaining units. If the unit alarms, get everyone out of the dwelling immediately.

If the unit alarms and you are certain that the source of smoke is not a firecooking smoke or an extremely dusty furnace, for example—open a nearby window or door and fan the smoke away from the unit (Use the Silence Feature to silence the Alarm). This will silence the alarm, and once the smoke clears the unit will reset itself automaticall

WHAT TO DO IN CASE OF FIRE

- Don't panic; stay calm. Follow your family escape plan • Get out of the house as quickly as possible. Don't stop to
- get dressed or collect anything.
- Feel doors with the back of your hand before opening them.
 If a door is cool, open it slowly. Don't open a hot door. Keep doors and windows closed, unless you must escape through them. Cover your nose and mouth with a cloth (preferably damp).
- Take short, shallow breaths. · Meet at your planned meeting place outside your home
- and do a head count to make sure everybody got out safely.
- Call the Fire Department as soon as possible from outside. Give your address, then your name.
- Never go back inside a burning building for any reason. · Contact your Fire Department for ideas on making your home safer
- AWARNING!

Alarms have various limitations. See "Limitations of Smoke Alarms" for

USING THE SILENCE FEATURE

The Silence Feature can temporarily quiet an unwanted alarm for up to 15

AWARNING! The Silence Feature does not disable the unit—it makes it temporarily

less sensitive to smoke. For your safety, if smoke around the unit is dense enough to suggest a potentially dangerous situation, the unit will stay in alarm or may re-alarm quickly. If you do not know the source of the smoke, do not assume it is an unwanted alarm. Not responding to an alarm can result in property loss, injury, or death. To silence Smoke Alarms in an interconnected series:

1. To silence multiple alarms in an interconnected series, you must press the

- Test/Silence button on the unit(s) that triggered the alarm. 2. Once you activate the Silence feature, the Red LED will continue to flash
- 3. Pressing the Test/Silence button when in silence will restart the silence
- **IMPORTANT!**

The Silence Feature on these units can temporarily quiet an unwanted alarm for up to 15 minutes. To use this feature, press the Test/Silence button on the cover. If the unit will not silence and no heavy smoke is present, or if it stays in silence mode continuously, it should be replaced immediately.

SILENCING THE LOW BATTERY WARNING

This silence feature can temporarily quiet the low battery warning "chirp" for up to 8 hours. You can silence the low battery warning "chirp" by pressing the Test/Silence button on the alarm cover. Once the low battery warning "chirp" silence feature is activated, the unit

continues to flash the Green light twice a minute for 8 hours. After 8 hours, the low battery "chirp" will resume. Replace the batteries as soon as possible; this unit will not operate without battery power! To deactivate this feature: Press the Test/Silence button again. The unit will go into Test Mode and the low battery warning will resume (LED flashes and

IF YOU SUSPECT A PROBLEM Smoke Alarms may not operate properly because of dead, missing or weak

unit sounds "chirp" once a minute).

batteries, a build-up of dirt, dust or grease on the Smoke Alarm cover, or installation in an improper location. Clean the Smoke Alarm as described in "Regular Maintenance." and install a fresh battery, then test the Smoke Alarm again. If fails to test properly when you use the test button, or if the problem persists, replace the Smoke Alarm immediately.

- If you hear a "chirp" approximately once a minute, replace the
- If you experience frequent non-emergency alarms (like those caused by cooking smoke), try relocating the Smoke Alarn
- If the alarm sounds when no smoke is visible, try cleaning or relocating the Smoke Alarm. The cover may be dirty. · If the alarm does not sound during testing, make sure it is receiving
- AWARNING! Always discharge the branch circuit before servicing an AC or AC/DC

Smoke Alarm. First, turn off the AC power at the circuit breaker or fuse box. Next, remove the battery from Smoke Alarms with battery back-up. Finally, press and hold the test button for 5-10 seconds to discharge the

Do not try fixing the alarm yourself – this will void your warranty! If the Smoke Alarm is still not operating properly, and it is still under warranty, please see "How to Obtain Warranty Service" in the Limited Warranty

RECOMMENDED LOCATIONS

FOR SMOKE ALARMS

Installing Smoke Alarms in Single-Family Residences


The National Fire Protection Association (NFPA), recommends one Smoke Alarm on every floor, in every sleeping area, and in every bedroom. In new construction, the Smoke Alarms must be AC powered and interconnected. See "Agency Placement Recommendations" for details. For additional coverage, it is recommended that you install a Smoke Alarm in all rooms, halls, storage areas, finished attics, and basements, where temperatures normally remain between 40° F (4° C) and 100° F (38° C). Make sure no door or other obstruction could keep smoke from reaching the Smoke Alarms.

More specifically, install Smoke Alarms: • On every level of your home, including finished attics and basements.

- · Inside every bedroom, especially if people sleep with the door partly or completely closed.
- In the hall near every sleeping area. If your home has multiple sleeping areas, install a unit in each. If a hall is more than 40 feet long (12 meters), install a unit at each end.
- At the top of the first-to-second floor stairway, and at the bottom of the basement stairway.

IMPORTANT! Specific requirements for Smoke Alarm installation vary from state to state

and from region to region. Check with your local Fire Department for current requirements in your area. It is recommended AC or AC/DC units be interconnected for added protection

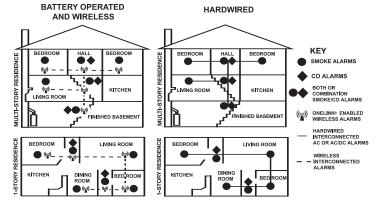

AGENCY PLACEMENT RECOMMENDATIONS NFPA 72 (National Fire Code) Chapter 11

"For your information, the National Fire Protection Association's Standard 72, reads as follows:'

"11.5.1 One- and Two-Family Dwelling Units."

"11.5.1.1 Smoke Detection. Where required by applicable laws, codes, or standards for the specified occupancy, approved single- and multiple-station Smoke Alarms shall be installed as follows: (1) In all sleeping rooms. Exception: Smoke Alarms shall not be required in sleeping rooms in existing one- and two-family dwelling units (2) Outside of each separate sleeping area, in immediate vicinity of the sleeping rooms. (3) On each level of the dwelling unit, including basements. Exception: In existing one- and two family dwelling units, approved Smoke Alarms powered by batteries are permitted

"A.11.8.3 Are More Smoke Alarms Desirable? The required number of Smoke Alarms might not provide reliable early warning protection for those areas separated by a door from the areas protected by the required Smoke Alarms. For this reason, it is recommended that the householder consider the use of additional Smoke Alarms for those areas for increased protection The additional areas include the basement, bedrooms, dining room, furnace room, utility room, and hallways not protected by the required Smoke Alarms. The installation of Smoke Alarms in kitchens, attics (finished or unfinished) or garages is not normally recommended, as these locations occasionally experience conditions that can result in improper operation."

LOCATIONS TO AVOID FOR SMOKE ALARMS For best performance, AVOID installing Smoke Alarms in these areas:

- Where combustion particles are produced. Combustion particles form when something burns. Areas to avoid include poorly ventilated kitchens garages, and furnace rooms. Keep units at least 20 feet (6 meters) from the sources of combustion particles (stove, furnace, water heater, space heater) if possible. In areas where a 20-foot distance is not possible in modular, mobile, or smaller homes, for example – it is recommende the Smoke Alarm be placed as far from these fuel-burning sources as possible. The placement recommendations are intended to keep these Alarms at a reasonable distance from a fuel-burning source, and thus reduce "unwanted" alarms. Unwanted alarms can occur if a Smoke Alarm is placed directly next to a fuel-burning source. Ventilate these areas as much as possible.
- In air streams near kitchens. Air currents can draw cooking smoke into the sensing chamber of a Smoke Alarm near the kitchen
- In very damp, humid or steamy areas, or directly near bathrooms with showers. Keep units at least 10 feet (3 meters) away from showers, saunas, dishwashers, etc.
- Where the temperatures are regularly below 40° F (4° C) or above 100° F (38° C) including unheated buildings, outdoor rooms, porches, or unfinished attics or basements. • In very dusty, dirty, or greasy areas. Do not install a Smoke Alarm directly
- over the stove or range. Clean a laundry room unit frequently to keep it free of dust or lint.
- Near fresh air vents, ceiling fans, or in very drafty areas. Drafts can blow smoke away from the unit, preventing it from reaching sensing chamber.
- In insect infested areas. Insects can clog openings to the sensing chamber and cause unwanted alarms.
- Less than 12 inches (305 mm) away from fluorescent lights. Electrical "noise" can interfere with the sensor.
- In "dead air" spaces. "Dead air" spaces may prevent smoke from

LIMITED WARRANTY

r greater value. This is your exclusive warranty

AVOIDING DEAD AIR SPACES

'Dead air" spaces may prevent smoke from reaching the Smoke Alarm.

To avoid dead air spaces, follow the installation recommendations below On ceilings, install Smoke Alarms as close to the center of the ceiling as possible. If this is not possible, install the Smoke Alarm at least 4 inches (102 mm) from the wall or corner.

For wall mounting (if allowed by building codes), the top edge of Smoke rms should be placed between 4 inches (102 mm) and 12 inches (305 mm)

from the wall/ceiling line, below typical "dead air" spaces. On a peaked, gabled, or cathedral ceiling, install the first Smoke Alarm within 3 feet (0.9 meters) of the peak of the ceiling, measured horizontally. Additional Smoke Alarms may be required depending on the length, angle etc. of the ceiling's slope. Refer to NFPA 72 for details on requirements fo sloped or peaked ceilings.

BRK Brands, Inc., ("BRK") the maker of First Alert® brand and products.

warrants that for a period of ten years from the date of purchase, this product will be free from defects in material and workmanship. BRK, at its

option, will repair or replace this product or any component of the product

longer available, replacement may be made with a similar product of equal

This warranty is valid for the original retail purchaser from the date of initial

retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty performance. BRK dealers, service centers, or retail stores selling BRK products do not have the right to

from any of the following: negligent use or misuse of the product, use on improper voltage or current, use contrary to the operating instructions, disassembly, repair or alteration by anyone other than BRK or an authorized

service center. Further, the warranty does not cover Acts of God. such as

fire, flood, hurricanes and tornadoes or any batteries that are included with

alter, modify or any way change the terms and conditions of this warranty.

his warranty does not cover normal wear of parts or damage resulting

found to be defective during the warranty period. Replacement will be made with a new or remanufactured product or component. If the product is no

ABOUT SMOKE ALARMS Battery (DC) operated Smoke Alarms: Provide protection even when electricity fails, provided the batteries are fresh and correctly installed. Units are

easy to install, and do not require professional installation. AC powered Smoke Alarms: Can be interconnected so if one unit senses oke, all units alarm. They do not operate if electricity fails. AC with battery (DC) back-up: will operate if electricity fails, provided the batteries are fresh and correctly installed. AC and AC/DC units must be installed by a qualified electrician.

ONELINK® Smoke Alarms with battery (DC) back-up: Interconnects with all ONELINK® enabled Smoke and Smoke/CO Alarms without wires or connectors, so when one alarm sounds, they all sound. Will operate if electricity fails, provided the batteries are fresh and correctly installed. Units are easy to install, and do not require professional installation

Smoke Alarms for Solar or Wind Energy users and battery backup power pure sine wave inverters. Operating this Smoke Alarm with most batterypowered UPS (uninterruptible power supply) products or square wave or "quasi sine wave" inverters will damage the Alarm. If you are not sure about your inverter or UPS type, please consult with the manufacturer to verify.

Smoke Alarms for the hearing impaired: Special purpose Smoke Alarms should be installed for the hearing impaired. They include a visual alarm and an audible alarm horn, and meet the requirements of the Americans With Disabilities Act. These units can be interconnected so if one unit senses smoke, all units alarm.

Smoke alarms are not to be used with detector guards unless the combination has been evaluated and found suitable for that purpose.

All these Smoke Alarms are designed to provide early warning of fires if located, installed and cared for as described in the user's manual, and if smoke reaches the Alarm. If you are unsure which type of unit to install, refer to NFPA (National Fire Protection Association) 72 (National Fire Alarm Code) and NFPA 101 (Life Safety Code). National Fire Protection Association, One Batterymarch Park, Quincy, MA 02269-9101. Local building codes may also require specific units n new construction or in different areas of the home

SPECIAL COMPLIANCE CONSIDERATIONS AWARNING!

is Smoke Alarm alone is not a suitable substitute for complete fire detection systems in places housing many people—like apartment puildings, condominiums, hotels, motels, dormitories, hospitals, longterm health care facilities, nursing homes, day care facilities, or gro nomes of any kind—even if they were once single-family homes. It is no a suitable substitute for complete fire detection systems in warehouses, industrial facilities, commercial buildings, and special-purpose non-residential buildings which require special fire detection and alarm systems. Depending on the building codes in your area, this Smoke Alarm may be The following information applies to all four types of buildings listed below:

In new construction, most building codes require the use of AC or AC/DC powered Smoke Alarms only. AC, AC/DC, or DC powered Smoke Alarms car e used in existing construction as specified by local building codes. Refer to NFPA 72 (National Fire Alarm Code) and NFPA 101 (Life Safety Code), local building codes, or consult your Fire Department for detailed fire protection requirements in buildings not defined as "households." 1. Single-Family Residence: Single family home, townhouse. It is recommended Smoke Alarms be installed

2. Multi-Family or Mixed Occupant Residence: Apartment building, condominium. This Smoke Alarm is suitable for use in individual apartments or condos, provided a primary fire detection system already exists to meet fire detection requirements in common areas like lobbies, hallways, or porches. Using this Smoke Alarm in common areas may not provide sufficient warning to all residents or meet local fire protection

on every level of the home, in every bedroom, and in each bedroom hallway.

This Smoke Alarm is suitable for use in individual patient sleeping/resident rooms, provided a primary fire detection system already exists to meet fire detection requirements in common areas like lobbies, hallways, or porches. Using this Smoke Alarm in common areas may not provide sufficient warning o all residents or meet local fire protection ordinances/regulations 4. Hotels and Motels: Also boarding houses and dormitories. This Smoke Alarm is suitable for use inside individual sleeping/resident rooms, provided a primary fire detection system already exists to meet fire detection requirements

n common areas like lobbies, hallways, or porches. Using this Smoke Alarm

common areas may not provide sufficient warning to all residents or meet

3. Institutions: Hospitals, day care facilities, long-term health care facilities

LIMITATIONS OF SMOKE ALARMS

local fire protection ordinances/regulations.

ordinances/regulations.

Smoke Alarms have played a key role in reducing deaths resulting from home fires worldwide. However, like any warning device, Smoke Alarms can only work if they are properly located, installed, and maintained, and if smoke reaches the Alarms. They are not foolproof.

Smoke alarms may not waken all individuals. Practice the escape plan at east twice a year, making sure that everyone is involved - from kids to grandparents. Allow children to master fire escape planning and practice before olding a fire drill at night when they are sleeping. If children or others do no readily waken to the sound of the smoke alarm, or if there are infants or family members with mobility limitations, make sure that someone is assigned to assist them in fire drill and in the event of an emergency. It is recommended that you hold a fire drill while family members are sleeping in order to determine their response to the sound of the smoke alarm while sleeping and to determine whether they may need assistance in the event of an emergency

Smoke Alarms cannot work without power. Battery operated units cannot work if the batteries are missing, disconnected or dead, if the wrong type of batteries are used, or if the batteries are not installed correctly. AC units cannot work if the AC power is cut off for any reason (open fuse or circuit bre failure along a power line or at a power station, electrical fire that burns the electrical wires, etc.). If you are concerned about the limitations of battery or AC power, install both types of units.

Smoke Alarms cannot detect fires if the smoke does not reach the Alarms. Smoke from fires in chimneys or walls, on roofs, or on the other side of closed doors may not reach the sensing chamber and set off the Alarm. That is why one unit should be installed inside each bedroom or sleeping rea—especially if bedroom or sleeping area doors are closed at night—and in the hallway between them.

Smoke Alarms may not detect fire on another floor or area of th dwelling. For example, a stand-alone unit on the second floor may not detect smoke from a basement fire until the fire spreads. This may not give you nough time to escape safely. That is why recommended minimum protection is at least one unit in every sleeping area, and every bedroom on every level of your dwelling. Even with a unit on every floor, stand-alone units may not provide as much protection as interconnected units, especially if the fire starts n a remote area. Some safety experts recommend installing AC powered units with battery back-up (see "About Smoke Alarms") or rofessional fire detection systems, so if one unit senses smoke, all units alarm. Interconnected units may provide earlier warning than stand-alone units since all units alarm when one detects smoke

exceeds current standards, it may not be heard if: 1) the unit is located outside a closed or partially closed door, 2) residents recently consumed alcohol or drugs, 3) the Alarm is drowned out by noise from stereo, TV, traffic, air conditioner or other appliances, 4) residents are hearing impaired or sound sleepers. Special purpose units, like those with visual and audible alarms, should be installed for hearing impaired residents. Smoke Alarms may not have time to alarm before the fire itself causes

Smoke Alarms may not be heard. Though the alarm horn in this unit meets or

damage, injury, or death, since smoke from some fires may not reach the unit immediately. Examples of this include persons smoking in bed, children playing with matches, or fires caused by violent explosions resulting from escaping gas. Smoke Alarms are not foolproof. Like any electronic device, Smoke Alarms are made of components that can wear out or fail at any time. You must test the unit weekly to ensure your continued protection. Smoke Alarms cannot prevent

or extinguish fires. They are not a substitute for property or life insurance. Smoke Alarms have a limited life. The unit should be replaced immediately f it is not operating properly. You should always replace a Smoke Alarm after 10 years from date of purchase. Write the purchase date on the space provided on back of unit.

by the breach of any express or implied warranty. Except to the extent prohibited by applicable law, any implied warranty of merchantability or fitness for a particular purpose is limited in duration to the duration of the above warranty. Some states, provinces or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state or province to

BRK shall not be liable for any incidental or consequential damages caused

How to Obtain Warranty Service

Service: If service is required, do not return the product to your retailer. In order to obtain warranty service, contact the Consumer Affairs Division at 1-800-323-9005, 7:30 AM - 5:00 PM Central Standard Time, Monday through Friday. To assist us in serving you, please have the model number and date of purchase available when calling. For Warranty Service return to: BRK Brands, Inc., 25 Spur Drive, El Paso, TX 79906

First Alert® is a registered trademark of the First Alert Trust.

Battery: BRK Brands, Inc. make no warranty, express or implied, written or

oral, including that of merchantability or fitness for any particular purpose

ONELINK® is a registered trademark of BRK Brands, Inc. Printed in Mexico M08-0149-003 **Q** 08/08 M08-0149-003 **Q**

Printed in Mexico

First Alert

© 2008 BRK Brands, Inc. All rights reserved. Distributed by BRK Brands, Inc. 3901 Liberty Street Road, Aurora, IL 60504-8122 Consumer Affairs: (800) 323-9005 • www.firstalert.com

LISTED TO

STANDARD

UL 217 SA520

USER'S MANUAL

Input: 120V AC

WIRELESS ONELINK® AC POWERED

SMOKE ALARM WITH BATTERY BACK-UP

IMPORTANT

PLEASE READ CAREFULLY AND SAVE.

This user's manual contains important information about your

others, you must leave this manual-or a copy of it-with the end user

Smoke Alarm's operation. If you are installing this Smoke Alarm for use by

All First Alert® and BRK® Smoke Alarms conform to regulatory requirements, including UL217 and are designed to detect particles of

lonization technology is generally more sensitive than photoelectric technology at detecting small particles, which tend to be produced in greater amounts by flaming fires, which consume combustible materials rapidly and spread quickly. Sources of these fires may include paper burning in a wastebasket, or a grease fire in the kitchen. Photoelectric technology is generally more sensitive than ionization technology at detecting large particles, which tend to be produced in greater amounts by small design from

greater amounts by smoldering fires, which may smolder for hours before bursting into flame. Sources of these fires may include cigarettes burning in couches or bedding. For maximum protection, use both types of Smoke Alarms on each level and in every bedroom of your home.

FIRE SAFETY TIPS

Follow safety rules and prevent hazardous situations: 1) Use smoking materials properly. Never smoke in bed. 2) Keep matches or lighters awa from children; 3) Store flammable materials in proper containers; 4) Keep electrical appliances in good condition and don't overload electrical circuits Keep stoves, barbecue grills, fireplaces and chimneys grease- and debrisfree; 6) Never leave anything cooking on the stove unattended; 7) Keep portable heaters and open flames, like candles, away from flammable materials; 8) Don't let rubbish accumulate.

Keen alarms clean, and test them weekly. Replace alarms immediately if they are not working properly. Smoke Alarms that do not work cannot aler you to a fire. Keep at least one working fire extinguisher on every floor, and an additional one in the kitchen. Have fire escape ladders or other reliable means of escape from an upper floor in case stairs are blocked.

BEFORE YOU INSTALL THIS SMOKE ALARM

IMPORTANT! Read "Recommended Locations for Smoke Alarms" and Locations to Avoid for Smoke Alarms" before beginning. This unit monitors the air, and when smoke reaches its sensing chamber, it alarms. It can give you more time to escape before fire spreads. This unit can ONLY give an early warning of developing fires if it is installed, maintained and located where smoke can reach it, and where all residents can hear it, as described in this manual. This unit will not sense gas, heat, or flame. It cannot prevent

types of protection. See "About Smoke Alarms" for details

Know What Smoke Alarms Can and Can't Do

Understand The Different Type of Smoke Alarms

Know Where To Install Your Smoke Alarms Fire Safety Professionals recommend at least one Smoke Alarm on every level of your home, in every bedroom, and in every bedroom hallway or separate sleeping area. See "Recommended Locations Fo Smoke Alarms" and "Locations To Avoid For Smoke Alarms" for details.

Battery powered or electrical? Different Smoke Alarms provide different

A Smoke Alarm can help alert you to fire, giving you precious time to scape. It can only sound an alarm once smoke reaches the sensor. See "Limitations of Smoke Alarms" for details.

Check Your Local Building Codes This Smoke Alarm is designed to be used in a typical single-family home. It alone will not meet requirements for boarding houses, apartment buildings, hotels or motels. See "Special Compliance Considerations"

ADANGER!

ELECTRICAL SHOCK HAZARD. Turn off the power to the area where the Smoke Alarm is installed before removing it from the mounting bracket. Failure to turn off the power first may result in serious electrical shock, injury or death

AWARNING!

This unit will not alert hearing impaired residents. It is recommended that you install special units which use devices like flashing strobe lights to alert hearing impaired residents.

- Installation of this unit must conform to the electrical codes in your area; Articles 210 and 300.3 (B) of NFPA 70 (NEC), NFPA 72, NFPA 101: SBC (SBCCI): UBC (ICBO): NBC (BOCA): OTFDC (CABO), and any other local or building codes that may apply. Wiring and installation must be performed by a licensed electrician Failure to follow these guidelines may result in injury or property
- This unit must be powered by a 24-hour, 120VAC pure sine wave 60Hz circuit. Be sure the circuit cannot be turned off by a switch, dimmer, or ground fault circuit interrupter. Failure to connect this unit to 24 hours fault circuit interrupter. unit to a 24-hour circuit may prevent it from providing constant This Smoke Alarm must have AC or battery power to operate.
- If the AC power fails, battery back-up will allow the alarm to sound for at least 4 minutes. If AC power fails and the battery is veak, protection should last for at least 7 days. If AC power fails and the battery is dead or missing, the alarm cannot operate.
- Never disconnect the power from an AC powered unit to stop an unwanted alarm. Doing so will disable the unit and remove your protection. In the case of a true unwanted alarm open a window or fan the smoke away from the unit. The alarm will reset automatically when it returns to normal operation. Never remove the batteries from a battery operated unit to stop an unwanted alarm (caused by cooking smoke, etc.). Instead open a window or fan the smoke away from the unit. The alarm will reset automatically

ACAUTION!

- Connect this unit ONLY to other compatible units. See "How To Install This Smoke Alarm" for details. Do not connect it to any other type of alarm or auxiliary device. Connecting anything else to this unit may damage it or prevent it from operating properly. . This Smoke Alarm has a battery drawer which resists closing
- unless a battery is installed. This warns you the unit will not operate under DC power without a battery. Do not stand too close to the unit when the alarm is sounding.
 It is loud to wake you in an emergency. Exposure to the horn at close range may harm your hearing.
- . Do not paint over the unit. Paint may clog the openings to the sensing chambers and prevent the unit from operating properly

HOW TO INSTALL THIS SMOKE ALARM

This Smoke Alarm is designed to be mounted on any standard wiring junction box up to a 4-inch (10 cm) size, on either the ceiling or wall (if allowed by local codes).

Read "Recommended Locations For Smoke Alarms" and "Locations to Avoid For Smoke Alarms" before you begin installation. Tools vou will need: • Needle-nose pliers • Standard Flathead screwdriver • Phillips screwdriver

AWARNING! Make sure the Alarm is not receiving excessively noisy power. Examples of noisy power could be major appliances on the same circuit, power from a generator or solar power, light dimmer on the same circuit or mounted near fluorescent lighting. Excessively noisy power may cause damage to your Alarm.

THE PARTS OF THIS SMOKE ALARM

The Mounting Bracket: To remove the mounting bracket from the Smoke Alarm base, hold the Smoke Alarm base firmly and twist the mounting bracket counterclockwise The mounting bracket installs onto the junction box It has a variety of screw slots to fit most boxes.

The Power Connector:

• The black wire is "hot."

and pull the connector free.

• The white wire is neutral.

The orange wire is used for interconnect.

If you need to remove the power connector, turn POWER OFF first. Insert a flat screwdriver blade

between the power connector and the security tab inside the power input block. Gently pry back the tab

Insert the batteries into the battery drawer of the **first** Alarm and close

will now be prompted to set the Alarm's location. Follow the direction given by the Alarm.

NOTE: Steps 4 through 6 need to be completed within two minutes.

Insert the batteries into the battery drawer of the **next** Alarm. DO NOT

Once you hear the unit chirp, release the test button. The Green power

If you purchased the Talking Smoke and Carbon Monoxide Alarm, you will now be prompted to set the Alarm's location. Follow the directions given by the Alarm.

If you have purchased the hardwired battery back-up ONELINK® Alarm, you can now connect the hardwired Alarm by installing the three-wire connector on the ceiling to the Alarm.

FOLLOW THESE INSTALLATION STEPS

The basic installation of this Smoke Alarm is similar whether you want to

istall one Smoke Alarm, or interconnect more than one Smoke Alarm.

If you are interconnecting more than one Smoke Alarm, you MUST read

Special Requirements For Interconnected Smoke Alarms" below before

ELECTRICAL SHOCK HAZARD. Turn off power to the area where you

Connect the white wire on the power connector to the neutral wire in

Tuck the orange wire inside the junction box. It is used for interconnect

Strip off about 1/2" (12 mm) of the plastic coating on the orange wire

Connect the white wire on the power connector to the neutral wire in

Connect the black wire on the power connector to the hot wire in the

wire in the junction box. Repeat for each unit you are interconnecting.

Never connect the hot or neutral wires in the junction box to the orange

Connect the orange wire on the power connector to the interconnect

Position the base of the Smoke Alarm over the mounting bracket and

Improper wiring of the power connector or the wiring leading to the

wer connector will cause damage to the Alarm and may lead to a

turn. The Alarm can be positioned over the bracket every 90°. Turn the

. Plug the power connector into the back of the Smoke Alarm

Smoke Alarm clockwise (right) until the unit is in place.

vill install this unit at the circuit breaker or fuse box before begin

nstallation. Failure to turn off the power before installation m

in serious electrical shock, injury or death.

Remove the mounting bracket from the base, and attach it to the junction

Using wire nuts, connect the power

connector to the household wiring.

STAND-ALONE ALARM ONLY:

INTERCONNECTED UNITS ONLY:

the junction box.

on the power connector.

Check all connections.

non-functioning Alarm.

AWARNING!

the junction box.

Repeat steps 4-9 for additional ONELINK® Alarms

You have now successfully linked your new ONELINK® Alarms

To add additional Alarms at a later time, follow steps 4 through 9

hirps and its Green power LED stops blinking. Then release

If more than two minutes pass, the Green power LED will stop blinking. Simply open the battery drawer of the second Alarm

Press and hold the test button and then close the battery drawer.

LED will start to blink indicating the ONELINK® Alarm is waiting for program data from one of the other setup ONELINK® Alarms.

Press and hold the test button on the first Alarm, until the second

system with no additional electrical work.

The Alarm will sound with a chirp.

. If you purchased the Talking Smoke and Carbon Monoxide Alarm, you

and repeat steps 4 through 6.

CLOSE THE DRAWER


the test button.

you begin installation.

ADANGER!

QUICK INSTALLATION INSTRUCTIONS

Easily expand an existing interconnected 120V AC hardwired system by simply replacing one Alarm in the series with the First Alert® ONELINK® Model SA520. Then add additional battery-operated Alarms to expand the

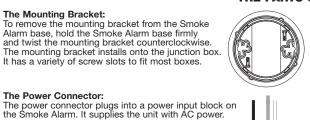

The Parts of This Unit Mounting Bracket Mounting Slots

- Locking Pins (break out of bracket) Hot (Black) AC Wire
- Neutral (White) AC Wire Interconnect (Orange) Wire
- Quick-Connect Power Connector Turn this way to remove from bracker Turn this way to attach to bracket
- 10 Slide-Out Battery Drawer

INSTALLATION STEPS, Continued

STAND-ALONE ALARM ONLY If you are only installing one Smoke Alarm, restore power to the

INTERCONNECTED UNITS ONLY: If you are interconnecting multiple Smoke Alarms, repeat steps 1-5 for each Smoke Alarm in the series. When you are finished,

ADANGER! ELECTRICAL SHOCK HAZARD. Do not restore power until all Smoke Alarms are completely installed. Restoring power before installation is

restore power to the junction box.

peration, the Green power indicator light will shine continu 7. If the Green power indicator light does not light, TURN OFF POWER TO THE JUNCTION BOX and recheck all connections. If all connections are correct and the Green power indicator still does not light when you

complete may result in serious electrical shock, injury or death.

6. Make sure the Smoke Alarm is receiving AC power. Under normal

store the power, the unit should be replaced immediatel

unit alarms. When testing a series of interconnected units you must test each unit individually. Make sure all units alarm when each one ADANGER! If any unit in the series does not alarm, TURN OFF POWER and recheck

8. Test each Smoke Alarm. Press and hold the Test/Silence button until the

Special Requirements For Interconnected Smoke Alarms

connections. If it does not alarm when you restore power, replace it

. Failure to meet any of the above requirements could damage the units and cause them to malfunction, removing your protection AC and AC/DC Smoke Alarms can be interconnected. Under AC power, all units will alarm when one senses smoke. When power interrupted, only the AC/DC units in the series will continue to ser

and receive signals. AC powered Smoke Alarms will not operate. Interconnected units can provide earlier warning of fire than stand-alone units, especially if a fire starts in a remote area of the dwelling. If any unit in the series senses smoke, all units will alarm. To determine which Smoke Alarm initiated an alarm, see table:

On Initiating Alarms Red LED flashes rapidly On All Other Alarms Red LED is Off


IMPORTANT!

nnect units within a single family residence only. Otherwise all house holds will experience unwanted alarms when you test any unit in the series Interconnected units will only work if they are wired to compatible units and all requirements are met. This unit is designed to be compatible with:

First Alert® Smoke Alarm Models SA4120, SA4121B, SA100B, 9120 series and *BRK Electronics*° Smoke Alarm Models 100S, 4120 series, 9120 series 7010 series; *BRK Electronics*° Heat Alarm Models HD6135F, HD6135FB; Smoke/CO Alarm Models SC6120B, SC9120B; CO Alarm Model CO5120B; Relay Modules RM3 and RM4. Interconnected units must meet ALL of the following requirements:

 A maximum of 18 compatible units may be interconnected Maximum of 12 Smoke Alarms).

• The total length of wire interconnecting the units should be less than 1000 feet (300 meters). This type of wire is commonly available at Hardware and Electrical Supply stores. • All wiring must conform to all local electrical codes and NFPA 70 (NEC). efer to NFPA 72, NFPA 101, and/or your local building code for

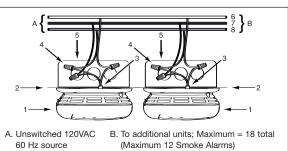

OPTIONAL LOCKING FEATURES

1. Smoke Alarm

2. Ceiling or Wall

The locking features are designed to discourage unauthorized removal of the battery or Alarm. It is not necessary to activate the locks in single-family ouseholds where unauthorized battery or Alarm removal is not a concern.

to the mounting bracket. You can choose to use either feature independently, or use them both. Tools you will need: • Needle-nose pliers • Standard Flathead screwdriver. Both locking features use locking pins, which are molded into the mounting bracket. Using needle-nose pliers, remove one or both pins

o permanently remove either lock, insert a flathead screwdriver between the locking pin and the lock, and pry the pin out of the lock. TO LOCK THE BATTERY COMPARTMENT Do not lock the battery compartment until you have installed the battery and tested the battery back-up.

from the mounting bracket, depending on how many locking features you want to use.

3 beeps, pause, 3 beeps, pause. IMPORTANT! If the unit does not alarm during testing, DO NOT lock the battery

nent! Install a new battery and test again. If the Smoke

Push and hold Test/Silence button until the alarm sounds:

Alarm still does not alarm, replace it immediately. . Using needle-nose pliers, detach one locking pin from the mounting



back of the Smoke Alarm.

Push the locking pin through the hole near the battery drawer on the

TO UNLOCK THE BATTERY COMPARTMENT

Once the Smoke Alarm is installed, you must disconnect it from the AC power before unlocking the battery compartment. ADANGER!

Always discharge the branch circuit before servicing an AC or AC/DC Smoke Alarm. First, turn off the AC power at the circuit breaker or fuse box

bracket. If the unit is locked to the bracket, see

 Disconnect the power connector by gently prying it away from the back of the Smoke Alarm. 3. Insert a flathead screwdriver under the head

4. To relock the battery compartment, close the battery door and reinsert locking pin in lock.

the Smoke Alarm to the mounting bracket, and restore the power.

AC Power All Models DC Power Constant Green LED Normal Operation Green LED Off No Audible Alarm No Audible Alarm **Test Condition** Constant Green LED Green LED Of Rapidly Flashing Rapidly Flashing Red LÉD Red LÉD Audible Alarm Audible Alarm Green LED Off **Alarm Condition** Constant Green LED Rapidly Flashing Rapidly Flashing Red LED Red LED Audible Alarm Audible Alarm Silence Mode Rapidly Flashing Rapidly Flashing Red LÉD Low Battery Alarm "chirp" approx. Alarm "chirp" approx. once/minute once/minute 3 rapid "chirps" every minute; LED flashes Malfunction 3 rapid "chirps" every minute; LED flashes approx. once a minute approx. once a minute NOTE: When power is applied, unit(s) may alarm momentarily *When any Smoke Alarm in an interconnected series triggers an alarm, its

UNDERSTANDING THE INDICATOR LIGHTS

AND ALARM HORN PATTERNS

red LED will flash rapidly. The red LEDs will remain OFF on any remaining alarms in the series. This feature helps responders identify which unit(s) triggered the alarm.

AWARNING

WEEKLY TESTING

NEVER use an open flame of any kind to test this unit. You might

entally damage or set fire to the unit or to your home. The built-in test switch accurately tests the unit's operation as required by Underwriters Laboratories, Inc. (UL). If the Alarm ever fails to test properly, replace it immediately

Products under warranty may be returned to the manufacturer for replacement. See "Limited Warranty" at the end of this manual ACAUTION! DO NOT stand close to the Alarm when the horn is sounding. Exposure

at close range may be harmful to your hearing. When testing, step away when horn starts sounding. It is important to test this unit every week to make sure it is working properly. Using the test button is the recommended way to test this Smoke Alarm. Press and hold the test button on the cover of the unit until

REGULAR MAINTENANCE AWARNING!

Use only the replacement batteries listed below. The unit may not operate properly with other batteries. Never use rechargeable batteries since they may not provide a constant charge.

are a few simple things you must do to keep it working properly: • Clean the Smoke Alarm at least once a month; gently vacuum the

outside of the Smoke Alarm using your household vacuum's soft brush attachment. Test the Smoke Alarm. Never use water, cleaners or solvents since they may damage the unit.

grime, and cannot be cleaned to avoid unwanted alarms, replace the unit immediately. Relocate the unit if it sounds frequent unwanted alarms. See "Locations

Choosing a replacement battery: Your Smoke Alarm requires 2 "AA" Energizer E91 batteries. These batteries

Actual battery service life depends on the smoke alarm and the environment

in which it is installed. All the batteries specified above are acceptable replacement batteries for this unit. Regardless of the manufacturer's suggested

1. Open the battery compartment. Press tabs A and B as shown in the diagram and remove each battery.

terminals on the unit. 4. Close the battery compartment, and then test the unit by pressing the Test/Silence

TO LOCK THE MOUNTING BRACKET



2. Insert the locking pin into the lock located opposite from the battery drawer as shown

pin's head will fit into a notch on the bracket.

Always discharge the branch circuit before servicing an AC or AC/DC

nounting bracket pin and the mounting bracket

ELECTRICAL SHOCK HAZARD. Turn off the power to the area where the

AWARNING!

branch circuit. 1. Remove the Smoke Alarm from the mounting

the section "To Unlock the Mounting Bracket."

of the locking pin, and gently pry it out of the battery compartment lock. (If you plan to relock the battery compartment, save the locking pin.)

5. Reconnect the power connector to the back of the Smoke Alarm, reattach

TO UNLOCK THE MOUNTING BRACKET

Smoke Alarm. First, turn off the AC power at the circuit breaker or fuse box. Next, remove the battery from Smoke Alarms with battery back-up. Finally, press and hold the Test/Silence button for 5-10 seconds to

Alarm counterclockwise (left) at the same time.

Connect the black wire on the power connector to the hot wire in the • The same fuse or circuit breaker must power all interconnected units.

further connection requirements.

3. Power Connector 6. Neutral Wire (Wht) 8. Hot Wire (Blk) Continued above...

These Smoke Alarms have two separate locking features: one to lock the battery compartment, and the other to lock the Smoke Alarm

Wire Nut

Junction Box

Interconnect Wire (Orange)

Smoke Alarm is installed before removing it from the mounting bracket. Failure to turn off the power first may result in serious electrical shock, injury or death.

Next, remove the battery from Smoke Alarms with battery back-up. Finally, press and hold the Test/Silence button for 5-10 seconds to discharge the

IMPORTANT!

battery compartment.

When replacing the battery, always test the Smoke Alarm before relocking the

the alarm sounds (the unit may continue to alarm for a few seconds after you release the button). If it does not alarm, make sure the unit is receiving power and test it again. If it still does not alarm, replace it immediately During testing, you will hear a loud, repeating horn pattern: 3 beeps, pause, 3 beeps, pause. When testing a series of interconnected units you must test each unit individually. Make sure all units alarm when each one is tested.

This unit has been designed to be as maintenance-free as possible, but there • Test it at least once a week.

If the Smoke Alarm becomes contaminated by excessive dirt, dust and/or

• When the battery back-up becomes weak, the Smoke Alarm will "chirp" about once a minute (the low battery warning). This warning should last 7 days, but you should replace the batteries immediately to continue your

are available at many local retail stores. IMPORTANT!

To Avoid For Smoke Alarms" for details.

battery life, you MUST replace the battery immediately once the unit starts 'chirping" (the "low battery warning").

3. Insert the new batteries, making sure they snap completely into the battery compartment. Match the terminals on the ends of the batteries with the

ADANGER!

1. Insert a flathead screwdriver between the

To replace the batteries (without removing Alarm from the ceiling

Using needle-nose pliers, detach one locking pin from mounting bracket

3. When you attach the Smoke Alarm to the mounting bracket, the locking

ELECTRICAL SHOCK HAZARD. Turn off the power to the area where the Smoke Alarm is installed before removing it from the mounting bracket. Failure to turn off the power first may result in serious electrical shock,

Locking Features, Continued

AWARNING!

2. Pry the Smoke Alarm away from the bracket by turning both the screwdriver and the Smoke