Register your product and get support at

www.philips.com/welcome

CED1700

EN Quick Start Guide

PHILIPS

1

a

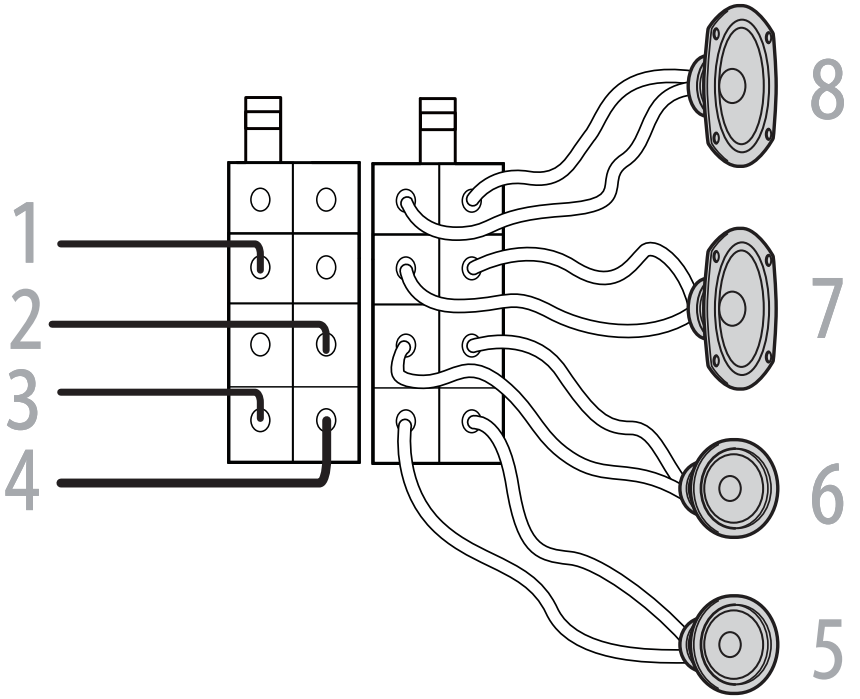

b

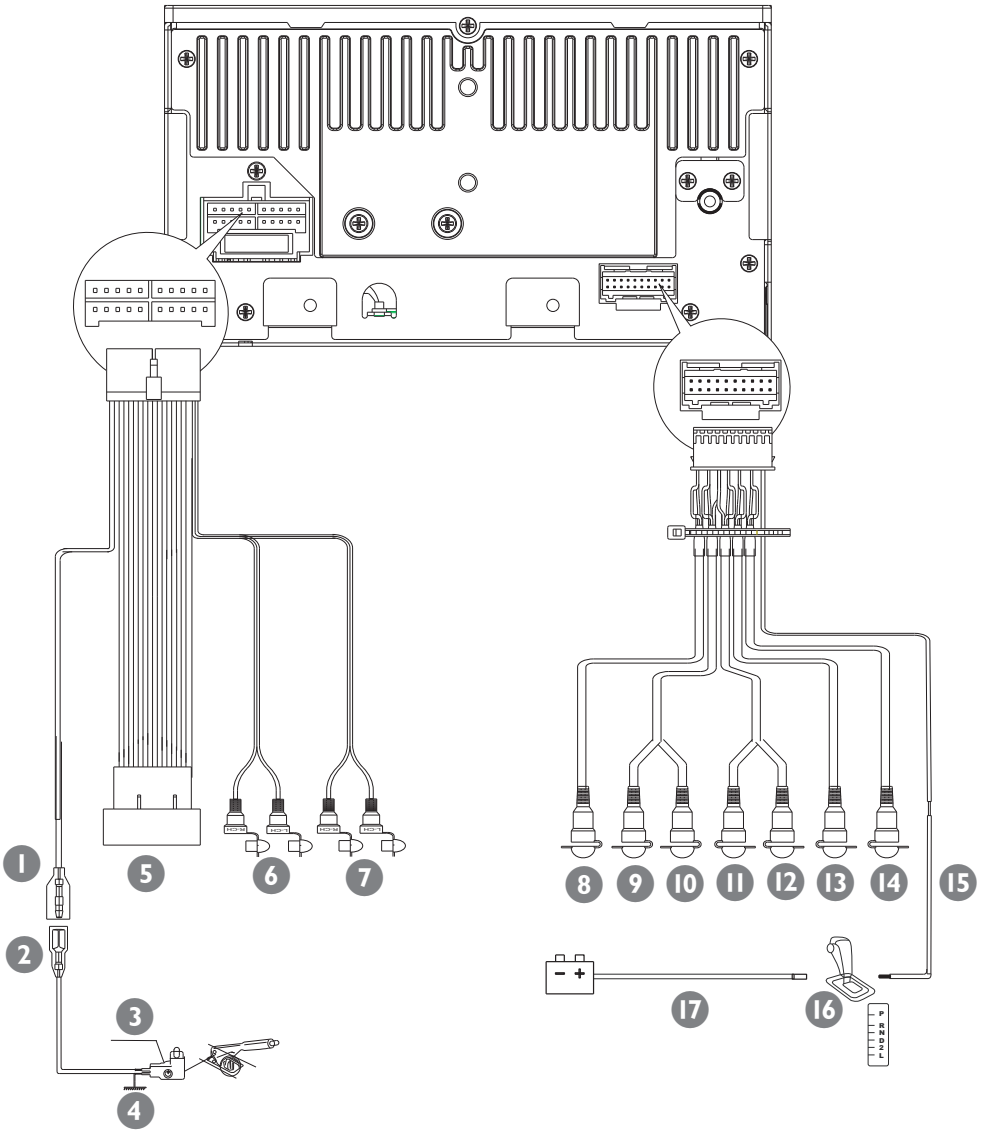

2

a

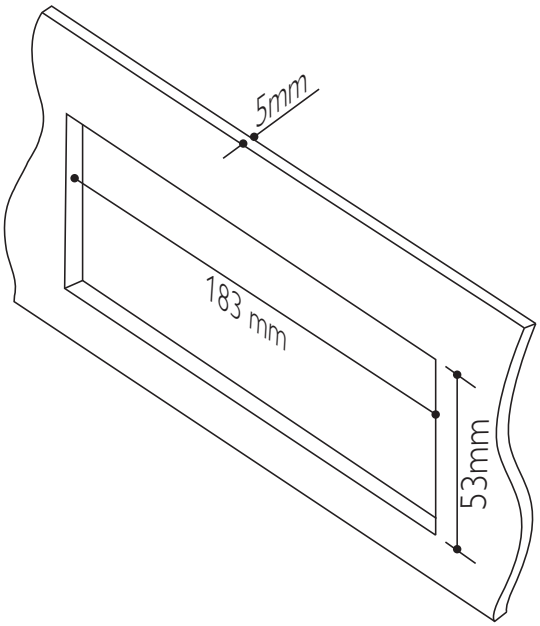

b

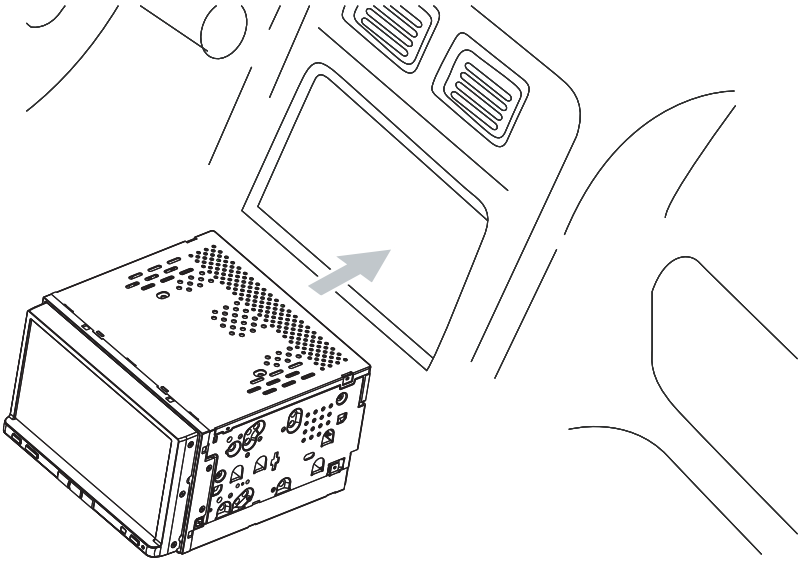

2 c

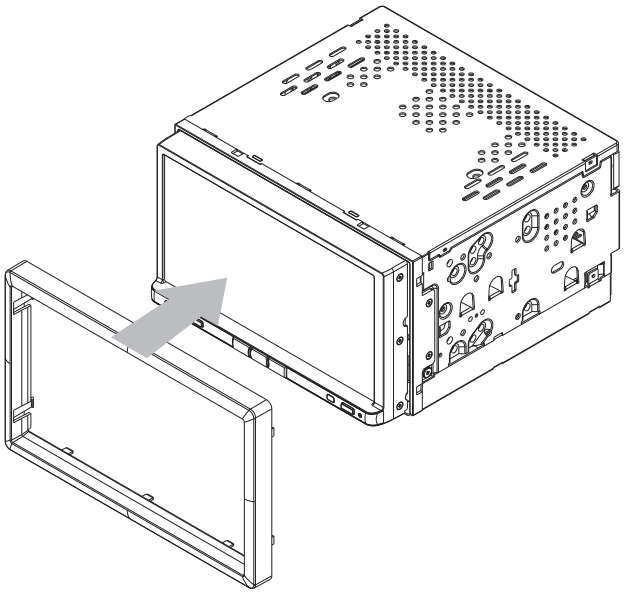

3

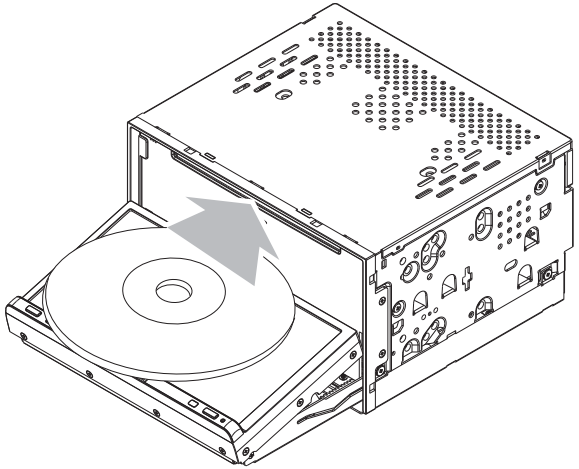

4

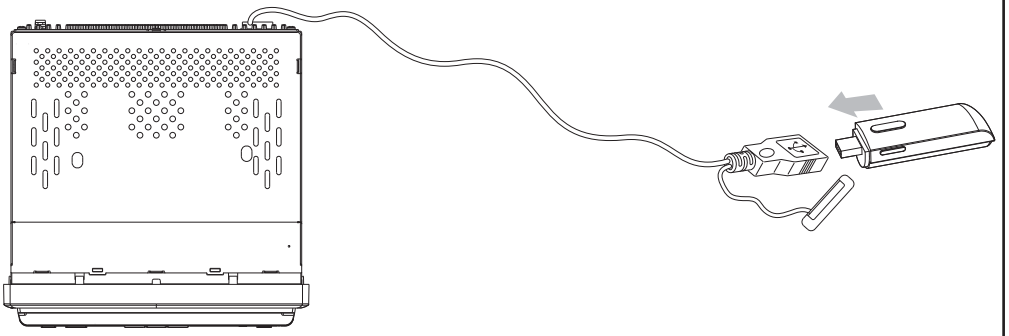

Install the car audio

These instructions are for a typical installation. However, if your car has different requirements, make the corresponding adjustment. If you have any questions regarding installation kits, consult your Philips car audio dealer.

Connect wires 1

1 Check the car's wiring carefully, then connect them to the supplied ISO wires. a

	Connector	Connect to
1	Yellow wire	**The +12V car battery which is live at all times.**
2	Blue wire	**The electric antenna control lead or power supply lead of the antenna booster** If there is no electric antenna or antenna booster, or it is manually operated telescopic antenna, it is not necessary to connect this lead.
3	Black wire	**A metal surface of the car** First connect the black ground (earth) lead, then connect the yellow and red power supply leads.
4	Red wire	**The +12V power terminal which is live in the accessory (ACC) position of the ignition switch** If there is no accessory position, connect to the +12V car battery terminal that is always live. Be sure to connect the black ground (earth) lead to a metal surface of the car first.
5	Green and green/black wires	**Left speaker (Rear)**
6	White and white/black wires	**Left speaker (Front)**
7	Gray and gray/black wires	**Right speaker (Front)**
8	Purple and purple/black wires	**Right speaker (Rear)**

2 Connect the other end of the supplied standard connector to the car audio system. b

	Connector/ Obeject	Connect to/with
1	Pink wire	Extension wire
2	2.5m extension wire(Not included)	Parking brake (-)
3	Brake switch	
4	Ground	
5	ISO wires	Connected in step 1 above.
6	Grey wire	Rear line out Left/ Right
7	Black wire	Front line out Left/ Right
8	Blue cable	Subwoofer
9	Red cable	Aux Right
10	White cable	Aux Left
11	Yellow cable	Video in
12	Yellow cable	Camera in
13	Yellow cable	Video out 1
14	Yellow cable	Video out 2
15	Purple wire	Reverse camera (B+)
16	Gearbox switch	
17	Reverse gear signal	Back lamp lead +

Mount in the dashboard 2

1 If the car does not have an on-board drive or navigation computer, disconnect the negative terminal of the car battery.

2 Ensure that car dashboard opening is within these measurements: a

3 Slide the unit into the dashboard until a click sound is heard. b

4 Attach the trim plate. c

5 Reconnect the negative terminal of the car battery.

Turn on

1 Press ⏻ to turn on the unit.

2 Touch a language to select.

- To adjust screen brightness, press **DIMMER** on the remote control, then press ▲ or ▼.
- To turn off the unit, press and hold⏻ for 3 seconds.

Set date and time

1 Touch ⌂ to display main menu.

2 Touch **[Settings]**.

3 Touch ▼ to access 2nd page.

4 Touch **[Date]**.

5 Touch year digit to highlight this digit.

6 Touch ◀/▶ to set year.

7 Repeat step 5 and 6 to set month and day.

Set Time

1 Touch **[Set time]**.

2 Touch hour/minute digit to highlight the digit.

3 Touch ◀/▶ to set hour/minute.

Set time format

1 Touch**[Clock Mode]**repeatedly to toggle between **[12Hr]** and **[24Hr]** options.

Listen to Radio

1 Touch ⌂ to display home menu.

2 Touch **[Radio]**.

3 Touch on **FM** or **AM** repeatedly on the left of the screen to select band:

4 Briefly touch ◀ or ▶ to tune to a radio station by step.

- Touch ◀ or ▶ for over 1 seconds to tune to a radio station automatically.

Play disc 3

You can play video, audio or images stored on the following discs:

- DVD video, DVD-R, DVD-RW
- VCD
- Audio CD, CD-R, CD-RW

1 Insert the disc into the disc slot with label side facing up.

Countries where you bought the unit	Supported DVD region code
China	6

Asia Pacific, Taiwan, Korea	
Latin America	
Russia, India	

Play USB device 4

Note

- Ensure that the device contains playable content.

1 Open the lid of USB socket.
2 Insert the USB to the USB socket.

Play with Bluetooth device

Pair the Bluetooth-enabled devices

1 Turn on the Bluetooth function on your device.
2 Search for other Bluetooth device with your device.
3 Select "CED1700" in the pairing list.
4 Enter default password "0000".

Make a call

1 Touch on top of the screen.
2 Touch number icons directly to input phone number.
3 After the phone number entered, touch .

Receive call

By default, all incoming calls are received automatically.

1 If there is incoming call, **[Incoming call...]** flashes on the screen. Speak into the Bluetooth microphone.
2 When conversation ends, tap (red) to terminate the call.

© 2010 Koninklijke Philips Electronics N.V.
All rights reserved.
Document order number: CED1700_00_QSG_V3.0

100% recycled paper
100% papier recyclé