Pointer 6.1
RF WIRELESS PRESENTER

• • • • • • • • • • • • MGPP61   User manual

MobileGear
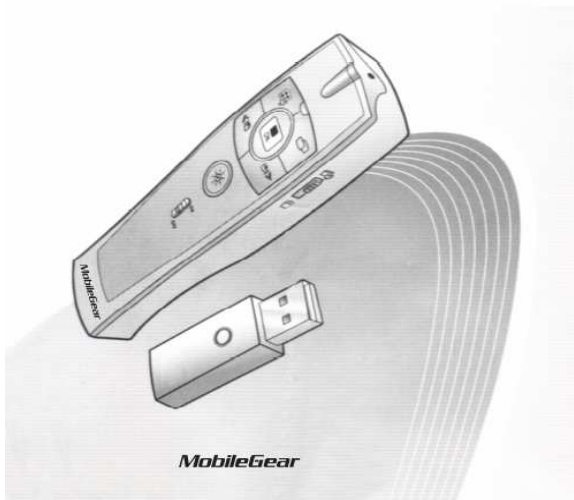
Pointer 6.1 Technical Specification

1. Transmitter

Bandwidth	2.4GHz ISM(2405 ~ 2480GHz)
Channel	76
RF Range	30M(Open Field)
RF Power	< 3mW
Modulation	GFSK
RF Type	Simplex
RF Date Rate	2Mbps
ID Code	65,536
Mouse	800CPI(Optional Touch Sensor)
Operating Voltage	DC 1.5V AAA Alkaline X 2(DC 3V)
Operating Voltage	2.0V ~ 3.6V
Operating Temperature	-10 to 50C
Laser	Class II
Laser Output Power	< 1mW
Laser Wavelength	650nm
Buttons	5ea, Power ON/OFF Switch, Mode Change Switch
Battery	1.5V AAA Alkaline x 2
Dimension	120x36.5x19
Weight	30g
Certificate	MIC, KPS, CE, FCC, TELEC, PSC

2. Receiver

Input Power	5V(USB bus power)
Operating Voltage	3.3V ~ 3.6V(± 10%)
Operating Temperature	-10 to 50°C
OS	Windows 98, SE, Me, 2000, XP, Vista
Compatible Interface	USB2.0 Full Speed
Dimension	47.5x16x7.5
Weight	5g

Setting Up the Pointer 6.1

- Windows XP, 2000, Me, Vista Users
  1. Insert 2 X AAA batteries into Pointer 6.1 Transmitter.
  2. Insert the Receiver into the USB Port of the PC.
  3. The Pointer 6.1 will be installed automatically and will work immediatel
     after it is inserted into the USB Port.

  4. Press any button on the Transmitter (except the Laser Pointer)
  5. To use the mouse function, switch the Keyboard-Mouse switch located on
     right side of the Transmitter to Mouse Mode. Control the Optical Touch
     Sensor to move the mouse arrow. Press the left and right buttons to activate
     the mouse-click-left or mouse-click-right functions
  6. To use Pointer 6.1 for presentations, switch the Keyboard-Mouse switch, to
     Keyboard Mode. The left button will start and stop the presentation. The
     right button will switch the application programs. To move forward, use the
     mouse button.
  7. If you see the failure in recognizing the Receiver, please follow ID Pairing
     Process.

ID Pairing between Transmitter and Receiver

  1. Press and release "Reset button" on the Receiver for 1 second
     The LED(Green) will start blinking and blink for 10 seconds
  2. Press together Two buttons(Slide Show Start/end, Alt-Tap) on the
     Transmitter and release the buttons when the LED turns off automatically
  3. If ID paired successfully, the LED on the Receiver and Transmitter will
     blink 4 times together.
  4. Pointer 6.1 is ready to use
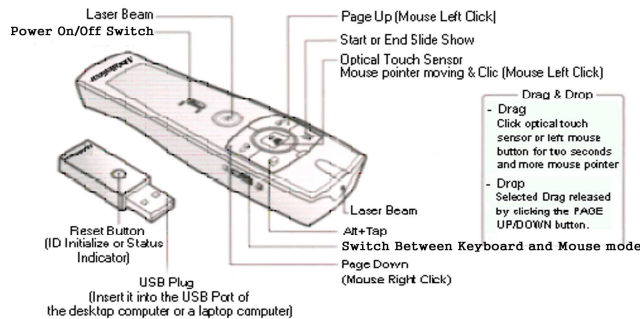 << In case of the failure in ID pairing >>
     Remove and reinsert the USB Receiver. Please repeat above installation
     processes.

Features

Superior ergonomic design allows user to comfortably take control of the PC
and presentation. By using Radio instead of Infra-red communication,
Pointer 6.1 offers greater range, reliability and freedom of movement
MGPP61 Model with optical touch sensor mouse controls offer greater
functionality with finer mouse control and intuitive presentation controls

Composition Of Pointer 6.1

* No software installation needed. Simply plug the receiver into the USB port
  press and hold any function button for 1 second and you are ready to go
* Main functions: Page up/down, Slide Show Start/End, Switch Application
  Programs.
* Wireless Mouse Control

Certification

Product Maintaining, Repairing and Supporting

Download upgraded version of software from MobileGear Home page
If you have problems while using the Pointer 6.1 or if you have any
suggestion about the Pointer 6.1, don't hesitate to contact us.

Homepage : www.mglifestyle.com
E-mail : support@mglifestyle.com