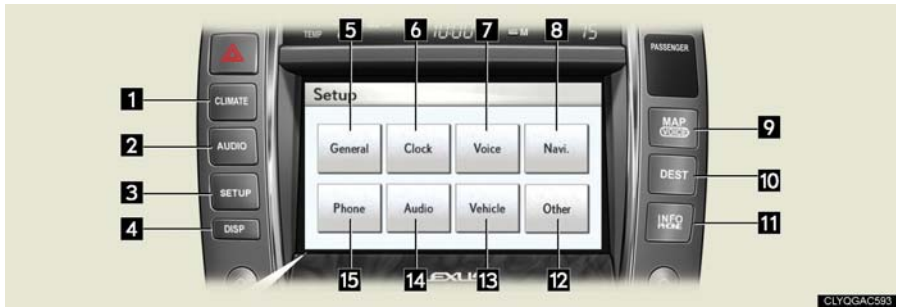# Touch Screen (with navigation system)

By touching the screen with your finger, you can control the audio system and air conditioning system, and adjust the screen display etc. For details, refer to the "Navigation System Owner's Manual".

The button positions, shapes and screen may slightly vary depending on the type of the touch screen.

Press the button to display the screen. The "Setup" screen shown in the above illustration is displayed when the "SET UP" button is pressed.

1 "CLIMATE": Air conditioning operation screen

2 "AUDIO": Audio control screen

3 "SET UP": Setup screen

4 "DISP": Adjust picture quality

5 "General": General settings screen

6 "Clock": Clock settings screen

7 "Voice": Voice settings screen

8 "Navi.": Navigation settings screen

9 "MAP VOICE": Vehicle's current position

10 "DEST": Destination screen

11 "INFO PHONE": Information screen

12 "Other": Other settings screen

13 "Vehicle": Vehicle settings screen

14 "Audio": Audio settings screen

15 "Phone": Phone settings screen

■Display

CLYQ5AB351

CLYQ5AB352
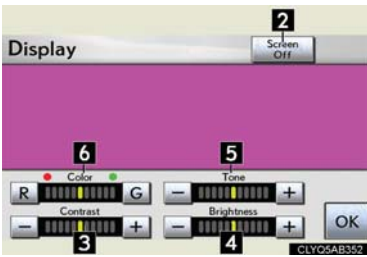
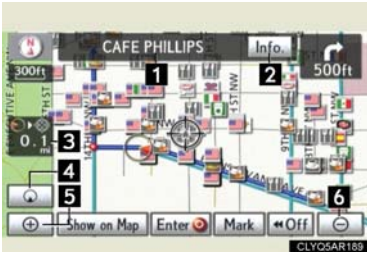Push the [DISP] button on the side of the touch screen to show the "Display" screen.

1 Displays the screen in "Day Mode" with the headlight switch on

2 Turns the screen off

3 Adjust contrast

4 Adjust brightness

5 Adjust color tone

6 Adjust color

■Screen scroll operation

When any point on the map is touched, that point moves to the center of the screen.

1 Indicates the street name, city name, etc. for the selected point

2 Displays various information for the selected point (if available)

3 Indicates the distance from the current position to the pointer

4 Switches the screens

5 Zooms in on the map

6 Zooms out on the map

■Setting a route

While route guidance is operating, you can change the route using the following method.

Touch **Route**.

The following settings can be accessed

1 Detour setting

2 Route preferences

3 Route overview

4 Pause and resume route guidance

Some functions are unavailable while the vehicle is in motion. Refer to the "Navigation System Owner's Manual".

Navigation System (If Equipped)

■Register home

STEP **2**

Setup

General	Clock	Voice	Navi.
Phone	Audio	Vehicle	Other

CLYQGAC583

1 Push the [SETUP] button on the side of the touch screen. (→P.26)

2 Touch [Navi.].

STEP **3**

Navigation Settings [?] [↩]

Home
Preset Destinations
Address Book
Areas to Avoid
Delete Previous Dest.
Detailed Navi. Settings

CLYQGAR460

3 Touch [Home].

4 Touch [Set Home].

5 Touch [Address].

STEP **6**

Address [?] [↩]

Select a method to search for an address:

City	Street Address

[Search Area] DC,DE,MD,NJ,PA,VA,WV

CLYQGAR461
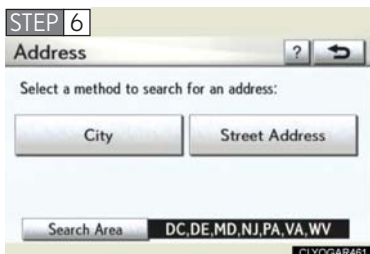
6 Touch [City].

7 Input a city name and touch [OK].

8 Touch the button of the desired city name from the displayed list.
For security reasons, use a point close to your home instead of your actual home address.

9 Input the street name and touch [OK].

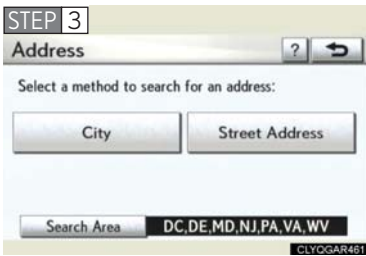10 When the desired street name is found, touch the corresponding button.

11 Input a house number and touch [OK].

12 Touch [Enter].

13 Touch [OK].

## ■ Destination input —— Search by address

▶ Select by city name

STEP 2

STEP 3

STEP 4

1 Push the [DEST] button on the side of the touch screen. (→P.26)

2 Touch [Address] .

3 Touch [City] .

4 Input a city name and touch [OK] .

5 Touch the button of the desired city name from the displayed list.

6 Input the street name and touch [OK] .

7 When the desired street name is found, touch the corresponding button.

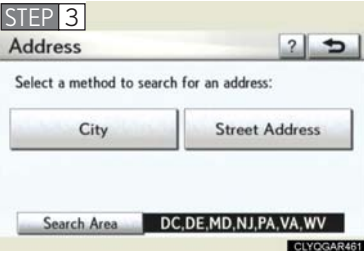8 Input a house number and touch [OK] .

9 Touch [Go to ○] .

10 Touch [OK] .

▶ **Select by street address**

STEP 2

Destination Page 1 Del.Dest. ?

Address | Point of Interest | Destination Assist | Previous Destinations | Address Book | More

Presets:
Go Home | 1 | 2 | 3 | 4 | 5

CLYOGAC596

1. Push the [DEST] button on the side of the touch screen. (→P.26)
2. Touch [Address].

STEP 3

Address ? ↩

Select a method to search for an address:

City | Street Address

Search Area DC,DE,MD,NJ,PA,VA,WV

CLYOGAR461

3. Touch Street Address.

STEP 4

House Number ↩

Enter a house number

N | 1 | 2 | 3
W | E | 4 | 5 | 6
S | 7 | 8 | 9
— | 0 | /

A-Z | 0-9 | Space | OK

CLYO5AR332

4. Input a house number and touch OK.
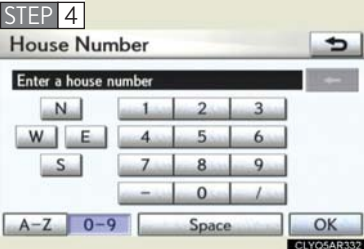5. Input the street name and touch OK.
6. When the desired street name is found, touch the corresponding button.
7. Input a city name and touch OK.
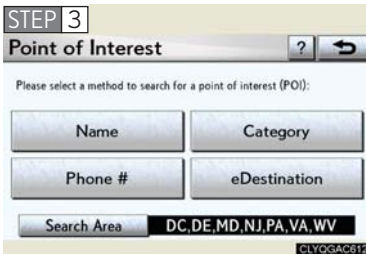8. Touch the button of the desired city name from the displayed list.
9. Touch Go to.
10. Touch OK.

## ■Destination input —— Search points of interest by name

STEP 2

Destination Page 1 Del.Dest. ?

Address | Point of Interest | Destination Assist | Previous Destinations | Address Book | More ▷

Presets:

Go Home | 1 | 2 | 3 | 4 | 5

CLYQGAC596

STEP 3

Point of Interest ? ↩

Please select a method to search for a point of interest (POI):

Name | Category

Phone # | eDestination

Search Area DC,DE,MD,NJ,PA,VA,WV

CLYQGAC612

STEP 4

POI Name ↩

Enter a POI name ***

1 2 3 4 5 6 7 8 9 0 ←

Q W E R T Y U I O P

A S D F G H J K L &

Z X C V B N M / ' –

A–Z | Other | Space | OK

CLYQ5AR265

1. Push the [DEST] button on the side of the touch screen. (→P.26)

2. Touch [Point of Interest] .

3. Touch [Name] .
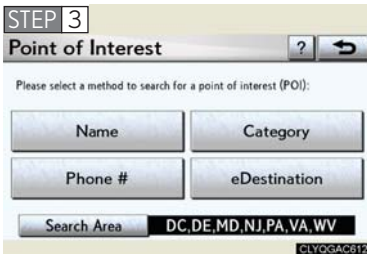
4. Input the name of the point of interest and touch [OK] .

5. Touch the button of the desired destination.

6. Touch Go to .

7. Touch [OK] .

■ Destination input —— Search points of interest by category

STEP 2

Destination   Page 1   Del.Dest.   ?

Address   Point of Interest   Destination Assist   Previous Destinations   Address Book   More

Presets:
Go Home | 1 | 2 | 3 | 4 | 5

CLYQGAC596

[1] Push the [DEST] button on the side of the touch screen. (→P.26)

[2] Touch [Point of Interest] .

STEP 3

Point of Interest   ?   ↩

Please select a method to search for a point of interest (POI):

| Name | Category |
| Phone # | eDestination |

Search Area   DC,DE,MD,NJ,PA,VA,WV

CLYQGAC612

[3] Touch [Category] .

STEP 4

POI Category   ↩

Where would you like to search?

| Near Here | Along My Route |
| Near City Center | Near a Destination |

CLYQ5AR266

[4] Touch [Near a Destination] .

[5] Touch the button of the desired destination and set the search point.

[6] Touch the desired point of interest category.

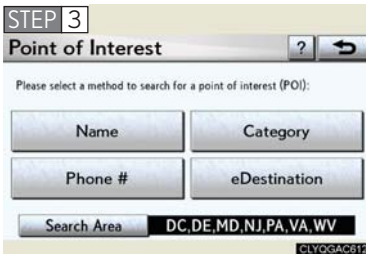[7] Touch the button of the desired item.

[8] Touch Go to .

[9] Touch OK .

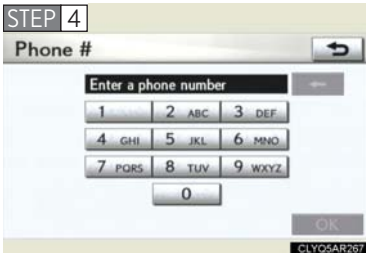## ■Destination input ⸺ Search points of interest by telephone number

STEP 2

Destination Page 1 | Del.Dest. | ? |

Address | Point of Interest | Destination Assist | Previous Destinations | Address Book | More

Presets:
| Go Home | 1 | 2 | 3 | 4 | 5 |

CLYQGAC596

1 Push the [DEST] button on the side of the touch screen. (→P.26)

2 Touch [Point of Interest] .

STEP 3

Point of Interest | ? | ↩ |

Please select a method to search for a point of interest (POI):

| Name | Category |
| Phone # | eDestination |

Search Area | DC,DE,MD,NJ,PA,VA,WV

CLYQGAC612

3 Touch [Phone #] .

STEP 4

Phone # | ↩ |

Enter a phone number

1	2 ABC	3 DEF
4 GHI	5 JKL	6 MNO
7 PQRS	8 TUV	9 WXYZ
	0	

OK

CLYQ5AR267

4 Input a telephone number and touch [OK] .

5 Touch [Go to●] .

6 Touch [OK] .

34

Hands-free System For Cellular Phone (with navigation system)

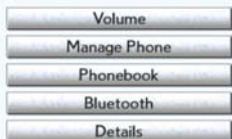### ■ Bluetooth® phone pairing

Compatible Bluetooth®-equipped phones can be connected to the vehicle, enabling hands-free operation. Please refer to the cellular phone manufacturer's user guide for pairing procedures, or go to "www.lexus.com/bluetooth" for more phone information.
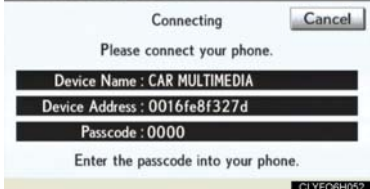
STEP 2

Setup

| General | Clock | Voice | Navi. |
| Phone | Audio | Vehicle | Other |

CLYQGAC583

STEP 3

Phone Settings

Volume
Manage Phone
Phonebook
Bluetooth
Details
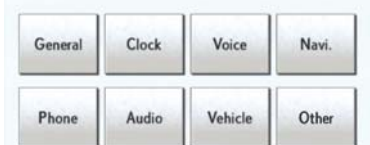
CLYQGAR485

STEP 5

Connect Bluetooth

Connecting   Cancel

Please connect your phone.

Device Name : CAR MULTIMEDIA
Device Address : 0016fe8f327d
Passcode : 0000

Enter the passcode into your phone.

CLYFQ6H052

To use a Bluetooth® phone, it is necessary to first register it in the system.

1 Push the [SETUP] button on the side of the touch screen. (→P.26)

2 Touch Phone .

3 Touch Manage Phone .

4 Touch [(add new)] to display the screen for connecting Bluetooth®.

5 Enter the passcode displayed on the screen into the phone.
Refer to the cellular phone user's manual for cellular phone operation.

6 When the connection is completed, Bluetooth connection successful. will appear and push the [SETUP] button.

■Phonebook transfer

STEP 2

Setup

| General | Clock | Voice | Navi. |
| Phone | Audio | Vehicle | Other |

CLYQGAC583

1 Push the [setup] button on the side of the touch screen. (→P.26)

2 Touch [Phone].

STEP 3

Phone Settings   ↰

Volume
Manage Phone
Phonebook
Bluetooth
Details

CLYQGAR485

3 Touch [Phonebook].

STEP 4

Phonebook Settings   ↰

Manage Contacts
Manage Speed Dials
Delete Call History
Manage Voice Tags

CLYQ5AR268

4 Touch [Manage Contacts].

5 Touch [Transfer Contacts].

6 Transfer the phonebook data to the system using the cellular phone.
Refer to the cellular phone user's manual for cellular phone operation.

Phonebook transfer may not be possible depending on phone model.

■Registering a voice tag

Setup

General	Clock	Voice	Navi.
Phone	Audio	Vehicle	Other

CLYQGAC583

1 Push the [setup] button on the side of the touch screen. (→P.26)

2 Touch Phone .

Phone Settings ↰

- Volume
- Manage Phone
- Phonebook
- Bluetooth
- Details

CLYQGAR485

3 Touch Phonebook .

Phonebook Settings ↰

- Manage Contacts
- Manage Speed Dials
- Delete Call History
- Manage Voice Tags

CLYQ5AR268

4 Touch Manage Voice Tags .

5 Touch New Voice Tag .

6 Touch the data you want to register.

7 Touch ● REC , and record a voice tag.

8 Touch OK .

37

■ Registering a speed dial

STEP 2

Setup

| General | Clock | Voice | Navi. |
| Phone | Audio | Vehicle | Other |

CLYQGAC583

STEP 3

Phone Settings   ⟵

Volume
Manage Phone
Phonebook
Bluetooth
Details

CLYQGAR485

STEP 6

Contacts   Options   ⟵

E EMIRY
H HOME
K KEN
M MIKE
N NANCY

ABC PQRS
DEF TUV
GHI WXYZ
JKL 0-9
MNO SYBL

CLYQ5AR326

1 Push the [setup] button on the side of the touch screen. (→P.26)

2 Touch Phone .

3 Touch Phonebook .

4 Touch Manage Speed Dials .

5 Touch New Speed Dial .

6 Touch the data you want to register.

7 Touch the desired phone number.

8 Touch the button you want to register in.

9 The registration completion message is displayed on the screen.

■ Calling by name

You can call by saying a voice tag registered in the phonebook. For setting the voice recognition, refer to the "Navigation System Owner's Manual". Only when English is selected as the system language can you call by saying a name registered in the phonebook without registering any voice tags beforehand. (Names in the phonebook work as voice tags.)

STEP 1

1 Press [icon].

STEP 2

Voice Menu

- Go Home
- Destination
- Phone
- Audio
- Information
- Command List

Cancel

2 Follow the voice guidance and say "Phone".
3 Follow the voice guidance and say "Dial by name".

STEP 4

> Phone > Dial by Name   Go Back

(Contact Name)

Cancel

4 Follow the voice guidance and say a contact name.
5 Follow the voice guidance and say the type of phone number (home, mobile, work, other).
6 Follow the voice guidance and say "Dial".

[icon] : Pressing this switch turns the voice command system on. Say a command after the beep.

■ Calling by speed dial

STEP 1

1 Press ☎ .

STEP 2

| Phone | DN1 | BT Hm | ? | ↩ |

Phone # Enter a phone number

Contacts	1	2 ABC	3 DEF	Redial
Speed Dials	4 GHI	5 JKL	6 MNO	Connect Phone
Call History	7 PQRS	8 TUV	9 WXYZ	☎
	* +	0	#	

2 Touch Speed Dials .

STEP 3

| Speed Dial | Options | BT Hm | ↩ |

| Speed Dial 1 | Speed Dial 2 | Speed Dial 3 |

1 EMIRY 1234567890	4 HOME 123123123#
2 KEN 0801234####	5 MIKE 0901234####
3 NANCY 0901235####	6 OFFICE 1123456789
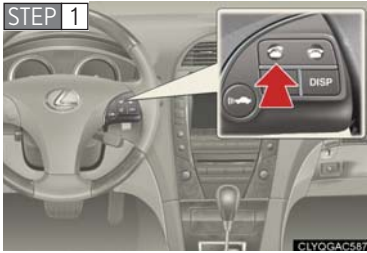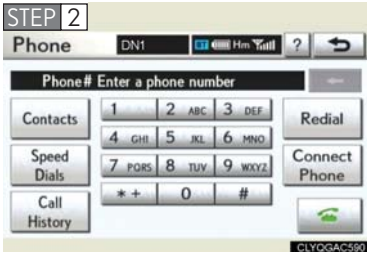
3 Touch the desired number to call.

■Receiving a call

STEP 1

Call

Incoming Call

0123456789

CLYQGAR853
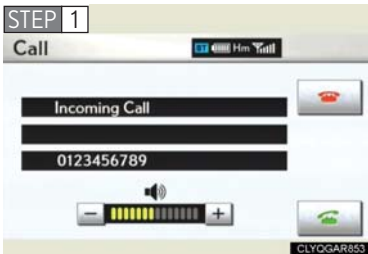
[1] When a call is received, this screen is displayed with a sound.

STEP 2

CLYQGAC589

[2] Push ☎ on the steering wheel to talk on the phone.

To ignore the call, push ☎ on the steering wheel.

Audio System (with navigation system)

The button positions, shapes and screen may slightly vary depending on the type of the audio system.

■ Basic operation

1 Displays the audio control screen

2 Sound quality modes

3 Audio sources

▶ **Type A**

AM•FM: AM radio/FM radio

SAT: Satellite radio

DISC: DVD player (if equipped)

CD: CD player (if equipped)

AUX: Auxiliary audio device/USB memory (if equipped)/iPod (if equipped)/Bluetooth® audio player

▶ **Type B**

AM: AM radio

FM: FM radio

DISC: DVD player

AUX: Auxiliary audio device/USB memory (if equipped)/iPod (if equipped)

4 Power/Volume

■ Radio

1 Displays the audio control screen

2 Station presets

3 Scanning radio stations

4 Radio tuner

5 Station select

6 Seek

■ **Entering station presets**

1 Touch the desired station by using the tune, seek or scan function.

2 Press and hold one of the preset buttons (1-6) until you hear a beep, indicating that the station is set.

■ **DVD player/CD player**

■ **Playing an audio CD**

1 Displays the audio control screen
2 Disc select
3 Repeat play
4 Random playback
5 Search playback
6 Disc load
7 Track select/rewind/fast-forward
8 Eject

■ **Playing a CD with MP3/WMA files**

1 Displays the audio control screen
2 Disc select
3 Repeat play
4 Random playback
5 Search playback
6 Folder select
7 File select
8 Disc load
9 Eject

■ **Playing a DVD (DVD player only)**

1 Displays the audio control screen
2 Disc select
3 DVD operation
4 Image display (full screen)
5 Disc load
6 Chapter select/rewind/fast-forward
7 Eject

■ **Loading a disc**

1 Press the "LOAD" button.

2 When the indicator changes from flashing amber to green, insert a disc after the disc slot door opens.

■ **Loading multiple discs**

1 Press and hold the "LOAD" button until you hear a beep.

2 When the indicator changes from flashing amber to green, insert a disc after the disc slot door opens.

3 After inserting a disc, wait until the indicator changes from flashing amber to green, then insert the next disc after the disc slot door has opened.

Repeat 2 and 3 until you have inserted all discs.

To cancel the operation, press the "LOAD" button. If you do not insert a disc within 15 seconds, loading will be canceled automatically.

■ Operating an iPod (if equipped)

1 Displays the audio control screen
2 Menu
3 Pause/Playback
4 Repeat play
5 Random playback
6 Song list
7 Song select
8 Song select/rewind/fast-forward

■ Remote control (steering wheel switches)

The audio system can be operated using the remote control located on the steering wheel.
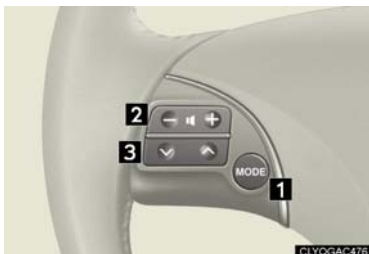
1 Power on/change mode: press
   Power off: press and hold
2 Volume
3 Radio mode: radio tuner
   DVD mode: track/chapter/disc select
   CD mode: disc/track/file (MP3/WMA) select
   iPod mode (if equipped): song select

Air Conditioning System (with navigation system)

CLYQGAC604

1 Passenger side temperature display
2 Dual mode button
3 Air outlet display
4 Fan speed display
5 Passenger side temperature control
6 Outside air/recirculated air mode button
7 Windshield defogger

8 "OFF" button
9 Automatic mode button
10 Driver side temperature control
11 Cooling and dehumidification function on/off button
12 Air conditioning operation screen display button
13 Driver side temperature display

■ Using the automatic mode

Press 9 to turn on the airflow and 10 to adjust the temperature.

■ Adjusting the temperature

■ To simultaneously adjust the driver's side and passenger's side temperature settings
Touch 2 to turn the "DUAL" indicator off (DUAL) and then press 10.

■ To individually adjust the driver's side and passenger's side temperature settings
Touch 2 or press 5 to turn the "DUAL" indicator on (DUAL) and then press 10 or 5.

■ To turn off the airflow

Press 8.

Hands-free System For Cellular Phone (without navigation system)

■ Bluetooth® phone pairing

Compatible Bluetooth®-equipped phones can be connected to the vehicle, enabling hands-free operation. Please refer to the cellular phone manufacturer's user guide for pairing procedures, or go to "www.lexus.com/bluetooth" for more phone information.

STEP 1

CLYQGAC587

To use a Bluetooth® phone, it is necessary to first register it in the system.

1. Press [☎] or [🎙] .

2. Press [🎙] and say "Pair Phone".

3. Press [🎙] and say a name*.

   *: This name will be used to identify your phone in the case that more than one phone has been registered to the system.

4. Press [🎙] and say "Confirm" to display the passkey.

5. Enter the passkey shown on the display into the phone.
   Refer to the cellular phone user's manual for cellular phone operation.

6. Once the voice guidance for registration completion is finished, press [☎] .

[🎙] : Pressing this switch turns the voice command system on. Say a command after the beep.

■Calling by number

STEP 1

① Press 🎤 and say "Dial by number".

② Press 🎤 and say the phone number.

③ Dialing

   a. Press 📞 .

   b. Press 🎤 and say "Dial".

■Calling by name

You can call by saying a voice tag registered in the phonebook. For setting the voice recognition, refer to the "Owner's Manual".

STEP 1

① Press 🎤 and say "Dial by name".

② Press 🎤 and say a contact name.

③ Dialing

   a. Press 📞 .

   b. Press 🎤 and say "Dial".

🎤 : Pressing this switch turns the voice command system on. Say a command after the beep.

■ Calling by speed dial

STEP 1

STEP 2
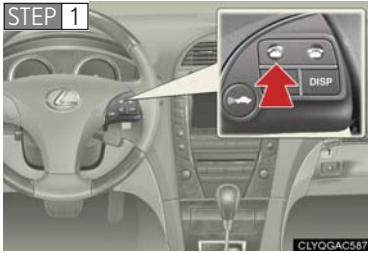
1 Press 📞 .

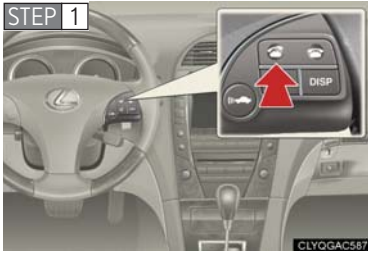2 Press the desired preset button (1-6).

3 Press 📞 .

■Phonebook transfer

STEP 1

1. Press [📞] .

2. Press [🗣] and say "Phonebook".

3. Press [🗣] and say "Add Entry".

4. Press [🗣] and say "By Phone".

5. Press [🗣] and say "Confirm".

6. Transfer the phonebook data to the system using the cellular phone.
   Refer to the cellular phone user's manual for cellular phone operation.

7. Press [🗣] and say "Previous" or "Next" until the desired data is displayed.

8. Press [🗣] and say "Confirm".

9. Press [🗣] and say the desired name.

10. Press [🗣] and say "Confirm".

11. Press [🗣] and say "Confirm" again.

Phonebook transfer may not be possible depending on phone model.

[🗣] : Pressing this switch turns the voice command system on. Say a command after the beep.

■Changing the registered name

STEP 1

CLYQGAC587

1 Press 📞 .

2 Press 🎙 and say "Phonebook".

3 Press 🎙 and say "Change Name".

4 Press 🎙 and say the desired name.

5 Press 🎙 and say "Confirm".

6 Press 🎙 and say the new name.

7 Press 🎙 and say "Confirm".

🎙 : Pressing this switch turns the voice command system on. Say a command after the beep.

■Registering a speed dial

STEP 1

STEP 7

1. Press 📞 .

2. Press 🎙 and say "Phonebook".

3. Press 🎙 and say "Set Speed Dial".

4. Select the data to be registered.

5. Press 🎙 and say the desired name.

6. Press 🎙 and say "Confirm".

7. Press the desired preset button (1-6).

8. Press 🎙 and say "Confirm".

🎙 : Pressing this switch turns the voice command system on. Say a command after the beep.

Audio System (without navigation system)

■ Basic operation

1 Power/Volume
2 Audio sources
3 Sound quality modes
  Listening position
  ASL (Automatic Sound Levelizer)

■ Audio sources

▶ Type A

AM·FM: AM radio/FM radio

SAT: Satellite radio

CD·AUX: CD player/Auxiliary audio device/USB memory (if equipped)/iPod (if
       equipped)/Bluetooth® audio player

▶ Type B

AM: AM radio

FM: FM radio

CD·AUX: CD player/Auxiliary audio device/USB memory (if equipped)/iPod (if
       equipped)/Bluetooth® audio player

■Radio

1 Text messages
2 Station presets
3 Traffic information
4 Scanning radio stations
5 Radio tuner
6 RDS genre select
7 Seek

■Entering station presets

1 Select the desired station by using the tune, the seek or the scan function.
2 Press and hold one of the preset buttons (1-6) until you hear a beep, indicating that the station is set.

■CD player

■Playing an audio CD

1 Eject
2 Disc load
3 Pause/Playback
4 Search playback
5 Disc select
6 Repeat play
7 Track select/rewind/fast-forward
8 Random playback
9 Text information

■Playing a CD with MP3/WMA files

1 Eject
2 Pause/Playback
3 Disc load
4 Folder select
5 Search playback
6 File select
7 Disc select
8 Repeat play
9 Random playback
10 Text information

■ **Loading a CD**

1 Press the "LOAD" button.

"WAIT" is shown on the display.

2 Insert a CD when the indicator on the slot turns from amber to green.

The display changes from "WAIT" to "LOAD".

■ **Loading multiple CDs**

1 Press and hold the "LOAD" button until you hear a beep.

"WAIT" is shown on the display.

2 Insert a CD when the indicator on the slot turns from amber to green.

The display changes from "WAIT" to "LOAD".

The indicator on the slot turns to amber when the CD is inserted.

3 Insert the next CD when the indicator on the slot turns from amber to green again.

Repeat the procedure for the remaining CDs.

To cancel the operation, press the "LOAD" button. If you do not insert a CD within 15 seconds, loading will cancelled automatically.

■ **Operating an iPod (if equipped)**

1 Random play
2 Repeat play
3 Pause/Playback
4 Go back
5 Menu/Song select
6 Playback
7 Song select/rewind/fast-forward
8 Text information

■ **Remote control (steering wheel audio switches)**

The audio system can be operated using the remote control located on the steering wheel.
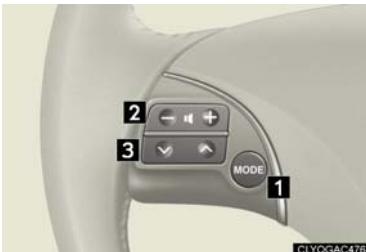
1 Power on/change mode: press
Power off: press and hold
2 Volume
3 Audio source
Radio: radio tuner
CD: disc/track/file (MP3/WMA) select
iPod (if equipped): song select

Air Conditioning System (without navigation system)
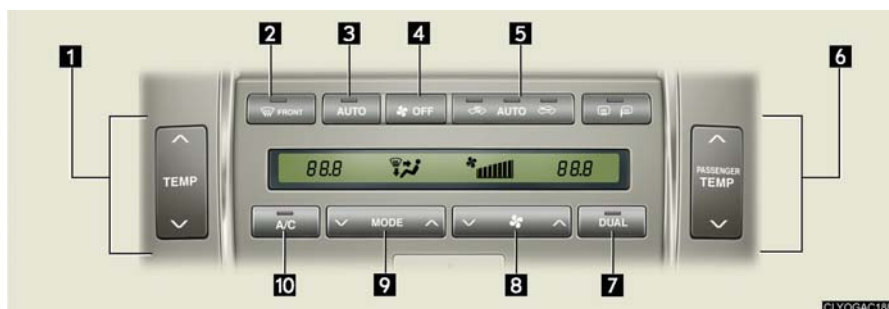
1. Driver side temperature control
2. Windshield defog/defrost
3. Switch to automatic mode
4. "OFF" button
5. Outside air/recirculated air mode switch
6. Passenger side temperature control
7. Dual mode switch
8. Fan speed controls
9. Air flow controls
10. "A/C" switch

■ Using the automatic mode

Press 3 to turn on the airflow and 1 to adjust the temperature.

■ Adjusting the temperature

### ■ To simultaneously adjust the driver's side and passenger's side temperature settings

Press 7 to turn the "DUAL" indicator off (DUAL) and then press 1 .

■ To individually adjust the driver's side and passenger's side temperature settings

Press 7 or 6 to turn the "DUAL" indicator on (DUAL) and then press 1 or 6 .

■ To turn off the airflow

Press 4 .

Voice Command System

■ Basic operation

NOTE: When inputting voice commands you must wait until after the beep to speak.

STEP 1

1 Press [icon] .

2 - If you know the command:

 Press [icon] again.

 - If you do not know the command:
 Follow the voice guidance to learn the command and then press [icon] again.

3 Say a command after the beep.

■ Important voice commands information and tips
- Voice commands can be used while driving.
- You must wait until after the beep to say a command.
- In vehicles with a navigation system, a large TALK icon [icon] will appear on the navigation screen to prompt you to say a command.
- If you know what command to use, you can press [icon] at any time to interrupt the voice guidance.

Safety Connect (If Equipped)

Safety Connect is a subscription-based telematics service that uses Global Positioning System (GPS) data and embedded cellular technology to provide safety and security features to subscribers. Safety Connect is supported by Lexus' designated response center, which operates 24 hours per day, 7 days per week.

Safety Connect service is available by subscription on select, telematics hardware-equipped vehicles.

■Buttons

1 "SOS" button
2 Microphone
3 LED light indicators

■Services

Subscribers have the following Safety Connect services available:

● **Automatic Collision Notification***

In case of either airbag deployment or severe rear-end collision, the system is designed to automatically call the response center. The responding agent receives th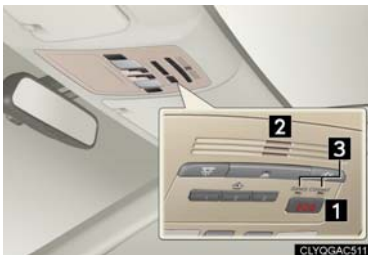e vehicle's location and attempts to speak with the vehicle occupants to assess the level of emergency. If the occupants are unable to communicate, the agent automatically treats the call as an emergency, contacts the nearest emergency services provider to describe the situation, and requests that assistance be sent to the location.

*: U.S. Patent No. 7,508,298 B2

● **Stolen Vehicle Location**

If your vehicle is stolen, Safety Connect can work with local authorities to assist them in locating and recovering the vehicle. After filing a police report, call the Safety Connect response center at 1-800-25-LEXUS (1-800-255-3987) and follow the prompts for Safety Connect to initiate this service.

In addition to assisting law enforcement with recovery of a stolen vehicle, Safety-Connect-equipped vehicle location data may, under certain circumstances, be shared with third parties to locate your vehicle. Further information is available at Lexus.com.

● **Emergency Assistance Button (SOS)**

In the event of an emergency on the road, push the "SOS" button to reach the Safety Connect response center. The answering agent will determine your vehicle's location, assess the emergency, and dispatch the necessary assistance required.

If you accidentally press the "SOS" button, tell the response-center agent that you are not experiencing an emergency.

● **Enhanced Roadside Assistance**

Subscribers can press the "SOS" button to reach a Safety Connect response-center agent, who can help with a wide range of needs, such as: towing, flat tire, fuel delivery, etc. For a description of the Enhanced Roadside Assistance services and their limitations, please see the Safety Connect Terms and Conditions, which are available at Lexus.com.

■Subscription

After you have signed the Telematics Subscription Service Agreement and are enrolled, you can begin receiving services.

A variety of subscription terms is available for purchase. Contact your Lexus dealer, call 1-800-25-LEXUS (1-800-255-3987) or push the "SOS" button in your vehicle for further subscription details.

Lexus Enform with Safety Connect (If Equipped)

Lexus Enform and Safety Connect are subscription-based telematics services that use Global Positioning System (GPS) data, embedded cellular technology an XM$^®$ satellite data services to provide safety and security as well as convenience features to subscribers.

Lexus Enform and Safety Connect services are supported by Lexus' designated response center, which operates 24 hours per day, 7 days per week.

Lexus Enform service is available by subscription on select, telematics hardware-equipped vehicles.

For details, refer to the "Owner's Manual" and "Navigation System Owner's Manual".

■Services

▶ **With an active Lexus Enform subscription, the following features are available:**
● **Safety Connect features (→P.58)**
  · Automatic collision notification[1]
  · Stolen vehicle location
  · Emergency assistance button (SOS)
  · Enhanced Roadside assistance

● **Destination Assist**
  Destination Assist provides you with live assistance for finding destinations via the Lexus Enform response center. You can request either a specific business, address, or ask for help locating your desired destination by category, such as restaurants, gas stations, shopping centers or other points of interest (POI).
  After you tell the agent your choice of destination, its coordinates are sent wirelessly to your vehicle's navigation system.

● **eDestination**
  With the eDestination feature, you can go online, via the Lexus.com owner's Web site, to select and organize destinations of your choice and then wirelessly send them to your vehicle's navigation system.
  You can store up to 200 locations online to access and update at any time.
  Your locations can be organized into up to 20 personalized folders.
  You must first go online at www.lexus.com and go to the "Owners" section where you will need to register and log in. After this, you can create your personalized folders containing the locations you wish to send to your vehicle. (See Lexus Enform Guide for more information.)

● **XM$^®$ Sports and Stocks[2]**

  XM$^®$ Sports and Stocks is a service included with XM$^®$ satellite radio subscriptions for Lexus Enform vehicles. With this service, you can receive updates via the navigation system on your personally selected sports teams and stocks.

● **XM NavWeather™**[*3]

The subscription-based XM NavWeather™ service allows the navigation system to display weather information on the map.

● **XM® NavTraffic**[*3]

The subscription-based XM® NavTraffic service allows the navigation system to display traffic information on the map.

▶ **The following navigation-based Lexus Enform features are available without a subscription:**

● **Lexus Insider**

Lexus Insider is an optional service that can send audio messages, or articles, to participating owner's vehicles via the navigation system. Potential Lexus Insider subjects might include, for example, Lexus vehicle technology tips, updates on regional Lexus events, or audio excerpts from Lexus Magazine articles. Up to 20 articles can be stored at a time.

● **Voice Command**

The voice command system enables you to operate the navigation system, audio system and hands-free system by giving a command.

[*1]: U.S. Patent No. 7,508,298 B2

[*2]: Available at no extra charge with an active XM® satellite radio subscription.

[*3]: Available via separate XM® subscription(s).

■ Subscription

After you have signed the Telematics Subscription Service Agreement and are enrolled, you can begin receiving services. A variety of subscription terms is available for purchase.
Contact your Lexus dealer, call 1-800-25-LEXUS (1-800-255-3987), or push the "Destination Assist" button in your vehicle for further subscription details. XM® NavTraffic and XM NavWeather™ require separate XM® subscription(s). XM® Sports and Stocks is available with an XM® Satellite Radio subscription. After a 90-day free trial, you must set up the appropriate XM® subscription(s) to continue receiving these services.