
Technical Manual
and
Replacement Parts List

FREEZER

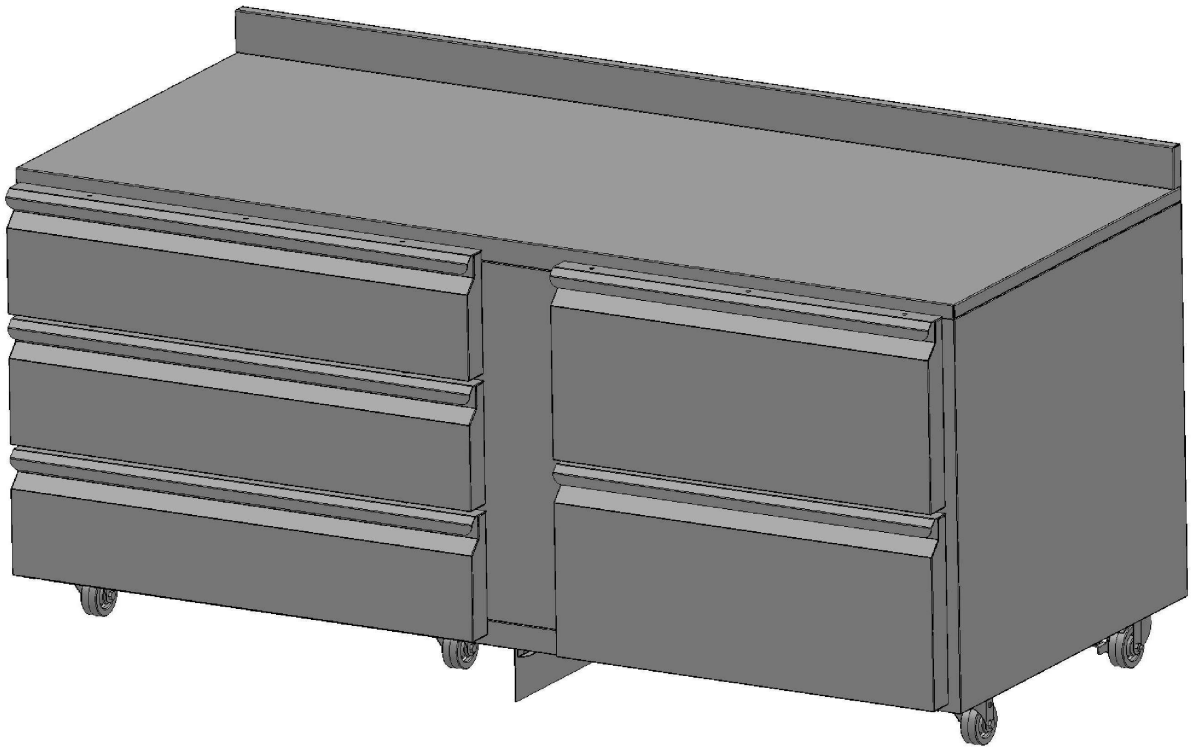

MODEL SKF72D/C10

1600 Xenium Lane North, Minneapolis, MN 55441-3787
Phone (763) 923-2441

SILVER KING®

FORM NO. 38198 REV A

Specifications Subject to Change Without Notice.

TECHNICAL MANUAL
SILVER KING FREEZER
MODEL SKF72D

Thank you for purchasing Silver King food service equipment. Our goal is to provide our customers with the most reliable equipment in the industry today. Please read this manual and the accompanying warranty information before operating your new Silver King unit.

INSPECT FOR DAMAGE AND UNCRATE

Upon delivery of your new Silver King unit, uncrate at once to inspect for possible freight damage following the instructions printed on the exterior of the container. Report any damages to the carrier responsible for transportation and promptly present a claim for any evidence of mishandling. Save all packaging materials if a claim is filed.

INSTALLATION

The stainless steel exterior of the cabinet has been protected by a plastic covering during manufacturing and shipping. This covering can be readily stripped before installation. After removing this covering, wash the interior and exterior surfaces using a warm, mild soapy water solution and a sponge or cloth, rinse with clean water and dry.

Legs/Casters

The unit comes with casters. To install them, tip the unit on its back and attach the casters with bolts provided in the base of the unit. The casters with brakes should be installed at the front of the cabinet. Make sure that they are installed tightly to prevent future thread wear. Periodically check for tightness.

Drawers

To remove the drawers for cleaning, simply open them fully, release gray tabs, and lift up on the front of the drawer to remove the front wheels from the drawer tracks, continue to slide the drawer out until the rear wheels reach the end of the tracks and lift the drawer out of the tracks. To reinstall the drawer, insert the rear wheels of the drawer into the drawer tracks and slide the drawer back until the front wheels on the drawer can be inserted into the track, push the drawer into the cabinet, pull the drawer back out and press the gray tabs back into the locked position. The drawer pans can be removed by lifting them out with the drawer extended. The rolling drawer tracks can be removed for cleaning when the drawers are removed from the cabinet. Pull each track out half way, push the gray tab on the inside rear of the track back, and pull the track out.. The drawer slide system is rated for a maximum load of 200 pounds. The drawers are not designed for or intended to be used as a surface to stand on. At no time should the drawers be extended and used as a platform for standing on to reach elevated equipment.

Location

When locating your new freezer, convenience and accessibility are important considerations, but the following installation guidelines must be followed:

- Always avoid placing the freezer adjacent to an oven, heating element or hot air source that would affect the operation of the unit.
- For proper ventilation, the bottom front and rear of the unit must not be obstructed. The unit must be on legs or casters to raise it off the floor. The unit can be installed tight on the sides.
- The unit must be level or tilted backwards slightly.

Electrical Connections
Be sure to check the data plate, located on the liner of the cabinet, for required voltage prior to connecting the unit to power. The specifications on the data plate supersede any future discussion.

The standard freezer is equipped with an eight (8) foot power cord that requires a 115 Volt, 60 Cycle, 1 Phase properly grounded electrical receptacle. The power cord comes with a 3 prong plug for grounding purposes. Any attempt to cut off the grounding spike or to connect to an ungrounded adapter plug will void the warranty, terminate the manufacturers responsibility and could result in serious injury.

The circuit must be protected with a 15 or 20 ampere fuse or breaker. The unit must be isolated on a circuit and not plugged into an extension cord.

OPERATION
Initial start up
After satisfying the installation requirements, the freezer is ready to start. The Compressor will start when the power cord is connected to the required power source. If the Compressor does not start when the unit is initially plugged in, check to make sure that the Temperature Control is not in the off position. Allow the unit to run for two hours before loading it with product. When loading the unit with product, take care not to block the air flow in the cabinet as this would affect the units performance.

Temperature Control
The Temperature Control is located on the back of the cabinet and is factory set to maintain an average cabinet temperature of approximately 0 Deg F. To obtain colder temperatures, press and hold the set button until the set point value flashes. Use the up or down arrow buttons to change the value and then press the set button again. Allow the unit a minimum of one hour to respond to a control setting adjustment.

Defrost
Your Silver King freezer is an automatic defrost unit and no additional plumbing is required. Automatic defrosting is accomplished by a defrost heater and timer. Frost buildup on the Evaporator Coil is cleared at five hour intervals. Defrost water is collected in a pan located in the compressor compartment where it is evaporated into the room air. It is important that the unit be installed level to allow proper drainage of the condensate water.

MAINTENANCE
Preventative maintenance is minimal although the following few steps are very important to continued operation and maximizing the life of the appliance.

Cabinet Surfaces
The cabinet interior is aluminum and the exterior is stainless steel. These surfaces should be cleaned periodically with a solution of warm water and mild soap, rinsed and wiped dry with a soft cloth. A good stainless steel cleaner can also be used. Should a surface become stained, do not attempt to clean with an abrasive cleanser or scouring pad. Use a soft cleanser and rub with the grain of the metal to avoid scratching the surface. Do not use chlorinated cleaners. Always rinse well and dry after cleaning.

Condenser
Periodically, accumulated dust must be removed from the condenser. First, disconnect the unit from the power supply. To clear the dust, vacuum or brush the condenser at the rear of the cabinet. This will need to be done regularly to maintain the compressor warranty!

Drawer Gasket
The Drawer Gasket will collect dirt and should be wiped clean with a warm, mild soapy water solution to extend its life and assure maximum cabinet performance and life.

MODEL _____ SERIAL NO._____ DATE INSTALLED _____

MANUAL TÉCNICO
CONGELADOR SILVER KING
MODELO SKF72D

Gracias por comprar un equipo de servicio para alimentos Silver King. Nuestro objetivo es proporcionar a nuestros clientes el equipo más confiable en la industria actual. Sírvase leer este manual y la información sobre garantía que se adjunta antes de operar su nueva unidad Silver King. Asegúrese de completar y enviar la tarjeta de garantía en los 10 días siguientes a la compra a fin de validar su garantía.

INSPECCIONE SI EXISTEN DAÑOS Y RETIRE LA UNIDAD DE LA CAJA DE EMBALAJE

Una vez que le ha sido entregada su nueva unidad Silver King, retírela de la caja de embalaje para verificar posibles daños por flete siguiendo las instrucciones impresas en el exterior del contenedor. Informe sobre cualquier daño al transportista responsable y presente inmediatamente un reclamo por cualquier evidencia de mala manipulación. Si se presenta una denuncia, guarde todos los materiales de embalaje.

INSTALACIÓN

El exterior de acero inoxidable del gabinete ha sido protegido con una cubierta de plástico durante la fabricación y envío. Esta cubierta puede ser retirada fácilmente antes de la instalación. Luego de retirar ésta cubierta, lave las superficies del interior y exterior usando una solución de agua tibia con jabón suave y una esponja o tela; enjuague con agua limpia y seca.

Patas/Ruedecillas

La unidad está equipada con Ruedecillas. Para instalarlas, incline la unidad sobre su parte posterior y enrosque las Ruedecillas en las cuatro placas de roscado en la base de la unidad. Las ruedecillas con frenos deben ser instaladas al frente del gabinete. Asegúrese que sean instaladas de manera firme para evitar un futuro desgaste de la rosca. Revise el ajuste de manera periódica.

Cajones

Para extraer los cajones para limpiarlos, simplemente ábralos por completo, levante la sección frontal del cajón para extraer los rodillos frontales de las ranuras del cajón, siga deslizando el cajón hasta que los rodillos posteriores lleguen al extremo de las ranuras y luego levante el cajón para extraerlo. Para instalarlo de nuevo, inserte las ruedas posteriores de tal manera que encajen con las ranuras del cajón y deslice el cajón hasta que las ruedas frontales se acoplen en las ranuras, empuje el cajón hacia el interior del gabinete. Las bases de los cajones pueden extraerse levantándolas mientras el cajón está extendido. Las ranuras de los cajones pueden extraerse para limpiarlas una vez que haya extraído los cajones del gabinete. Cuando estén las ranuras acopladas dentro del gabinete, simplemente levante la ranura para removerla. El sistema lateral del cajón puede soportar una carga de hasta 200 libras. Los cajones no están diseñados ni deben utilizarse como superficie de soporte. En ningún momento, extienda los cajones para utilizarlos como plataforma de soporte o como base para alcanzar un equipo elevado.

Ubicación

Al ubicar su nueva refrigeradora, debe tomar en consideración la comodidad y accesibilidad. Además, debe seguir las siguientes pautas de instalación:

- Siempre evite ubicar la refrigeradora cerca a un horno, elemento de calor o fuente de aire caliente que pudiera afectar la operación de la unidad.
- Para una adecuada ventilación, la cara inferior de la unidad no debe ser obstruida. La unidad debe encontrarse sobre patas o ruedecillas para elevarla del piso. La unidad puede ser instalada fija en los lados y en la parte posterior.
- La unidad debe estar nivelada o inclinada ligeramente hacia atrás.

Conexiones Eléctricas
Asegúrese de revisar la placa de información, ubicada en el revestimiento del gabinete, para conocer el voltaje requerido, antes de conectar la unidad a la corriente. Las especificaciones en la placa de información invalidan cualquier discusión futura.

El congelador estándar está equipado con un cable de transmisión de energía de 2,43 metros (8 pies) que requiere un receptor eléctrico con descarga a tierra de 115 Voltios, 60 Ciclos, 1 Fase. El cable de transmisión de energía incluye un enchufe de tres patas para la descarga a tierra. Cualquier intento de cortar la pata de descarga a tierra o de conectar el enchufe a un adaptador que no posea descarga a tierra anulará la garantía, eximirá a los fabricantes de responsabilidad y podría resultar en un serio daño.

El circuito debe estar protegido con un fusible o cortacircuitos de 15 o 20 amperios. La unidad debe ser aislada en un circuito y no debe ser conectada a un cable de extensión.

OPERACIÓN
Arranque inicial
Luego de haber cumplido con los requisitos de instalación, la refrigeradora está lista para arrancar. La Compresora arrancará cuando el cable de corriente se encuentre conectado a la fuente de poder requerida. Si la Compresora no arranca cuando la unidad es inicialmente enchufada, revise y asegúrese que el Control de Temperatura no se encuentra en posición de apagado. Deje que la unidad funcione durante dos horas antes de cargarla con producto. Cuando cargue la unidad con producto, tenga cuidado de no bloquear el flujo de aire en el gabinete pues esto afectará el rendimiento de la unidad.

Control de Temperatura
El Control de Temperatura está ubicado en la pared posterior del revestimiento del gabinete y está ajustado en fábrica para mantener una temperatura promedio de aproximadamente -18 Grados Centígrados (0 Grado Fahrenheit). Para obtener temperaturas más bajas gire la perilla de Control de temperatura en el sentido de las agujas del reloj y viceversa. Espere un mínimo de una hora para que la unidad responda a un ajuste de control.

Descongelamiento
Su congelador Silver King es una unidad con descongelamiento automático y no se requieren trabajos de plomería adicionales. El descongelamiento automático se produce por medio de un calefactor descongelante y un controlador del encendido. La escarcha generada en la bobina del condensador es eliminada en intervalos de seis horas. El agua descongelada se almacena en un panel ubicado en el compartimiento del compresor, desde donde se evapora al aire del ambiente. Es importante que la unidad esté instalada derecha para permitir el desagüe adecuado del agua descongelada.

MANTENIMIENTO
El mantenimiento preventivo es mínimo; sin embargo, estos pasos son muy importantes para una operación continua y para maximizar la vida del artefacto.

Superficies del Gabinete
El interior del gabinete es de aluminio y de acero inoxidable y el exterior, de acero inoxidable. Estas superficies deben ser limpiadas periódicamente con una solución de agua tibia y jabón suave, enjuagadas y secadas con una tela suave. También puede emplearse un buen limpiador de acero inoxidable. En caso de que una superficie se haya teñido, no intente limpiarla con un limpiador abrasivo o esponja para frotado. Use un limpiador suave y frote con el granulo del metal para evitar arañar la superficie. No use limpiadores con cloro. Siempre enjuague bien y seque después de la limpieza.

Condensador
El polvo acumulado en el condensador debe ser retirado en forma periódica. En primer lugar, desconecte la unidad de la fuente de energía. Para retirar el polvo, aspire o cepille el condensador ubicado en la parte trasera del gabinete. ¡Esta operación debe ser llevada a cabo con regularidad para mantener la vigencia de la garantía!

Juntas del cajón
Las juntas del cajón acumulan la suciedad y deben limpiarse con una solución neutra de agua y jabón a temperatura media a fin de extender su vida útil y garantizar el mejor rendimiento y duración del gabinete.

MANUEL TECHNIQUE
DU CONGÉLATEUR SILVER KING
MODELE SKF72D

Merci d'avoir choisi un équipement Silver King. Notre objectif est d'offrir à nos clients l'équipement le plus fiable de l'industrie. Veuillez lire ce manuel et les informations relatives à la garantie avant d'utiliser votre nouvelle unité Silver King. Assurez-vous de remplir et de renvoyer la carte de garantie dans les 10 jours suivant votre achat pour valider votre garantie.

VERIFIEZ L'ABSENCE DE DOMMAGES ET DE DEFAUTS

Dès réception de votre nouveau Silver King, veuillez l'examiner et le tester pour vérifier l'absence de dommages. Pour ce faire, suivez les instructions imprimées sur la face externe du conteneur. Signalez les dommages au transporteur et présentez une réclamation en cas de mauvaise manipulation. Conservez l'emballage en cas de réclamation.

INSTALLATION

La surface externe en acier inox de l'armoire a été protégée à l'aide d'un revêtement en plastique durant la fabrication et pendant le transport. Retirez ce revêtement avant l'installation. Ensuite, nettoyez les surfaces interne et externe à l'aide d'eau savonneuse chaude et d'une éponge ou d'un chiffon doux, rincez et séchez.

Pieds/roulettes

L'unité dispose de roulettes. Pour les installer, retournez l'unité et vissez les roulettes dans les quatre plaques taraudées de la base de l'unité. Installez les roulettes avec frein à l'avant de l'armoire. Assurez-vous que vous les avez installées fermement afin d'éviter l'usure des filets. Vérifiez régulièrement le serrage.

Tiroirs

Pour retirer les tiroirs afin de les nettoyer, ouvrez-les simplement entièrement, soulevez le devant du tiroir pour retirer les roulettes avant des rails du tiroir, continuez à faire glisser pour sortir le tiroir jusqu'à ce que les roulettes arrière atteignent l'extrémité des rails et retirez le tiroir des rails. Pour réinstaller le tiroir, insérez les roulettes arrière du tiroir dans les rails du tiroir et refaites glisser le tiroir jusqu'à ce que les roulettes avant du tiroir puissent être insérées dans le rail, poussez le tiroir dans le meuble. Les casseroles du tiroir peuvent être retirées en les soulevant avec le tiroir ouvert. Les rails du tiroir peuvent être retirés pour nettoyage lorsque les tiroirs sont retirés du meuble. Avec le rail entièrement dans le meuble, soulevez simplement le rail du tiroir pour le retirer du meuble. Le système de glissière du tiroir est conçu pour une charge maximale de 200 livres (90 kg). Les tiroirs ne sont pas conçus ou prévus pour être utilisés en tant que surface pour se tenir dessus. A aucun moment les tiroirs ne devront être ouverts et utilisés comme plateforme pour se tenir dessus pour atteindre un équipement placé en hauteur.

Emplacement

Lorsque vous placez votre réfrigérateur, tenez compte de la facilité d'accès et suivez les recommandations suivantes :

- Evitez de placer le réfrigérateur à proximité d'un four, d'une source de chaleur ou d'air chaud car ce pourrait provoquer des dysfonctionnements.
- Pour une correcte ventilation, la face inférieure avant de l'unité ne doit pas être obstruée. Pour séparer l'unité du sol, utilisez des pieds ou des roulettes. Les faces latérales et arrière peuvent être appuyées contre le mur.
- L'unité doit être de niveau ou légèrement inclinée vers l'arrière.

Branchements électriques
Vérifiez la tension indiquée sur la plaque de caractéristiques, placée sur le plan de l'armoire, avant de brancher l'unité au secteur. Les caractéristiques de la plaque sont les seules valables.

Le congélateur standard est muni d'un cordon d'alimentation long de huit (8) pieds qui exige une prise de courant convenablement mise à la terre de 115 volts, 60 cycles/s, courant monophasé. Le cordon d'alimentation se présente avec une fiche à trois broches dans un but de mise à la terre. Toute tentative de couper la pointe de mise à la terre ou de connecter l'unité à une fiche d'adaptateur non mise à la terre annulera la garantie, mettra fin à la responsabilité des fabricants et peut produire des blessures sérieuses.

Le circuit doit être protégé à l'aide d'un fusible de 15 ou 20 ampères ou d'un rupteur. L'unité doit être isolée sur un circuit. Ne la branchez pas sur une allonge.

UTILISATION
Première utilisation
Une fois son installation correcte terminée, l'unité est prête. Le compresseur démarre lorsque vous branchez le cordon d'alimentation à une source de courant. Si le compresseur ne démarre pas lors du branchement de l'unité, vérifiez que le thermostat n'est pas désactivé. Laissez fonctionner l'unité durant deux heures avant de la charger. Lorsque vous chargez l'unité, n'obstruez pas la circulation de l'air dans l'armoire car ce pourrait entraîner des dysfonctionnements.

Réglage de température
Le réglage de température est situé sur la paroi arrière de l'armoire ; il est établi en usine pour maintenir une température moyenne de l'armoire de 0 degré F. Pour obtenir des températures plus froides, faites tourner la tige de commande de température dans le sens horaire et vice versa. Laissez à l'unité au moins une heure pour répondre à un réglage de fixation de régulation.

Dégivrage
Votre congélateur Silver King est une unité à dégivrage automatique. Aucune tuyauterie supplémentaire n'est requise. Le dégivrage automatique est accompli par un réchauffeur de dégivrage et une minuterie. L'accumulation de givre sur le serpentin de l'évaporateur est dégagée à des intervalles de six heures. L'eau de dégivrage est recueillie dans un récipient situé dans le compartiment du compresseur où elle s'évapore dans l'air de la salle. Il est important que l'unité soit installée horizontalement pour permettre une évacuation correcte du condensat.

ENTRETIEN
L'entretien préventif est minime mais il est essentiel pour permettre le bon fonctionnement et la longue durée de service de l'appareil.

Surfaces de l'armoire
La partie interne de l'armoire est en aluminium et en acier inox et la partie extérieure est en acier. Nettoyez ces surfaces régulièrement à l'aide d'une solution d'eau chaude et de détergent doux, rincez et séchez à l'aide d'un chiffon. Vous pouvez également utiliser des éponges en acier inox. Si les surfaces s'oxydent, n'utilisez pas de produits abrasifs ou agressifs. Utilisez un chiffon doux et frottez dans le sens du grain afin de ne pas griffer la surface. N'utilisez pas d'eau de javel. Rincez et séchez après le nettoyage.

Condenseur
Il faut nettoyer périodiquement le condenseur pour enlever la poussière. Débranchez d'abord l'unité de l'alimentation. Pour enlever la poussière, passez le condenseur à l'aspirateur ou brossez-le. Cela a besoin d'être fait régulièrement pour maintenir la garantie du compresseur !

Joint du tiroir
Le joint du tiroir collectera la saleté et devra être essuyé pour être nettoyé avec une solution d'eau chaude avec du savon doux afin de prolonger sa durée de vie et assurer au meuble, performance et durée de vie maximales.


MODELE_____ Nº DE SERIE_____ DATE INSTALLATION_____


AIR CURTAIN INSTALLATION INSTRUCTIONS


MODELS: SKP278, SKP2712, SKPZ27/D, SKR27D, SKF27D, SKR48, SKF48, SKP4812, SKP4818/D, SKR60, SKP6016, SKP6024/D, SKP7218, SKP7230, SKPZ60/D, SKPZ92/D


DO NOT OPERATE UNIT WITHOUT AIR CURTAIN INSTALLED

1. Disconnect unit from power source.
2. Tip the unit on its back and loosen the center screw along the front edge of the base.
3. Insert the tab on the end of the air curtain into the slot located along the rear lower edge of the unit.
4. Slip the opposite end of the air curtain under the screw head loosened in step 2, pull forward, and tighten screw to secure the air curtain to the base.
5. Install legs or casters.
6. Return unit to original upright position.

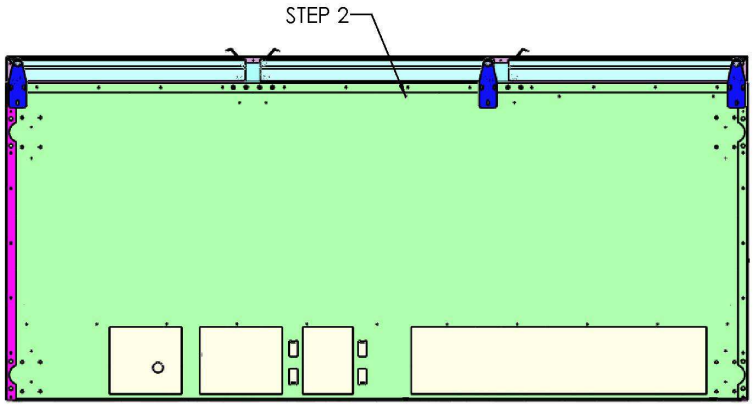


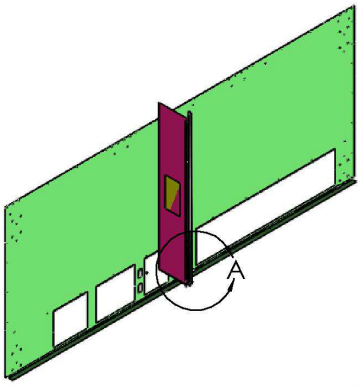


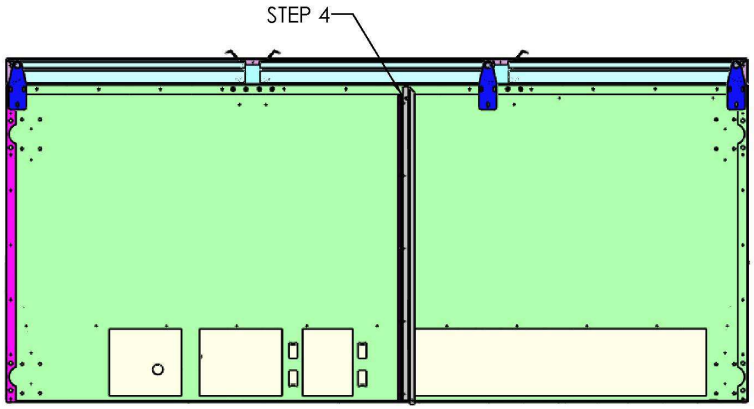


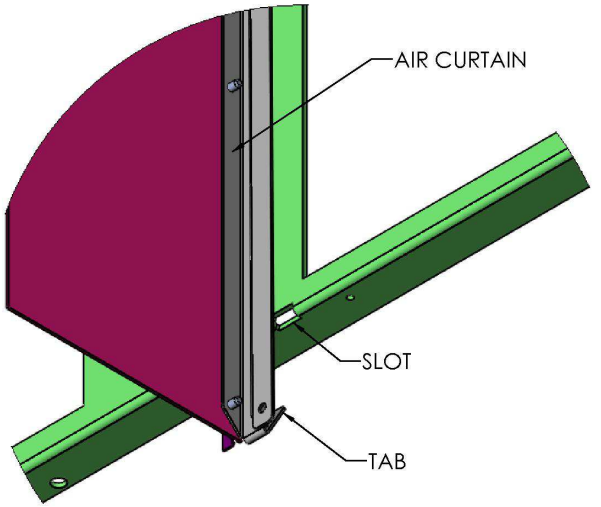


STEP 3

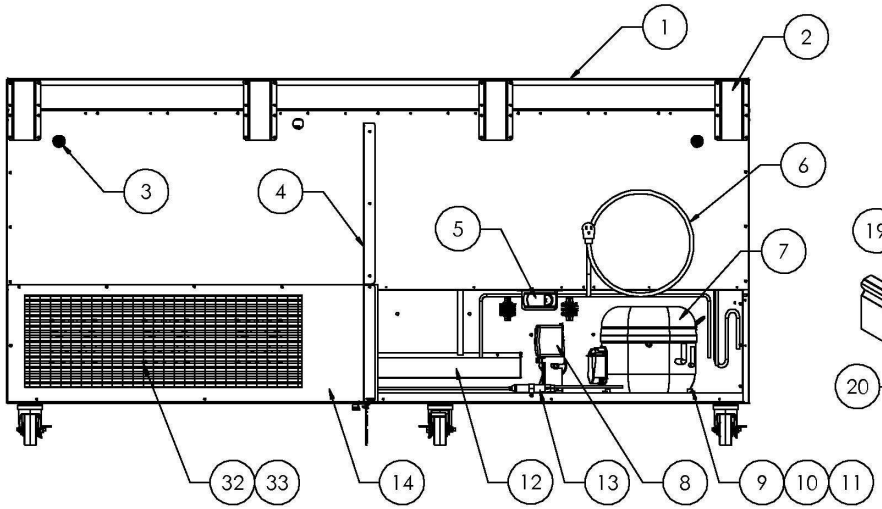
1
2
3
4
5
6
7
32
33
14
12
13
8
9
10
11

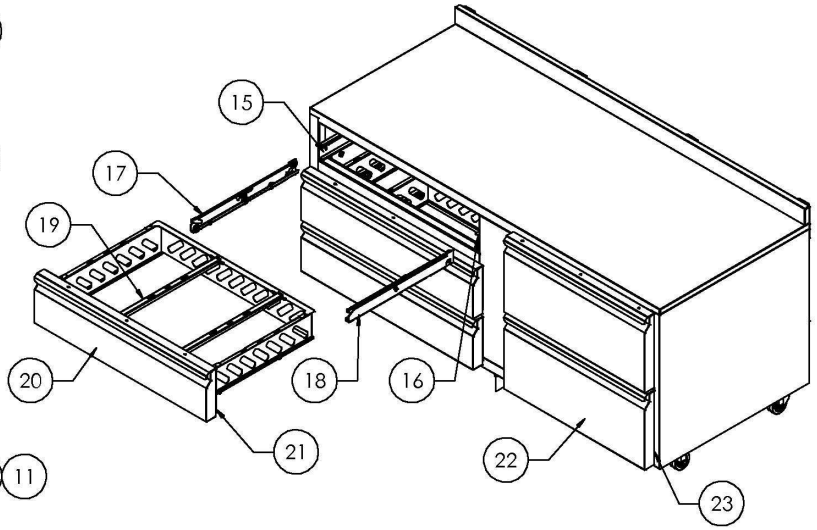
15
17
19
20
21
18
16
22
23

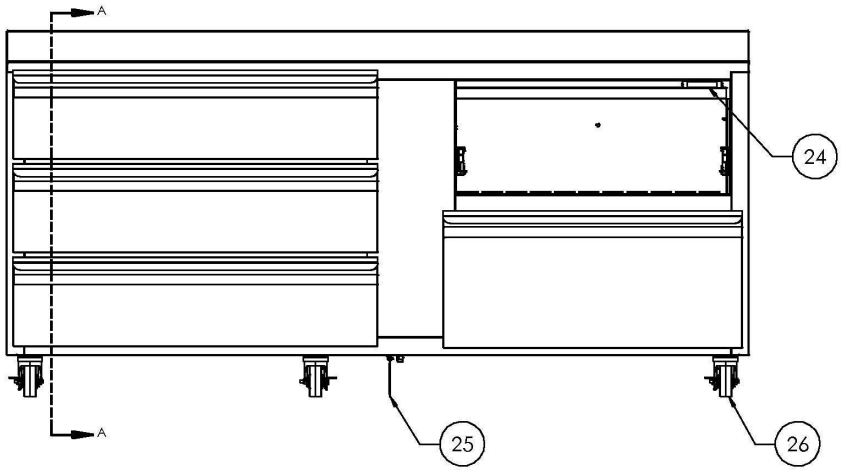
A
A
24
25
26

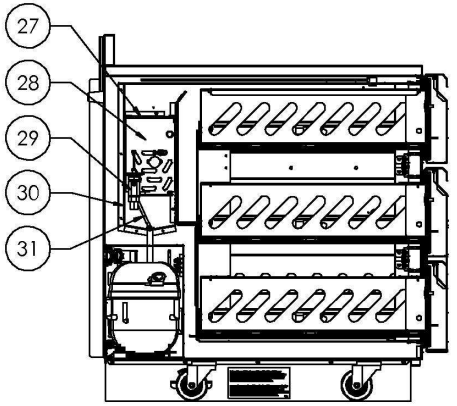
27
28
29
30
31


SECTION A-A

REPLACEMENT PARTS LIST - SKF72D

ITEM NO.	PART DESCRIPTION	PART NO.
1	BACKSPLASH	38200
2	SUPPORT BRACKET BACKSPLASH	38225
3	BUMPER	99574
4	AIR DIVIDER REAR	38221
5	TEMPERATURE CONTROL ELECTR 115V (PROGRAMMED)	38553
	TEMPERATURE CONTROL ELECTR 230V (PROGRAMMED)	38460
6	POWER CORD 115V	42667
	POWER CORD 230V EURO	43514
	POWER CORD 230V UK	25454
7	COMPRESSOR KIT W/ ELECTRICALS 115V/60HZ	10343-95
	COMPRESSOR KIT W/ ELECTRICALS 230V/50HZ	10343-96
8	ELECTRICAL KIT 115V (RELAY, OVERLOAD, CAPACITOR)	10344-95
	ELECTRICAL KIT 230V (RELAY, OVERLOAD, CAPACITOR)	10344-96
9	GROMMET COMPRESSOR MOUNT	20481
10	WASHER COMPRESSOR MOUNT	22401
11	HAIRPIN CLIP COMPRESSOR MOUNT	98106
12	CONDENSATE PAN ASSEMBLY	38215
13	DRIER	22677
14	REAR PANEL LH	38211
	REAR PANEL RH	38212
15	DRAWER SLIDE CABINET LH	34646
16	DRAWER SLIDE CABINET RH	34645
17	DRAWER SLIDE CENTER LH	34648
18	DRAWER SLIDE CENTER RH	34647
19	PAN ADAPTER DRAWER	28726
20	DRAWER ASSEMBLY LARGE	37920
21	DRAWER GASKET LARGE	37917
22	DRAWER ASSEMBLY SMALL	37822
23	DRAWER GASKET SMALL	34872
24	TEMPERATURE INDICATOR	22409
25	AIR CURTAIN ASSEMBLY	38354
26	CASTER KIT 4" (6 PER)	10314-78
27	FAN MOTOR EVAPORATOR 115V	37736
	FAN MOTOR EVAPORATOR 230V	37814
28	EVAPORATOR COIL	38484
29	EXPANSION VALVE 1/2 TON	38481
30	TEMPERATURE PROBE	30660
31	DEFROST HEATER 115V	38210
	DEFROST HEATER 230V	38275
32	CONDENSER COIL	38202
33	CONDENSER FAN MOTOR 115V	37736
	CONDENSER FAN MOTOR 230V	37814

FORM 38197

WHEN ORDERING REPLACEMENT PARTS, PLEASE PROVIDE MODEL AND SERIAL NUMBERS.

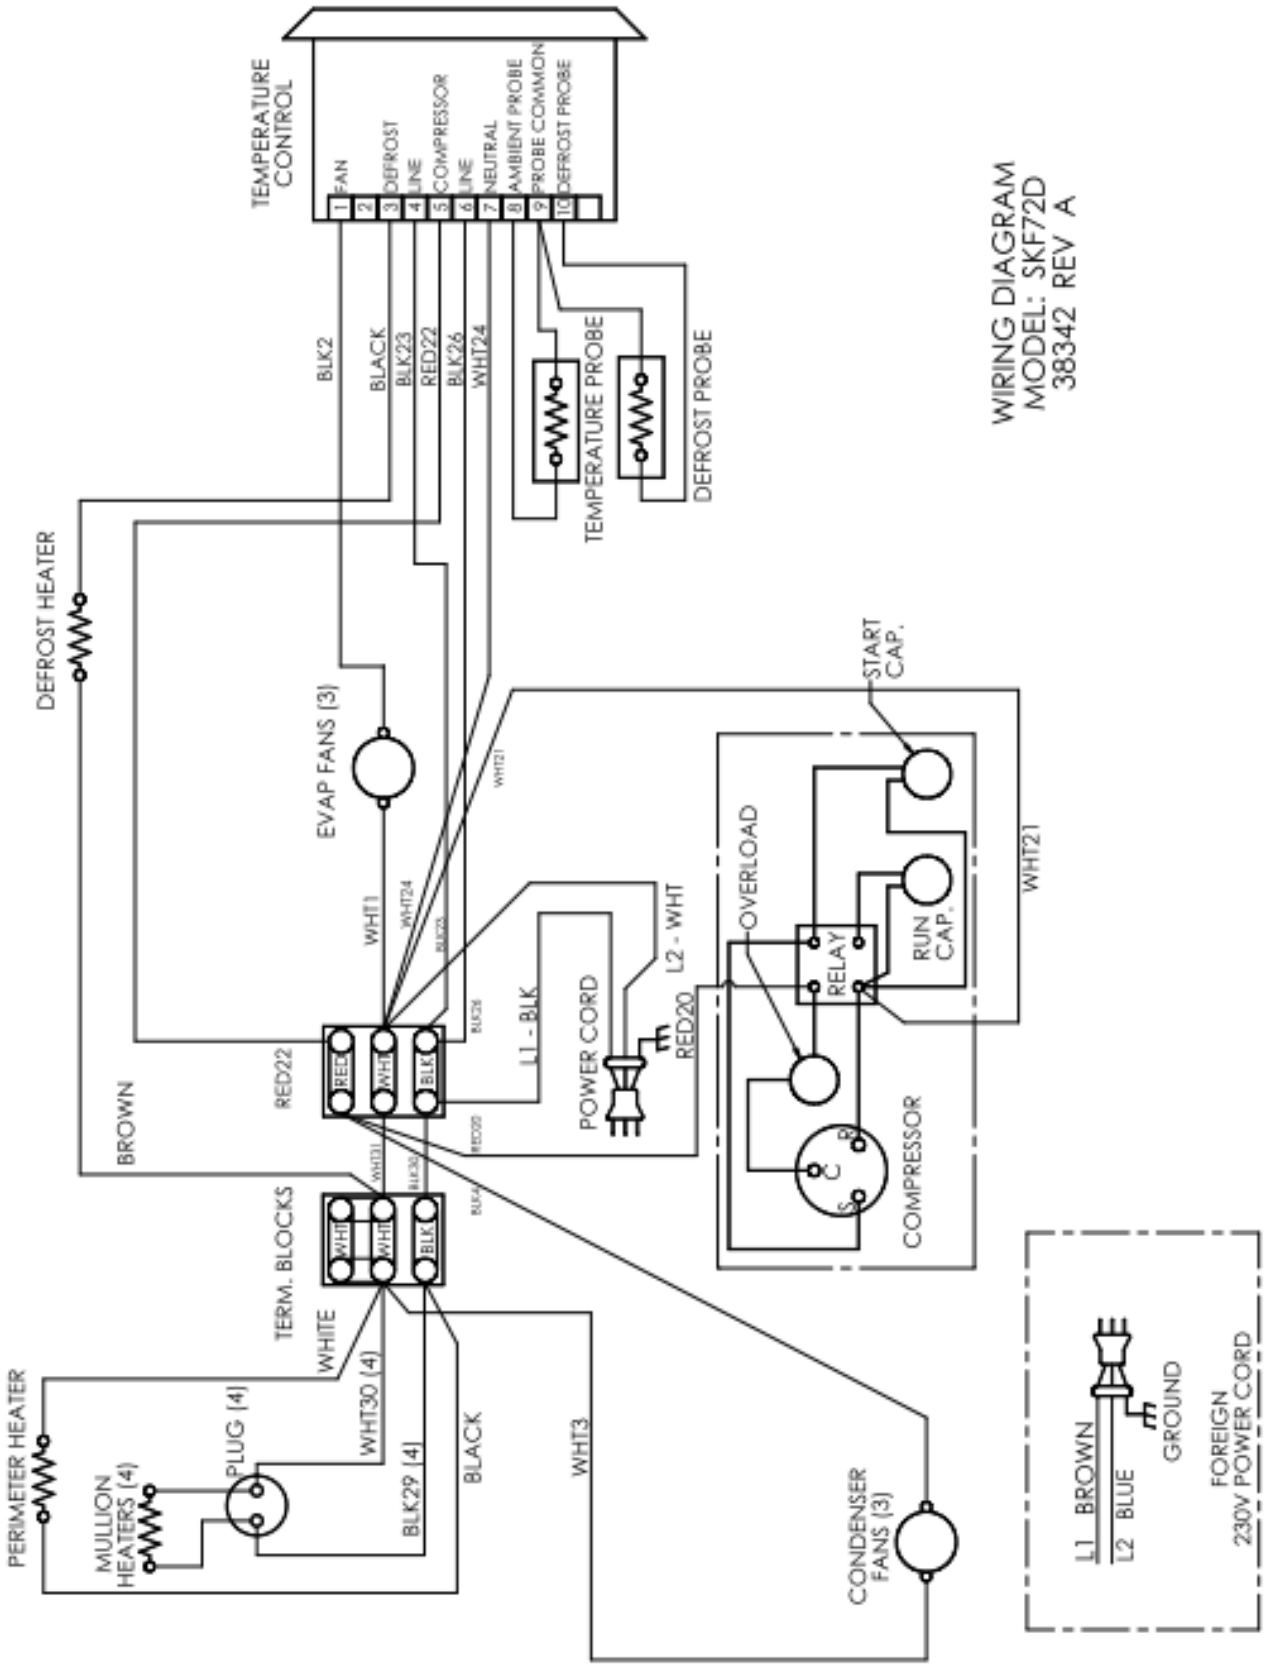
WIRING DIAGRAM
MODEL: SKF72D
38342 REV A
TEMPERATURE CONTROL
1 FAN
2
3 DEFROST
4 LINE
5 COMPRESSOR
6 LINE
7 NEUTRAL
8 AMBIENT PROBE
9 PROBE COMMON
10 DEFROST PROBE
BLK2
BLACK
BLK23
RED22
BLK26
WHT24
TEMPERATURE PROBE
DEFROST PROBE
DEFROST HEATER
EVAP FANS (3)
WHT1
WHT24
WHT21
START CAP.
OVERLOAD
RELAY
RUN CAP.
WHT21
L2 - WHT
L1 - BLK
POWER CORD
RED20
RED22
RED
WHT
BLK
BROWN
COMPRESSOR
C
R
S
TERM. BLOCKS
WHITE
WHT30 (4)
BLK29 (4)
BLACK
WHT3
PERIMETER HEATER
MULLION HEATERS (4)
PLUG (4)
CONDENSER FANS (3)
L1 BROWN
L2 BLUE
GROUND
FOREIGN
230V POWER CORD

LIMITED WARRANTY

Silver King Refrigeration Inc. warrants to the original purchaser of Silver King refrigerated equipment that the equipment shall be free from defects in material and workmanship under normal use and service as outlined in the Technical Manual. This limited warranty shall apply for a period of one (1) year from the date of original purchase. The Compressor will carry an additional four (4) year warranty. All warranties are subject to specific limitations outlined below.

This limited warranty does not apply to repair or replacement required as a result of carelessness, neglect and/or abuse, including improper installation, incorrect voltage supply, tampering with or altering components and/or equipment or failure to perform proper maintenance. Equipment damaged in transit, by fire, flood or an act of God is not covered. This limited warranty does not include freight, handling, installation, labor (following the one (1) year labor warranty period) or other incidental or consequential costs including product and/or economic loss. This limited warranty is in lieu of all other warranties, express or implied, including those of merchantability, and is non-transferable.

Specific provisions of this limited warranty are as follows:

One (1) Year Parts Warranty
Silver King warrants to the original purchaser of new Silver King equipment that such equipment and all parts thereof will be free of defects in material and workmanship, under normal use and service, for a period of one (1) year from the date of original purchase or 18 months from the date of shipment from the factory, whichever comes first, subject to all terms and conditions herein.

This warranty is limited to repairing or replacing any parts that, at Silver King's discretion, are deemed to be defective within the time period covered by this warranty. The one year parts warranty covers reasonable freight and handling charges. It does not cover special handling charges or expedited means for transport. Use of non-OEM parts may, at Silver King's discretion, void this warranty. If approved, warranty credit for non-OEM parts will be issued at the OEM cost.

Replacement parts sold separately are warranted for 90-days from date of purchase.

Five (5) Year Compressor Warranty
Silver King warrants to the original purchaser for a period of five (5) years from the date of original purchase or five (5) years and six (6) months from the date of shipment from the factory, whichever comes first, that it will replace the compressor with one of similar design and capacity, exclusive of delivery and installation charges, if it is found to Silver King's satisfaction to be inefficient or inoperative due to defects in material or factory workmanship. It is the owner's responsibility to return the serial plate of the defective compressor, or at Silver King's option the complete compressor, to the factory. Failure to do so will void the warranty.

Five (5) Year Heavy Duty Drawer Slide Warranty
Silver King warrants to the original purchaser for a period of five (5) years from the date of original purchase or five (5) years and six (6) months from the date of shipment from the factory, whichever comes first, that it will replace the heavy duty drawer slides with one of similar design and capacity, exclusive of delivery and installation charges, if it is found to Silver King's satisfaction to be inefficient or inoperative due to defects in material or factory workmanship.

One (1) Year Labor Warranty
Silver King warrants to the original purchaser for a period of one (1) year from the date of purchase or 18 months from the date of shipment from the factory, whichever comes first, a limited service labor warranty on Silver King refrigerated equipment subject to the following terms;
A factory issued Service Authorization Number must be obtained prior to work being performed under the labor warranty. Call your supplier or Silver King. Claims submitted without a Service Authorization Number will be paid at Silver King's discretion.
The labor warranty includes standard straight time labor charges in accordance with Silver King's Labor Warranty Guidelines and reasonable travel time, as determined by Silver King.
The warranty does not cover original installation, startup, normal adjustments or maintenance. Normal adjustments and maintenance include, but are not limited to; temperature control adjustments, temperature indicator calibrations, coil and filter cleaning, condensate drain cleaning.

A second service call for a related failure is not covered.

Use of refrigerants other than specified on the equipment serial plate voids the warranty.

All claims must include; model and serial number of equipment, date of purchase, date of failure, and a copy of the service invoice detailing the defect and service performed. No claim will be processed without this information. All claims must be filed within 60 days from date of service.

P/N 26355 Revision C

© 2013 Silver King Refrigeration, Inc.
1600 Xenium Lane
Minneapolis MN 55441