FireBall™ DVD and Music Manager DVDM-300

Quick Setup

Escient
6325 Digital Way, Indianapolis, Indiana 46278
Phone: 800-372-4368 Press "3" For Support
Hours: Monday - Friday 9:00am - 7pm EST
Fax: 317-616-6790
www.escient.com
Email: support@escient.com
Document Number: M22140-01A1
January 2005

1. Unpack Your New FireBall DVDM-300

- Unpack the FireBall, cables, and accessories (save the box).
- Install the included batteries into the remote and keyboard.
- Make note of the serial number (located on the back).

SERIAL NUMBER:

2. Connect FireBall to your Home Theater

A) Locate the included composite video and analog audio cables.
B) Connect FireBall to the "DVD" or other available A/V input on your receiver or TV.

Note: You may use optional s-video or component video cables and optional digital audio cables for the best picture and sound quality. This is also applicable to the next step, connecting changers to your FireBall. Contact your Escient dealer for more information.

3. Connect Changers to your FireBall

A) Locate the composite video and analog audio cables included with your changer.
B) Connect the composite video output from the first changer to the composite video input 1 on FireBall.
C) Connect the analog audio cables from the first changer to the FRONT LEFT and RIGHT inputs of the first 5.1 analog audio input on FireBall.
D) Locate the included RS-232 serial cable and 1/8" stereo S-Link/IR cable.
E) Connect the RS-232 serial cable from the first changer to COM port 1 on FireBall.
F) Connect the S-Link/IR cable from the "DVD-Control" jack on Kenwood changers to the S-Link/IR input 1 on FireBall. **DO NOT CONNECT FOR SONY DVD CHANGERS**
G) Repeat steps **A-F** for each additional changer using video, audio, COM, and S-Link/IR ports number 2 and 3 on FireBall.

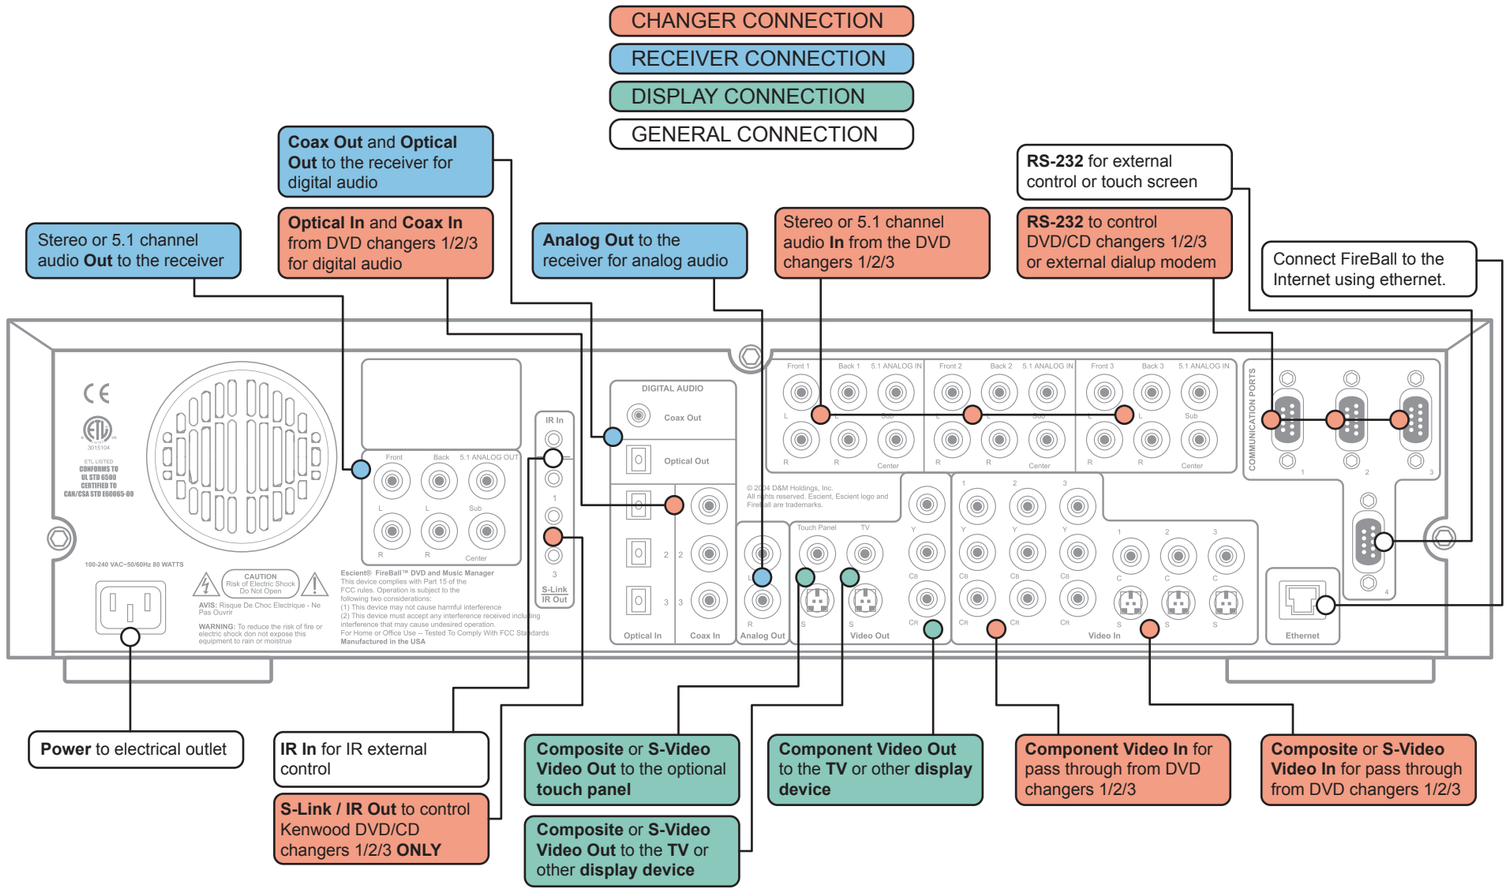

4. Connect FireBall to the Internet

Note: FireBall requires an Internet connection to identify the discs in the front panel drive and connected changers, to play Internet radio stations, and for general system maintenance.

- If you have a broadband (cable, DSL, ISDN) Internet Service Provider, connect the included ethernet cable from FireBall's ethernet jack to your ethernet network.
- If you have a Dialup Internet Service Provider, you'll need to purchase an external modem and connect it to one of the four serial ports.

Note: You may need to purchase additional network hardware such as a "router" or a "dialup external modem". Please contact your Escient dealer for more information.

5. Power Up!

- Plug each changer into an AC outlet.
- Plug FireBall into an AC outlet.
- The Standby LED on the front of the FireBall will begin to flash RED during the power on cycle. When the LED turns solid RED, the FireBall is ready for use.
- Press the power button on the front panel or on the remote control. The LED will turn solid BLUE and video will be displayed on the TV when the unit is on.

Note: You may have to press the "FB1" button on the remote to configure it to control FireBall. Also be sure the TV and receiver are turned on and set to the correct FireBall input.

6. Quick Start

- Use the remote control and follow the on-screen instructions.

©2005 Escient. All rights reserved. Escient and the Escient logo are registered trademarks and FireBall and Physital are trademarks of Digital Networks North America, Inc. All other trademarks are property of their respective owners. Escient reserves the right to change product hardware, features and software without notice. Upon any change, materials are updated as quickly as possible, but may not be reflected in documents already distributed. Supported hardware is updated continually. If you wish to interface with hardware that is not listed on this data sheet, please call Escient at 800.372.4368.

FireBall™ DVD and Music Manager DVDM-300

Time for Fun

Escient
6325 Digital Way, Indianapolis, Indiana 46278
Phone: 800-372-4368 Press "3" For Support
Hours: Monday - Friday 9:00am - 7pm EST
Fax: 317-616-6790
www.escient.com
Email: support@escient.com
Document Number: M22140-01A1
January 2005

Remote Overview

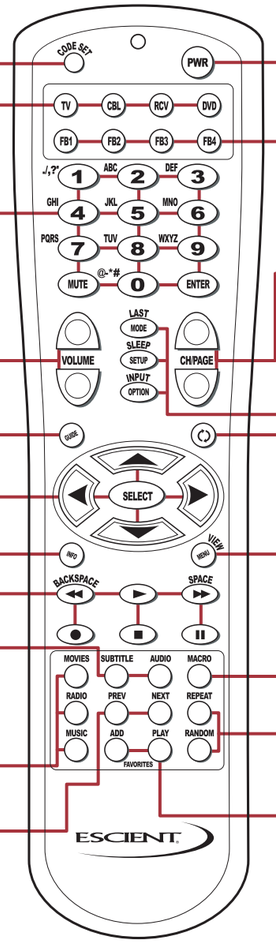

CODE SET
Code Set - used to set the universal IR source buttons. See manual for details.

UNIVERSAL SOURCE SELECT
TV / Cable / Receiver / DVD - used to configure the remote to control other devices. See manual for details on the universal remote functions.

KEY PAD
Alpha / Numeric / Enter - used for entering numbers and text. Also used for searching in the movies, music and radio guides.

VOLUME CONTROL
Volume Up / Volume Down / Mute - Universal remote can be configured to operate volume on TVs and receivers. See manual for detailed setup steps.

GUIDE
Guide / Player - toggles between Guide and Player screens.

NAVIGATION & SELECT
Up / Down / Left / Right / Select - used to navigate and select on-screen menus and buttons.

INFO
Info - displays additional movie and music info.

TRANSPORT CONTROLS
Rewind / Play / Forward / Record / Stop / Pause - used to control playback of movies and music. Also used for text entry and for canceling certain operations.

DVD FUNCTIONS
Subtitle / Audio - used to toggle subtitle and audio tracks on and off when watching a movie.

DVDM-300 GUIDE SELECT
Movies / iRadio / Music - used to select DVDM modes.

DISC PLAY FUNCTIONS
Previous / Next - skip disc functions.

POWER
Power - used to toggle the current source device on and off.

FIREBALL SELECT
FireBall 1 / FireBall 2 / FireBall 3 / FireBall 4 - use FB1 to control the DVDM. Use other FB buttons if additional FireBall products are installed.

CHANNEL / PAGE CONTROL
Channel/Page Up/Down - used to page up and down in Guide and Player screens.

CONTROL
Mode - changes music play modes: normal, random, repeat etc.
Setup - displays Setup menu.
Options - displays Options menu.

ALL / NONE
Toggle All or None on Select Guides.

VIEW / MENU
View / Menu - toggles through various guide views (artist, title, cover) and displays DVD menu when watching a movie.

MACRO FUNCTION
Macro Function - used to directly access various music, movie and radio items and controls.

MUSIC PLAY FUNCTIONS
Repeat / Random - used to cause the system to play the current group/genre in repeat or random playback mode.

MUSIC FAVORITES
Add-Favorites / Play-Favorites - used to add the currently highlighted music track to the Favorites playlist and to play the favorites playlist.

On-Screen Interface Overview

GUIDE

PLAYER

OPTIONS

SETUP

MOVIES

Movies Guide - Browse and manage your Movie collection

Movie Player - display full screen video (watch a movie)

Movie Options - allows you to create custom groups, edit disc information and access other movie features

Setup Menus - set user preferences and configure external changers

MUSIC

Music Guide - Browse and manage your Music collection

Music Player - display and control the currently playing music title

Music Options - allows you to create playlists and groups, edit disc information and access other music features

iRADIO

iRadio Guide - browse and manage Internet Radio stations

iRadio Player - displays the currently playing iRadio station, location, channels and speed (if available)

iRadio Options - allows you to create custom groups, tune new stations and access other iRadio features

Watch a Movie

- Press the Movies key on the remote.
- Highlight the Movie you want to watch.
- Press Play.
- The DVD movie will load and play.

Listen to Your Music

- Press the Music key on the remote.
- Highlight the Music Title you want to listen to.
- Press Play.
- The music begins to play.

Listen to an Internet Radio Station

- Press the iRadio key on the remote.
- Highlight the Station you want to listen to.
- Press Play.
- FireBall will connect and begin to stream (play) the station.

PHYSITAL™ ENTERTAINMENT PRODUCT

ESCIENT movieDB

gracenote cddb®