

## INSTALL INSTRUCTIONS WGI-D22 INTERIOR WINDOW GUARDS 2005-2006 DODGE MAGNUM

**TOOLS REQUIRED:**

Power drill

Drill bits – 1/8", 5/32"

T-25 tamperproof torx bit

Phillips screwdriver

**HARDWARE:**

**QTY DESCRIPTION**

1	Driver Side Window Guard
1	Passenger Side Window Guard
2	Upper mounting bracket
8	#10 x 3/4" Sheet metal screw
8	#10 x 1/2" Sheet metal screw
4	1/4" x 1/2" T-25 Tamperproof bolts
4	1/4" Flat Washers

**PART #**


WGI-D22-1
WGI-D22-6
WGI-MB-12-90
GSM33195
GSM33194
GSM34190
GSM31005

**Always!**

- Read all instructions before installing any Havis-Shields Equipment Corp products.
- Check for obstructions (Wire, brake lines, fuel tank, etc.) before drilling any holes!
- Use hardware provided with install kit

**SUBASSEMBLY:**

1. Bend window guard so it contours the door as shown in *photo #1*.
2. Determine the proper window guard for each window.
3. If installing aluminum door panels refer to those instructions at this time. They will need to be installed first.

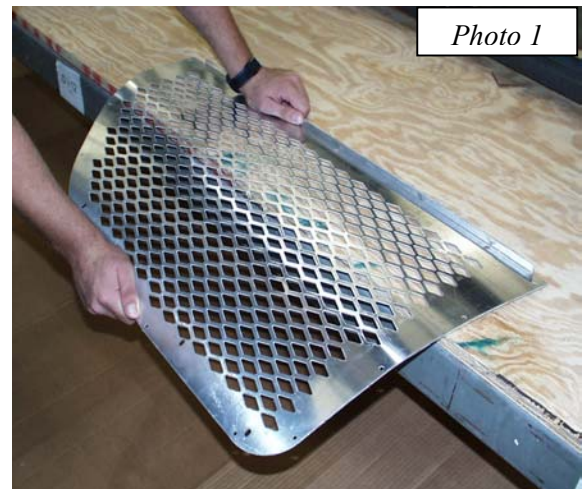

*Photo 1*

## INSTALL WINDOW GUARDS

- Loosely attach upper mounting bracket to window guard using  $\frac{1}{4}$ " x  $\frac{1}{2}$ " tamper proof screws and flat washers.
- Position screen to vehicle as shown in *photo #2*.
- Make sure you have the window guard centered on the door.
- Mark, drill  $\frac{1}{8}$ " holes, and attach lower mount using #10 x  $\frac{1}{2}$ " screws as shown in *photo #3*.

**Note:** Be sure the upper mounting brackets go under weather stripping and the notches go around the mounting plugs.

**Make sure the mounting holes will have metal material to drill into.**

- Press firmly against window guard and mark door where the upper mounting brackets are located
- Drill  $\frac{5}{32}$ " holes and mount to door using #10 x  $\frac{3}{4}$ " sheet metal screws.

Mount upper bracket using #10 x  $\frac{3}{4}$ " screws

