



SM221



CM097

-Also available with dual T-head configuration  
CM097-2

SM020

SM020-2



CM921




CM097

-Also available with dual T-head configuration  
CM097-2


CM090

CM090-2

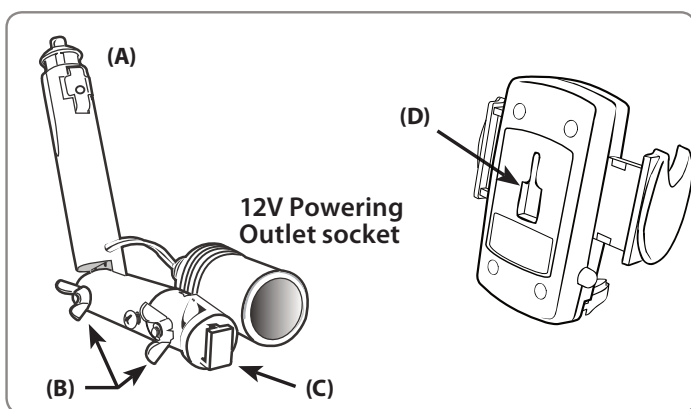

### Installation Instructions

- Step 1. Insert the DC Power plug (A) completely into the vehicle's 12V/lighter socket.
- Step 2. Adjust the angle of the pedestal arm by loosening/tightening the wing nuts (B) to the desired placement angle.
- Step 3. Attach your cradle or device to the pedestal by inserting the single T-tab (C) into the T-slot (D). Adjust the angle and rotation of the head by loosening/tightening the wing nuts (B).

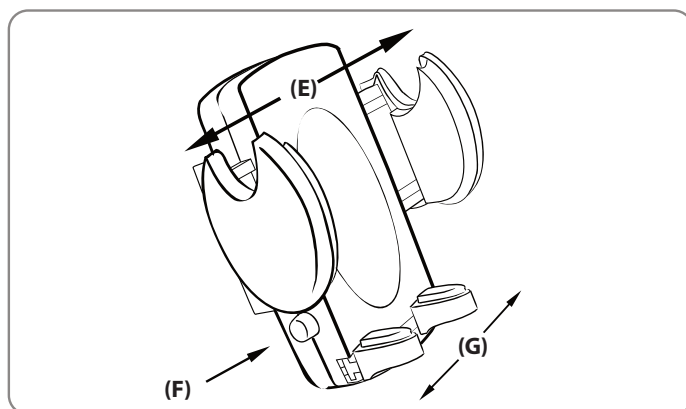

### Universal Cradle Instructions

- Step 1. If necessary, adjust the support legs (G) by sliding them laterally. These provide support for your device.
- Step 2. Place device on the support legs (G) and squeeze the side grip arms (E) until they fit securely to the device.
- Step 3. Push the release button (F) in order to release the device from the cradle.



### Safety Precautions

Do not install Arkon products over an air bag cover or within the air bag deployment zone. Arkon Resources, Inc. assumes no responsibility of liability for injury or death as a result of car crashes and/or air bag deployment.

Arkon Resources, Inc. is not responsible for any damages caused to your car, your device, or yourself due to the installation or use of the pedestal mount.

**ARKON**  
RESOURCES INC.

The Mobile Mounting Specialists™

Consumer Hotline:  
(USA) (800) 841-0884  
(INT'L) (626) 254-9005

Mon-Fri. 9am-5pm, PST © Copyright 2007 Arkon Resources, Inc.

[www.arkon.com](http://www.arkon.com)

Arcadia, CA 91006 USA

Made in Taiwan