

Firmware: PKH3 - Installation Instructions


Check for firmware updates before installing

Honda/Acura Transponder Interface: TYPE-C (7 Wire Connector)

Platform #05 firmware:- *PKT2, PKH1, PKH2, PKH3, PKH4, PKN2, PKM2, PKHY1, PKG3, PKG8

Downloadable @ www.XpressDownload.com

*Default Firmware

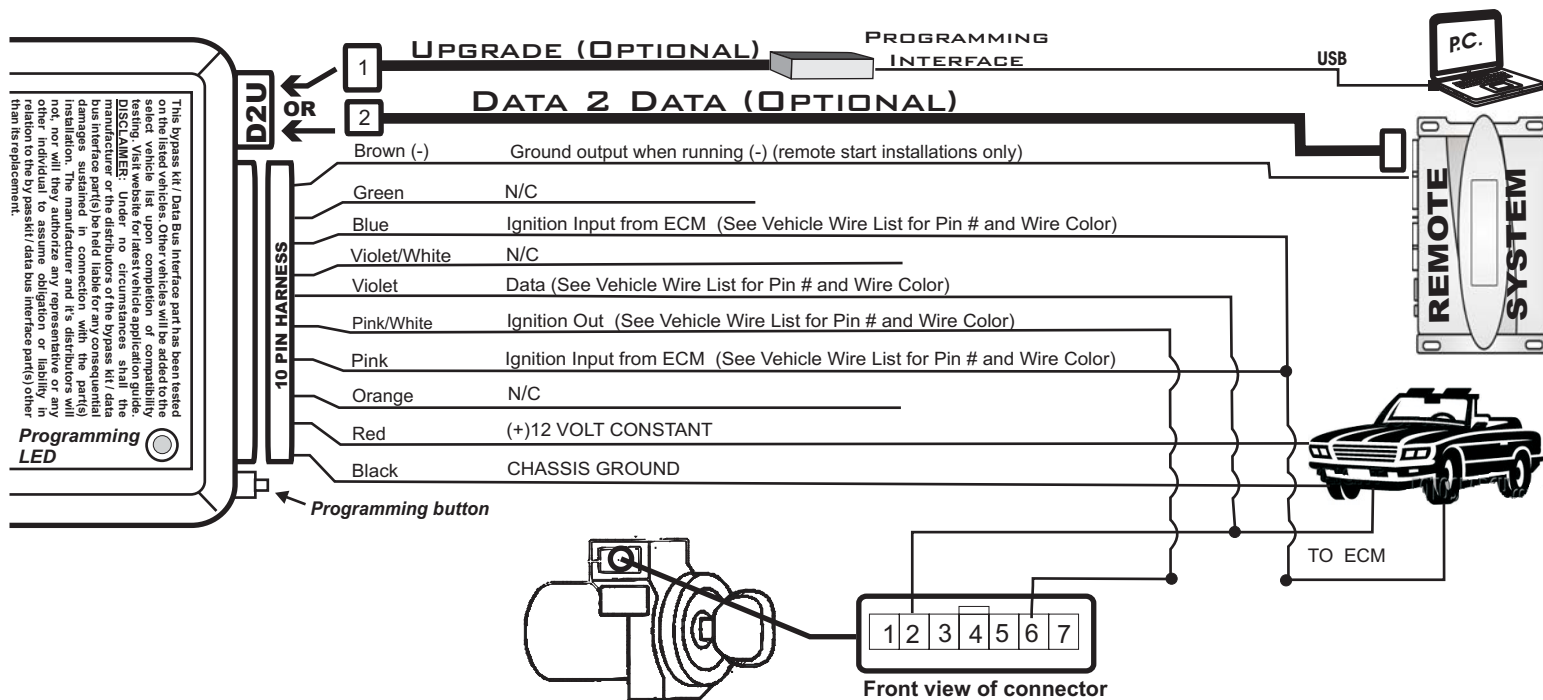

WIRE FUNCTIONS

10 PIN HARNESS	Function
Brown	Ground output when running (-) (remote start installations only)
Green	N/C
Blue	Ignition Input from ECM (See Vehicle Wire List for Pin # and Wire Color)
Violet/White	N/C
Violet	Data
Pink/White	Ignition Out (See Vehicle Wire List for Pin # and Wire Color)
Pink	Ignition Input from ECM (See Vehicle Wire List for Pin # and Wire Color)
Orange	N/C
Red	(+)12 VOLT CONSTANT
Black	CHASSIS GROUND

D2U This connector has dual functions: 1) XKLOADER Firmware Upgrades. 2) 4 Pin Data 2 Data connector to remote system, which replaces wire to wire (w2w) connection on the 10 Pin Harness.

VEHICLE	Data (Code)	Ignition	Ground (Gnd)
Acura EL 1.7 2005 - 01	Red/Blue Pos.:#2	Black/Yellow Pos.:#6	Brown/ Yellow Pos.:#1
Acura MDX 2005 - 03	Red Pos.:#2	Green/White Pos.:#6	Brown/ Yellow Pos.:#1
Acura RSX 2005 - 02	Red/Blue Pos.:#2	Black/Yellow Pos.:#6	Brown/ Yellow Pos.:#1
Acura TSX 2005 - 03	Red/Blue Pos.:#2	Black/Yellow Pos.:#6	Brown/ Yellow Pos.:#1
Acura TL 2005 - 04	Red/Blue Pos.:#2	Black/Blue Pos.:#6	Brown/ Yellow Pos.:#1
Honda Accord 2005 - 03	Red/Blue Pos.:#2	Black/Yellow Pos.:#6	Brown/ Yellow Pos.:#1
Honda Civic 2005 - 01	Red/Blue Pos.:#2	Black/Yellow Pos.:#6	Brown/ Yellow Pos.:#1
Honda CRV 2005 - 03	White Pos.:#2	Black/Yellow Pos.:#6	Brown/ Yellow Pos.:#1
Honda Element 2005 - 03	White Pos.:#2	Black/Yellow Pos.:#6	Brown/ Yellow Pos.:#1
Honda Pilot 2005	Red/Green Pos.:#2	Red/White Pos.:#6	Brown/ Yellow Pos.:#1
Honda Odyssey 2005	Red/Blue Pos.:#2	Black/Yellow Pos.:#6	Black Pos.:#1
Honda Ridgeline 2006	Red/Blue Pos.:#2	Black/Green Pos.:#6	Brown/ Yellow Pos.:#1

Module Programming

1. Press and hold programming button.
2. Turn the ignition key to the "ON" position, the LED will blink.
3. Release programming button.
4. Turn ignition key to the "OFF" position.

Reset

Press and hold programming button and plug module into 10 pin harness, LED comes ON. When LED goes OFF, release program button.

XK05-PKH3

XpressKit HW Platform 5: Transponder Data Override

DATA INTERFACE FUNCTIONS: Override OEM Transponder Immobilizer Via Data. (No Key Required). Interfaces directly with the latest model ignition immobilizer systems to provide seamless, safe and secure system integration for the purpose of adding aftermarket remote starting. Dependable in all weather conditions. XPRESSKIT - Upgradeable Vehicle Interface Solutions is the best option when reliable & secure remote starting is your goal.

Model	Year									
	'06	'05	'04	'03	'02	'01	'00	'99	'98	'97
Acura										
CL				●	●	●	●	●	●	●
EL		●								
EL 1.7			●	●	●	●				
Integra				●	●	●	●			
MDX		●	●	●	●	●	●			
RL			●	●	●	●	●	●	●	
RSX		●	●	●	●	●	●			
TL		●	●	●	●	●	●	●	●	
TSX		●	●							
Honda										
Accord	●	●	●	●	●	●	●	●	●	●
Accord Hybrid	●									
Civic		●	●	●	●	●				
CRV		●	●	●	●	●				
Element		●	●	●	●	●				
Odyssey		●	●	●	●	●	●	●	●	●
Pilot		●	●	●	●	●				
Prelude						●	●	●	●	●
Ridgeline	●									
S2000			●	●	●	●	●			
Year										
Model	'06	'05	'04	'03	'02	'01	'00	'99	'98	'97