



INSTALLATION INSTRUCTIONS

VEHICLE APPLICATIONS

Volvo S60 / V70 2001-04



KIT COMPONENTS



Housing

KIT FEATURES

- DIN Head Unit Provision with Pocket

TOOLS REQUIRED


- Phillips screw driver
- T-25 Torx Driver

Questions?
Call the Help Line
(800)253 TECH

● TABLE OF CONTENTS ●

●

- Dash Disassembly..... 1
- Kit Assembly
 - Volvo S60 / V70
 - DIN Head Unit Provision with Pocket..... 2
- Final Assembly
 - All Vehicles..... 4

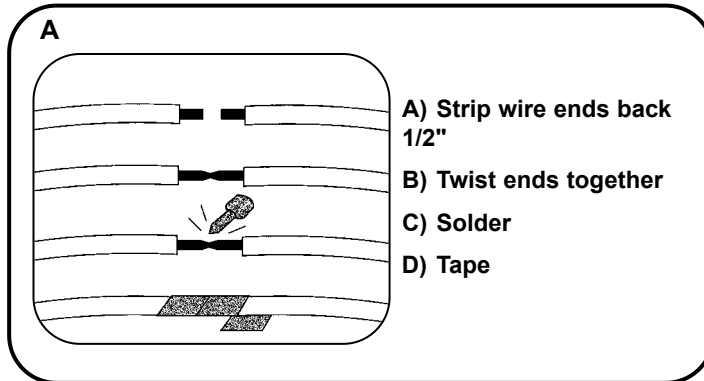

- 1 Locate the factory wiring harness in the dash. Metra recommends using the proper mating adapter and making connections as shown. (Isolate and individually tape off the ends of any unused wires to prevent electrical short circuit).

See figure A

- 2 Re-connect the battery terminal and test the unit for proper operation.
- 3 Reassemble dash in the reverse order of the Dash Disassembly on page 1.

- 1 Disconnect the negative battery terminal to prevent an accidental short circuit.
- 2 Unsnap gearshift trim bezel and slide back.


See figure A

- 3 Remove (2) T-25 Torx from climate control assembly, angle the climate control panel out, insert fingers between the console and climate panel and pull down at the same angle. Remove the panel. (Some force may be required)

See figure B

- 4 Remove (2) T-25 Torx from radio bottom in climate control cavity to remove radio.

See figure C

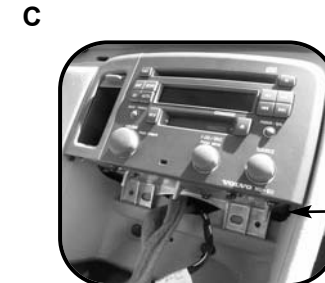


9 9 -9 2 2 3 Volvo S60 / V70


9 9 -9 2 2 3 Volvo S60 / V70

DIN HEAD UNIT PROVISION WITH POCKET


DIN HEAD UNIT PROVISION WITH POCKET

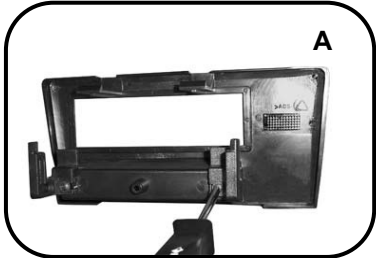


- 1 With a Phillips screwdriver, remove the kit rear support bracket.
See figure A

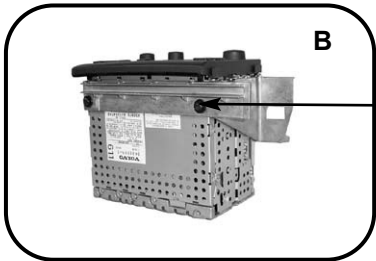

- 2 After removing radio, with a T-25 Torx driver remove (5) screws from radio bracket.
See figure B

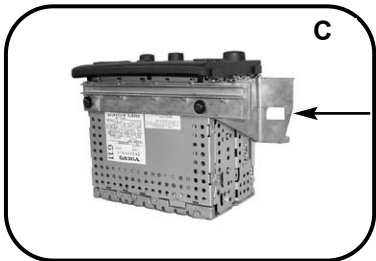


- 3 Depress snaps on top and bottom of pocket to remove from bracket.
See figure C

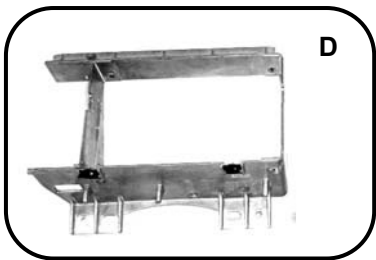


- 4 Slide radio bracket off of radio.
See figure D

- 5 Snap the Radio Housing into radio bracket and replace rear support brackets removed in step #1.

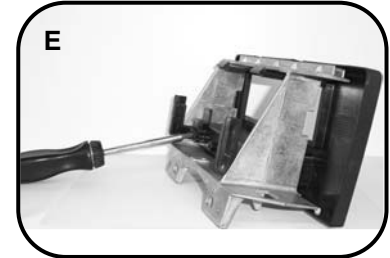

See figure E

- 6 Slide the DIN cage into the radio opening, secure by bending the metal locking tabs down.*

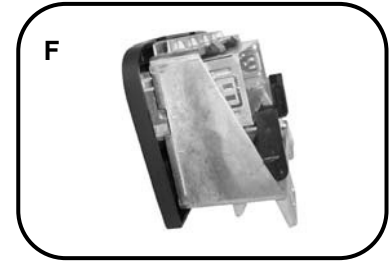

See figure F

- 7 Slide the DIN unit (radio) into the cage until its secure.



See figure G

*Note: Also please refer to instructions included with radio