
Simplicity 5 in the second sec

LIGHT KIT

for LANDLORD SOVEREIGN BROADMOOR MFR, NO. 517

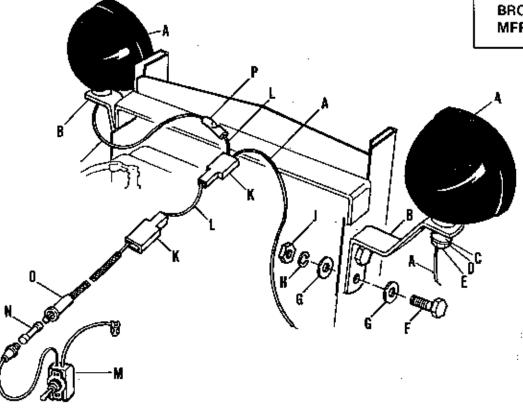

- 1. Remove Hood and Battery.
- Remove white plastic plug button from 1/2" hole on the dash board and install toggle switch 122211.
- 3. Before beginning to install the light kit, study the above illustration and identify all of the parts. Attach the light support brackets (2) 122194 with 705018 capscrews, 720001 lockwashers, 719002 plain washers and 717001 hex nuts. The bottom hole of the light support bracket 122194 will have 2 plain washers 719002, one under the head of the capscrew and the other between the lockwasher and the grill support.
- 4. Remove all paint from the immediate area around the two lamp mounting holes on the light support and mount the lamps to the support with a spacer between the lamp support and nut. Fasten securely with a 1/2" - 13 hex nut and lockwasher.
- 5. Attach the terminals of the lamp wires to the connector. Attach the extension wire (122185) between the two connectors. Remove the wire clamp near the front left corfner of the gas tank and install the clamp (122186) furnished with the light kit. Install the wire (122212) from the connector to the fuse, then install toggle switch wire to other end of fuse. Attach other toggle switch wire to ignition switch terminal.

Ref. Let.	Part No.	Description
A B C D E F G H J K L M N O P	122175 122194 122053 720004 717006 705018 719002 720001 717001 122182 122185 122111 122172 122172 122121	Lamp Assembly Bracket Spacer Lock Washer, 1/2" Full Hex. Nut, 1/2" - 13 Hex. Capscrew, 5/16" - 18 x 1-1/2" Plain Washer, 5/16" Lock Washer, 5/16" Full Hex. Nut, 5/16" - 18 Insulated Connector Extension Wire Toggle Switch (with hardware) Fuse 20 Amp. Wire Connector Connector

1308

