



# Thule System Kit 001

**AUDI 80/90, 87–  
AUDI V8, 89–  
VW PASSAT, 88–**


**AUDI 100/ 200/ 5000, 83–91  
PEUGEOT 205 5-dr, 84–**







x4

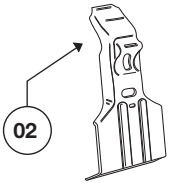

x4



x4

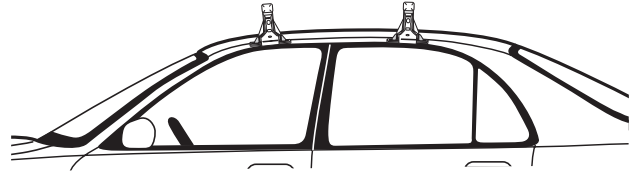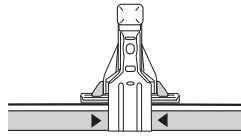
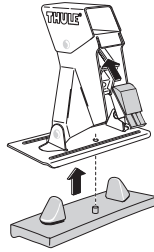


**Front**


**Rear**

<b>AUDI 80,90</b>	885 mm / 34 <sup>7</sup> / <sub>8</sub> inch	873 mm / 34 <sup>5</sup> / <sub>8</sub> inch
<b>AUDI 100, 200, 5000</b>	960 mm / 37 <sup>7</sup> / <sub>8</sub> inch	940 mm / 37 inch
<b>PEUGEOT 205</b>	880 mm / 34 <sup>5</sup> / <sub>8</sub> inch	875 mm / 34 <sup>3</sup> / <sub>8</sub> inch
<b>VW Passat</b>	950 mm / 37 <sup>3</sup> / <sub>8</sub> inch	932 mm / 36 <sup>5</sup> / <sub>8</sub> inch




**ROVER 200/400, 90–  
HONDA Concerto 4-dr, 89–**

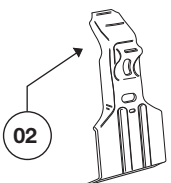

x4



x4

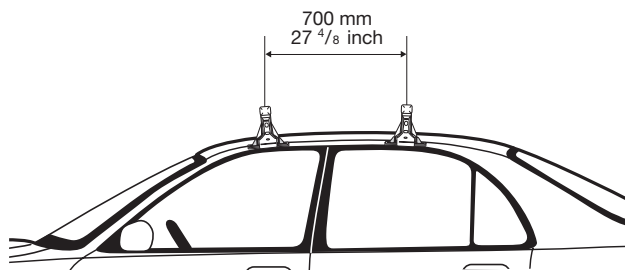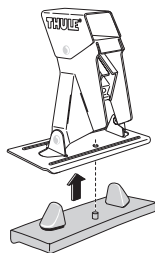

**Front**

**Rear**

<b>Rover</b>	995 mm / 39 <sup>1</sup> / <sub>8</sub> inch	960 mm / 38 <sup>1</sup> / <sub>8</sub> inch
<b>Honda</b>	846 mm / 33 <sup>2</sup> / <sub>8</sub> inch	846 mm / 33 <sup>2</sup> / <sub>8</sub> inch