

**EDELBROCK HEAVY-DUTY TIE ROD SLEEVES**  
**Catalog #5250, 5251, 5252**


**INSTALLATION INSTRUCTIONS**

Please study these instructions carefully before installing your new Heavy-Duty Tie Rod Sleeves. If you have any questions or problems, contact our **Technical Hotline** at: **1-800-416-8628**, 7:00 am to 5:00 pm, Monday through Friday, Pacific Standard Time or e-mail us at [edelbrock@edelbrock.com](mailto:edelbrock@edelbrock.com).

These are heavy-duty replacement parts for original tie rod sleeves and install basically in the same manner as the original stock parts. See our catalog for complete application listing. **To order a catalog, please call (800) FUN-TEAM.**

1. Installation of these parts requires precision front-end alignment equipment.
2. Installation should only be done by a qualified professional.
3. Following installation, drive vehicle about 10 miles and re-check all nuts for tightness.

**Note:** It is a good idea to periodically check suspension components for tightness and potential problems.

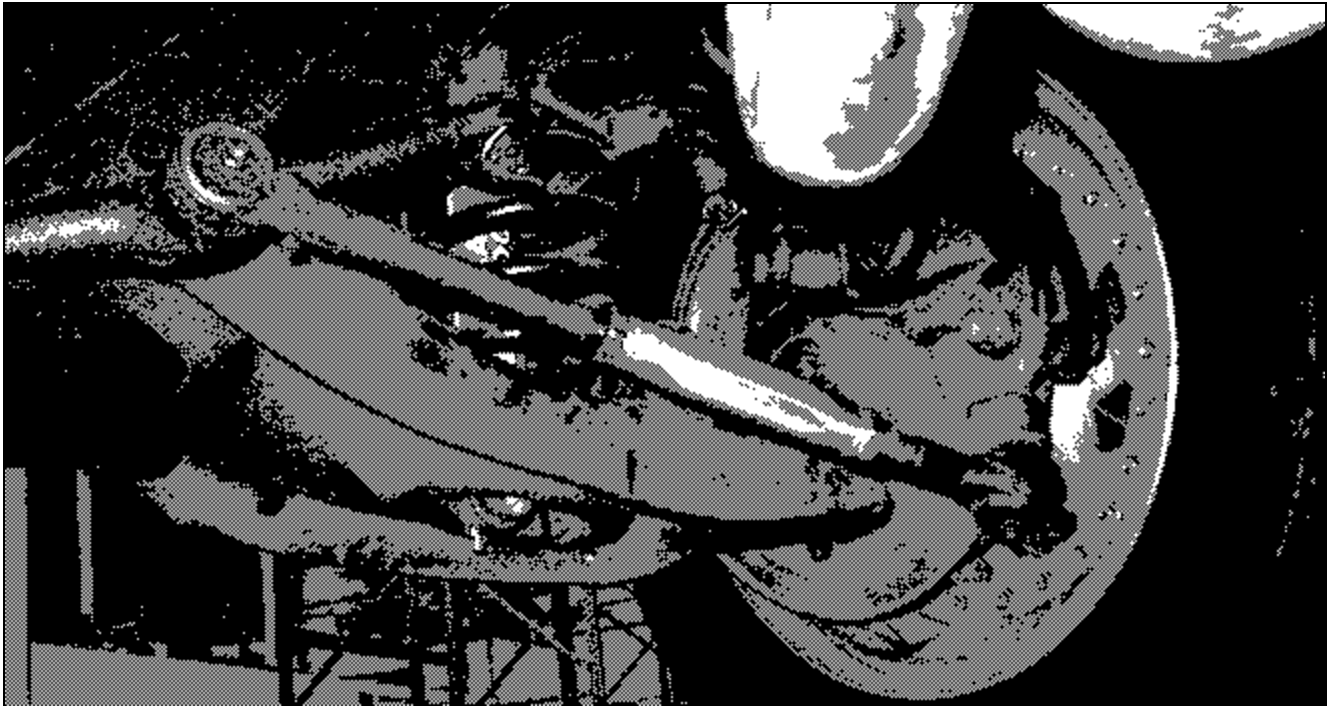

Edelbrock Corporation  
2700 California St.  
Torrance, CA 90503  
Technical Hotline: 800-416-8628  
Office: (310) 781-2222