



EDELBROCK CAT-BACK EXHAUST SYSTEM
For 2007 Toyota Tundra, 5.7L V8, 2WD & 4WD
Catalog #5716
INSTALLATION INSTRUCTIONS

Please study these instructions carefully before installing your new Edelbrock Cat-Back Exhaust System. If you have any questions, please contact our **Technical Hotline at: 1-800-416-8628** , 7am - 5pm, Monday-Friday, Pacific Standard Time or e-mail us at **Edelbrock@Edelbrock.com**.

Suggested Tools for Installation:

- 3/8" ratchet and metric sockets
- Jack and jackstands
- 9/16" and 15mm Wrench
- Liquid penetrant and rubber lubricant

IMPORTANT NOTE:

Proper installation is the responsibility of the installer. Improper installation will void warranty and may result in poor performance and engine or vehicle damage.

DISASSEMBLY

1. Raise and support vehicle.
2. Remove the V-clamp behind the muffler and remove the rear portion of the exhaust.
3. Unbolt the two flanges on the inlet pipes and remove the muffler section of the exhaust. **NOTE:** You will need to re-use the original gaskets and bolts on new system.

5. Working from the front of the system to the rear, adjust, align, and tighten all the band clamps. Give adequate clearance for fuel lines, brake lines, electrical wiring, and the spare tire.


ASSEMBLY

1. Using the original gaskets and bolts, install new inlet pipes and place hangers in the rubber isolators. Left inlet pipe #25-3287, right inlet pipe #25-3288.
2. Slip muffler onto the inlet pipes using two 2-1/2" band clamps. **NOTE:** Inlet end of muffler is marked. Snug the clamps so you can adjust system later.
3. Install overaxle pipe #25-3289 using a 3" band clamp and placing the hangers in the rubber isolators. snug the clamp so you can adjust system later.
4. Install polished tailpipe #25-3157 using a 3" band clamp. Snug the clamp so you can adjust system later.

KIT CONTENTS		
Catalog #5716		
Qty.	Part #	Description
<input type="checkbox"/> 1	25-3287	Left Inlet Pipe
<input type="checkbox"/> 1	25-3288	Right Inlet Pipe
<input type="checkbox"/> 1	25-3289	Overaxle Pipe
<input type="checkbox"/> 1	25-3157	Tailpipe (Polished)
<input type="checkbox"/> 1	22-5716	Installation Kit

WARNING!!!

Exhaust gas contains carbon monoxide, a deadly invisible gas.
Correct any leaks before driving!

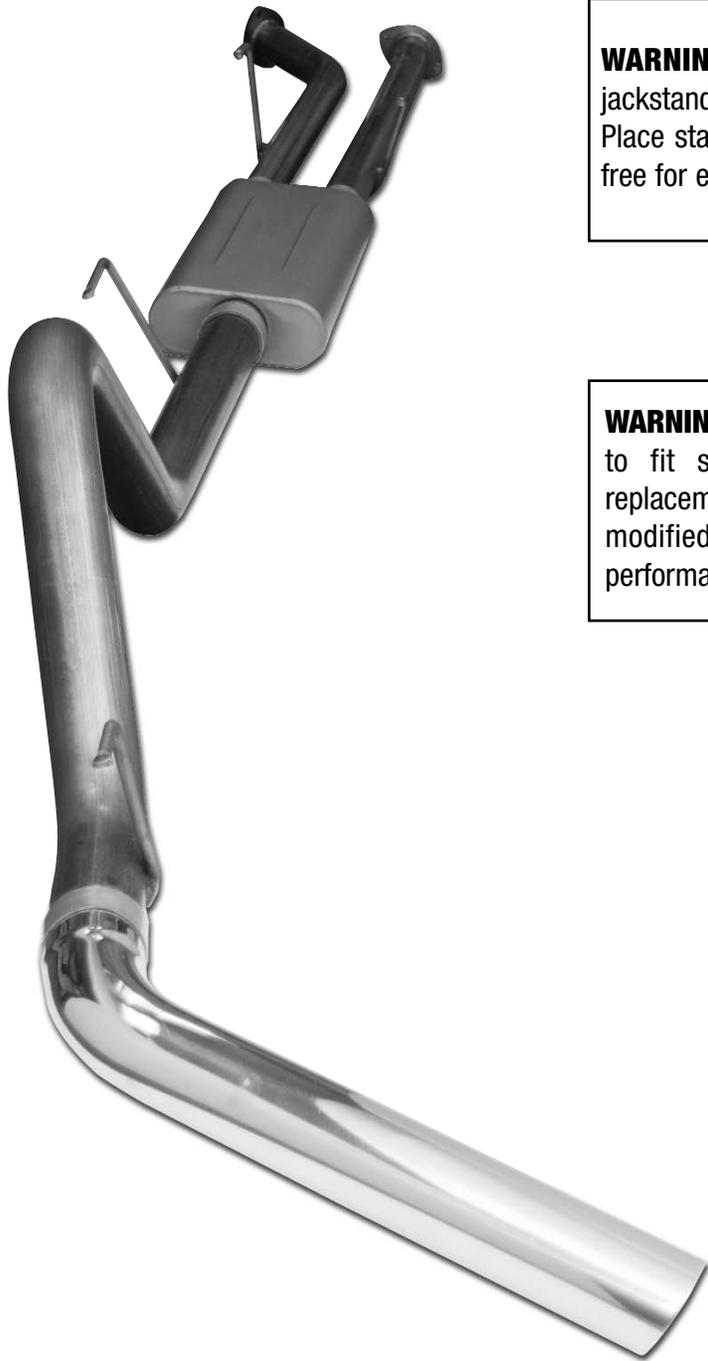

WARNING: Support your vehicle with proper jackstands or ramps rated for the total vehicle weight. Place stands so that the rear axle is allowed to hang free for easy system removal.

WARNING: These cat-back systems are engineered to fit stock catalytic converters or equivalent replacements. If your original system has been modified, Edelbrock will not warranty fit or performance.



Edelbrock Corporation, 2700 California St., Torrance, CA 90503

Tech Line: (800) 416-8628

Office: (310) 781-2222

E-Mail: Edelbrock@Edelbrock.com