



Edelbrock Cat-Back Exhaust System
For 2001-2006 Tahoe/Yukon
4-Door, 4.8L & 5.3L V8, 2 & 4 WD
Catalog #5724
INSTALLATION INSTRUCTIONS

Please study these instructions carefully before installing your new Cat-back Exhaust System. If you have any questions, contact our **Technical Hotline at: 1-800-416-8628**, 7am - 5pm, Monday-Friday, Pacific Standard Time or e-mail us at **Edelbrock@Edelbrock.com**.

Suggested Tools for Installation:

- 3/8" ratchet set with SAE and metric sockets
- 9/16" & 15mm wrench
- Jackstands and jack
- Liquid penetrant and rubber lubricant

DISASSEMBLY


1. Raise vehicle and support with proper jackstands for the weight, leaving the suspension hanging.
2. Use caution around hot exhaust systems to avoid burns.
3. Use penetrating oil on all nuts and bolts.
4. Remove the bolts and clamps from the system and lubricate the rubber hangers.
5. Use a long pry bar to pull the rubber hangers off of the pipe hangers.
6. Remove the old system. In some cases, you will find it easier to cut the overaxle pipe to remove it.

ASSEMBLY

1. Bolt I-pipe to factory outlet flange (behind catalytic converters). Make sure that you have engaged the stock rubber hanger with the wire hanger welded to the pipe.
Note: Do not tighten flange bolts at this time (snug only).
2. Slip the muffler onto the intermediate pipe with a 3" band clamp on the front. **Note:** Inlet end of muffler is marked. Snug the clamp so you can adjust the system later.
3. Install hanger clamp assembly #23-4095 onto outlet of muffler and engage it into the stock rubber isolator.
4. Install overaxle pipe into outlet of muffler and engage hanger bar into stock rubber isolator at rear of vehicle.
5. Slip tailpipe onto overaxle pipe, install 3" band clamp and snug clamp.
6. Working from the front of the system, align and tighten each pipe from the cat-back.
7. Check for clearance to body, frame, and driveline as you tighten the system from front to rear.
8. Check for leaks and correct, if necessary.

WARNING!!!

Exhaust gas contains carbon monoxide, a deadly invisible gas. Correct any leaks before driving!

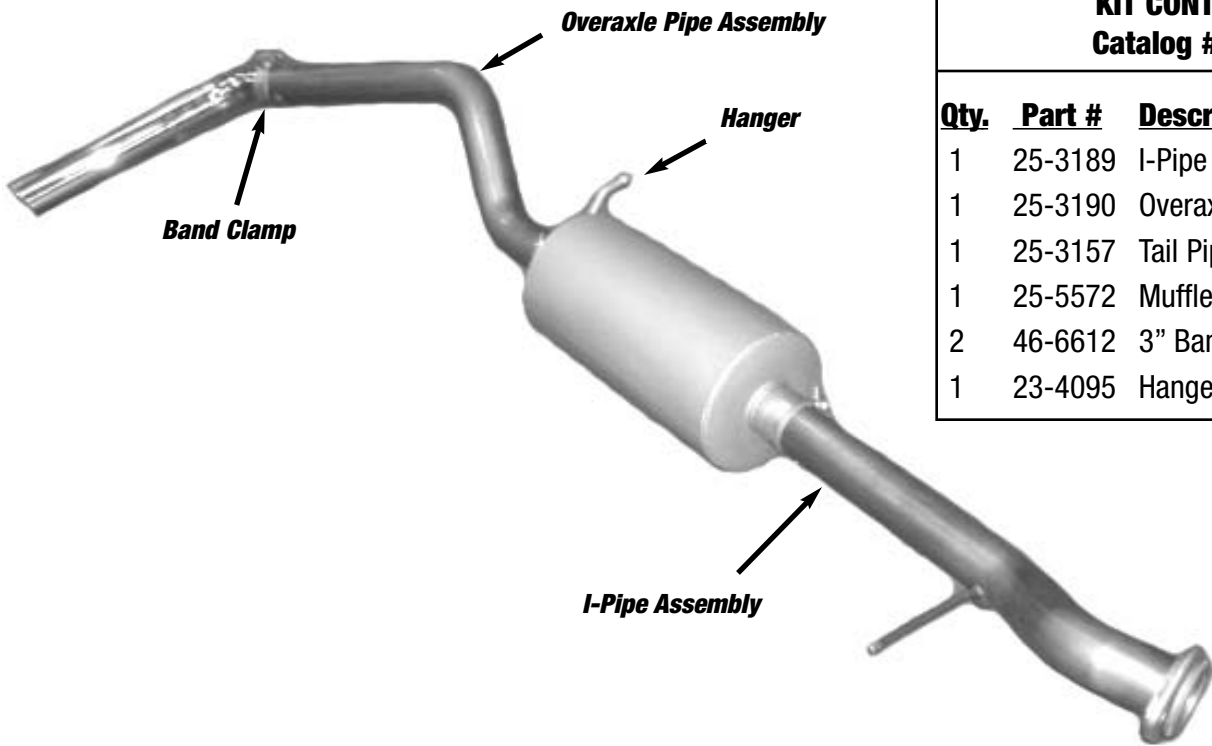

KIT CONTENTS Catalog #5724		
Qty.	Part #	Description
1	25-3189	I-Pipe
1	25-3190	Overaxle Pipe
1	25-3157	Tail Pipe
1	25-5572	Muffler
2	46-6612	3" Band Clamps
1	23-4095	Hanger Clamp Assembly

WARNING: Support your vehicle with proper jackstands or ramps rated for the total vehicle weight. Place stands so that the rear axle is allowed to hang free for easy system removal.

WARNING: These cat-back systems are engineered to fit stock catalytic converters or equivalent replacements. If you original system has been modified, Edelbrock will not warranty fit or performance.



Edelbrock Corporation, 2700 California St., Torrance, CA 90503
Tech Line: (800) 416-8628
Tech Fax: (310) 972-2730
E-Mail: Edelbrock@Edelbrock.com