




# Dresser Bag Bottle Installation Instructions

## Catalog #71922 & #71924

To be used in conjunction with Installation Instructions for 71910-71919

Please study all instructions before you install your nitrous bottle in your dresser bag. If you have any questions or problems, please call our Technical Hotline at: 1-800-416-8628, 7:00 a.m. to 5:00 p.m., Monday through Friday, Pacific Standard Time or e-mail us at [edelbrock@edelbrock.com](mailto:edelbrock@edelbrock.com).

1. Remove the dresser bag from the right side of the motorcycle.
2. Remove the dresser bag lid and latching mechanism from the bag.
3. Cut out the supplied template below. This template will be used to locate the correct drilling locations for the installation of your 2-lb. nitrous bottle.
4. Locate the template on the outside of the dresser bag facing in toward the motorcycle. Position the template so the "Top of Bag" and "Latch" labels are facing their corresponding positions in relation to the bag. Your correctly positioned template should be positioned the same as shown in Fig. 1.
5. Using a 7/16" drill bit, drill the installation hole for the bulkhead fitting where depicted in the template. Using a 1/4" drill bit, drill the two holes for the bottle bracket mount.
6. Install the supplied bulkhead fitting in the mounting hole that was just drilled, with the short end of the bulkhead fitting facing out of the bag.
7. Using the two supplied bottle bracket base bolts, bottle bracket lower, and bracket backing plate, install the bracket lower into the bag as shown in Fig. 2. It is recommended to use removable threadlock on the bolt threads to prevent vibration from loosening the bottle bracket bolts and damaging the bag or your bottle.
8. Install the nitrous bottle in the brackets using the bottle bracket upper, two clamps bolts, and bottle as shown in Fig. 3.
9. Connect the supplied feed line from the bottle outlet to the bulkhead fitting. Re-install your dresser lid and bag onto the motorcycle.

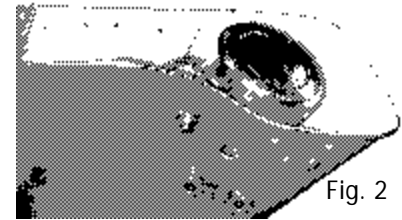

CONGRATULATIONS! YOU ARE NOW FINISHED MOUNTING YOUR BOTTLE.

©2003 Edelbrock Corporation  
Rev. 4/03

Edelbrock Corp., 2700 California St., Torrance, CA 90503  
Tech Line: 1-800-416-8628; Office: 310-781-2222

Brochure No. 63-0157  
Catalog #71922 & #71924

✂ Cut Here

