



EDELBROCK CAT-BACK EXHAUST SYSTEM

For 2006 Dodge Ram, 1500 Quad Cab,
5.7L Hemi V8, 2 & 4 WD

Catalog #5714

INSTALLATION INSTRUCTION

Please study these instructions carefully before installing your new Cat-Back Exhaust System. If you have any questions, contact our **Technical Hotline at: 1-800-416-8628** from 7 am - 5 pm, Monday through Friday, Pacific Standard Time or e-mail us at **Edelbrock@Edelbrock.com**.

SUGGESTED TOOLS FOR INSTALLATION:

- ☐ 3/8" ratchet with deep SAE and metric sockets
- ☐ 9/16" and 15mm wrenches
- ☐ Jackstands and jack
- ☐ Liquid penetrant and rubber lubricant

IMPORTANT NOTE:

Proper installation is the responsibility of the installer. Improper installation will void warranty and may result in poor performance and engine or vehicle damage.

INSTALLATION INSTRUCTIONS

DISASSEMBLY

1. Raise vehicle and support with proper jackstands for the weight, leaving the suspension hanging.
2. Use caution around hot exhaust systems to avoid burns.
3. Use penetrating oil on all nuts and bolts.
4. Remove the bolts and clamps from the system and lubricate the rubber hangers to ease removal.
5. Use a long pry bar to pull the rubber hangers off of the pipe hangers.
6. Remove the old system. In some cases, you will find it easier to cut the overaxle pipe to remove it.

ASSEMBLY

1. Clamp the intermediate pipe (#25-3250) to the catalytic converter with a 3" band clamp and just snug the clamp at this time. Slide hanger clamp assembly (#23-4083) onto intermediate pipe and engage wire into original front rubber isolator. Leave clamp loose at this time.

2. Install hanger clamp assembly #23-4084 into the second I-pipe isolator on frame.
3. Slip the muffler onto the intermediate pipe with a 3" band clamp on the front. Inlet of muffler is stamped in the nipple.
4. Install hanger clamp assembly (#23-4085) onto outlet end of muffler, engage hangers into the stock rubber isolators and slip it onto the muffler outlet. Slip the overaxle pipe over the rear end and into the muffler outlet.
5. Install hanger clamp assembly (#23-4086) onto rear of the overaxle pipe and engage into factory isolator.
6. Install tailpipe and snug clamp.
7. Working from the front of the system, align and tighten each pipe from the cat-back.
8. Check for clearance to body, frame, and driveline as you tighten and align the system from front to rear.
9. Check for leaks and correct, if any are found.


WARNING: Exhaust gas contains carbon monoxide, a deadly invisible gas. Correct any leaks before driving!

KIT CONTENTS **CATALOG #5714**

Qty	Part #	Description
☐ 1	25-3250	Intermediate Pipe
☐ 1	25-55725	Muffler
☐ 1	23-3251	Overaxle Pipe Assembly
☐ 1	25-3157	Tail Pipe

Qty	Part #	Description
☐ 2	46-6612	3" Band Clamps
☐ 1	23-4083	I-Pipe Hanger Clamp Assembly*
☐ 1	23-4084	I-pipe Hanger Clamp Assembly*
☐ 1	23-4085	Muffler Hanger Clamp Assembly
☐ 1	23-4086	Tail Pipe Hanger Clamp Assembly*

***Not Shown.**

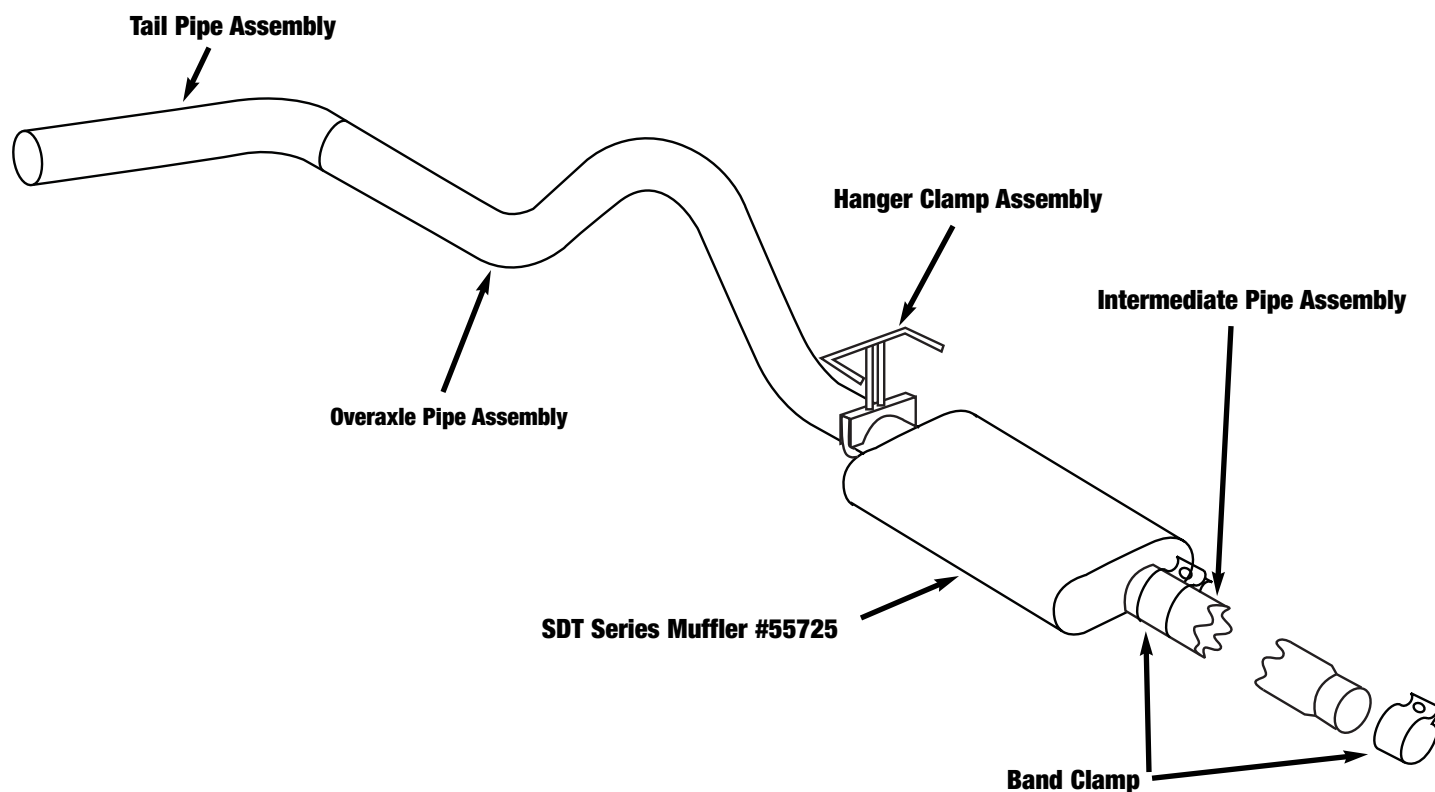

WARNING: Support your vehicle with proper jackstands or ramps rated for the total vehicle weight. Place stands so that the rear axle is allowed to hang free for easy system removal.

WARNING: These cat-back systems are engineered to fit vehicles with stock catalytic converters or equivalent replacements. If your original system has been modified, Edelbrock will not warranty fit or performance.

Edelbrock Corporation, 2700 California Street, Torrance, CA 90503
Tech Line: 1-800-416-8628
E-mail: Edelbrock@Edelbrock.com